

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Compressor
- A 3 Air Flow Meter
- A 4 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 5 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 6 Airbag Sensor Front LH
- A 7 Airbag Sensor Front RH
- A 8 Alternator
- A 9 Alternator

- B 1 Brake Fluid Level Warning SW


- C 1 Cooling Fan ECU
- C 2 Counter Gear Speed Sensor
- C 3 Crankshaft Position Sensor
- C 17 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- C 18 Camshaft Timing Oil Control Valve (LH Intake Side)
- C 19 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- C 20 Camshaft Timing Oil Control Valve (RH Intake Side)

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Level Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F 10 Front Window Deicer
- F 11 Front Wiper Motor
- F 19 Fuel Pump Resistor

- H 1 Headlight Cleaner Control Relay
- H 2 Headlight Cleaner Motor
- H 3 Headlight LH
- H 4 Headlight RH
- H 5 Headlight LH
- H 6 Headlight LH
- H 7 Headlight LH
- H 8 Headlight RH
- H 9 Headlight RH
- H 10 Headlight RH
- H 11 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 12 Height Control Sensor Front LH
- H 13 Height Control Sensor Front RH
- H 14 Height Control Solenoid Valve Front
- H 15 Horn LH
- H 16 Horn RH

Position of Parts in Engine Compartment <RHD>

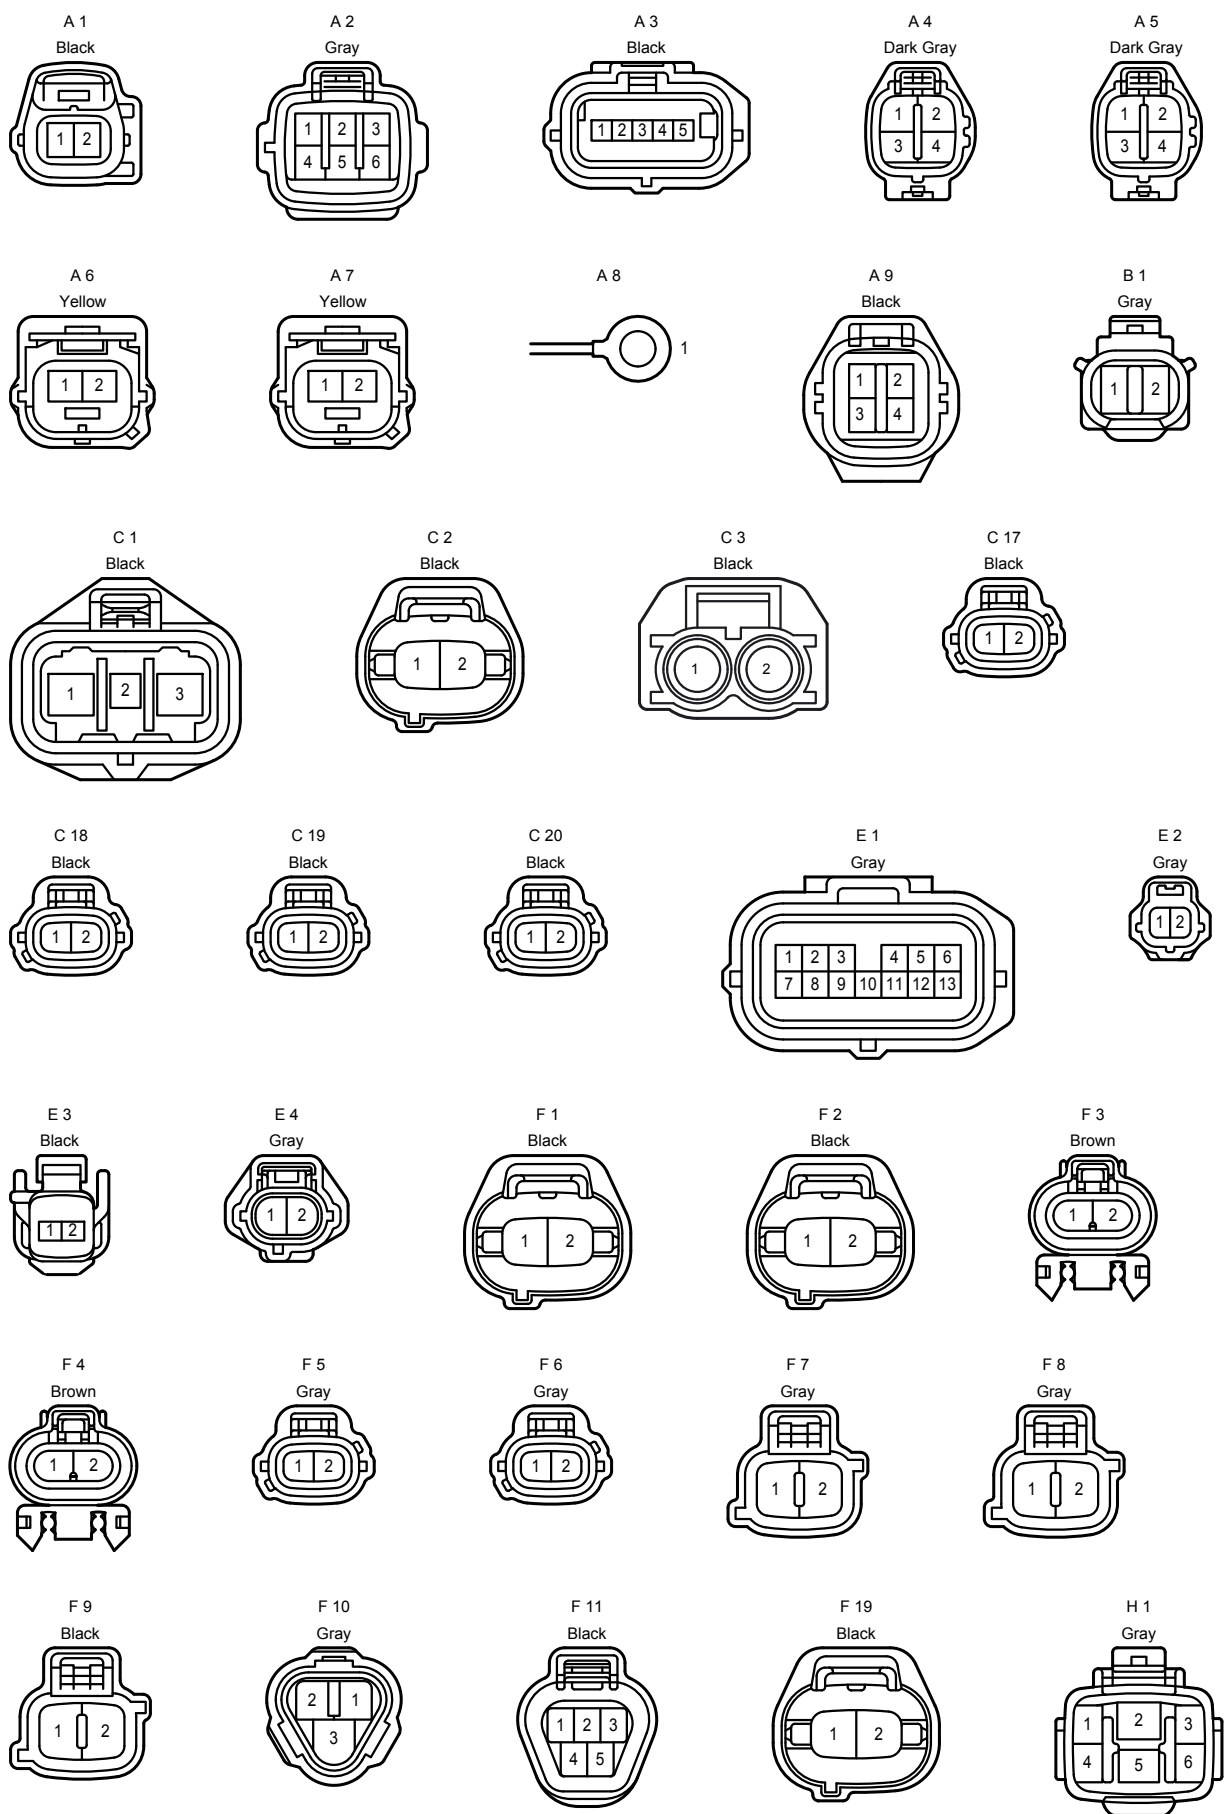

Position of Parts in Engine Compartment <RHD>

