


Position of Parts in Engine Compartment <RHD>

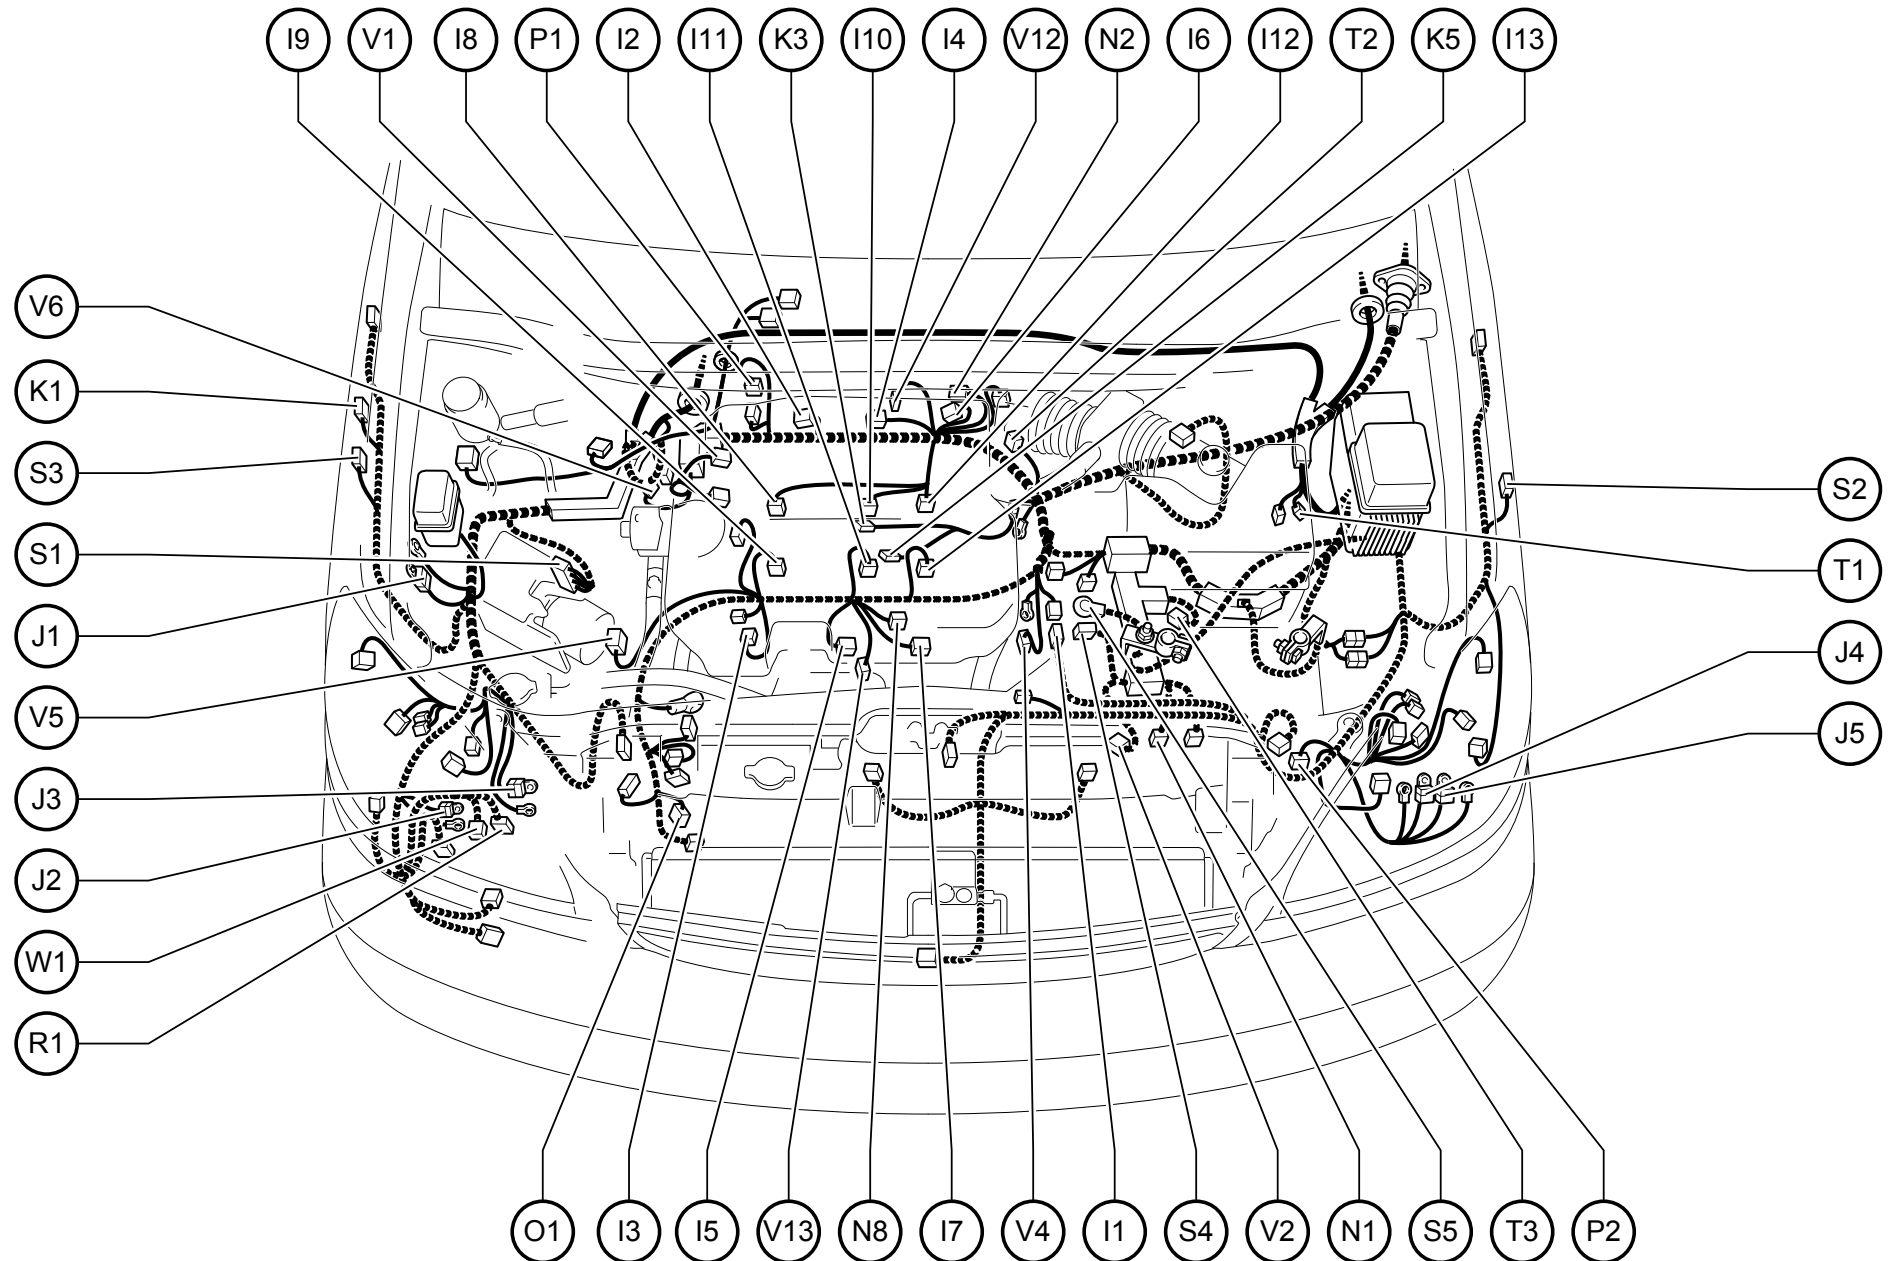

- I 1 Idle Air Control Valve
- I 2 Ignition Coil and Igniter No.1
- I 3 Ignition Coil and Igniter No.2
- I 4 Ignition Coil and Igniter No.3
- I 5 Ignition Coil and Igniter No.4
- I 6 Ignition Coil and Igniter No.5
- I 7 Ignition Coil and Igniter No.6
- I 8 Injector No.1
- I 9 Injector No.2
- I 10 Injector No.3
- I 11 Injector No.4
- I 12 Injector No.5
- I 13 Injector No.6

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector

- K 1 Keyless Buzzer
- K 3 Knock Sensor (Bank 1)
- K 5 Knock Sensor (Bank 2)

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition No.1)
- N 8 Noise Filter (Ignition No.2)

- O 1 Oil Pressure SW

- P 1 Power Steering Oil Pressure SW
- P 2 A/C Pressure Sensor

- R 1 Rear Washer Motor


- S 1 Skid Control ECU with Actuator
- S 2 Speed Sensor Front LH
- S 3 Speed Sensor Front RH
- S 4 Starter
- S 5 Starter

- T 1 Theft Deterrent Horn
- T 2 Throttle Position Sensor
- T 3 Turbine Speed Sensor

- V 1 VSV (ACIS)
- V 2 VSV (ACM)
- V 4 VSV (Purge)
- V 5 VVT Sensor (Bank 2 Intake Side)
- V 6 VVT Sensor (Bank 1 Intake Side)
- V 12 VVT Sensor (Bank 1 Exhaust Side)
- V 13 VVT Sensor (Bank 2 Exhaust Side)

- W 1 Washer Level Warning SW

Position of Parts in Engine Compartment <RHD>

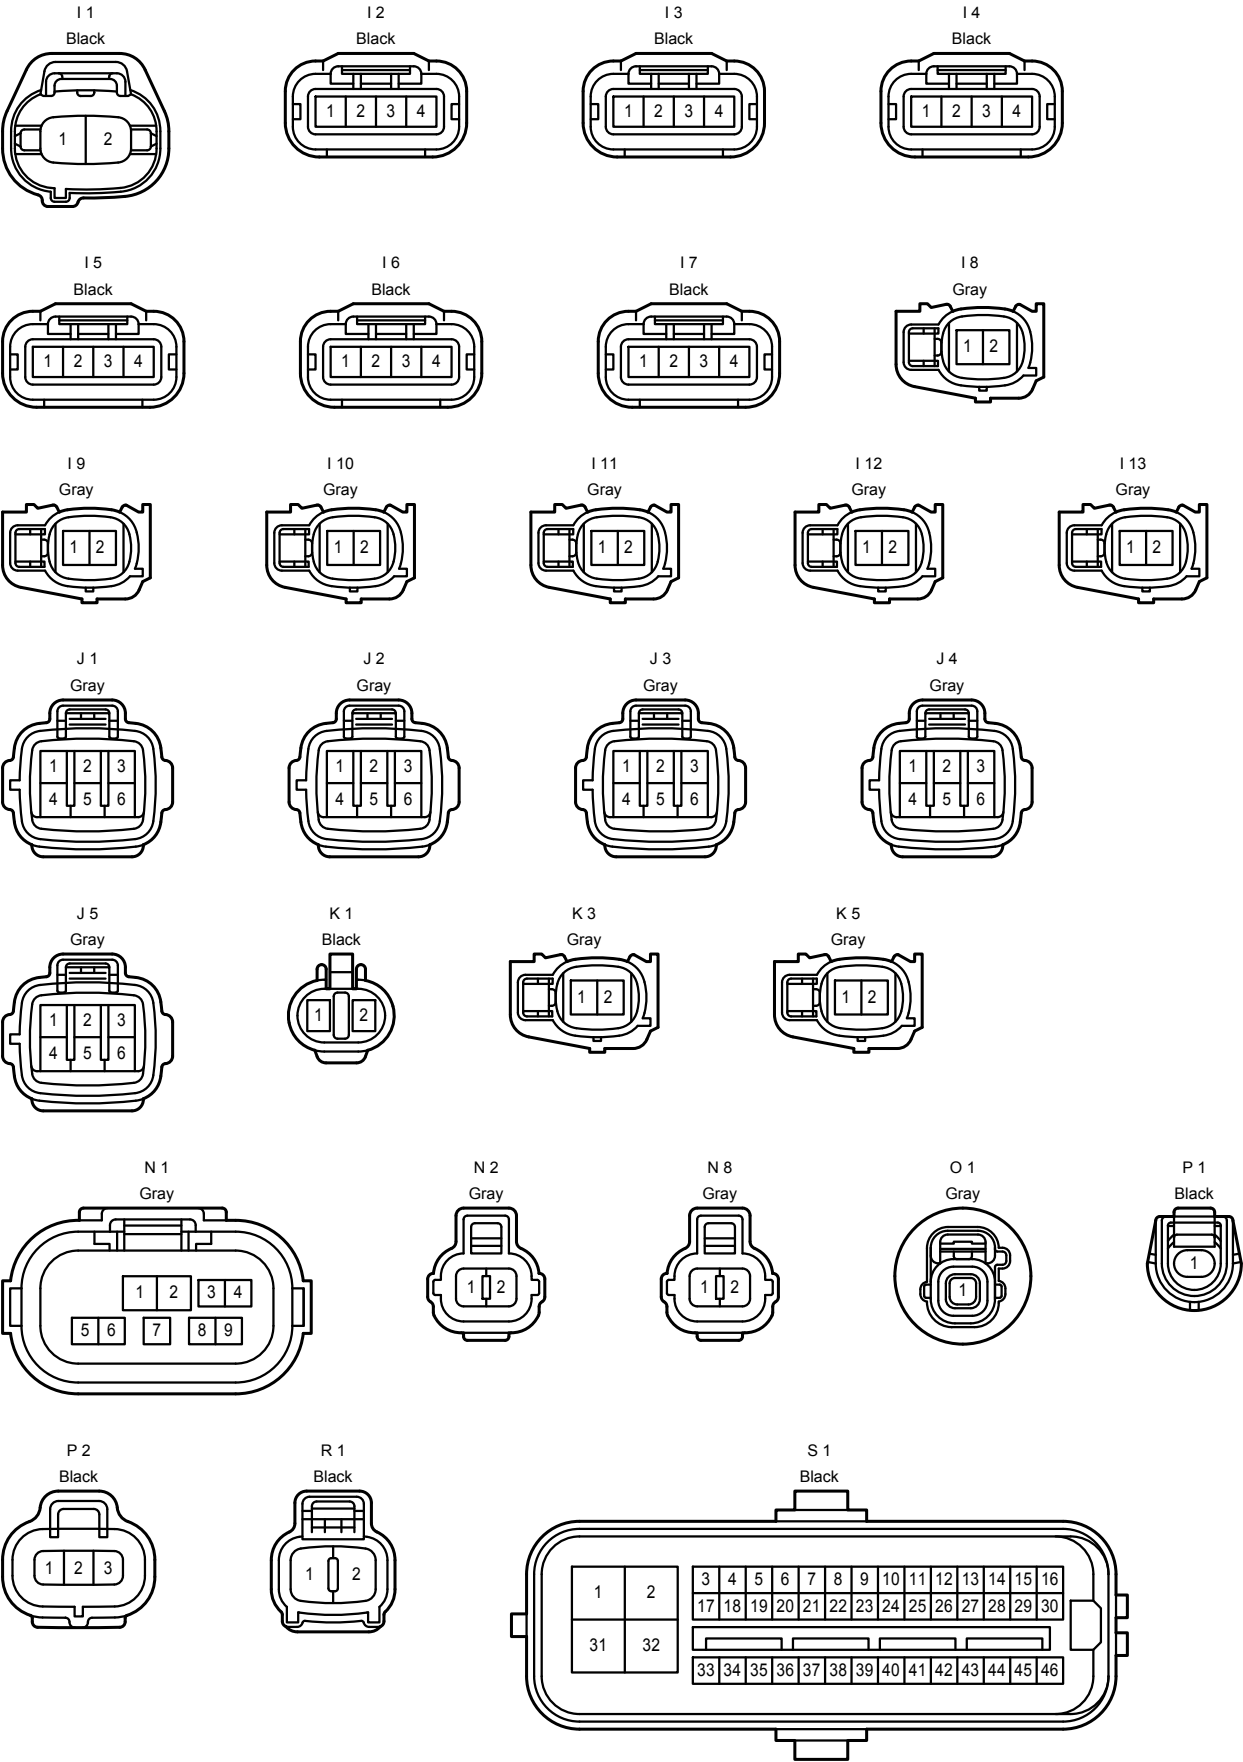

Position of Parts in Engine Compartment <RHD>

