

P 3 Panel Relay
P 4 Parking Brake SW
P 5 Pneumatic Tank Solenoid Valve
P 6 Power Back Door Off SW
P 7 Power Back Door Opener/Closer SW


R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Remote Control Mirror SW
R 6 Rheostat , Trip SW
R 21 Radio and Player

S 6 Seat Heater SW
S 7 Shift Lock ECU
S 8 Side Airbag Squib LH
S 9 Side Airbag Squib RH
S 10 Steering Angle Sensor
S 11 Step Light LH
S 12 Step Light RH
S 13 Stop Light SW
S 14 Suspension Control ECU
S 15 Suspension Control ECU
S 16 Suspension Control ECU

T 4 Tilt and Telescopic ECU
T 5 Tilt Motor
T 6 Transmission Control SW
T 7 Transponder Key Amplifier
T 8 Transponder Key Computer
T 9 Turn Signal Flasher
T 10 Tweeter LH
T 11 Tweeter RH


V 9 VSC Warning Buzzer

Position of Parts in Instrument Panel <LHD>

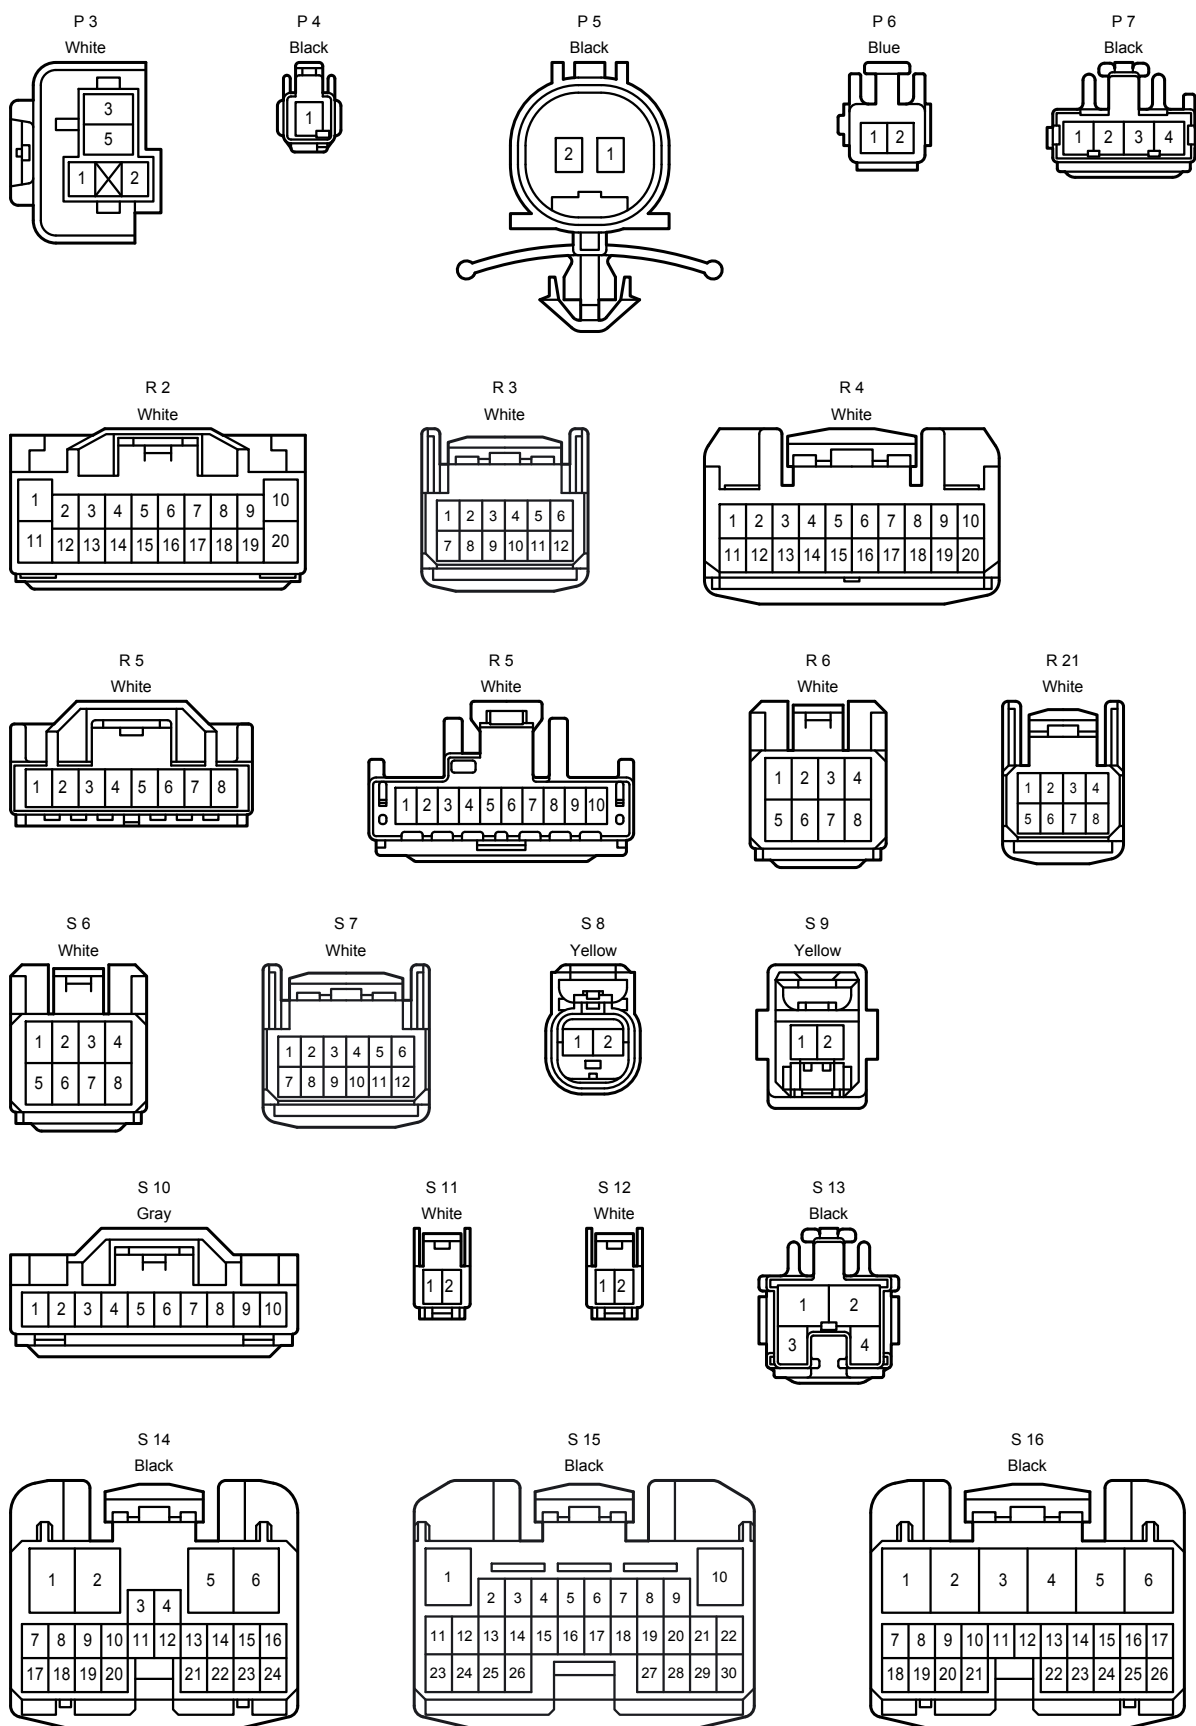


Position of Parts in Instrument Panel <LHD>


T 4
White

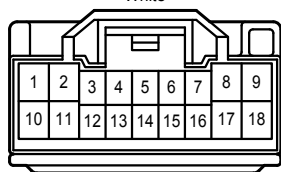


T 5
White

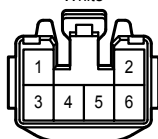


T 6
White

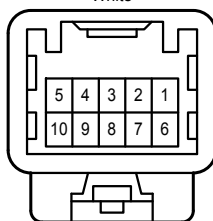

T 7
Black

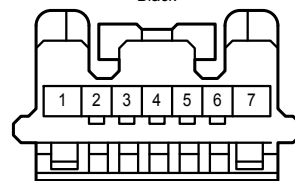


T 8
White

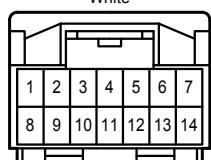


T 9
White



 T 10
White



T 11
White

 

V 9
Black

