


- C 1 Park/Neutral Position SW
- C 2 Air Flow Meter
- C 3 Starter
- C 4 Water Temp. Sensor
- C 5 Throttle Body Assembly
- C 6 VSV (Purge)
- C 7 Fuel Injector (No.1)
- C 8 Fuel Injector (No.3)
- C 9 Fuel Injector (No.2)
- C 10 Fuel Injector (No.4)
- C 11 Ignition Coil (No.1)
- C 12 Ignition Coil (No.3)
- C 13 Ignition Coil (No.2)
- C 14 Ignition Coil (No.4)
- C 15 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 16 Noise Filter (Ignition RH)
- C 17 Power Steering Oil Pressure SW
- C 18 Alternator
- C 19 Alternator
- C 21 A/C Compressor
- C 23 Engine Oil Pressure SW
- C 34 VSV (ACM)
- C 35 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 36 Fuel Injector (No.5)
- C 37 Fuel Injector (No.6)
- C 38 Ignition Coil (No.5)
- C 39 Ignition Coil (No.6)
- C 40 VVT Sensor (Bank 1 Exhaust Side)
- C 41 VVT Sensor (Bank 1 Intake Side)
- C 42 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 43 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 44 VVT Sensor (Bank 2 Exhaust Side)
- C 45 VVT Sensor (Bank 2 Intake Side)
- C 46 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 47 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 48 VSV (ACIS)
- C 49 Noise Filter (Ignition LH)
- C 50 Crankshaft Position Sensor
- C 51 Heated Oxygen Sensor (Bank 2 Sensor 2)
- C 52 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C 53 A/C Compressor
- C 56 Transmission Control ECU
- C 57 Junction Connector
- C 58 Engine ECU

- D 1 Starter

- V 1 Knock Control Sensor (Bank 2)
- V 2 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <RHD 2GR-FE>

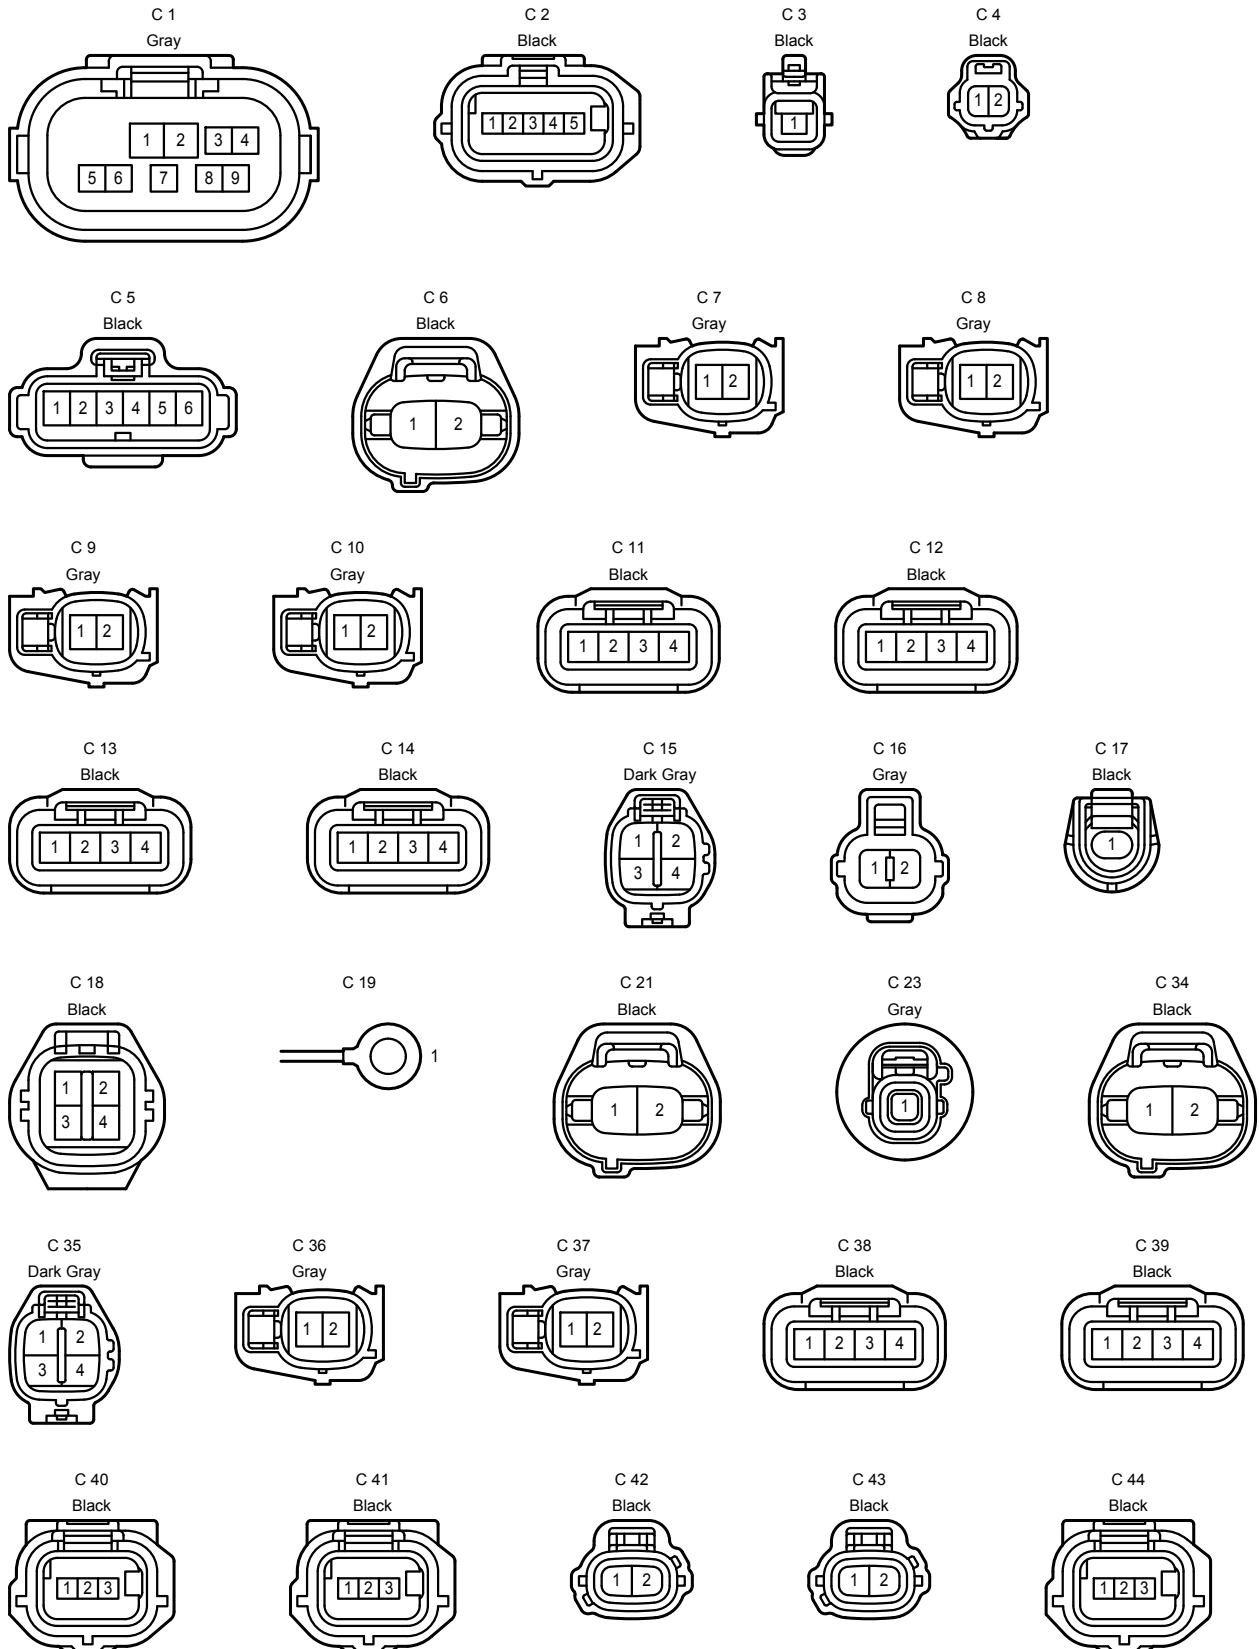

Position of Parts in Engine Compartment <RHD 2GR-FE>

