 

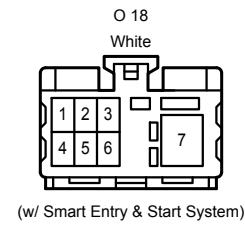
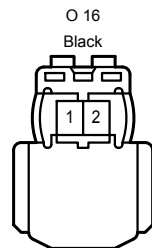
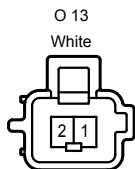
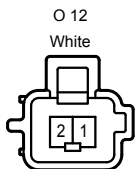
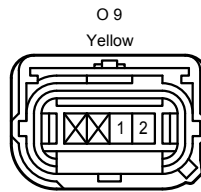
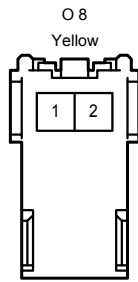
 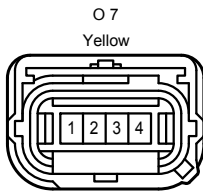

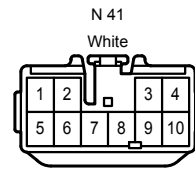
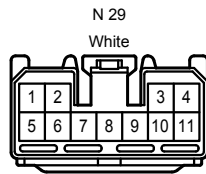
 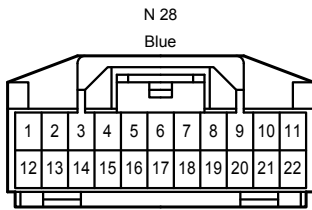

 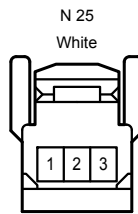

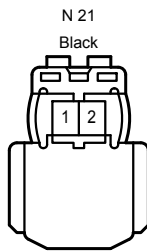
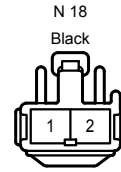
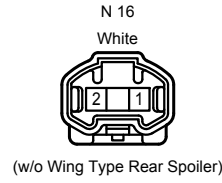
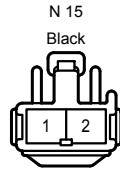
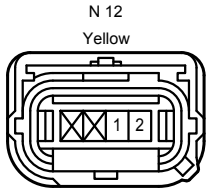
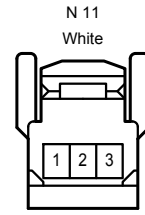
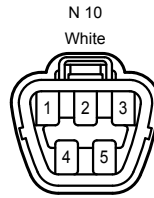
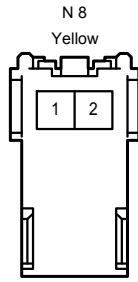


N 6 Door Courtesy SW (Front LH)  
N 7 Side Airbag Sensor (Front LH)  
N 8 Pretensioner (LH)  
N 10 Fuel Suction Pump and Gage Assembly  
N 11 Electrical Key Oscillator (Rear Seat)  
N 12 Side Airbag Sensor (Rear LH)  
N 13 Door Courtesy SW (Rear LH)  
N 15 Noise Filter (Dome and Stop)  
N 16 Center Stop Lamp  
N 18 Noise Filter (Rear Window Defogger)  
N 19 Rear Window Defogger  
N 21 Curtain Shield Airbag Squib (LH)  
N 23 Diode (Luggage Compartment Lamp)  
N 25 Electrical Key Oscillator (Inside Luggage Room)  
N 26 Luggage Compartment Lamp  
N 28 Junction Connector  
N 29 Junction Connector  
N 41 Rear Sunshade Relay  
N 42 Rear Sunshade Motor

O 6 Door Courtesy SW (Front RH)  
O 7 Side Airbag Sensor (Front RH)  
O 8 Pretensioner (RH)  
O 9 Side Airbag Sensor (Rear RH)  
O 10 Door Courtesy SW (Rear RH)  
O 12 Speaker (Rear LH)  
O 13 Speaker (Rear RH)  
O 16 Curtain Shield Airbag Squib (RH)  
O 18 Door Control Receiver  
O 19 Electrical Key Antenna  
O 21 Junction Connector  
O 23 Height Control Sensor  
O 30 Clearance Warning ECU  
O 32 Junction Connector  
O 33 Junction Connector  
O 34 Junction Connector

# Position of Parts in Body <LHD>

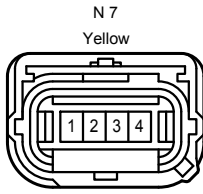

Position of Parts in Body <LHD>

