

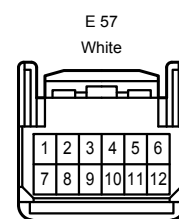
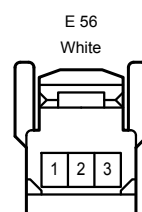
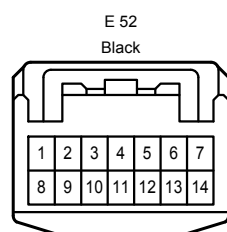
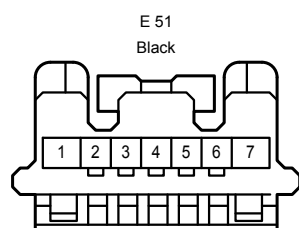
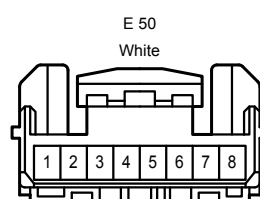
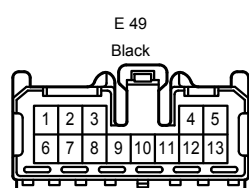
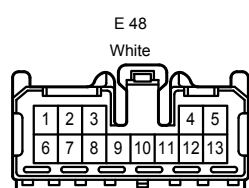
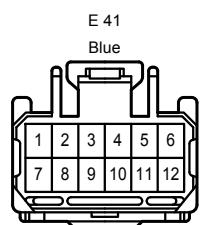
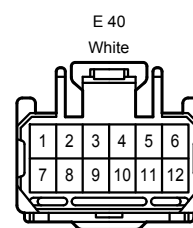


- E 38 A/C Amplifier
- E 39 Blower Motor
- E 40 Junction Connector
- E 41 Junction Connector
- E 42 Junction Connector
- E 43 Junction Connector
- E 44 Junction Connector
- E 45 Junction Connector
- E 46 Junction Connector
- E 48 Junction Connector
- E 49 Junction Connector
- E 50 ID Code Box
- E 51 Steering Lock ECU
- E 52 Power SW
- E 56 Electrical Key Oscillator (Console)
- E 57 Shift Lock Control ECU
- E 58 Certification ECU
- E 62 Junction Connector
- E 63 Junction Connector
- E 64 Headlamp Leveling SW
- E 73 Back Sonar SW
- E 74 Rear Sunshade SW

# Position of Parts in Instrument Panel <LHD>

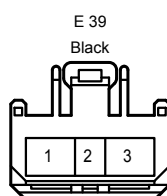

(w/ Smart Entry & Start System)

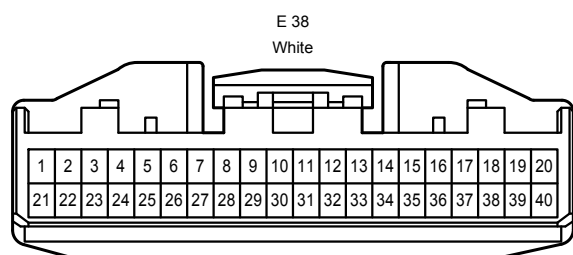