



- A 17 Accelerator Position Sensor
- A 18 Parking Brake SW
- A 19 Stop Lamp SW
- A 20 Headlamp Leveling ECU
- A 21 Cruise Control Clutch SW
- A 40 Junction Connector
- A 41 Junction Connector
- A 42 Junction Connector
- A 56 Short Connector
- A 57 Short Connector
- A 58 Junction Connector

- N 1 Airbag Sensor Assembly Center

- O 1 Airbag Sensor Assembly Center

- a 1 Spiral Cable , Steering Pad SW

- b 1 Spiral Cable , Cruise Control SW

- c 1 Airbag Squib (Front Passenger's Airbag Assembly)
- c 2 Airbag Squib (Front Passenger's Airbag Assembly)

- e 1 A/C Amplifier , A/C Blower Assembly

Position of Parts in Instrument Panel <LHD>

