

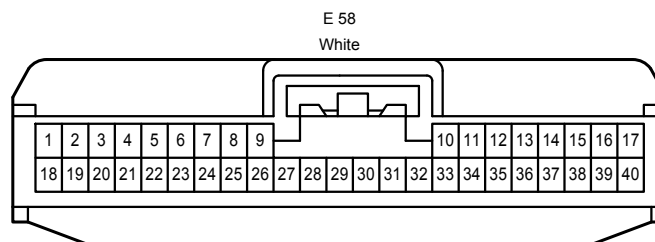
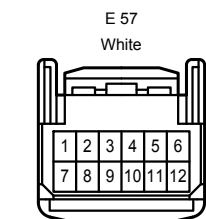
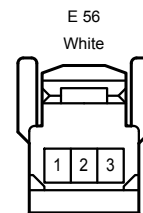
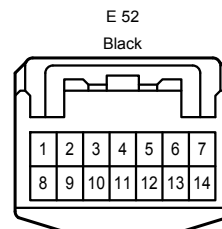
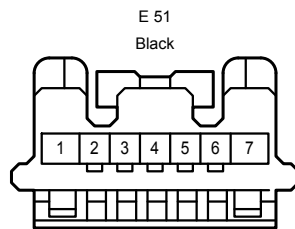
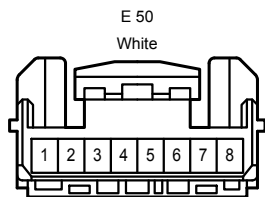
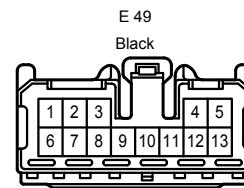
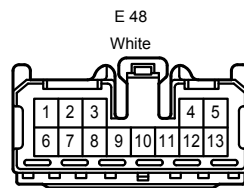
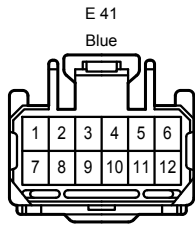
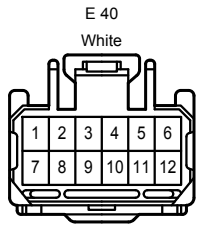
 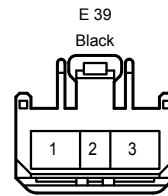
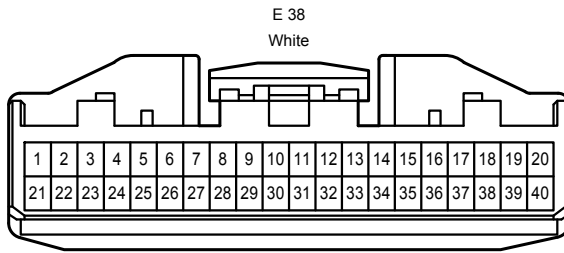

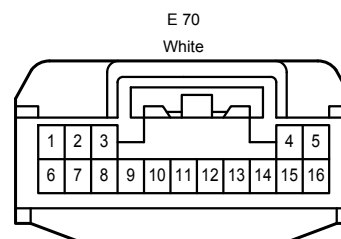


- E 37 Diode (Door Courtesy Front RH)
- E 38 A/C Amplifier
- E 39 Blower Motor
- E 40 Junction Connector
- E 41 Junction Connector
- E 42 Junction Connector
- E 43 Junction Connector
- E 44 Junction Connector
- E 45 Junction Connector
- E 46 Junction Connector
- E 47 Junction Connector
- E 48 Junction Connector
- E 49 Junction Connector
- E 50 ID Code Box
- E 51 Steering Lock ECU
- E 52 Power SW
- E 56 Electrical Key Oscillator (Console)
- E 57 Shift Lock Control ECU
- E 58 Certification ECU
- E 59 Certification ECU
- E 69 AFS OFF SW
- E 70 Gateway ECU
- E 73 Back Sonar SW
- E 74 Rear Sunshade SW
- E 77 A/T Shift Lever Illumination
- E 78 Junction Connector
- E 79 Junction Connector
- E 80 Junction Connector
- E 81 Junction Connector
- E 82 Outer Mirror SW
- E 85 Outer Mirror Control ECU
- E 86 Outer Mirror Control ECU
- E 88 Seat Memory SW

Position of Parts in Instrument Panel <RHD>

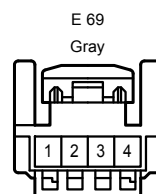

(w/ Smart Entry & Start System)

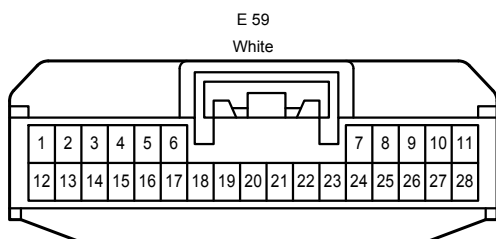

Position of Parts in Instrument Panel <RHD>

