



- A 17 Accelerator Position Sensor
- A 18 Parking Brake SW
- A 19 Stop Lamp SW
- A 21 Cruise Control Clutch SW
- A 40 Junction Connector
- A 41 Junction Connector
- A 42 Junction Connector
- A 56 Short Connector
- A 57 Short Connector
- A 58 Junction Connector
- A 61 Headlamp Swivel ECU
  
- N 1 Airbag Sensor Assembly Center
  
- O 1 Airbag Sensor Assembly Center
  
- a 1 Spiral Cable , Steering Pad SW
  
- b 1 Spiral Cable , Cruise Control SW
  
- c 1 Airbag Squib (Front Passenger's Airbag Assembly)
- c 2 Airbag Squib (Front Passenger's Airbag Assembly)
  
- e 1 A/C Amplifier , A/C Blower Assembly
  
- h 1 Automatic Light Control Sensor

# Position of Parts in Instrument Panel <RHD>

