



- N 3 Front Seat Inner Belt (Front LH)
- N 27 Junction Connector

- O 20 Junction Connector
- O 22 Front Seat Inner Belt (Front RH)

- T 1 Power Seat Motor (Front RH Seat Slide Control)
- T 8 Power Seat SW (Front RH Seat)
- T 9 Power Seat SW (Front RH Seat Lumbar Support Control)
- T 12 Front Seat Inner Belt (Front RH)
- T 18 Junction Connector

- U 1 Power Seat Motor (Front LH Seat Slide Control)
- U 2 Power Seat Motor (Front LH Seat Front Vertical Control)
- U 4 Power Seat Motor (Front LH Seat Lifter Control)
- U 7 Power Seat SW (Front LH Seat)
- U 8 Power Seat SW (Front LH Seat Lumbar Support Control)
- U 11 Junction Connector

- Y 1 Side Airbag Squib (RH)

- Z 1 Side Airbag Squib (LH)

- j 1 Power Seat Motor (Front RH Seat Reclining Control)
- j 2 Power Seat Motor (Front RH Seat Lumbar Support Control)

- k 1 Power Seat Motor (Front LH Seat Reclining Control)
- k 2 Power Seat Motor (Front LH Seat Lumbar Support Control)

Position of Parts in Seat <LHD>

