



- N 27 Junction Connector
- O 20 Junction Connector
- O 24 Front Seat Inner Belt (Front RH)
- T 1 Power Seat Motor (Front RH Seat Slide Control)
- T 2 Power Seat Motor (Front RH Seat Front Vertical Control)
- T 4 Power Seat Motor (Front RH Seat Lifter Control)
- T 8 Power Seat SW (Front RH Seat)
- T 9 Power Seat SW (Front RH Seat Lumbar Support Control)
- T 18 Junction Connector
- T 20 Position Control ECU and SW
- T 21 Position Control ECU and SW
- U 1 Power Seat Motor (Front LH Seat Slide Control)
- U 7 Power Seat SW (Front LH Seat)
- U 8 Power Seat SW (Front LH Seat Lumbar Support Control)
- U 11 Junction Connector
- Y 1 Side Airbag Squib (RH)
- Z 1 Side Airbag Squib (LH)
- j 1 Power Seat Motor (Front RH Seat Reclining Control)
- j 2 Power Seat Motor (Front RH Seat Lumbar Support Control)
- k 1 Power Seat Motor (Front LH Seat Reclining Control)
- k 2 Power Seat Motor (Front LH Seat Lumbar Support Control)

Position of Parts in Seat <RHD>

