


Position of Parts in Engine Compartment <RHD 1KD-FTV>

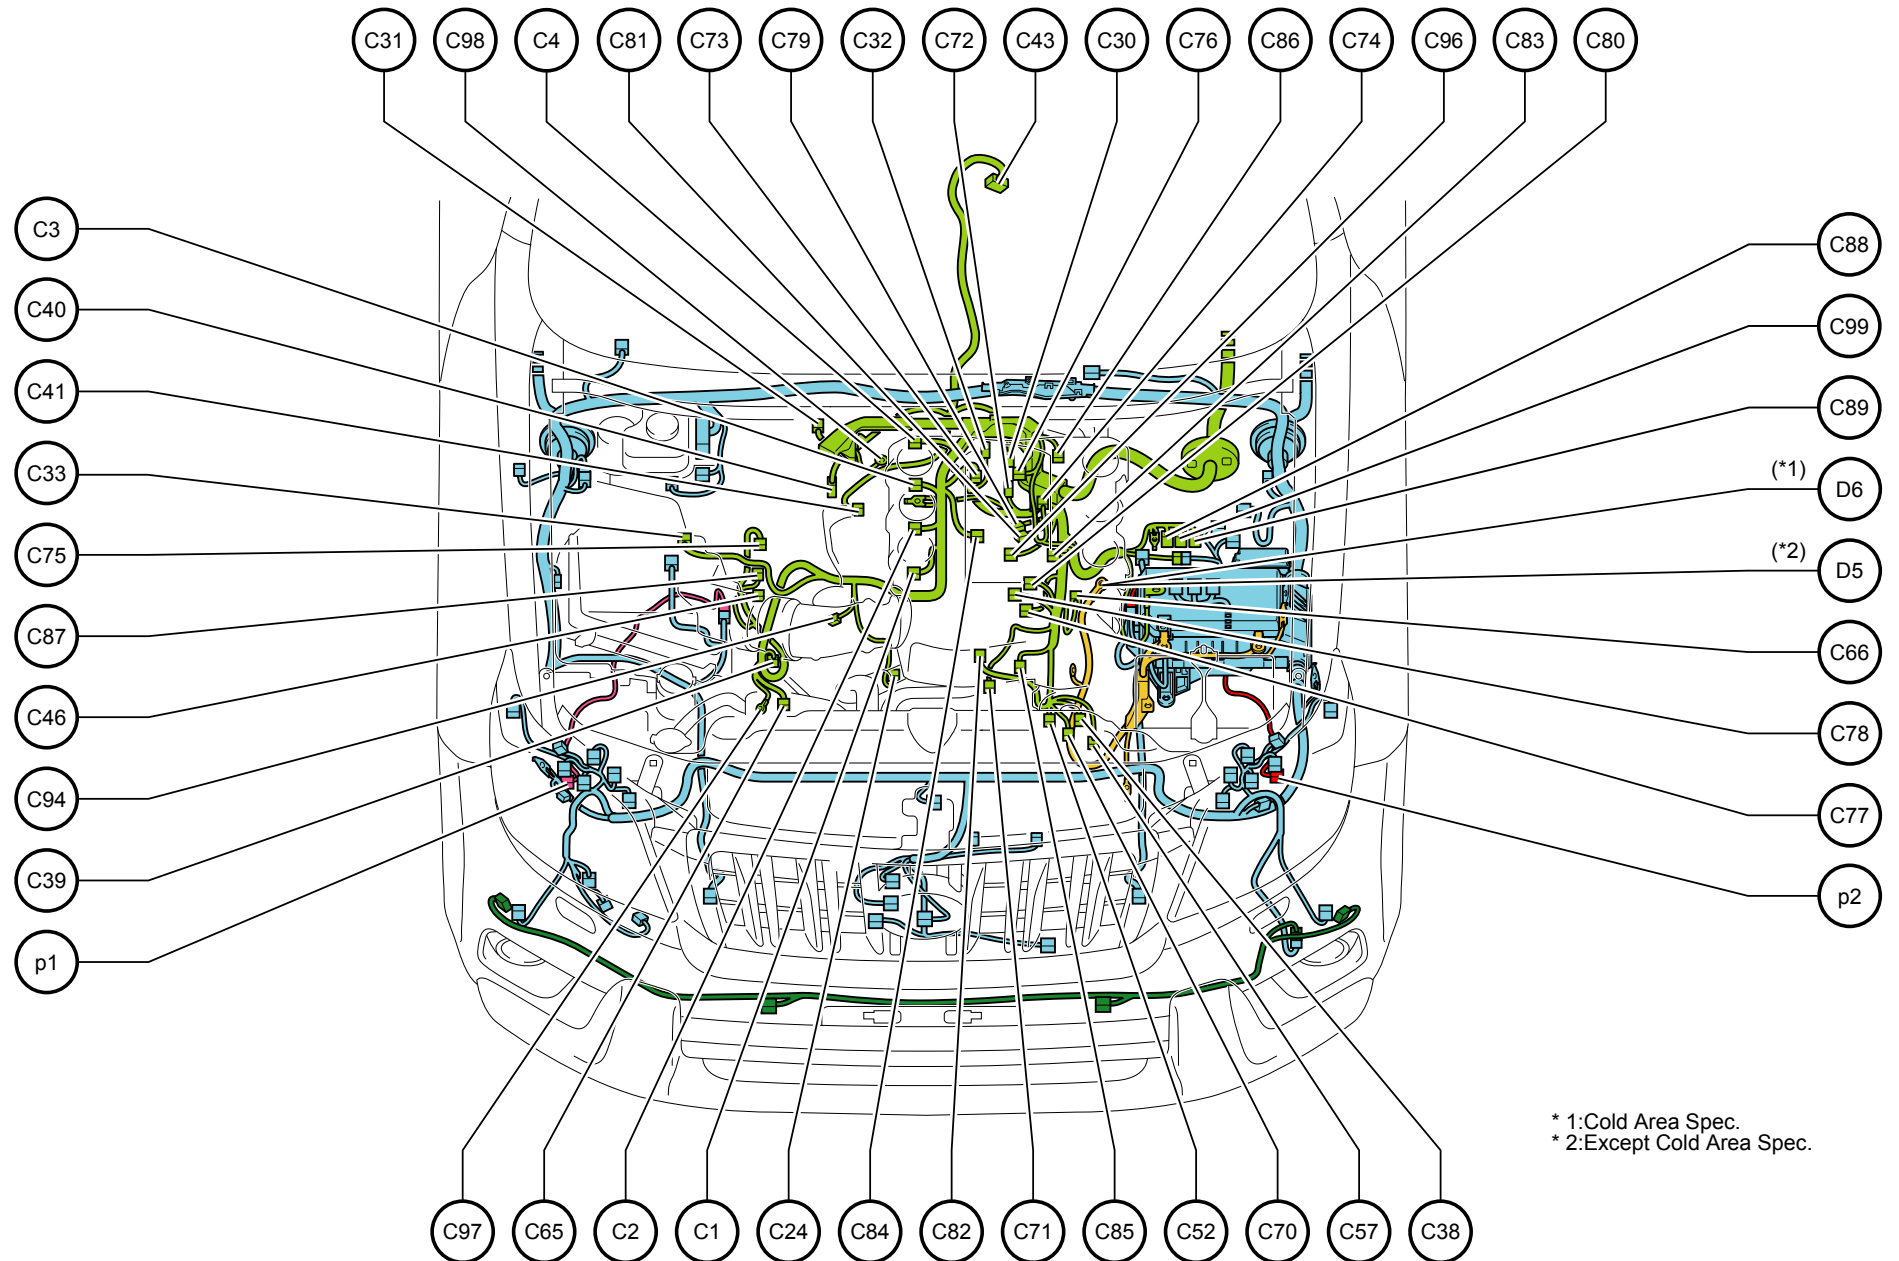

* 1: Cold Area Spec.
* 2: Except Cold Area Spec.

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 46 Engine Oil Level Sensor
- C 52 Cam Position Sensor
- C 57 Power Steering Oil Pressure Switch
- C 65 Generator Assembly
- C 66 Starter Assembly
- C 70 Crank Position Sensor
- C 71 Suction Control Valve
- C 72 Pressure Discharge Valve
- C 73 Diesel Throttle Body Assembly
- C 74 Diesel Throttle Body Assembly
- C 75 DC Motor
- C 76 Electric Vacuum Regulating Valve Assembly
- C 77 VSV (for EGR Cut)
- C 78 No. 2 EGR Valve Assembly
- C 79 VSV (for No. 2 Swirl Control Valve)
- C 80 VSV (for Engine Mounting)
- C 81 VSV (for No. 1 Swirl Control Valve)
- C 82 Fuel Pressure Sensor
- C 83 Diesel Turbo Pressure Sensor
- C 84 Intake Air Temperature Sensor
- C 85 Fuel Temperature Sensor
- C 86 Electric EGR Control Valve Sensor
- C 87 Nozzle Vane Position Sensor
- C 88 Injector Driver
- C 89 Injector Driver
- C 94 Viscous with Magnet Clutch Heater Assembly
- C 96 Engine Oil Pressure Switch Assembly
- C 97 Generator Assembly
- C 98 Glow Plug Assembly
- C 99 Injector Driver

- D 5 Starter Assembly
- D 6 Starter Assembly

- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

