 


Position of Parts in Body <LHD 3-Door>

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
\* 1:w/ Entry & Start System  
 \* 2:w/o Entry & Start System

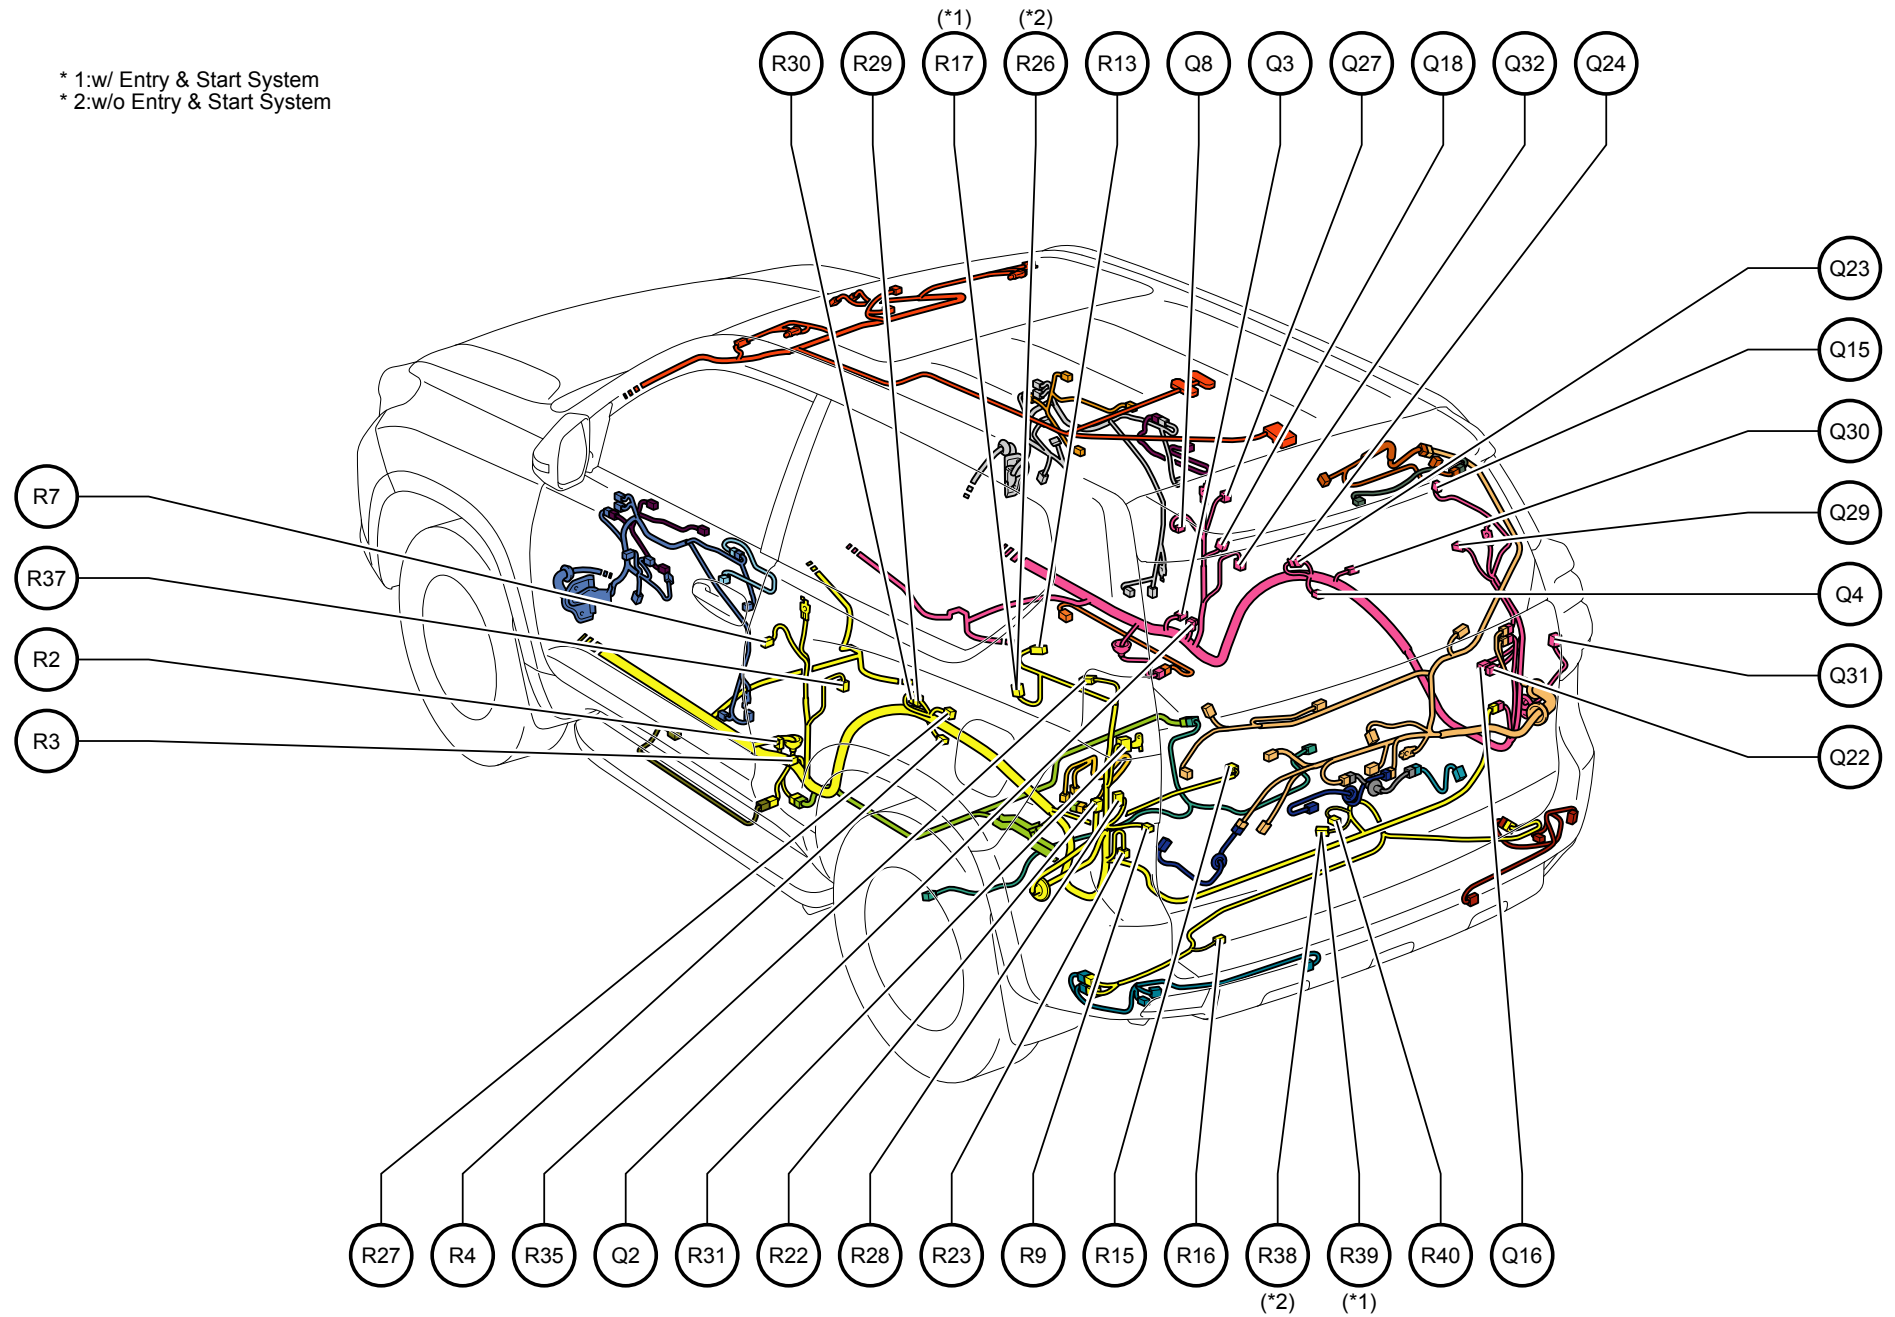

Q 2 Front Seat Outer Belt Assembly RH  
Q 3 Front Seat Outer Belt Assembly RH  
Q 4 Rear Side Airbag Sensor Assembly RH  
Q 8 Front Door Courtesy Light Switch Assembly RH  
Q 15 Rear Header Speaker Assembly RH  
Q 16 Rear Power Point Socket Assembly  
Q 18 Theft Warning Siren Assembly  
Q 22 Power Outlet Socket  
Q 23 Junction Connector  
Q 24 Junction Connector  
Q 27 Voltage Inverter Assembly  
Q 29 Curtain Shield Airbag Assembly RH  
Q 30 No. 1 Speaker with Box Assembly  
Q 31 Rear Combination Light Assembly RH  
Q 32 Rear Speaker Set RH

R 2 Front Seat Outer Belt Assembly LH  
R 3 Front Seat Outer Belt Assembly LH  
R 4 Rear Side Airbag Sensor Assembly LH  
R 7 Front Door Courtesy Light Switch Assembly LH  
R 9 Back Door Courtesy Light Switch Assembly  
R 13 Rear Header Speaker Assembly LH  
R 15 No. 3 Indoor Electrical Key Antenna Assembly  
R 16 Outside Luggage Electrical Key Antenna  
R 17 Door Control Receiver  
R 22 Rear Combination Light Assembly LH  
R 23 Trailer Socket  
R 26 Door Control Receiver  
R 27 Junction Connector  
R 28 Junction Connector  
R 29 Junction Connector  
R 30 Junction Connector  
R 31 Junction Connector  
R 35 Curtain Shield Airbag Assembly LH  
R 37 Rear Speaker Set LH  
R 38 Fuel Pump  
R 39 Fuel Tank Sub-Assembly  
R 40 Fuel Sender Gauge Assembly

Position of Parts in Body <LHD 3-Door>

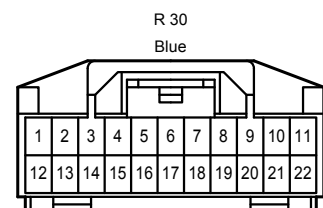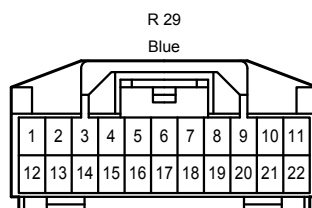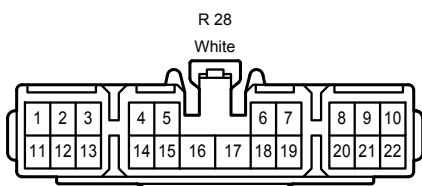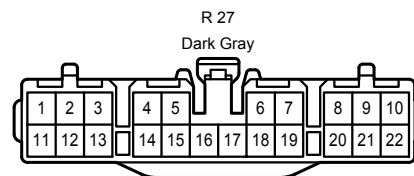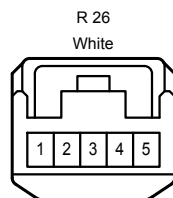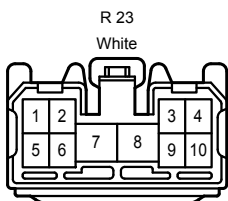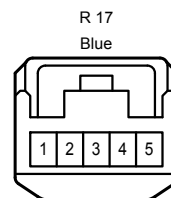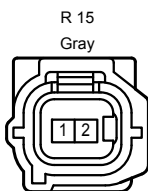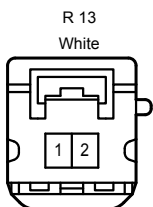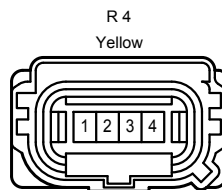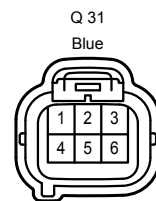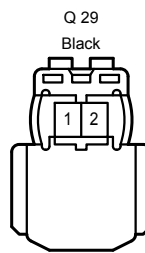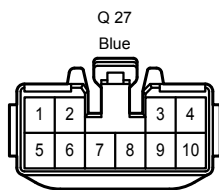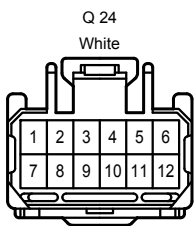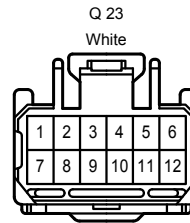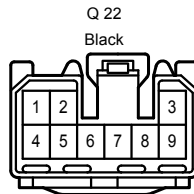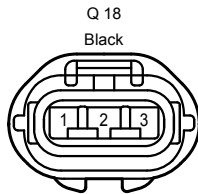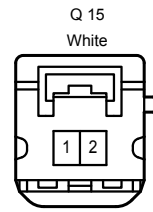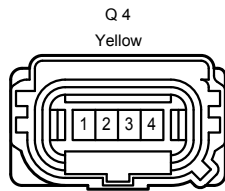

Position of Parts in Body <LHD 3-Door>

---

