



























Position of Parts in Body <RHD 3-Door>

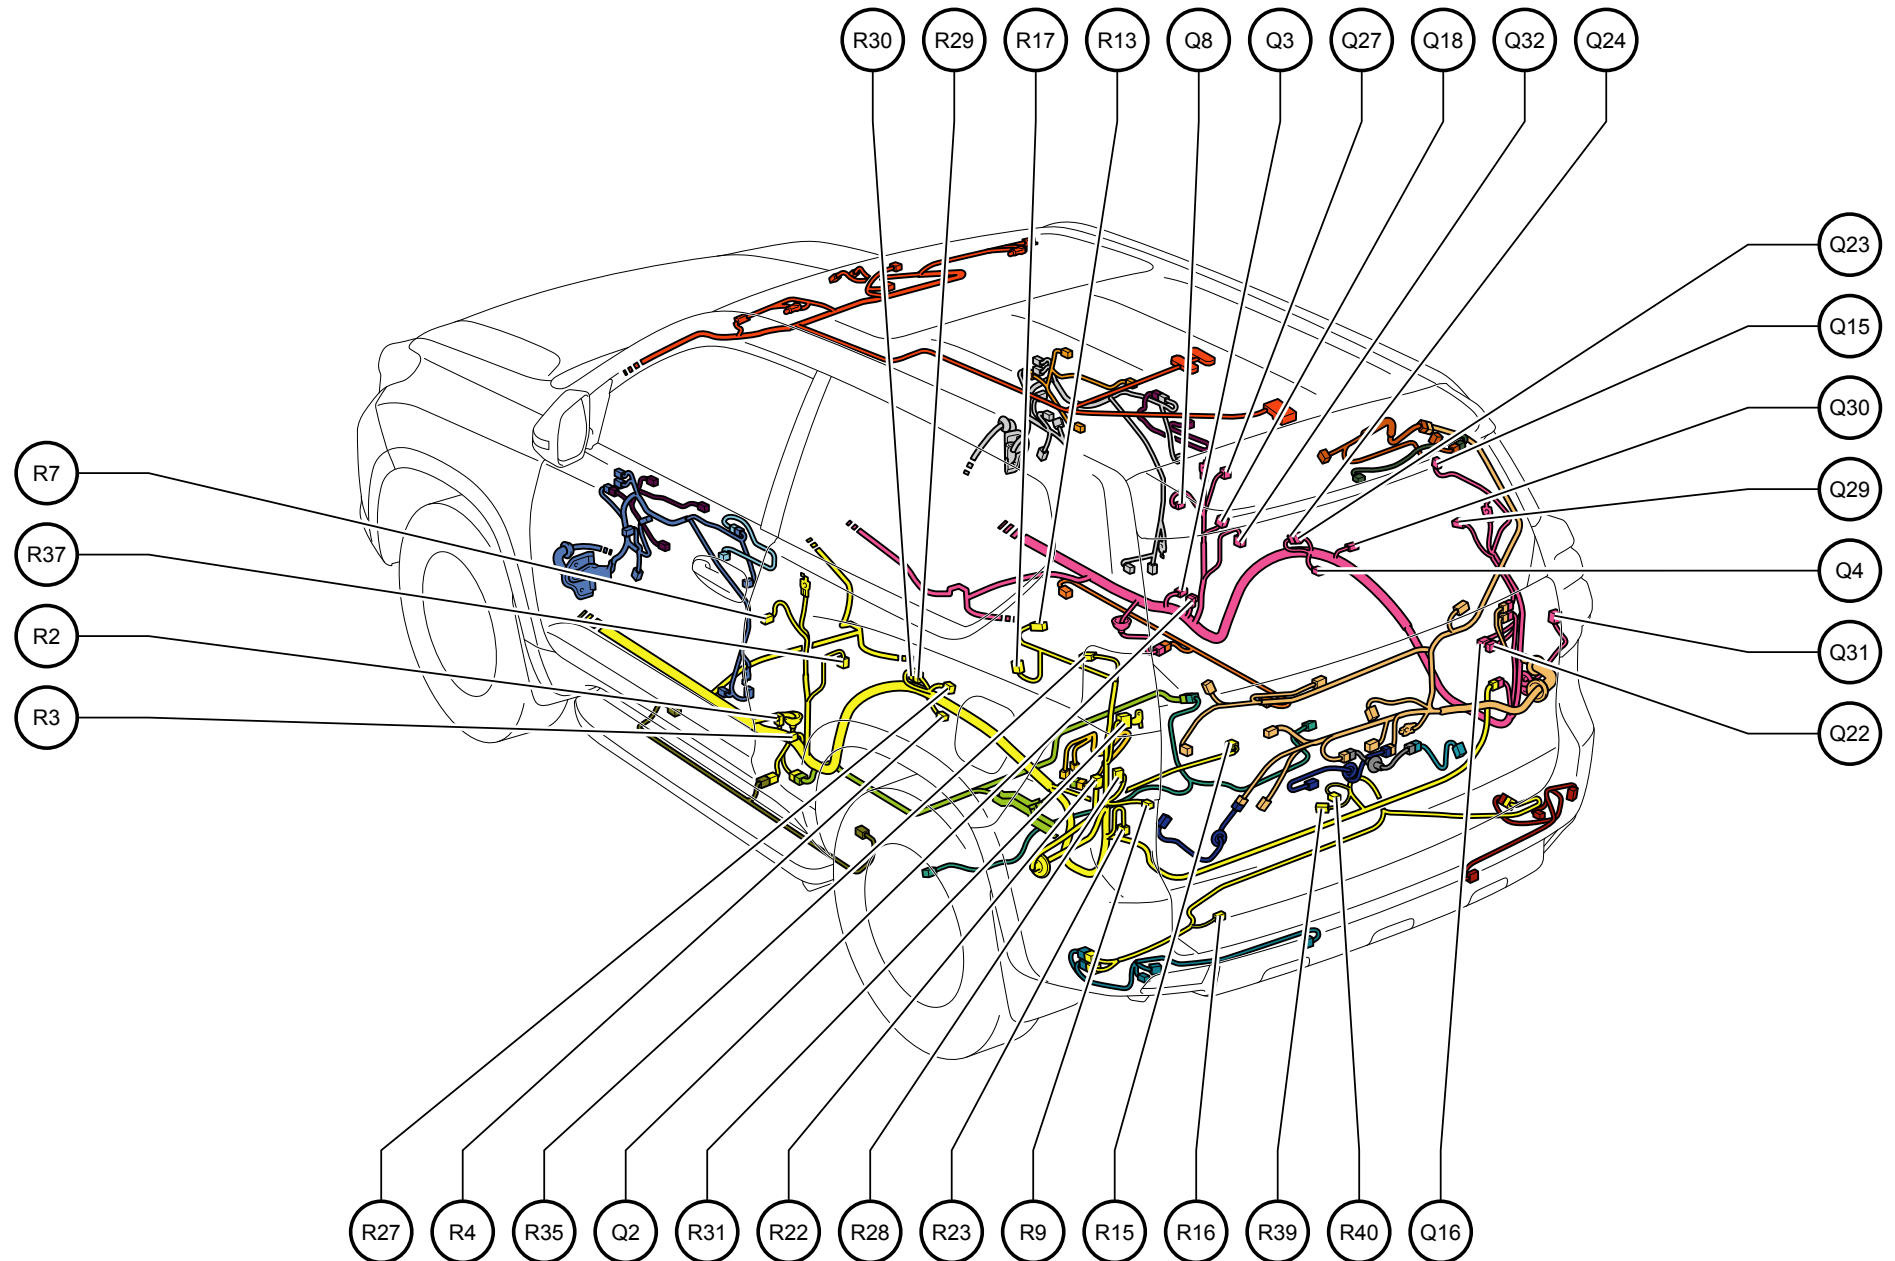

Q 2 Front Seat Outer Belt Assembly RH
 Q 3 Front Seat Outer Belt Assembly RH
 Q 4 Rear Side Airbag Sensor Assembly RH
 Q 8 Front Door Courtesy Light Switch Assembly RH
 Q 15 Rear Header Speaker Assembly RH
 Q 16 Rear Power Point Socket Assembly
 Q 18 Theft Warning Siren Assembly
 Q 22 Power Outlet Socket
 Q 23 Junction Connector
 Q 24 Junction Connector
 Q 27 Voltage Inverter Assembly
 Q 29 Curtain Shield Airbag Assembly RH
 Q 30 No. 1 Speaker with Box Assembly
 Q 31 Rear Combination Light Assembly RH
 Q 32 Rear Speaker Set RH

R 2 Front Seat Outer Belt Assembly LH
 R 3 Front Seat Outer Belt Assembly LH
 R 4 Rear Side Airbag Sensor Assembly LH
 R 7 Front Door Courtesy Light Switch Assembly LH
 R 9 Back Door Courtesy Light Switch Assembly
 R 13 Rear Header Speaker Assembly LH
 R 15 No. 3 Indoor Electrical Key Antenna Assembly
 R 16 Outside Luggage Electrical Key Antenna
 R 17 Door Control Receiver
 R 22 Rear Combination Light Assembly LH
 R 23 Trailer Socket
 R 27 Junction Connector
 R 28 Junction Connector
 R 29 Junction Connector
 R 30 Junction Connector
 R 31 Junction Connector
 R 35 Curtain Shield Airbag Assembly LH
 R 37 Rear Speaker Set LH
 R 39 Fuel Tank Sub-Assembly
 R 40 Fuel Sender Gauge Assembly

        Position of Parts in Body <RHD 3-Door>

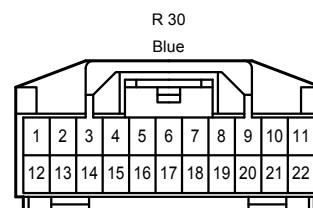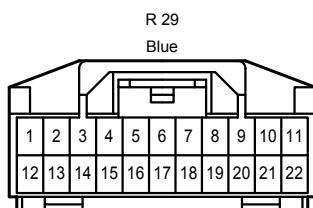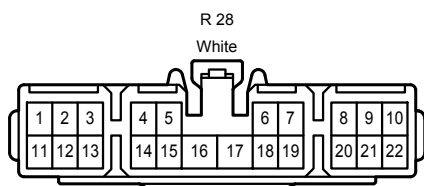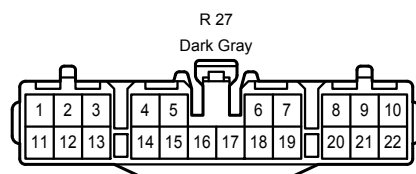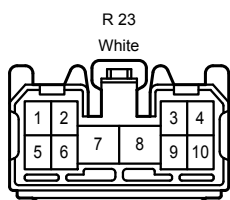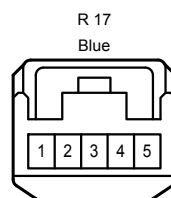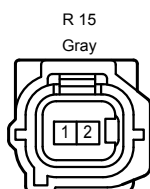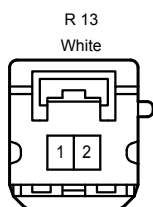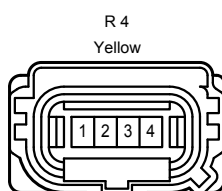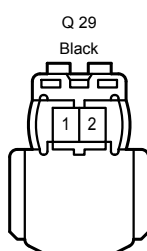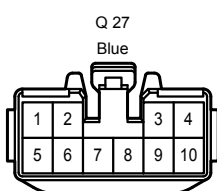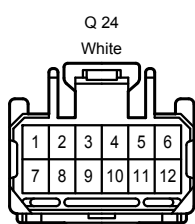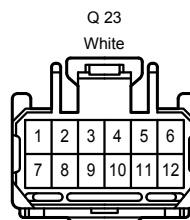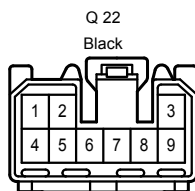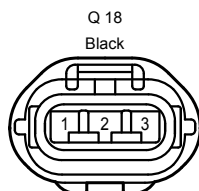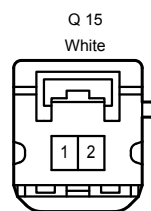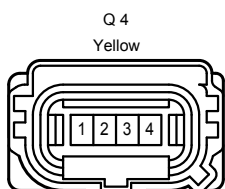

Position of Parts in Body <RHD 3-Door>

