


# Position of Parts in Body <RHD 5-Door>










 
 
 

 
 



 


 





 


 
 
- \* 1:w/ Entry & Start System
- \* 2:w/o Entry & Start System
- \* 3:w/ Rear A/C
- \* 4:w/o Rear A/C

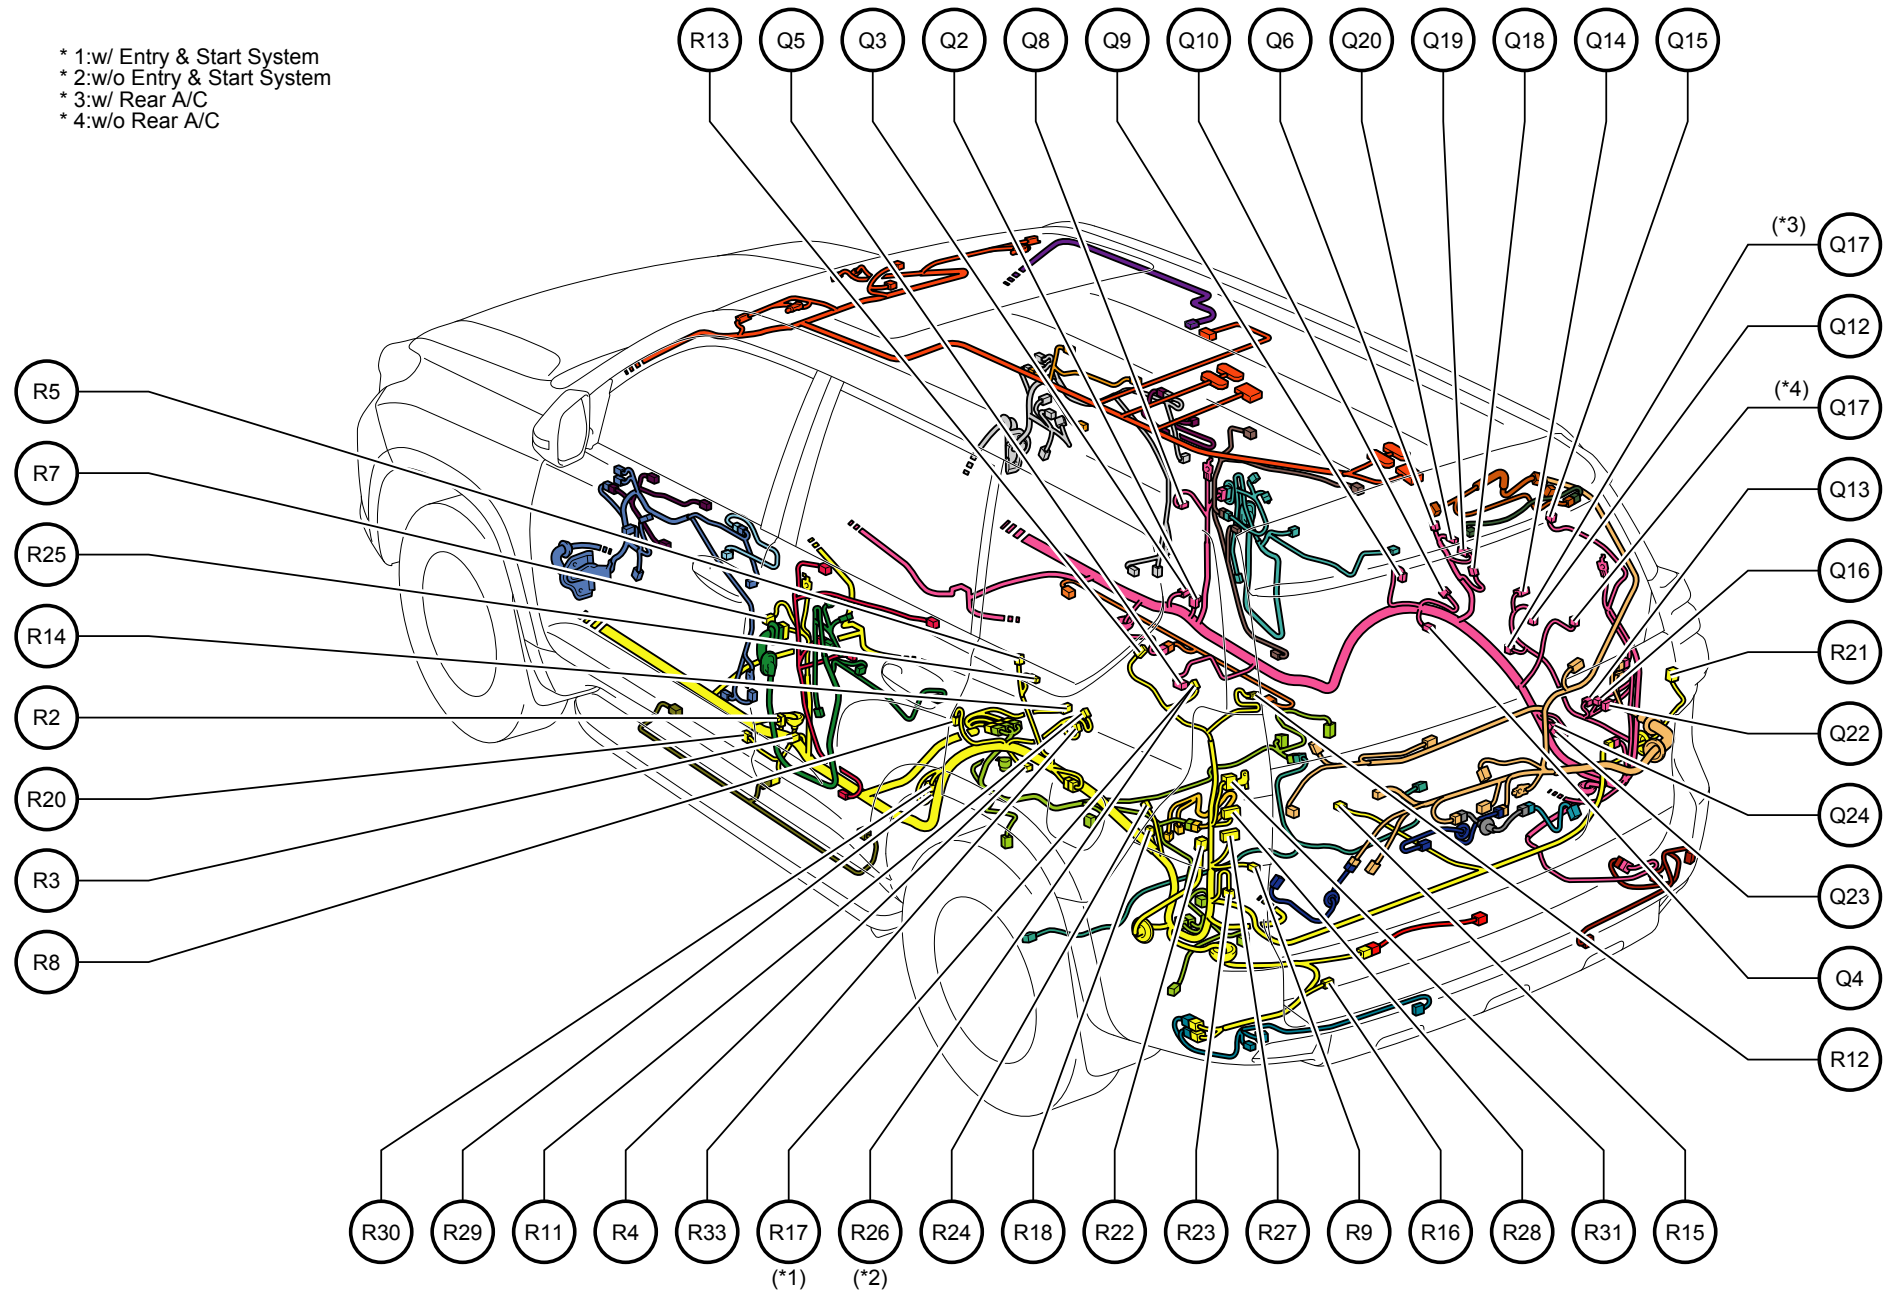

Q 2 Front Seat Outer Belt Assembly RH  
 Q 3 Front Seat Outer Belt Assembly RH  
 Q 4 Rear Side Airbag Sensor Assembly RH  
 Q 5 Rear Floor Side Airbag Sensor  
 Q 6 Curtain Shield Airbag Assembly RH  
 Q 8 Front Door Courtesy Light Switch Assembly RH  
 Q 9 Rear Door Courtesy Light Switch Assembly RH  
 Q 10 Rear Power Seat Switch RH  
 Q 12 Rear Blower with Fan Motor Sub-Assembly  
 Q 13 Rear A/C Blower Assembly  
 Q 14 Rear Blower with Fan Motor Sub-Assembly  
 Q 15 Rear Header Speaker Assembly RH  
 Q 16 Rear Power Point Socket Assembly  
 Q 17 Voltage Inverter Assembly  
 Q 18 Theft Warning Siren Assembly  
 Q 19 Rear No. 1 Cooler Thermistor  
 Q 20 Glass Breakage Sensor RH (Quarter Glass RH)  
 Q 22 Power Outlet Socket  
 Q 23 Junction Connector  
 Q 24 Junction Connector

R 2 Front Seat Outer Belt Assembly LH  
 R 3 Front Seat Outer Belt Assembly LH  
 R 4 Rear Side Airbag Sensor Assembly LH  
 R 5 Curtain Shield Airbag Assembly LH  
 R 7 Front Door Courtesy Light Switch Assembly LH  
 R 8 Rear Door Courtesy Light Switch Assembly LH  
 R 9 Back Door Courtesy Light Switch Assembly  
 R 11 Rear Power Seat Switch LH  
 R 12 No. 2 Fold Seat Switch Assembly  
 R 13 Rear Header Speaker Assembly LH  
 R 14 No. 2 Indoor Electrical Key Antenna Assembly  
 R 15 No. 3 Indoor Electrical Key Antenna Assembly  
 R 16 Outside Luggage Electrical Key Antenna  
 R 17 Door Control Receiver  
 R 18 Rear Acceleration Sensor Assembly  
 R 20 Stabilizer Control with Accumulator Housing Assembly  
 R 21 Rear Combination Light Assembly RH  
 R 22 Rear Combination Light Assembly LH  
 R 23 Trailer Socket  
 R 24 No. 1 Speaker with Box Assembly  
 R 25 Glass Breakage Sensor LH (Quarter Glass LH)  
 R 26 Door Control Receiver  
 R 27 Junction Connector  
 R 28 Junction Connector  
 R 29 Junction Connector  
 R 30 Junction Connector  
 R 31 Junction Connector  
 R 33 No. 1 Fold Seat Switch Assembly

# Position of Parts in Body <RHD 5-Door>

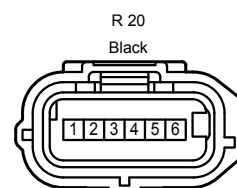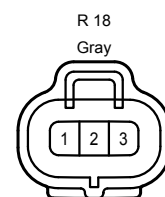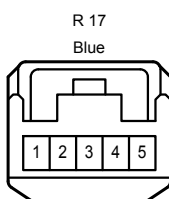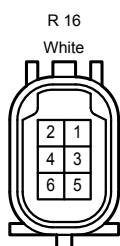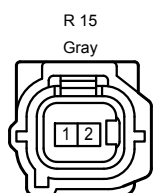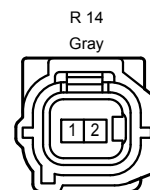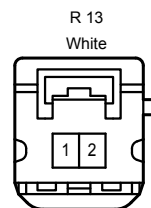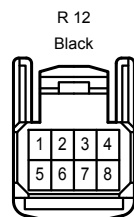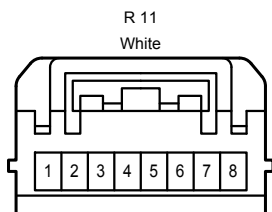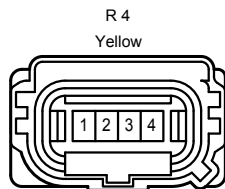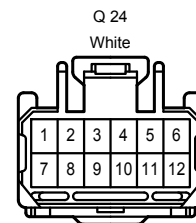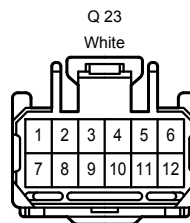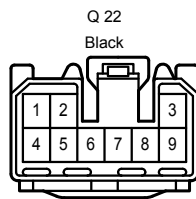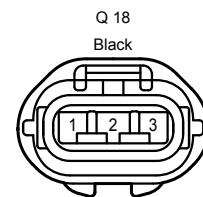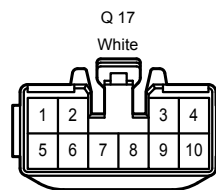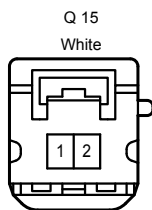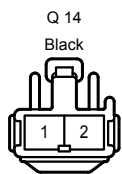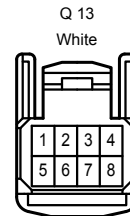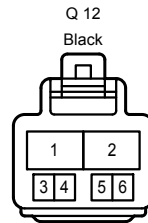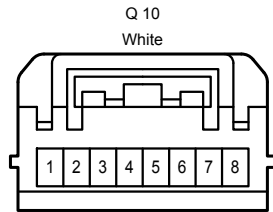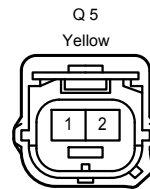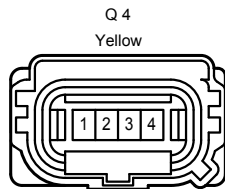

# Position of Parts in Body <RHD 5-Door>


R 21  
Blue




R 22  
Blue




R 23  
White

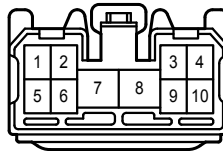


R 24  
White

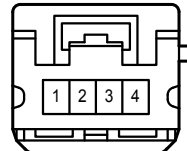


R 25  
White

 


R 26  
White

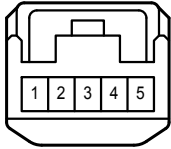


R 27  
Dark Gray

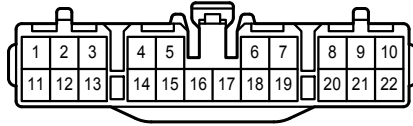


R 28  
White

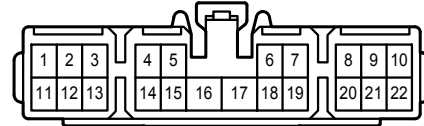


R 29  
Blue

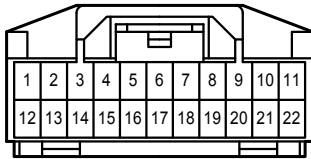

R 30  
Blue

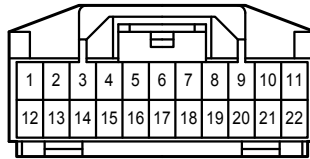

R 31  
White

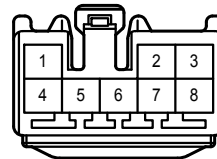

R 33  
Black

