


Position of Parts in Seat <LHD Front Seat w/ Power Seat>

\* 1:w/ Seat Position Memory  
 \* 2:w/o Seat Position Memory

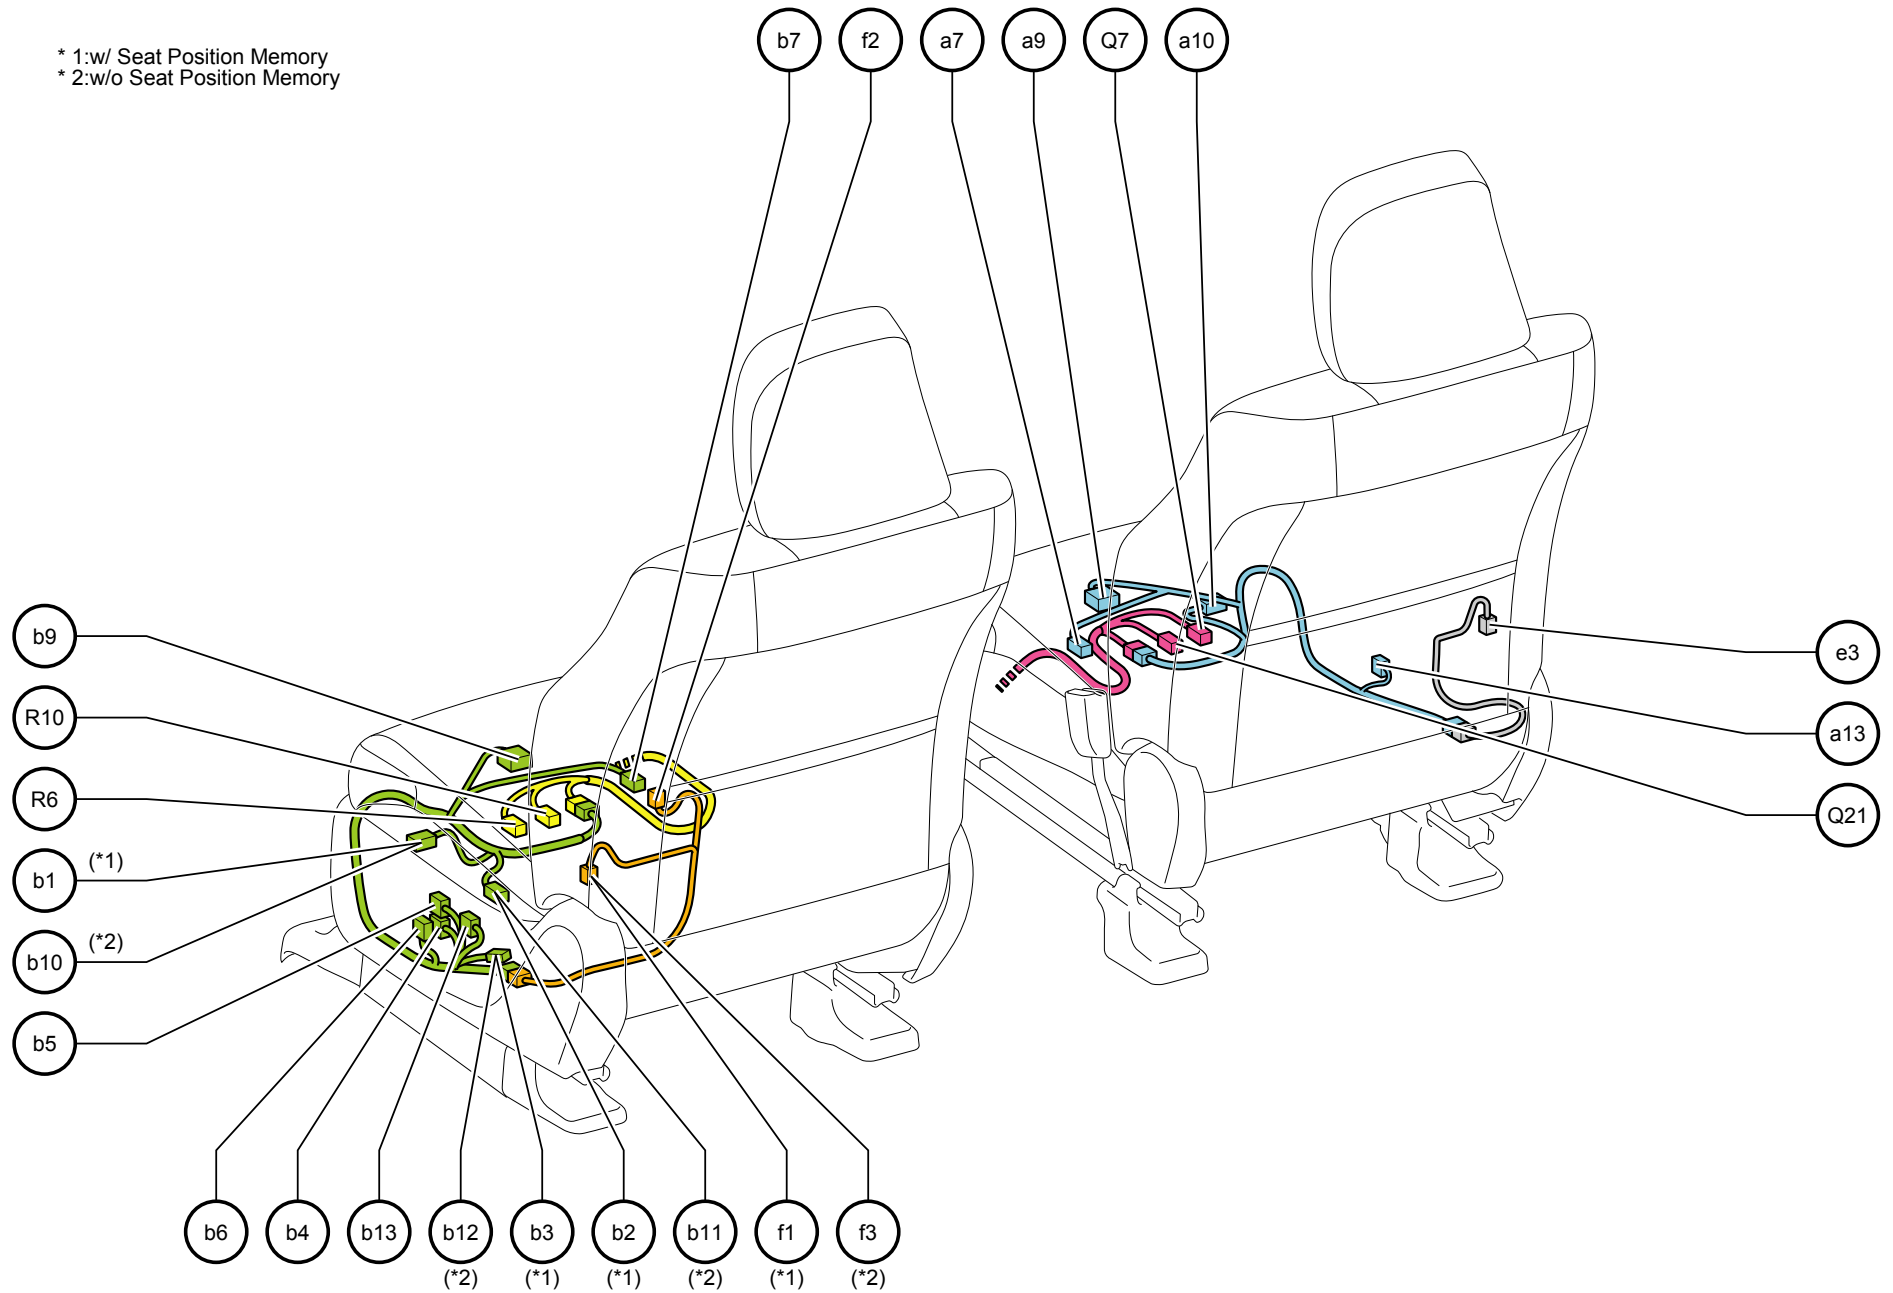

- Q 7 Front Side Airbag Squib Circuit RH
- Q 21 Front Seat Inner Belt Assembly RH
  
- R 6 Front Side Airbag Squib Circuit LH
- R 10 Front Seat Inner Belt Assembly LH
  
- a 7 Front Seat Heater Assembly RH
- a 9 Junction Connector
- a 10 Separate Type Front Seat Cushion Spring Assembly RH
- a 13 Front Power Seat Switch RH
  
- b 1 Separate Type Front Seat Cushion Spring Assembly LH
- b 2 Separate Type Front Seat Cushion Spring Assembly LH
- b 3 Separate Type Front Seat Cushion Spring Assembly LH
- b 4 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 5 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 6 Front Power Seat Switch Assembly LH
- b 7 Front Seat Heater Assembly LH
- b 9 Junction Connector
- b 10 Separate Type Front Seat Cushion Spring Assembly LH
- b 11 Separate Type Front Seat Cushion Spring Assembly LH
- b 12 Separate Type Front Seat Cushion Spring Assembly LH
- b 13 Front Power Seat Switch LH
  
- e 3 Separate Type Front Seat Back Assembly RH
  
- f 1 Separate Type Front Seat Back Assembly LH
- f 2 Separate Type Front Seat Back Assembly LH
- f 3 Separate Type Front Seat Back Assembly LH

Position of Parts in Seat <LHD Front Seat w/ Power Seat>

