


■ HEADLIGHT BEAM LEVEL CONTROL SYSTEM

This system keeps the beam of the headlights adjusted to the appropriate level in accordance with the number (weight) of passengers and volume of luggage. The headlight beam level can be adjusted by operating the headlight beam level control switch. This system is standard equipment for Europe.

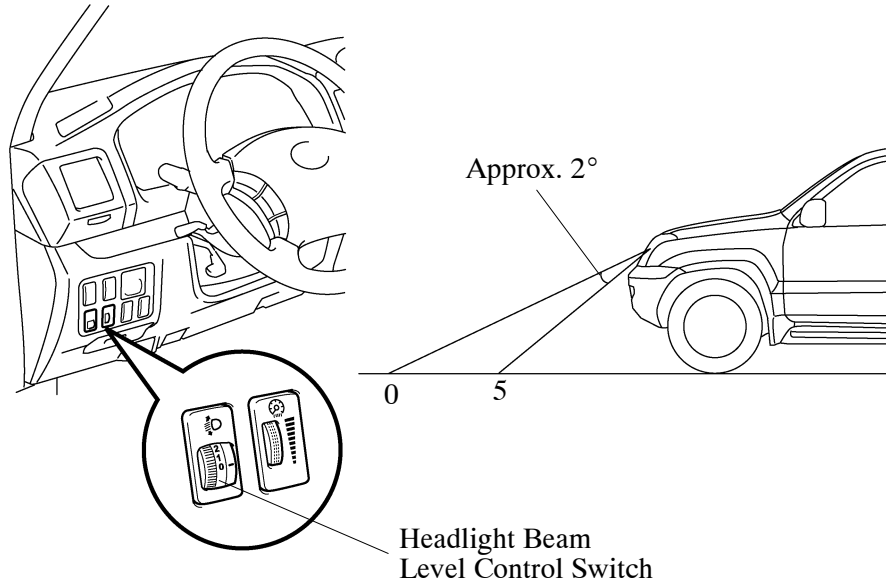

233BE06

■ LIGHT AUTO TURN-OFF SYSTEM

- When the ignition key is turned from ON or ACC to LOCK position and driver's door is opened with the taillights and headlights on, this system automatically turns them off.
- This system is controlled by the Body ECU.

■ ILLUMINATED ENTRY SYSTEM

- When a door is unlocked through a key operation or transmitter operation, or if a door is opened or closed, the illuminated entry system turns ON the interior light and the ignition key illumination.
- If the ignition switch is turned to the ACC or ON position or if all doors are locked during the 15 seconds in which these lights are ON, they will immediately turn OFF.
- This system is controlled by the Body ECU.