


■ SEAT HEATER

- The seat heater for the driver and front passenger seats are provided on the VX grade model for the G.C.C. and General countries and on the GX grade model for Europe as optional equipment.
- By operating the dial-type seat heater control switch, which is located in the console box, the temperature can be controlled steplessly within the range of 32°C to 39°C (90°F to 102°F).
- Whether the seat heater is ON or OFF can be determined by illuminating condition of the indicator light of the seat heater control switch.

► System Diagram ◀

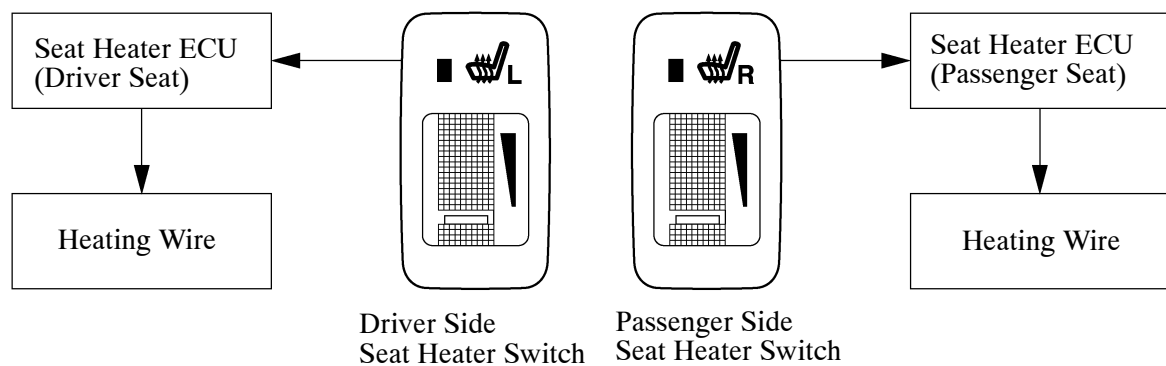

Driver Side

Passenger Side

232BE57

BE