

■ OUTSIDE REAR VIEW MIRROR

- The electrical remote control type mirrors are used as standard equipment on all models.
- The model for Europe is provided with a mirror heater to remove any water drops from the mirror surface.
- A manual electrical retractable mirror function is used as optional equipment on models for Europe, G.C.C. countries and General countries.
- The outside rear view mirror has following functions:

Function	Outline
Electrical Remote Control type Mirror	When the mirror control switch is operated, this function moves the mirror surface vertically or laterally to enable the driver to attain an optimal mirror angle. Setting the mirror master switch to the “R” position operates the right mirror, and to the “L” position operates the left mirror.
Manual Electrical Retractable Mirror*1	This function retracts the outside rear view mirrors when the mirror folding switch is pressed.
Mirror Heater*2	Mirror heater is activated when the mirror heater switch is ON. This switch is provided with a timer function to keep the mirror heater ON for approximately 5 minutes.

*1: Optional Equipment for Europe, G.C.C. countries and General countries Models

*2: Optional Equipment for Europe Models

► System Diagram ◀

