

■ SEAT BELT

1. General

- The following types of seat belts are provided.

Seat	Seat Belt Type	Remarks
Driver & Front Passenger	3-point ELR* ¹	Electrical sensing type Pretensioner & Force Limiter
Rear No.1 (LH, RH, and Center)	3-point ELR* ¹ (With Child Restraint System)	—
Rear No.2 (LH, RH, and Center)	3-point ELR* ¹	—

*¹: Emergency Locking Retractor

- The ability for the airbag sensor assembly to memorize the driver is and front passenger's seat belt condition during the airbag deployment has been added.

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.

In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

