


5. Initialize Function during Part Replacement

- The initialize function must invariably be performed whenever one of the conditions indicated in the table below occurs.

Parts Name	Condition	Initialize Item
Television Camera	<ul style="list-style-type: none"> • Camera position shifted • Removal and reassembly • Replacement • Deformed when the mounted area is struck 	Camera position adjustment <ul style="list-style-type: none"> – Vertical position – Horizontal position – Roll angle, pan angle, tilt angle
Television Camera ECU	Replacement	<ul style="list-style-type: none"> • Neutral steering point in memory • Maximum side-to-side steering angle in memory • Camera position adjustment <ul style="list-style-type: none"> – Vertical position – Horizontal position – Roll angle, pan angle, tilt angle
Steering Angle Sensor	<ul style="list-style-type: none"> • Replacement • Removal and reassembly 	<ul style="list-style-type: none"> • Neutral steering point in memory • Maximum side-to-side steering angle in memory

- The initialize function described above is performed on the diagnosis menu screen.
- The method for starting the diagnosis menu screen is the same as in the navigation system.

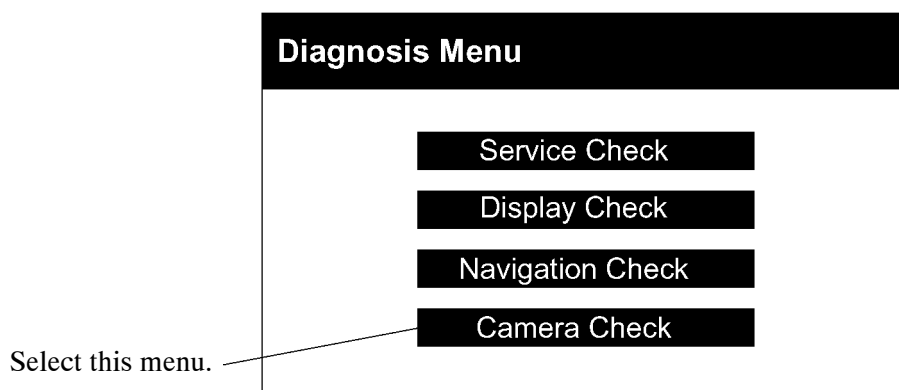

00WBE18Y