



## 5. Warning and Indicator Lights and VSC Warning Buzzer

The warning and indicator lights and VSC warning buzzer operate as follows.

○ : Illuminates (Continuous Sound)    △ : Blinks (Intermittent Sound)

Condition		Warning Light			Indicator Light			Buzzer
		BRAKE	ABS	VSC TRAC	VSC OFF			
Initial Check		○	○	○	○	○	○	
During Operation	A-TRC					△		
	VSC					△		△
	DAC					△	○	
	HAC					△		△
Driving Mode	H4L, L4L				○			
During Actuator Protection				✕	→ Changed	△	△ <sup>*2</sup>	△
Cannot operate due to a malfunction	ABS & Brake Assist		○					
	EBD	○	○					
	A-TRC			○		○ <sup>*1</sup>		
	VSC			○	○			
	DAC			○			△ <sup>*2</sup>	
	HAC			○				
Others	Low Brake Fluid Level	○		○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>		
	ABS Malfunction		○	○	○	○ <sup>*1</sup>	△ <sup>*2</sup>	
	Zero point calibration of yaw rate & deceleration sensor not done			○	○	○ <sup>*1</sup>		
	Low Accumulator Pressure	○	○	○	○	○ <sup>*1</sup>		○
	Skid Control ECU Malfunction	○	○	○	○			

\*1: Addition

\*2: Blinks when the DAC switch is pushed.

273GX80