


■ AIR CONDITIONER

General

- On the models equipped with the 1GR-FE engine, the ECU to control the compressor has been changed from the Engine ECU to the A/C ECU.

► System Diagram ◀

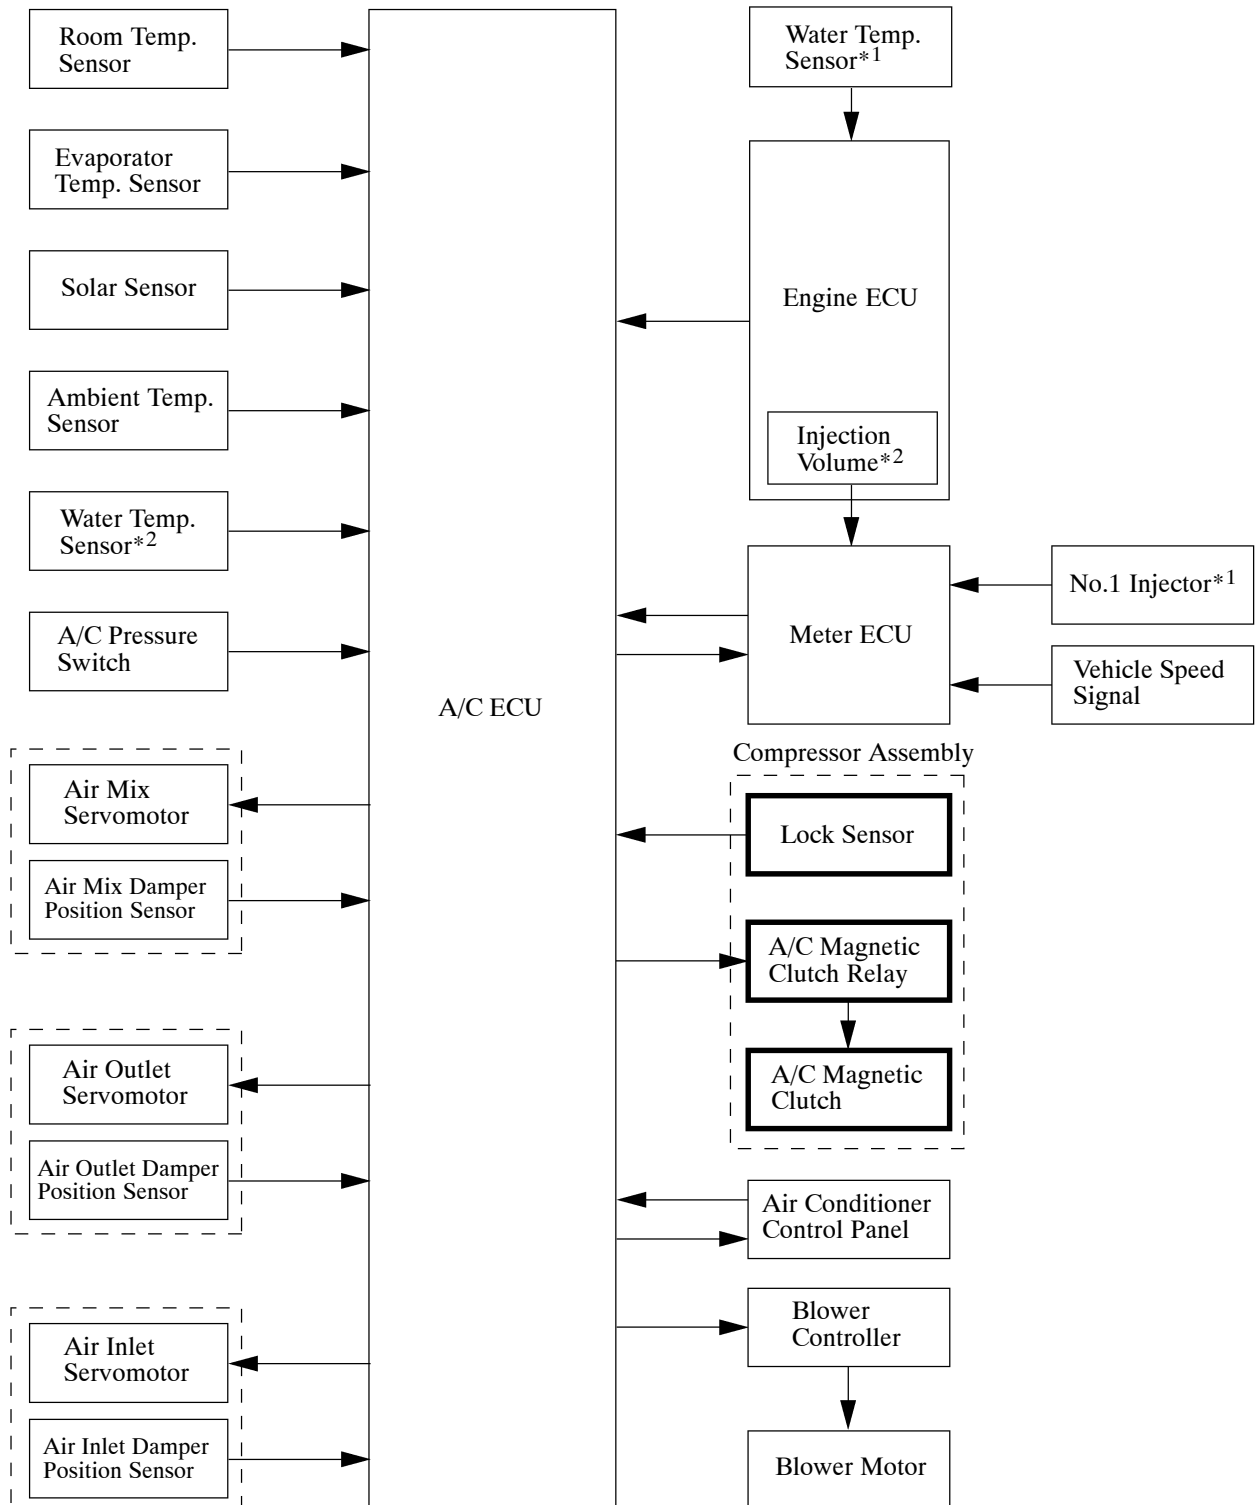

*1: Only for Models with 1GR-FE Engine

*2: Only for Models with 1KZ-TE Engine