


Position of Parts in Engine Compartment <RHD 1GR-FE>

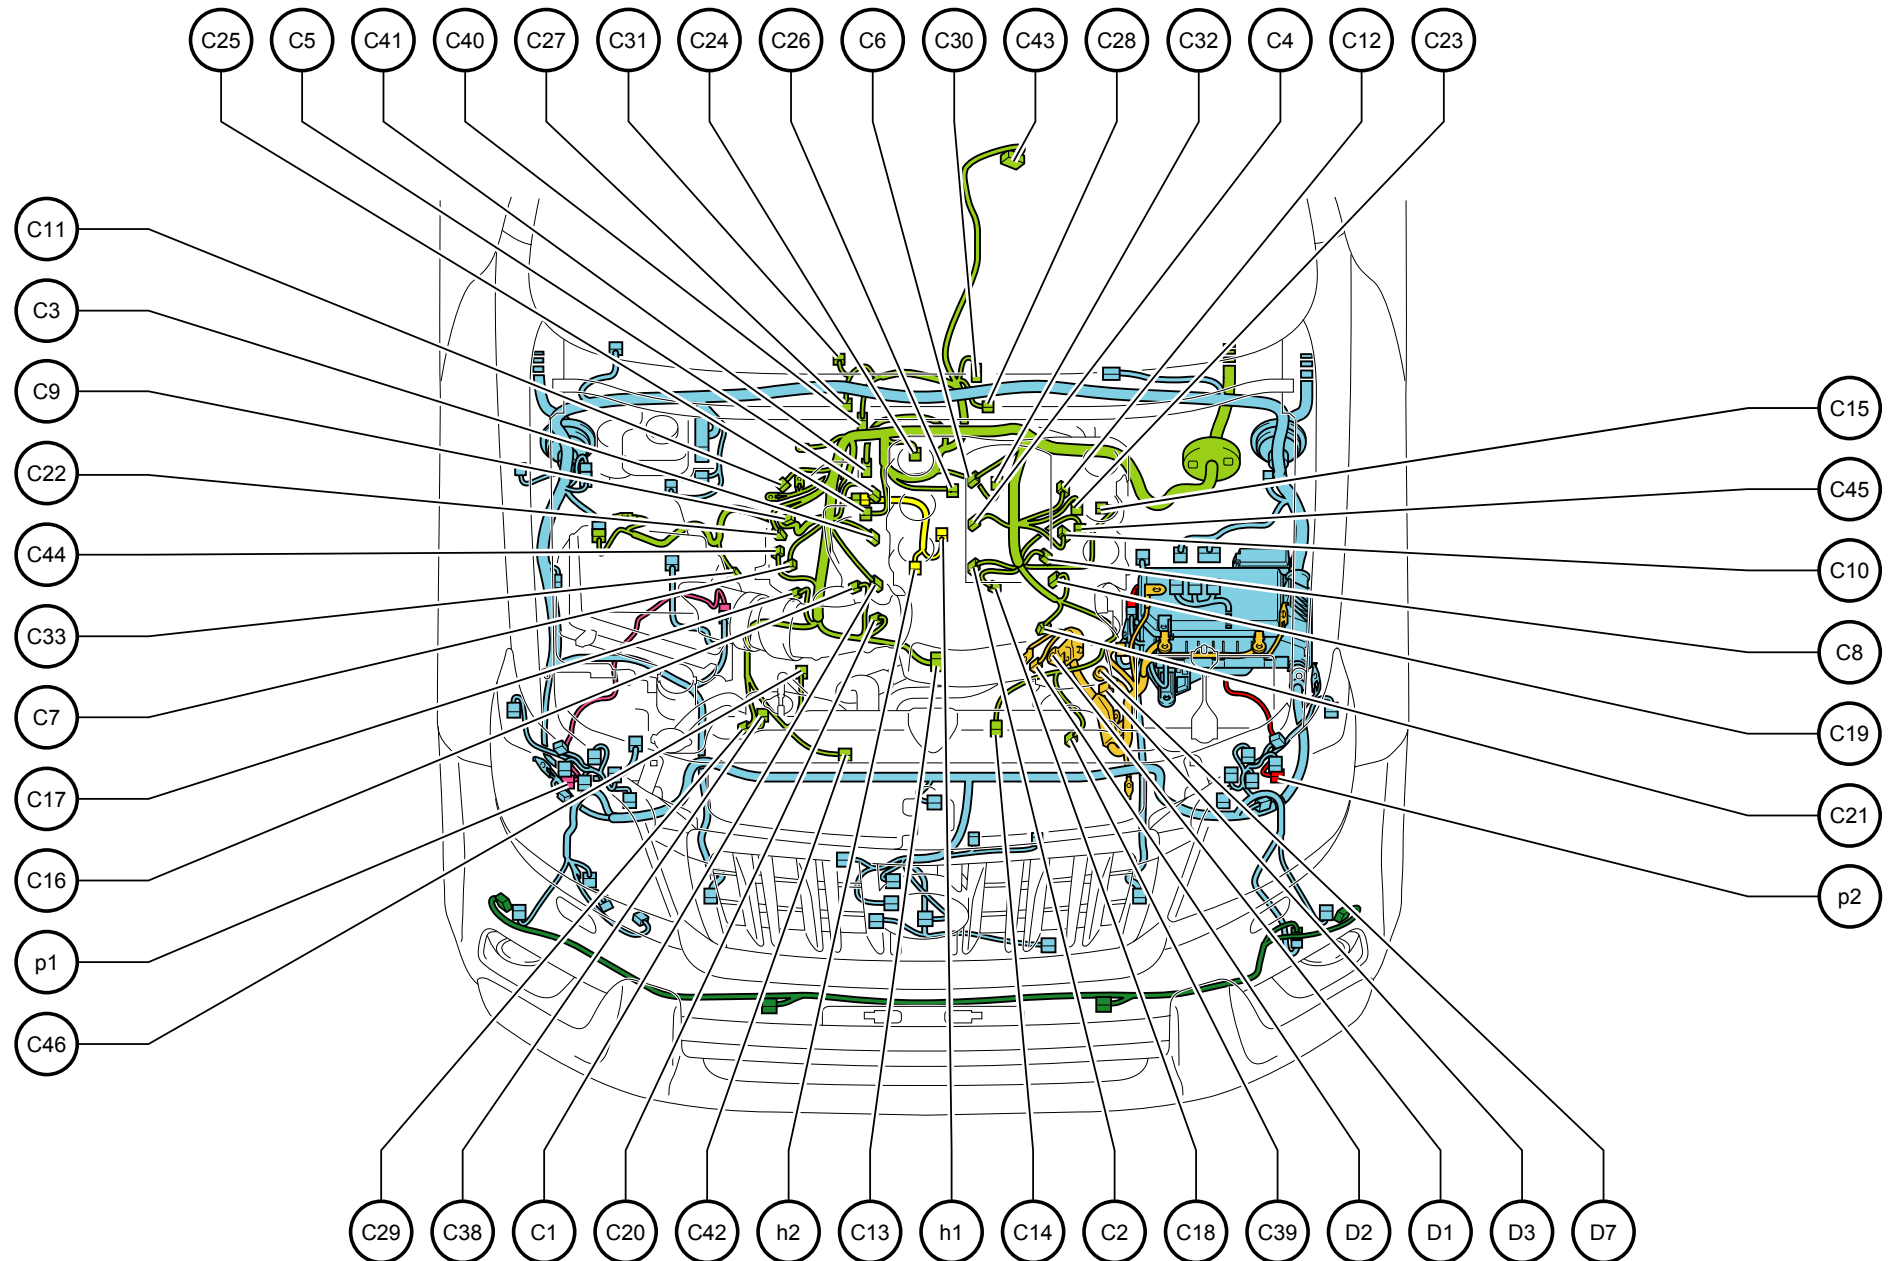


- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Fuel Injector Assembly No. 5
- C 6 Fuel Injector Assembly No. 6
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 11 Ignition Coil Assembly No. 5
- C 12 Ignition Coil Assembly No. 6
- C 13 Throttle Body Assembly
- C 14 Crank Position Sensor
- C 15 Purge VSV
- C 16 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- C 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 18 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- C 19 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 20 VVT Sensor (Bank 1 Intake Side)
- C 21 VVT Sensor (Bank 2 Intake Side)
- C 22 VVT Sensor (Bank 1 Exhaust Side)
- C 23 VVT Sensor (Bank 2 Exhaust Side)
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 25 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 26 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 28 Oxygen Sensor (Bank 2 Sensor 2)
- C 29 Power Steering Oil Pressure Switch
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 44 Air Pump Assembly (Bank 1)
- C 45 Air Pump Assembly (Bank 2)
- C 46 Engine Oil Level Sensor

- D 1 Starter Assembly
- D 2 Starter Assembly
- D 3 Generator Assembly
- D 7 Generator Assembly

- h 1 Knock Control Sensor (Bank 2)
- h 2 Knock Control Sensor (Bank 1)

- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <RHD 1GR-FE>

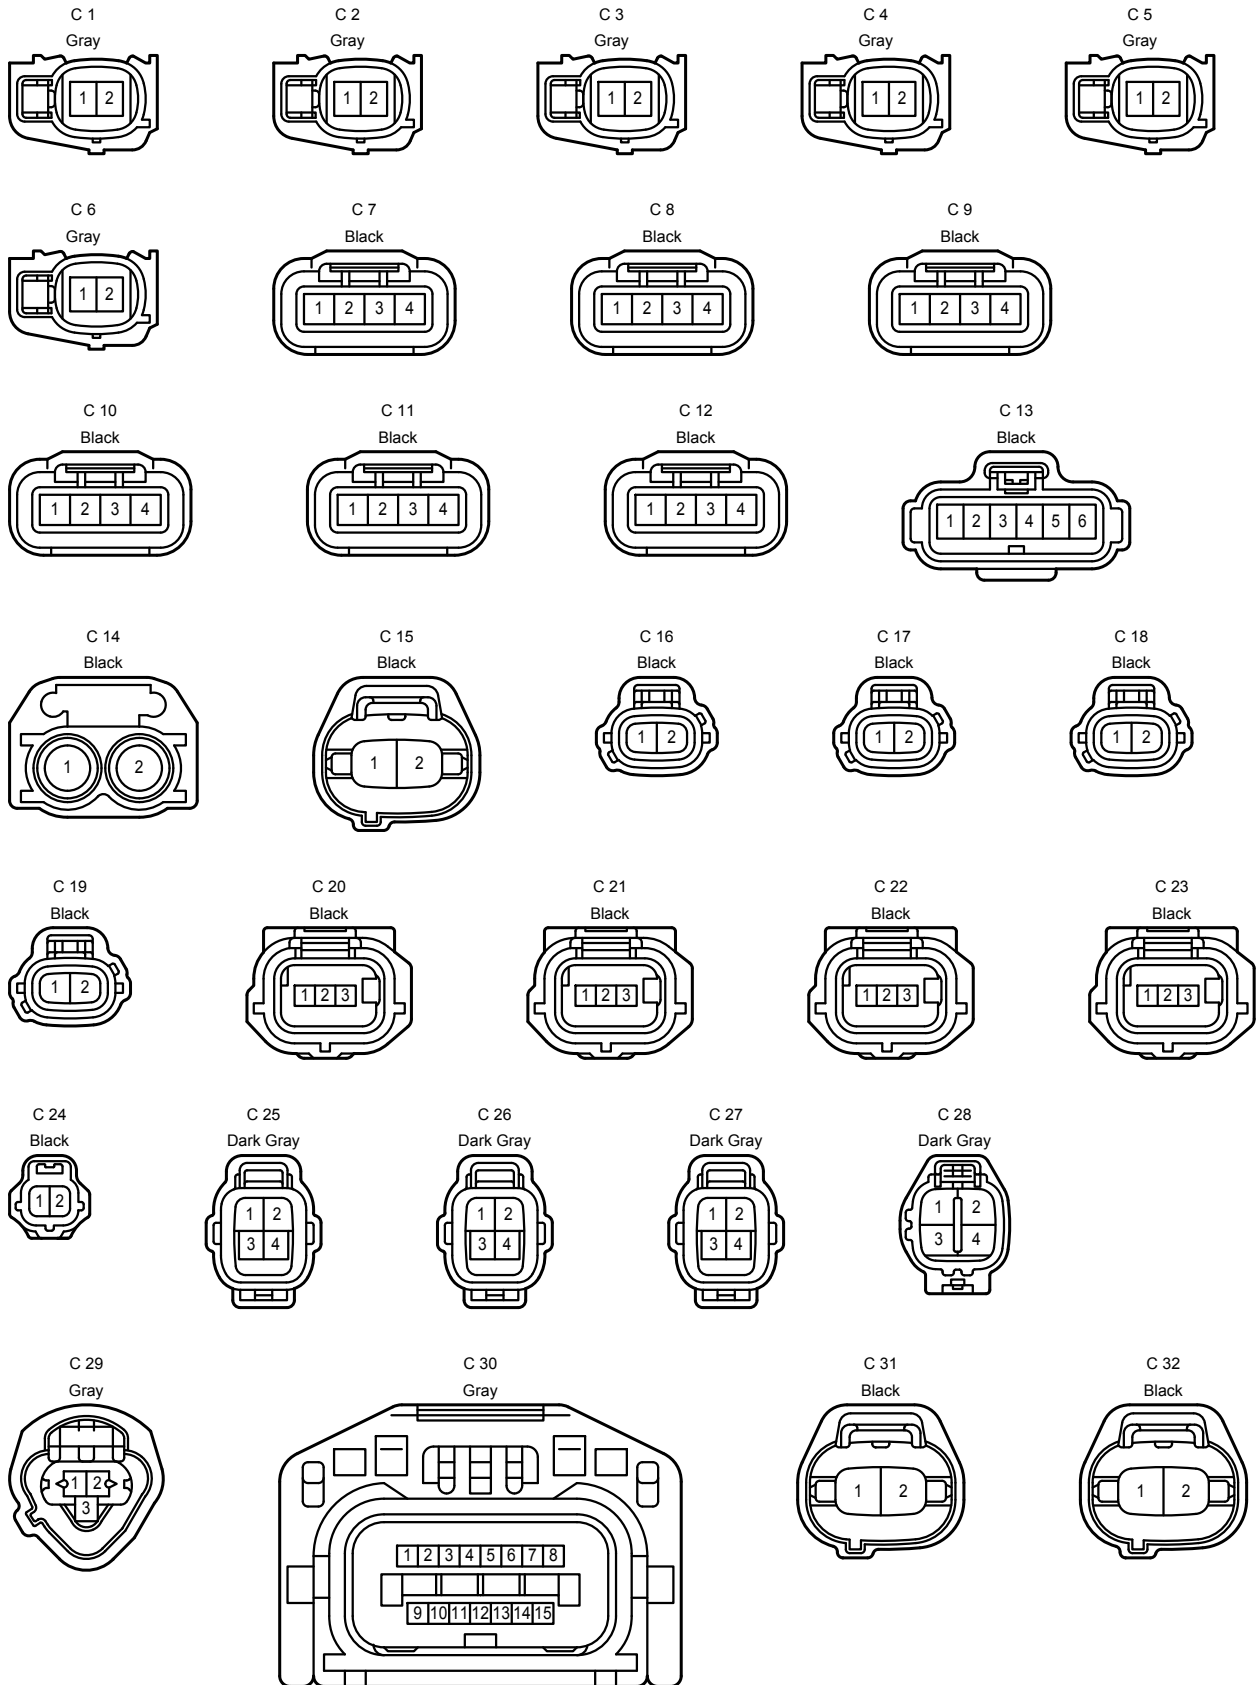

Position of Parts in Engine Compartment <RHD 1GR-FE>

