



Position of Parts in Engine Compartment <LHD 5L-E>

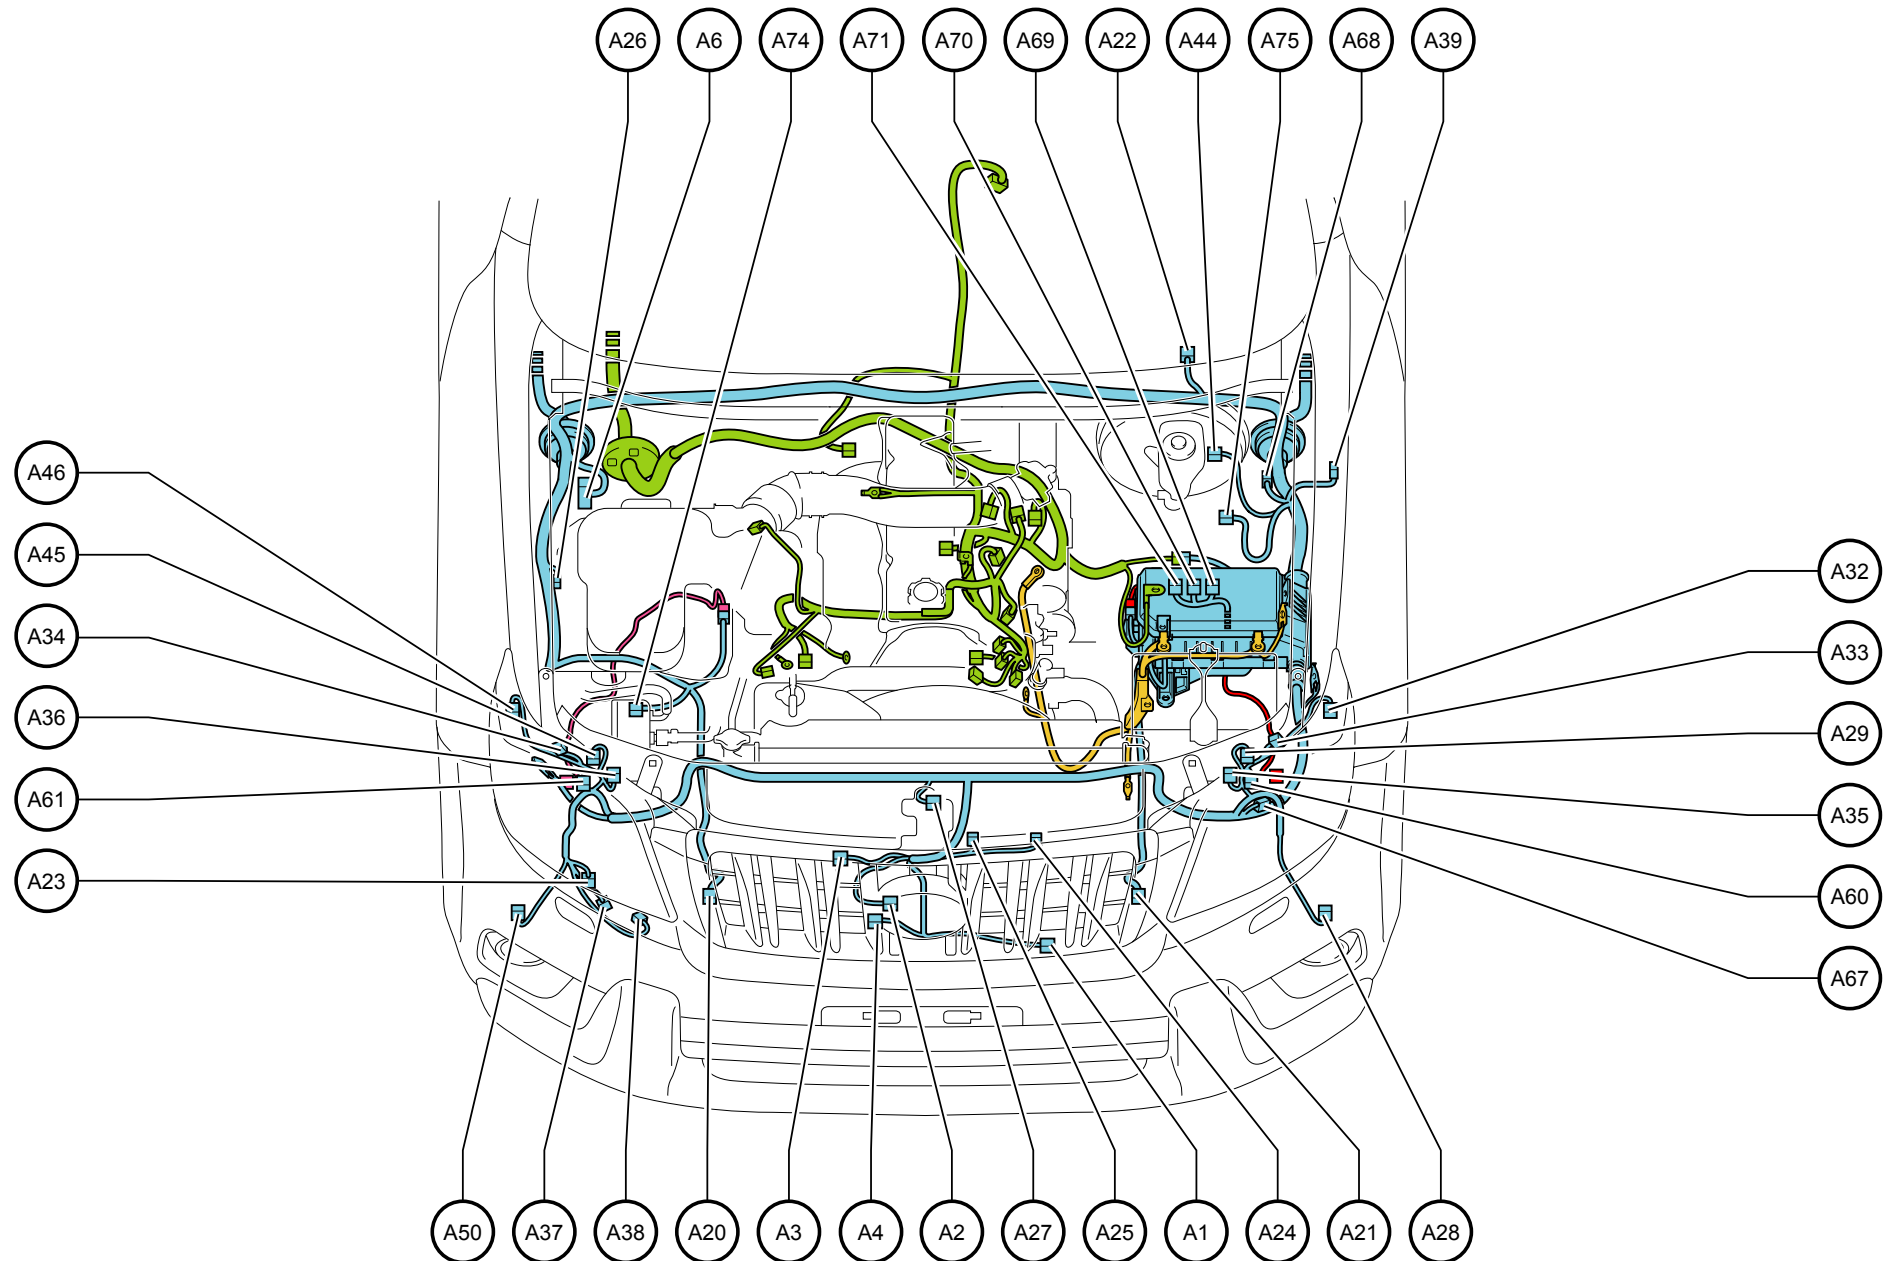

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH
- A 46 Headlight Assembly RH
- A 50 Fog Light Assembly RH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 74 Vacuum Warning Switch Assembly
- A 75 Fuel Filter Warning Switch

Position of Parts in Engine Compartment <LHD 5L-E>

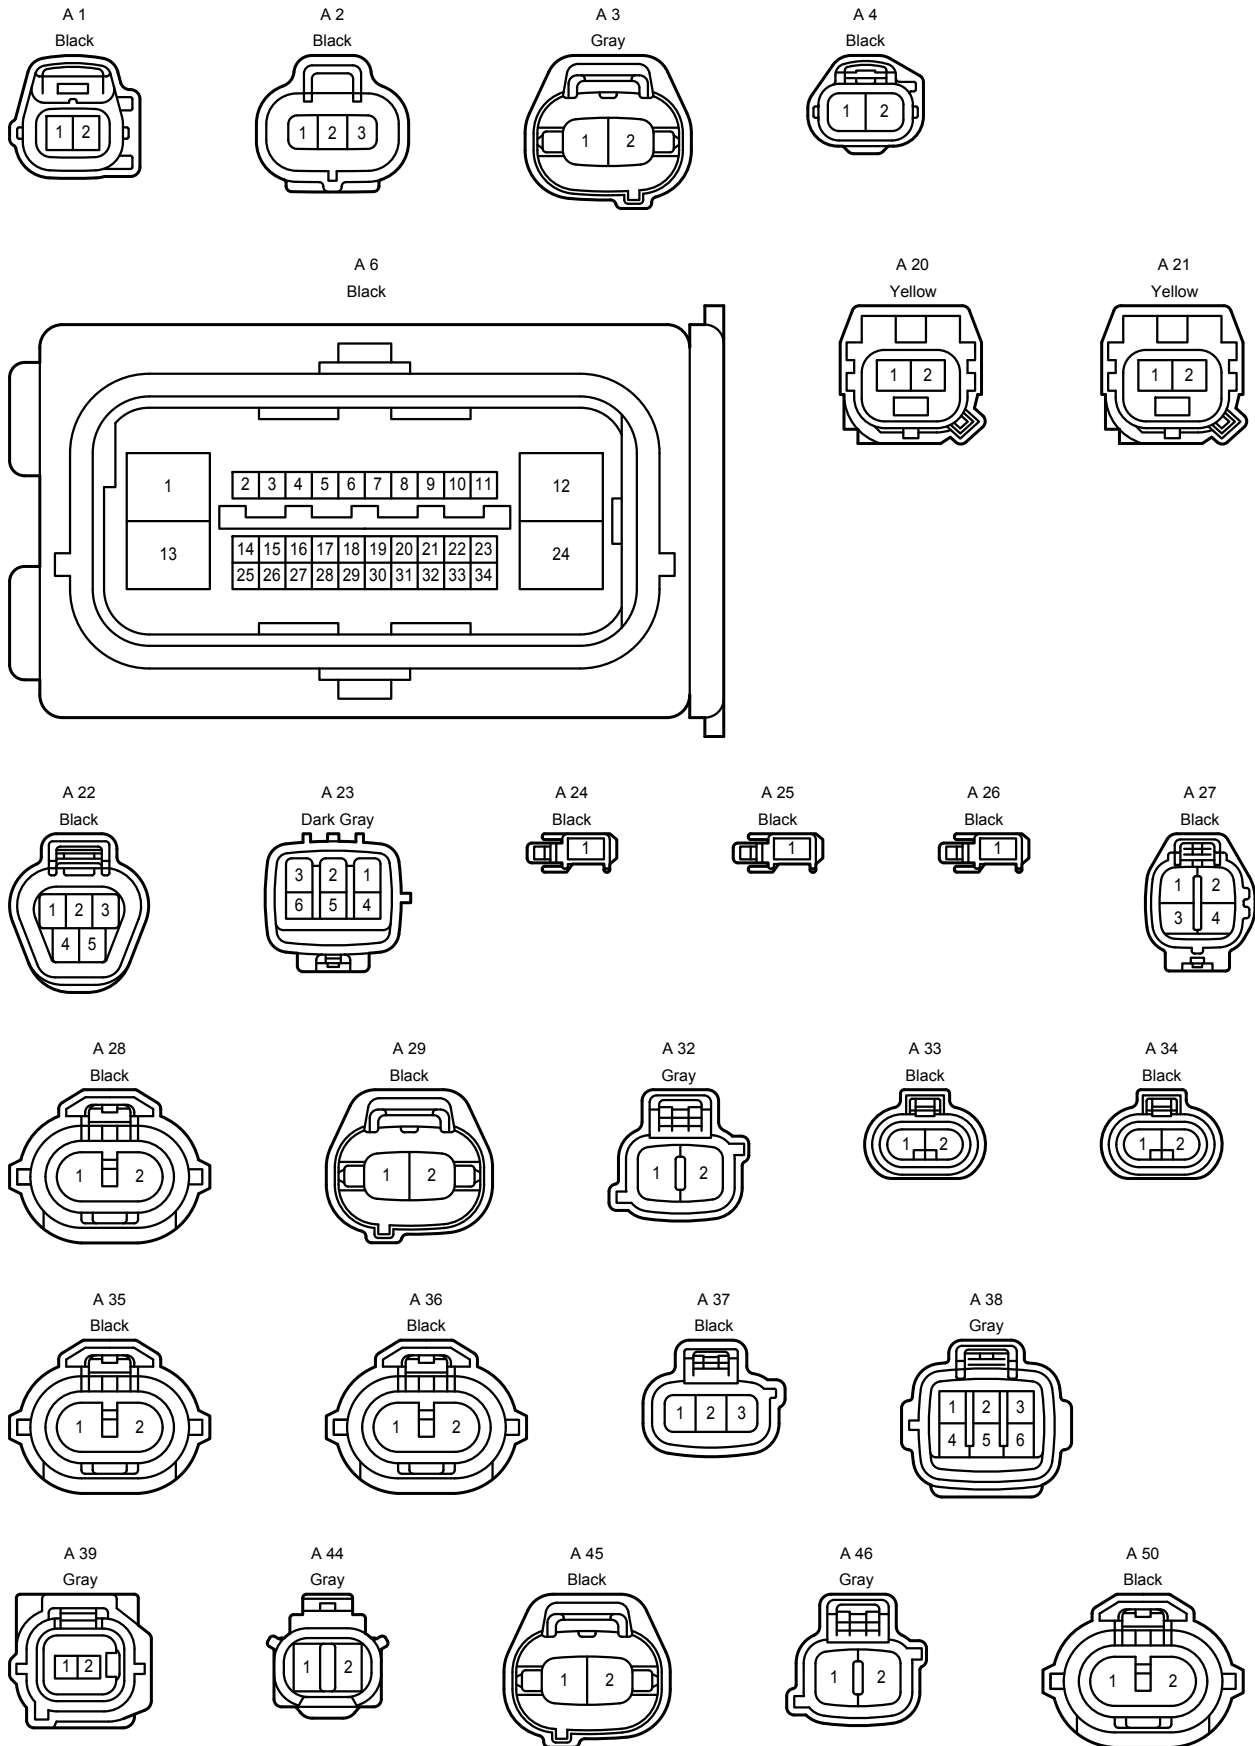

A 60

Black



A 61

Black



A 67

Dark Gray




A 68

Dark Gray




A 69

White

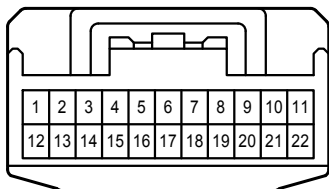


A 70

White

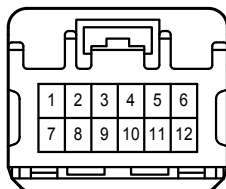

A 71

White

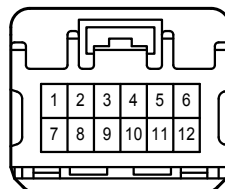

A 74

Gray



A 75

Gray

