


Position of Parts in Engine Compartment <LHD 5L-E>

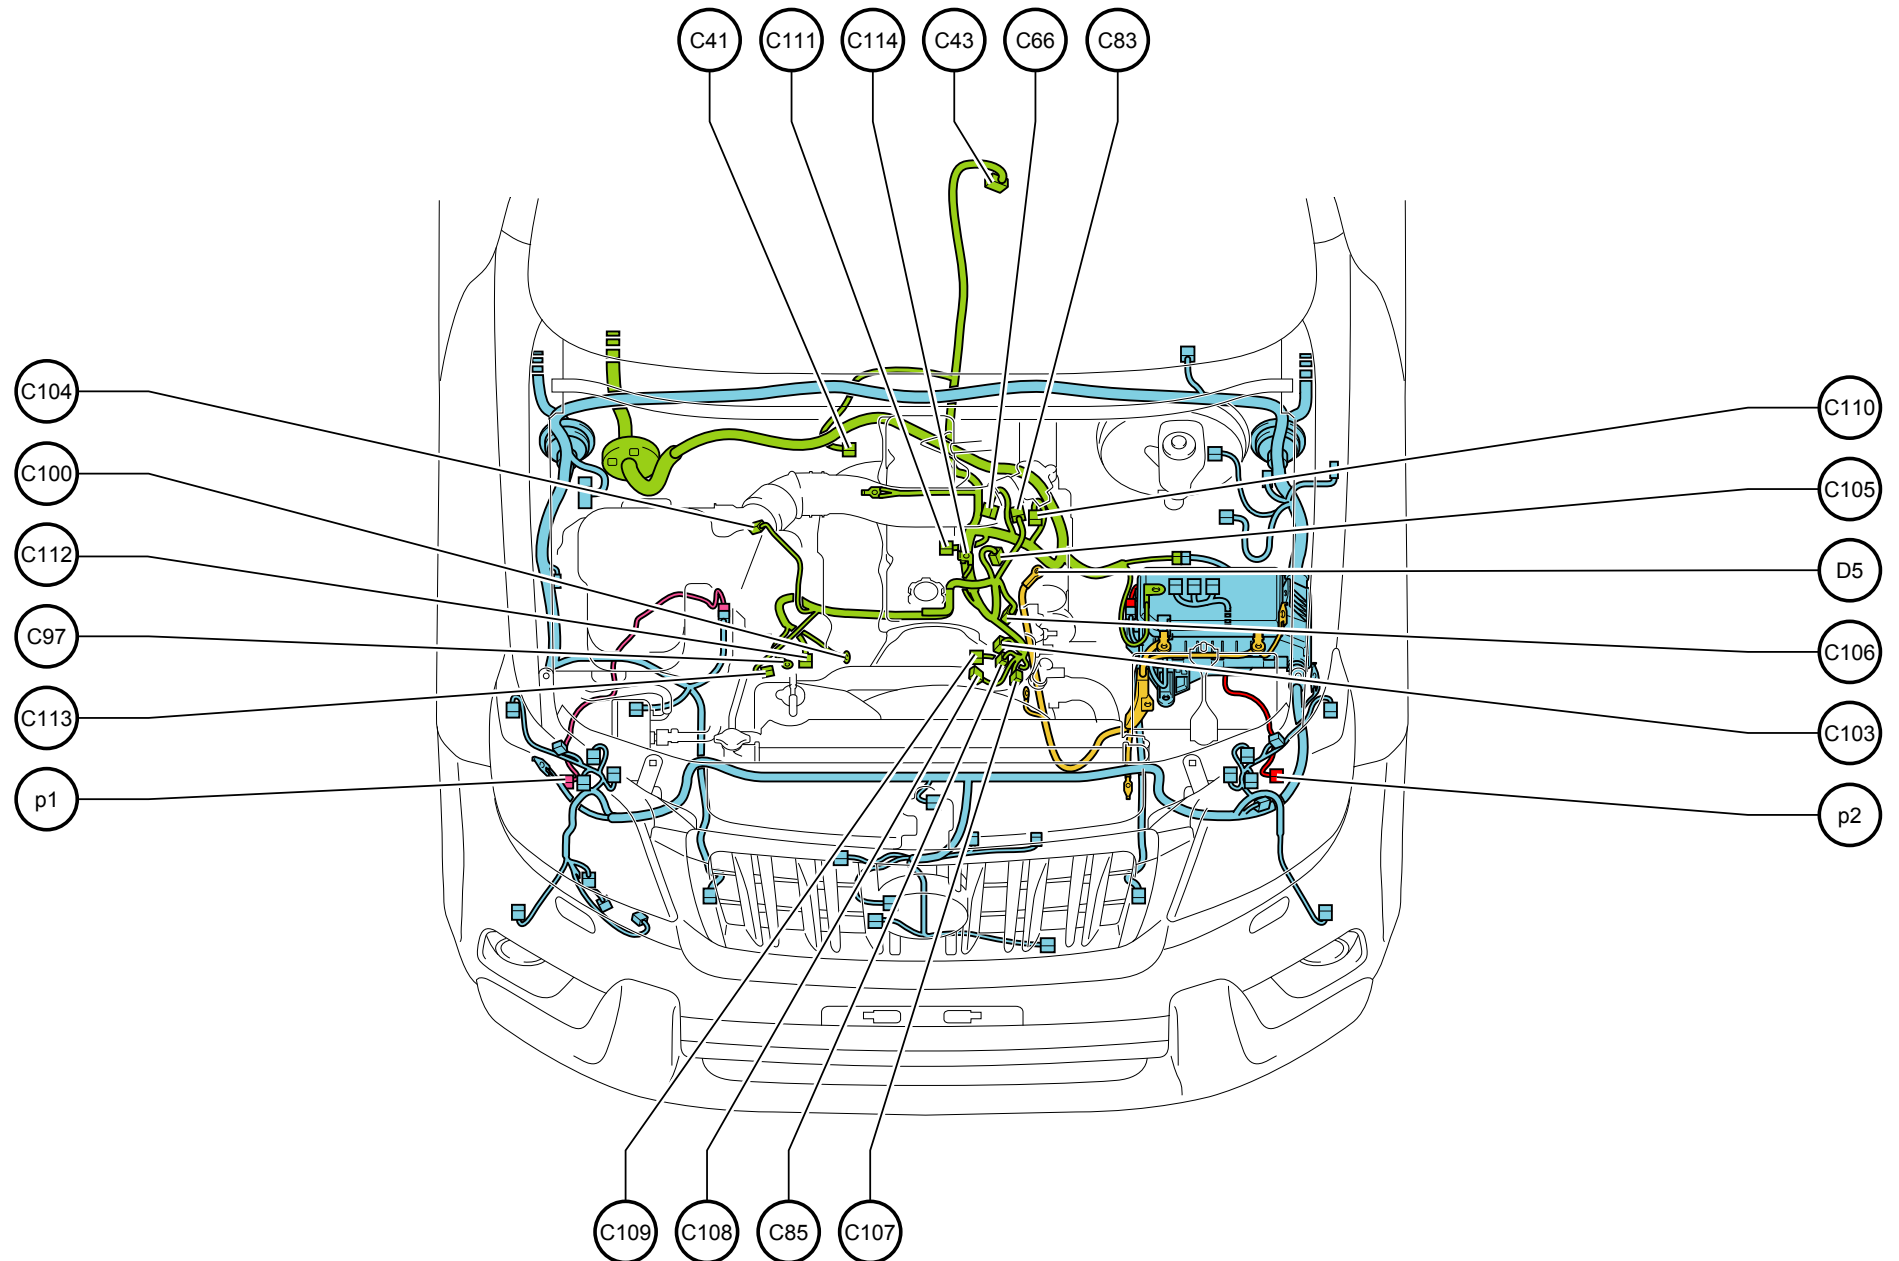

- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 66 Starter Assembly
- C 83 Diesel Turbo Pressure Sensor
- C 85 Fuel Temperature Sensor
- C 97 Generator Assembly
- C 100 Engine Oil Pressure Switch Assembly
- C 103 Cam Position Sensor
- C 104 Intake Air Temperature Sensor
- C 105 Throttle Control Motor
- C 106 Spill Control Valve
- C 107 Injection Pump
- C 108 Timing Control Valve
- C 109 Crank Position Sensor
- C 110 Throttle Open Switch
- C 111 Diesel Engine Coolant Temperature Sensor
- C 112 Generator Assembly
- C 113 Cooler Compressor Assembly
- C 114 Glow Plug Assembly

- D 5 Starter Assembly

- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <LHD 5L-E>

