


Position of Parts in Instrument Panel <LHD>

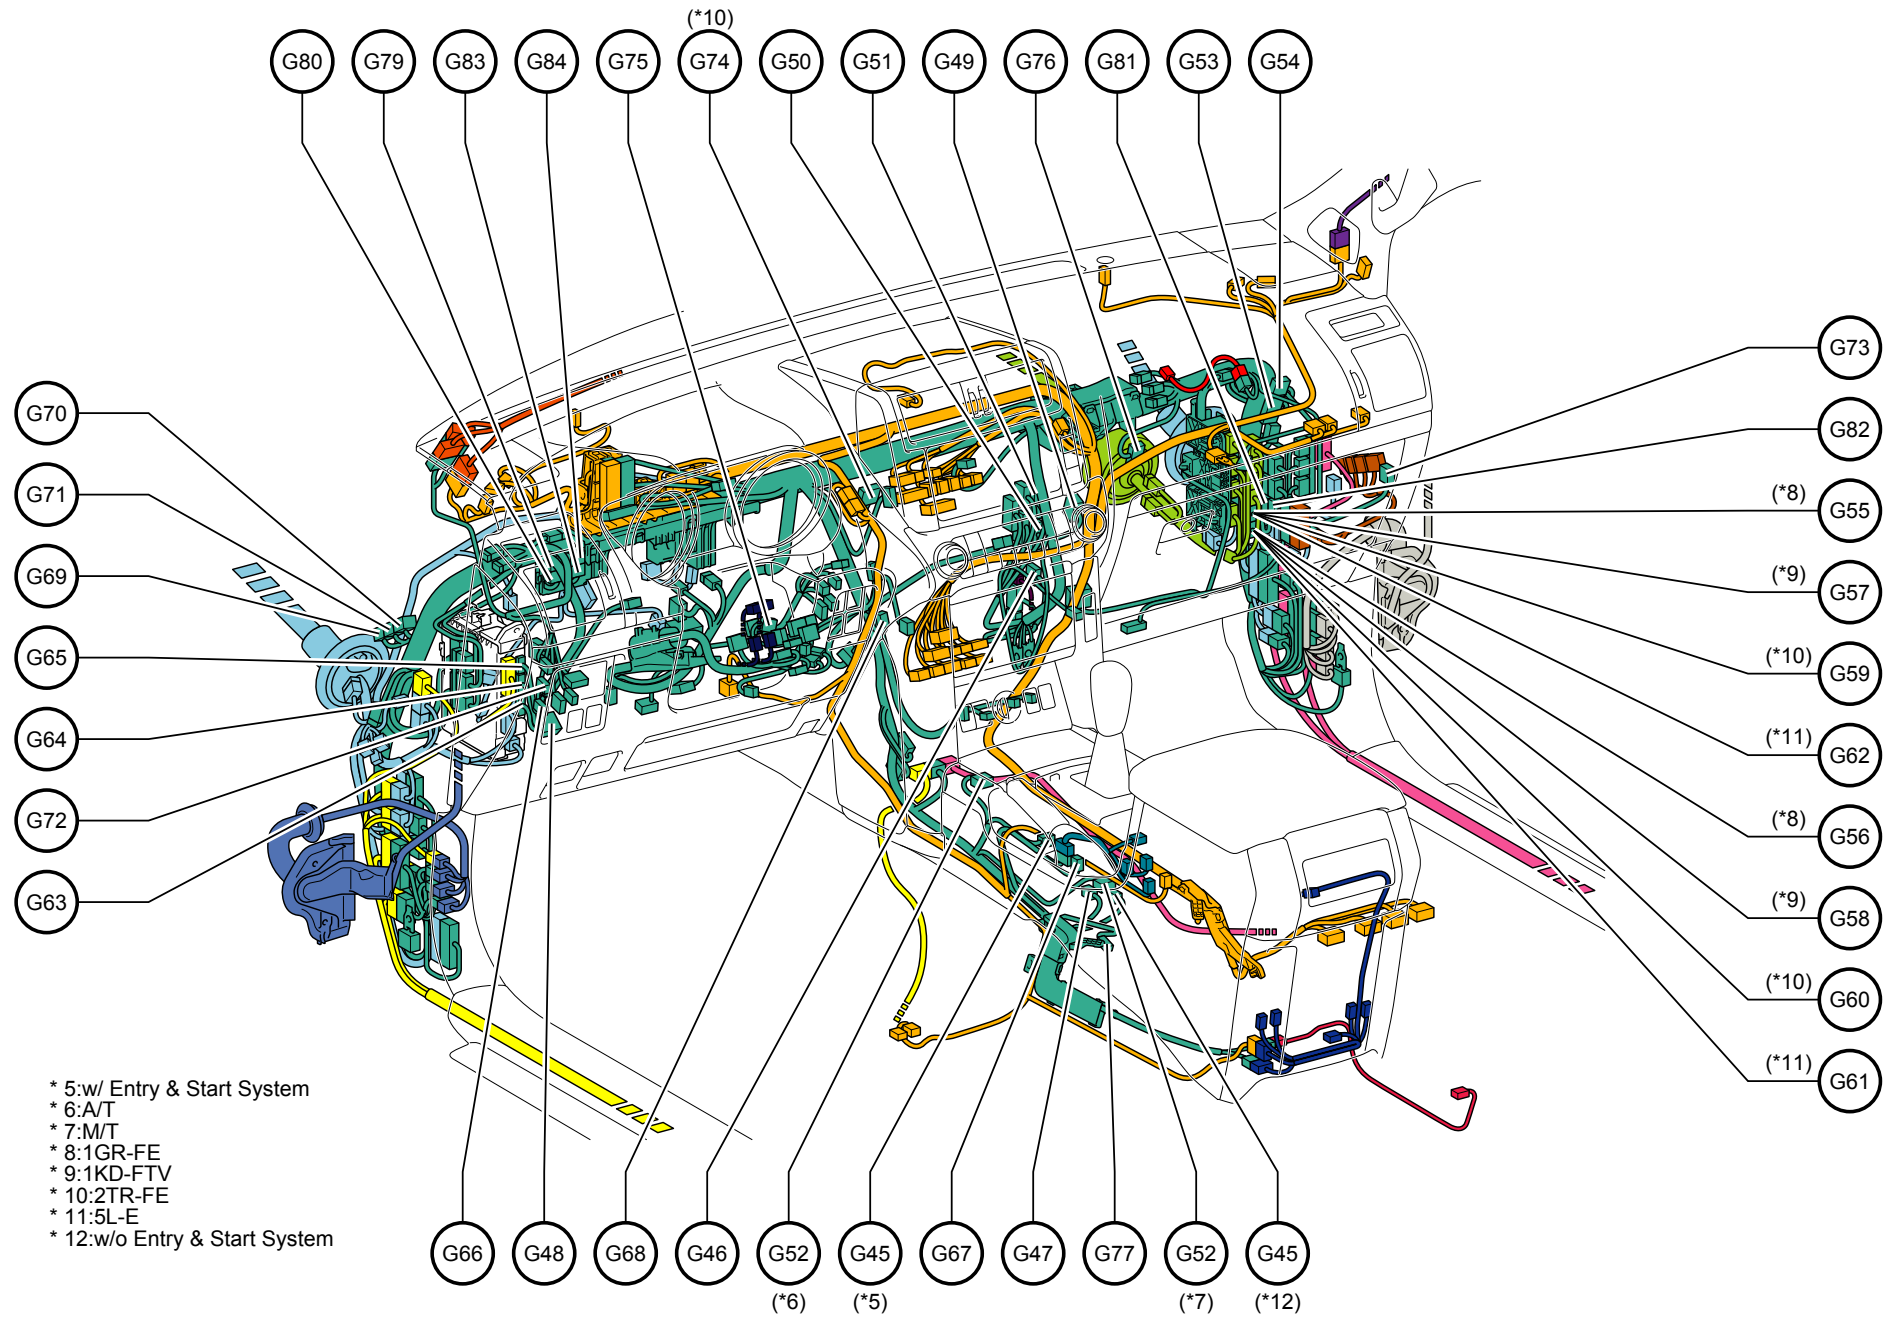

- G 45 Shift Lock Control ECU Sub-Assembly
- G 46 Power Steering ECU Assembly
- G 47 Transmission Control Switch
- G 48 DLC3
- G 49 Double Lock Door Control Relay Assembly
- G 50 Power Management Control ECU
- G 51 Power Management Control ECU
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 55 ECM
- G 56 ECM
- G 57 ECM
- G 58 ECM
- G 59 ECM
- G 60 ECM
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 66 Outer Mirror Heater Switch Assembly
- G 67 Shift Position Indicator (Console Box Assembly)
- G 68 Diode (Shift Position)
- G 69 Transmission Control ECU Assembly
- G 70 Transmission Control ECU Assembly
- G 71 Transmission Control ECU Assembly
- G 72 Headlight Cleaner Switch Assembly
- G 73 Airbag Cut Off Switch Cylinder Sub-Assembly
- G 74 Transponder Key ECU Assembly
- G 75 Transponder Key Amplifier
- G 76 Driving Support Switch Control ECU
- G 77 Parking Brake Switch Assembly
- G 79 Junction Connector
- G 80 Junction Connector
- G 81 Junction Connector
- G 82 Junction Connector
- G 83 Junction Connector
- G 84 Junction Connector

# Position of Parts in Instrument Panel <LHD>


G 45

White




G 46

White

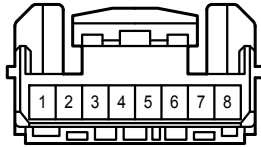


G 47

Black

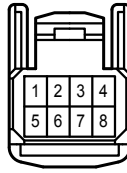


G 48

White

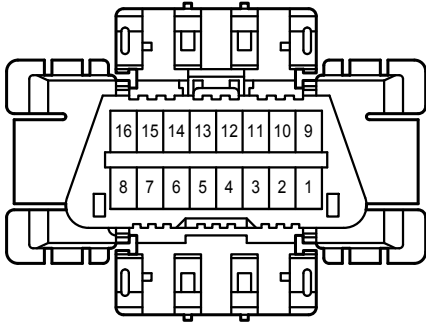


G 49

White




G 50

White

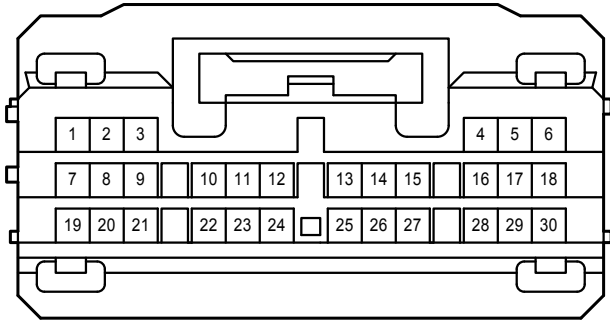


G 51

Black

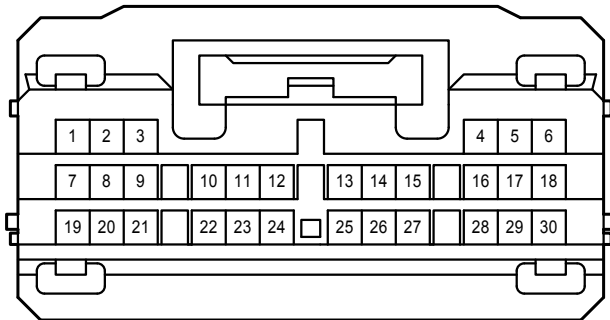


G 52

Black

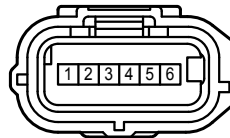


G 53

Black

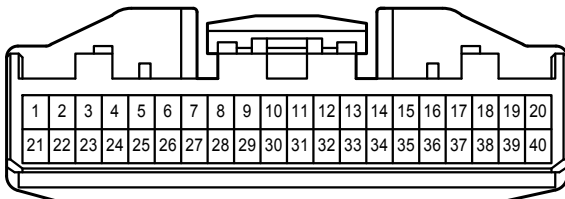


G 54

Black




# Position of Parts in Instrument Panel <LHD>


G 55  
White

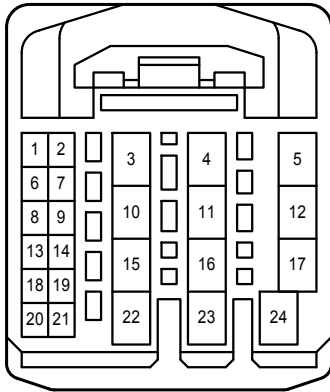


G 56  
White

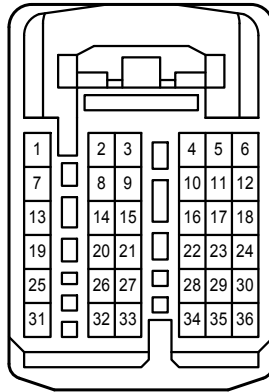


G 57  
White

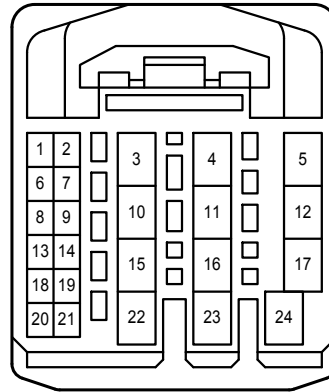


G 58  
White

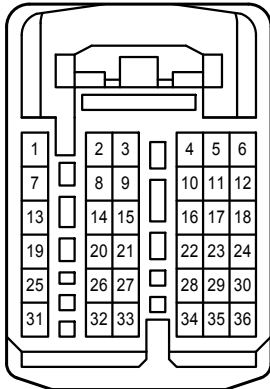


G 59  
White

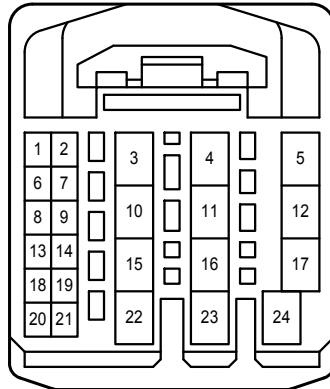


G 60  
White

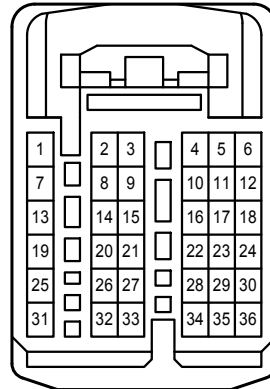


G 61  
White

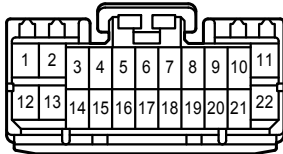


G 62  
White

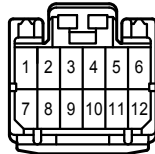


G 63  
White

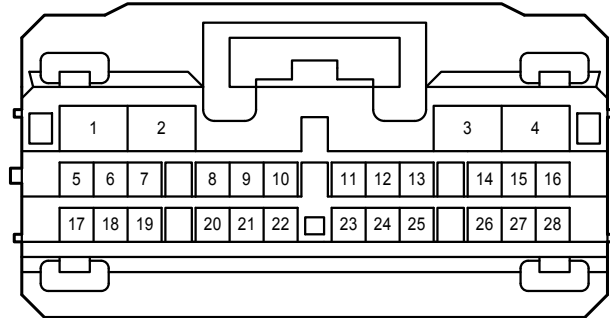

G 64  
White

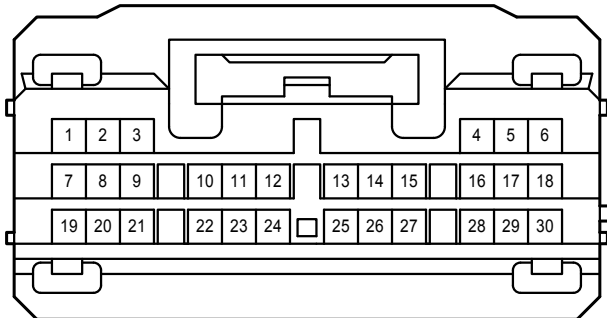

G 65  
White

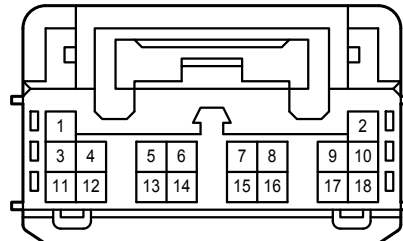

# Position of Parts in Instrument Panel <LHD>

