

- I 1 Clearance Warning ECU Assembly
- I 2 Parking Assist ECU
- I 3 Parking Assist ECU
- I 5 Parking Assist ECU

- Q 1 Airbag Sensor Assembly

- R 1 Airbag Sensor Assembly
- R 19 Suspension Control ECU

- T 1 Video Adapter Terminal
- T 2 Headphone Terminal RH
- T 3 A/C Control Assembly
- T 4 Headphone Terminal LH
- T 5 Power Outlet Socket Assembly
- T 6 Cooling Box Assembly


- i 1 No. 1 Indoor Electrical Key Antenna Assembly
- i 2 Power Point Socket Assembly
- i 3 Seat Heater Switch RH
- i 4 Seat Heater Switch LH

- s 1 No. 2 Indoor Electrical Key Antenna Assembly


- z 1 A/C Blower Assembly , A/C Amplifier Assembly
- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 8 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly

Position of Parts in Instrument Panel <LHD>


I 1
White

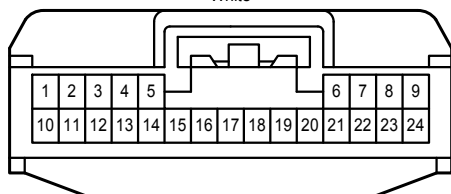


I 2
White

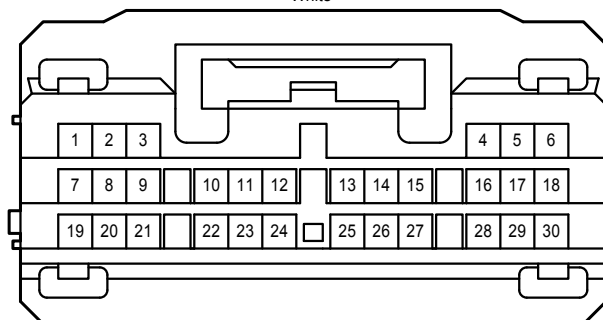


I 3
White

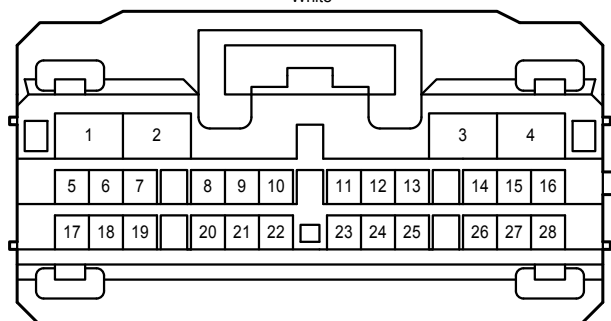


I 5
White




Q 1
Yellow

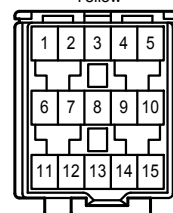


R 1
Yellow

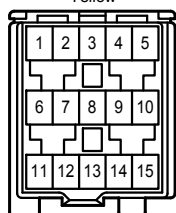

R 19
Black

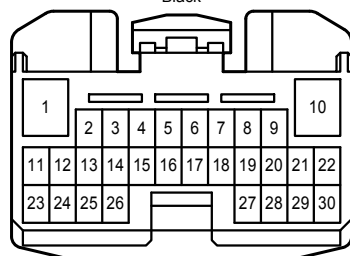


T 1
White

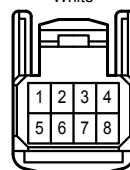

T 2
White




T 3
Black

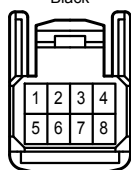


T 4
White




T 5
White

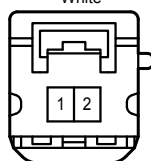


T 6
White

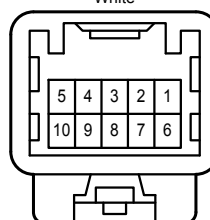


i 1
White

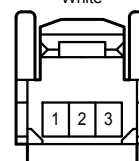


i 2
White



i 3
Black

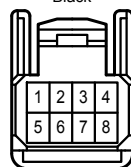

i 4
Black

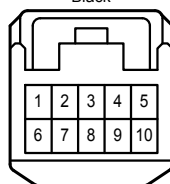

s 1
Gray



z 1
White

