

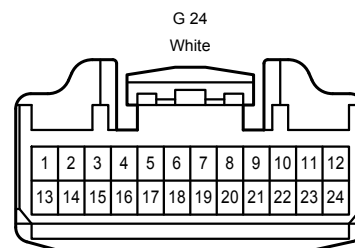
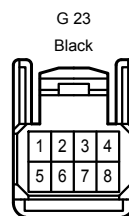
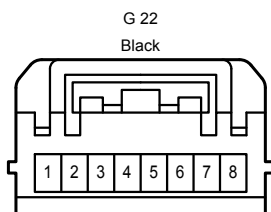
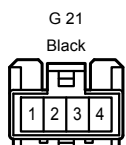
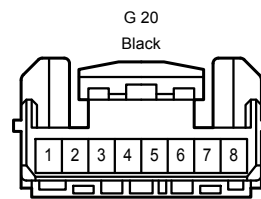
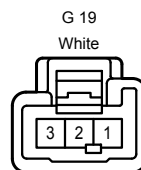
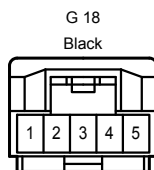
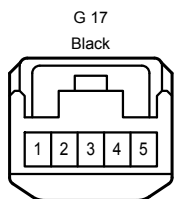
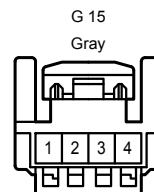
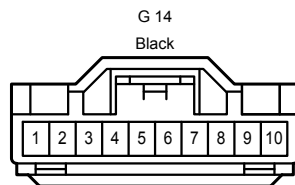
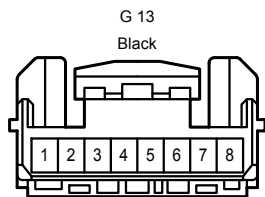
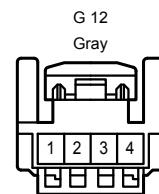
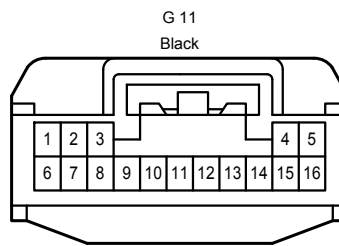
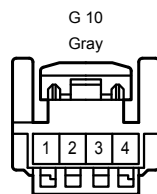
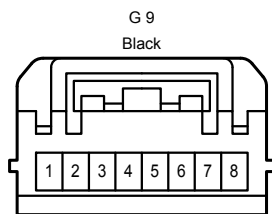
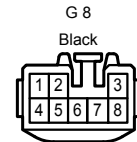
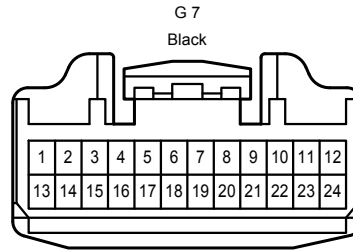
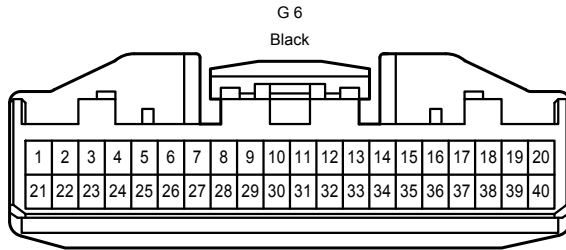
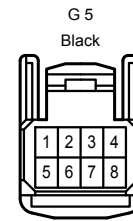


- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 9 VSC Off Switch
- G 10 Downhill Assist Control Switch
- G 11 Outer Mirror Switch Assembly
- G 12 Pattern Select Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 17 Center Differential Lock Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 20 Idle Up Switch
- G 21 Headlight Leveling Switch
- G 22 Heater Switch Assembly
- G 23 Integration Control and Panel Assembly
- G 24 A/C Amplifier Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 27 Intake Air Temperature Sensor
- G 28 Quick Heater Assembly
- G 29 Quick Heater Assembly
- G 30 Glove Box Light
- G 32 Lower No. 1 Instrument Panel Airbag Assembly
- G 33 Steering Sensor
- G 34 No. 1 Clearance Warning Buzzer
- G 35 Steering Lock Actuator Assembly
- G 36 Engine Switch
- G 37 ID Code Box
- G 38 Certification ECU Assembly
- G 39 Certification ECU Assembly
- G 40 Spiral Cable Sub-Assembly
- G 41 Spiral Cable Sub-Assembly
- G 42 Windshield Wiper Switch Assembly
- G 43 Windshield Wiper Switch Assembly

# Position of Parts in Instrument Panel <RHD>

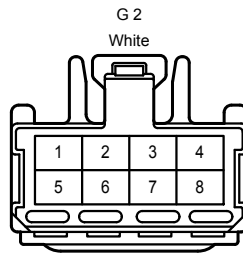

# Position of Parts in Instrument Panel <RHD>

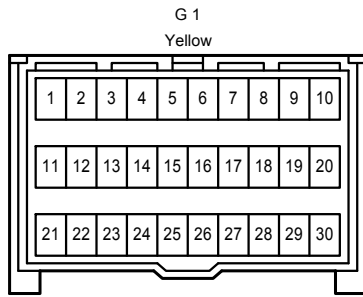