


Position of Parts in Seat <RHD Front Seat w/ Power Seat>

* 1:w/ Seat Position Memory
 * 2:w/o Seat Position Memory

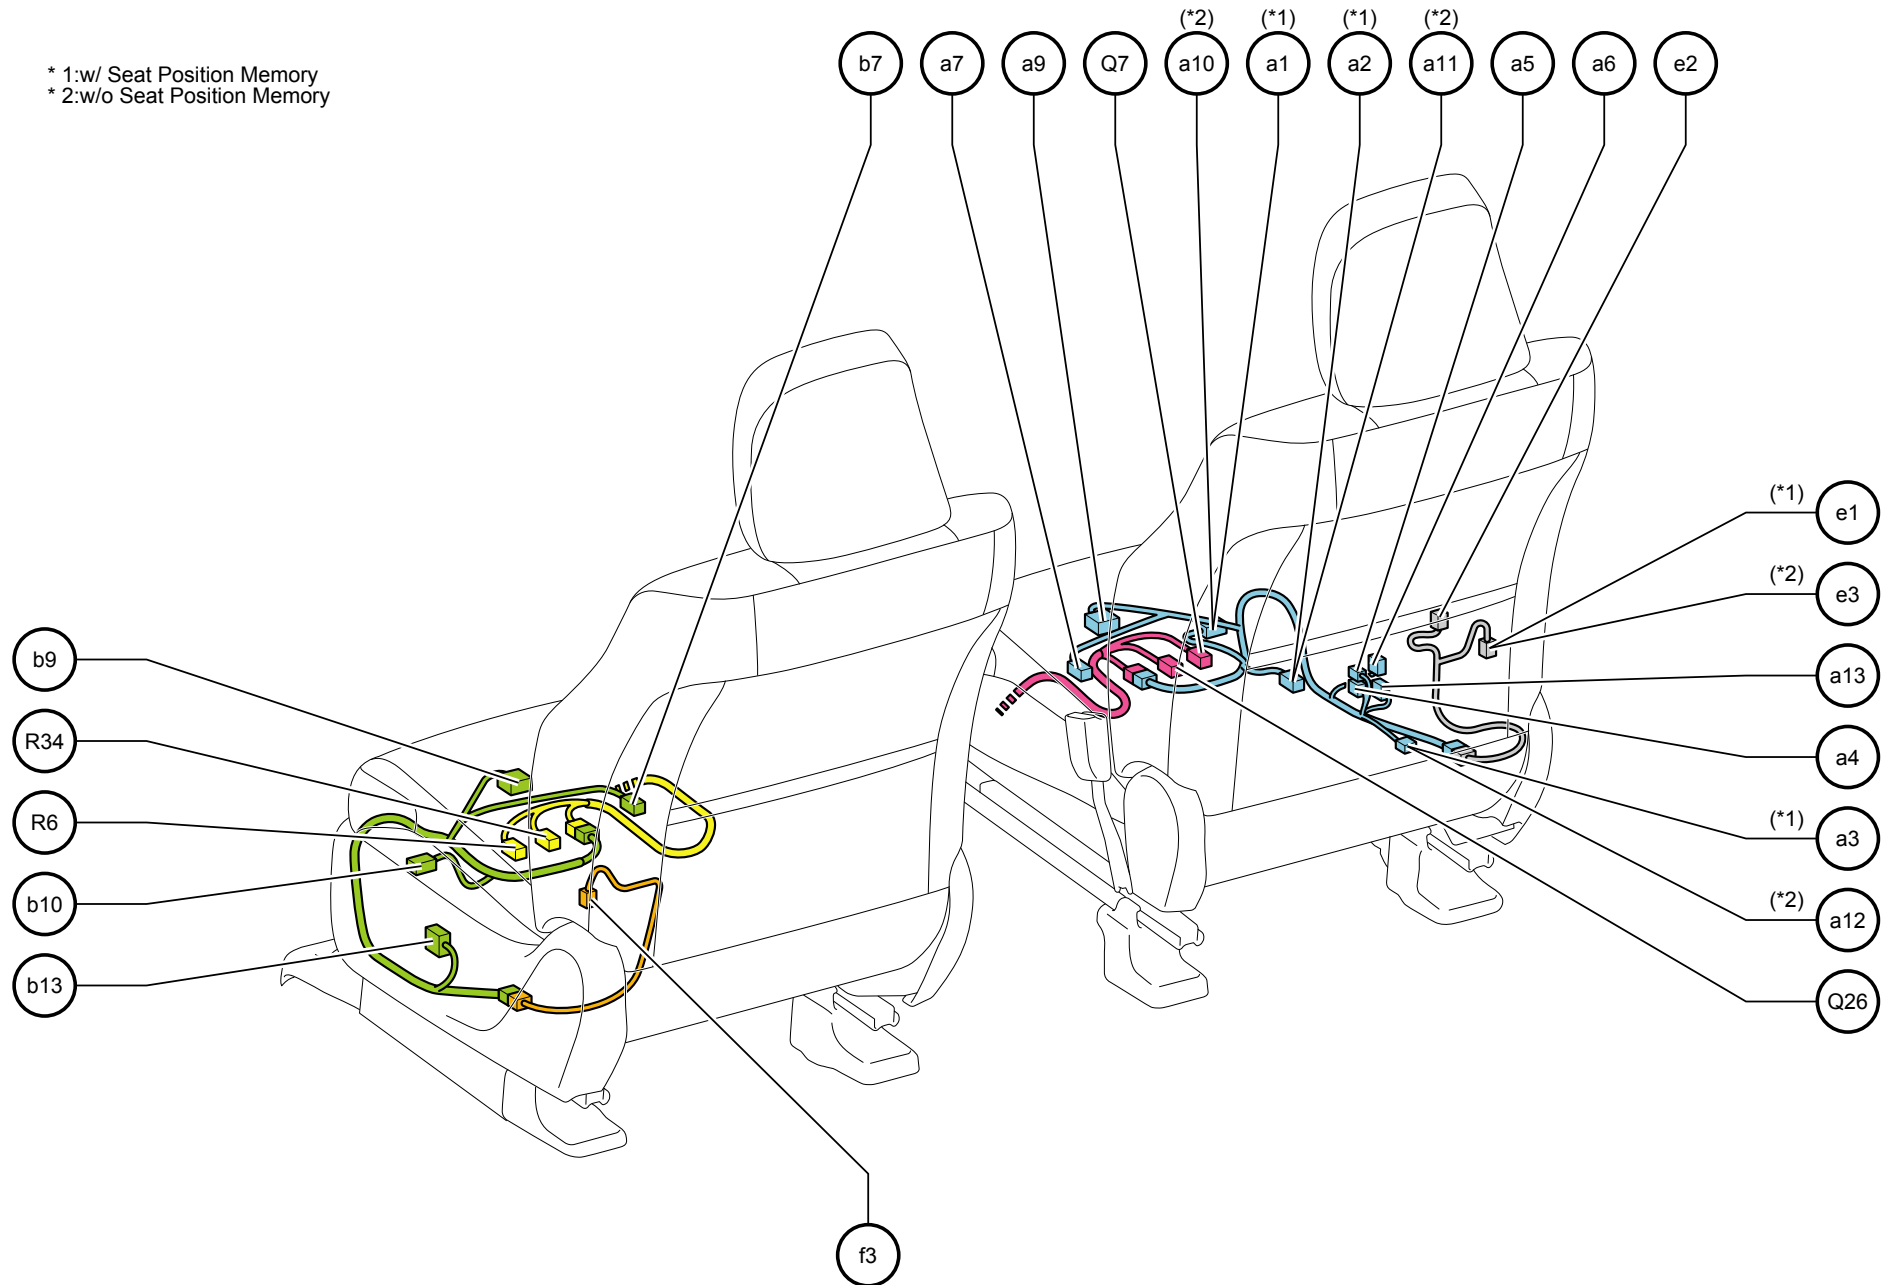

- Q 7 Front Side Airbag Squib Circuit RH
- Q 26 Front Seat Inner Belt Assembly RH

- R 6 Front Side Airbag Squib Circuit LH
- R 34 Front Seat Inner Belt Assembly LH

- a 1 Separate Type Front Seat Cushion Spring Assembly RH
- a 2 Separate Type Front Seat Cushion Spring Assembly RH
- a 3 Separate Type Front Seat Cushion Spring Assembly RH
- a 4 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
- a 5 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
- a 6 Front Power Seat Switch Assembly RH
- a 7 Front Seat Heater Assembly RH
- a 9 Junction Connector
- a 10 Separate Type Front Seat Cushion Spring Assembly RH
- a 11 Separate Type Front Seat Cushion Spring Assembly RH
- a 12 Separate Type Front Seat Cushion Spring Assembly RH
- a 13 Front Power Seat Switch RH

- b 7 Front Seat Heater Assembly LH
- b 9 Junction Connector
- b 10 Separate Type Front Seat Cushion Spring Assembly LH
- b 13 Front Power Seat Switch LH

- e 1 Separate Type Front Seat Back Assembly RH
- e 2 Separate Type Front Seat Back Assembly RH
- e 3 Separate Type Front Seat Back Assembly RH

- f 3 Separate Type Front Seat Back Assembly LH

Position of Parts in Seat <RHD Front Seat w/ Power Seat>

