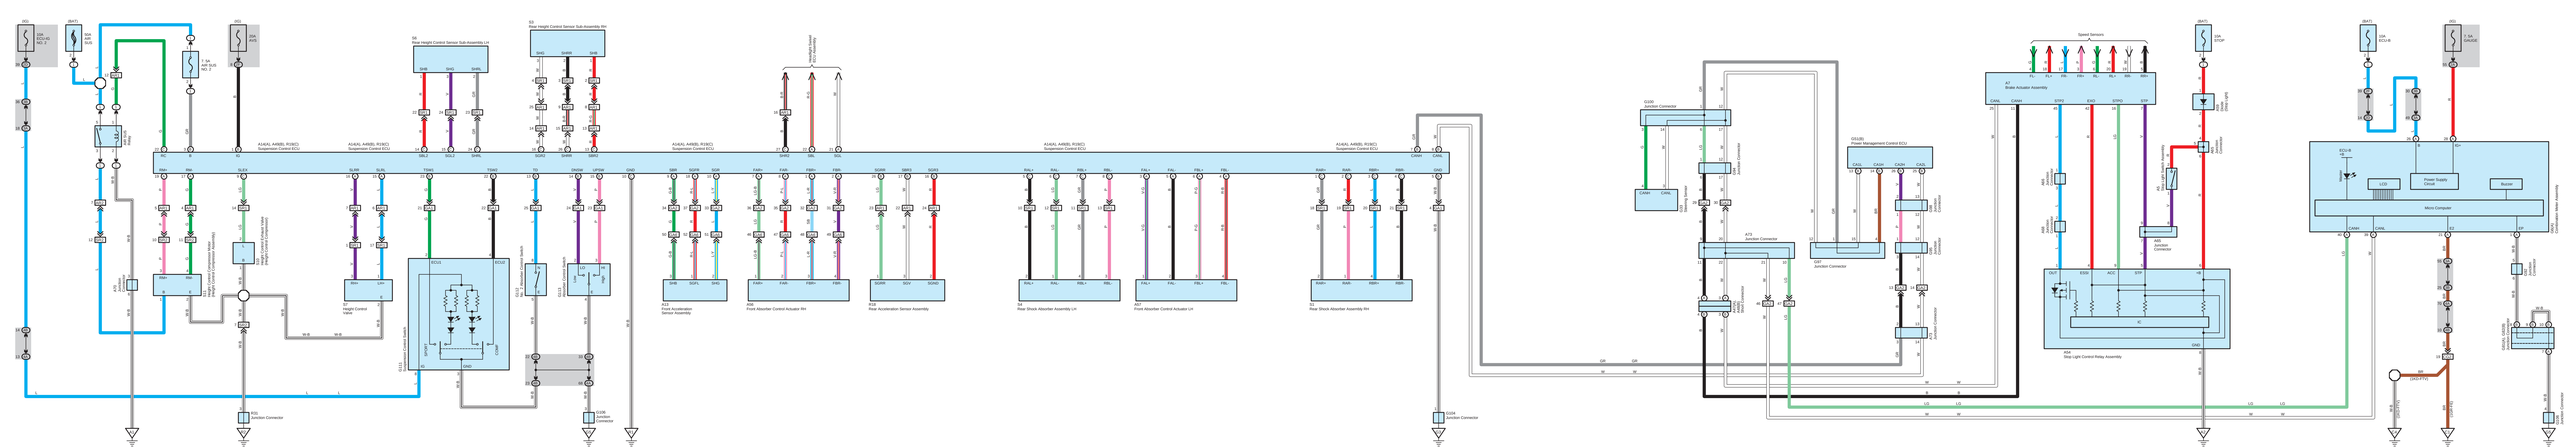
IG1
10A ECU-IG NO. 2
BAT1
50A ANT SUS
IG2
30A ECU-B
7.5A ECU-IG NO. 2
J/B No.1 Relay
J/B No.2 Relay
J/B No.1 Junction Connector (Engine Room)
J/B No.2 Junction Connector (Engine Room)
J/B No.3 Junction Connector (Engine Room)
J/B No.4 Junction Connector (Engine Room)
J/C1 Junction Connector
J/C2 Junction Connector
J/C3 Junction Connector
J/C4 Junction Connector
J/C5 Junction Connector
J/C6 Junction Connector
J/C7 Junction Connector
J/C8 Junction Connector
J/C9 Junction Connector
J/C10 Junction Connector
J/C11 Junction Connector
J/C12 Junction Connector
J/C13 Junction Connector