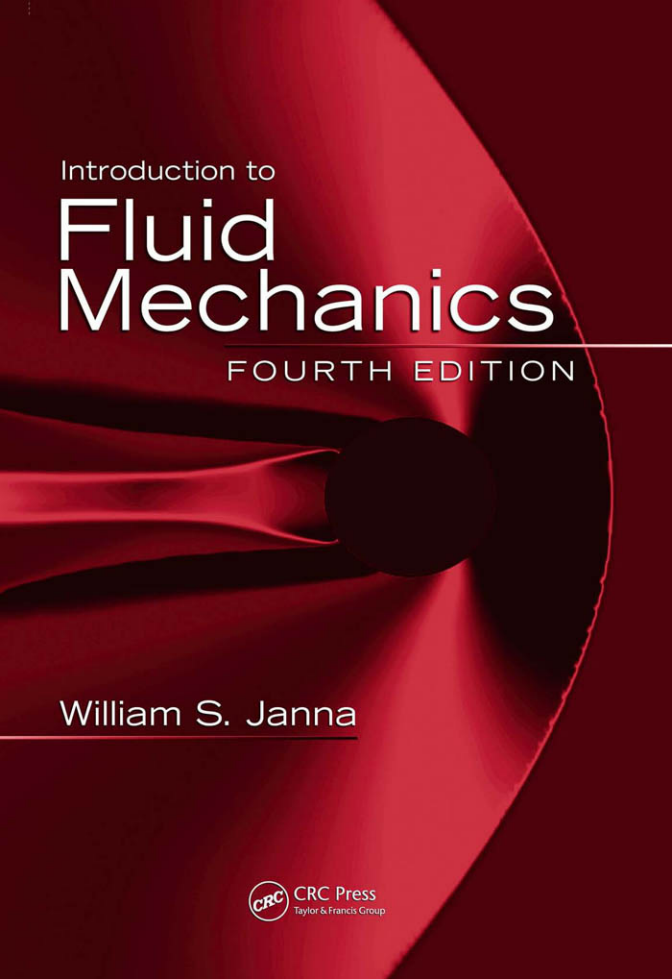


The background of the cover features a dynamic, abstract visualization of fluid flow in shades of red. A central jet of fluid is shown being deflected by a dark, circular object, creating a complex pattern of vortices and streamlines. The overall effect is one of motion and fluid dynamics.

Introduction to

Fluid Mechanics

FOURTH EDITION

William S. Janna



CRC Press
Taylor & Francis Group

Introduction to

Fluid Mechanics

FOURTH EDITION

This page intentionally left blank

Introduction to

Fluid Mechanics

FOURTH EDITION

William S. Janna

*University of Memphis
Memphis, Tennessee, U.S.A.*



CRC Press

Taylor & Francis Group

Boca Raton London New York

CRC Press is an imprint of the
Taylor & Francis Group, an **informa** business

CRC Press
Taylor & Francis Group
6000 Broken Sound Parkway NW, Suite 300
Boca Raton, FL 33487-2742

© 2010 by Taylor and Francis Group, LLC
CRC Press is an imprint of Taylor & Francis Group, an Informa business

No claim to original U.S. Government works

Printed in the United States of America on acid-free paper
10 9 8 7 6 5 4 3 2 1

International Standard Book Number: 978-1-4200-8524-2 (Hardback)

This book contains information obtained from authentic and highly regarded sources. Reasonable efforts have been made to publish reliable data and information, but the author and publisher cannot assume responsibility for the validity of all materials or the consequences of their use. The authors and publishers have attempted to trace the copyright holders of all material reproduced in this publication and apologize to copyright holders if permission to publish in this form has not been obtained. If any copyright material has not been acknowledged please write and let us know so we may rectify in any future reprint.

Except as permitted under U.S. Copyright Law, no part of this book may be reprinted, reproduced, transmitted, or utilized in any form by any electronic, mechanical, or other means, now known or hereafter invented, including photocopying, microfilming, and recording, or in any information storage or retrieval system, without written permission from the publishers.

For permission to photocopy or use material electronically from this work, please access www.copyright.com (<http://www.copyright.com/>) or contact the Copyright Clearance Center, Inc. (CCC), 222 Rosewood Drive, Danvers, MA 01923, 978-750-8400. CCC is a not-for-profit organization that provides licenses and registration for a variety of users. For organizations that have been granted a photocopy license by the CCC, a separate system of payment has been arranged.

Trademark Notice: Product or corporate names may be trademarks or registered trademarks, and are used only for identification and explanation without intent to infringe.

Library of Congress Cataloging-in-Publication Data

Janna, William S.
Introduction to fluid mechanics / William S. Janna. -- 4th ed.
p. cm.
Includes bibliographical references and index.
ISBN 978-1-4200-8524-2 (hardcover : alk. paper)
1. Fluid mechanics. I. Title.

TA357.J36 2010
620.1'06--dc22

2009026753

Visit the Taylor & Francis Web site at
<http://www.taylorandfrancis.com>

and the CRC Press Web site at
<http://www.crcpress.com>

Dedication

*To Him who ordered the Universe by a word;
Whose love and glory are seen in the
beauty of natural science and in
the accomplishments of simple men;
And to my lovely wife Marla, who daily reflects
this love and glory to me.*

This page intentionally left blank

Contents

Preface..... xiii

Acknowledgments..... xv

Introduction to Fluid Mechanics..... xvii

Author xix

Chapter 1 Fundamental Concepts 1

1.1 Definition of a Fluid 1

1.2 Dimensions and Units..... 2

1.3 Properties of Fluids 7

1.3.1 Viscosity 7

1.3.1.1 Time-Independent Fluids 9

1.3.1.2 Time-Dependent Fluids..... 9

1.3.1.3 Viscoelastic Fluids 9

1.3.2 Pressure 12

1.3.3 Density 12

1.3.4 Kinematic Viscosity 13

1.3.5 Surface Tension 13

1.3.6 Specific Heat 16

1.3.7 Internal Energy..... 18

1.3.8 Enthalpy 19

1.3.9 Compressibility Factor/Bulk Modulus 19

1.3.10 Ideal Gas Law 21

1.4 Liquids and Gases..... 22

1.5 Continuum..... 22

Problems..... 23

Chapter 2 Fluid Statics..... 35

2.1 Pressure and Pressure Measurement..... 35

2.2 Hydrostatic Forces on Submerged Plane Surfaces 47

2.3 Hydrostatic Forces on Submerged Curved Surfaces 55

2.4 Equilibrium of Accelerating Fluids 61

2.5 Forces on Submerged Bodies 67

2.6 Stability of Submerged and Floating Bodies..... 71

2.7 Summary 75

Problems..... 76

Chapter 3 Basic Equations of Fluid Mechanics..... 101

3.1 Kinematics of Flow..... 101

3.2 Control Volume Approach..... 103

3.3 Continuity Equation 107

3.4 Momentum Equation 112

3.4.1 Linear Momentum Equation..... 113

3.4.2 Angular Momentum Equation 117

3.5 Energy Equation..... 120

3.6 Bernoulli’s Equation 126

3.7 Summary 135

Problems..... 135

Chapter 4 Dimensional Analysis and Dynamic Similitude 155

4.1 Dimensional Homogeneity and Analysis 155

4.1.1 Rayleigh Method..... 157

4.1.2 Buckingham Pi Method 161

4.2 Dimensionless Ratios 163

4.2.1 Flow in a Pipe or Conduit 163

4.2.2 Flow over Immersed Bodies 164

4.2.3 Open-Channel Flow 164

4.2.4 Unbounded Flows..... 165

4.3 Dimensional Analysis by Inspection 165

4.4 Similitude 167

4.4.1 Geometric Similarity..... 168

4.4.2 Dynamic Similarity 169

4.4.3 Modeling 171

4.5 Correlation of Experimental Data 175

4.6 Summary 180

Problems..... 180

Chapter 5 Flow in Closed Conduits..... 193

5.1 Laminar and Turbulent Flow 193

5.2 Effect of Viscosity 196

5.2.1 Entrance Effects 197

5.3 Pipe Dimensions and Specifications..... 199

5.3.1 Equivalent Diameters for Noncircular Ducts..... 201

5.4 Equation of Motion..... 203

5.5 The Friction Factor and Pipe Roughness 206

5.5.1 Flow through Pipes of Noncircular Cross Sections..... 211

5.5.2 Flow through an Annulus 213

5.5.3 Miscellaneous Geometries 216

5.6 Simple Piping Systems 216

5.7 Minor Losses..... 227

5.8 Forces Exerted on Fittings by Moving Fluids 240

5.9 Pipes in Parallel 243

5.10 Pumps and Piping Systems..... 247

5.11 Summary 250

Problems..... 251

Chapter 6 Flow over Immersed Bodies 269

6.1 Boundary-Layer Growth and Separation 269

6.1.1 Boundary-Layer Growth..... 269

6.1.2 Separation..... 275

6.2 Drag on Various Two-Dimensional Bodies 276

6.3 Drag on Various Three-Dimensional Bodies 283

6.4 Applications to Ground Vehicles..... 287

6.4.1 Bicycle–Rider Combinations 288

6.4.2 Automobiles 293

6.4.3 Tractor-Trailer Trucks..... 293

6.5 Lift on Airfoils 298

6.6 Summary 305

Problems..... 305

Chapter 7 Flow in Open Channels..... 325

7.1 Types of Open-Channel Flows 325

7.2 Open-Channel Geometry Factors 326

7.3 Energy Considerations in Open-Channel Flows..... 329

7.3.1 Flow under a Sluice Gate 329

7.3.2 Flow through a Venturi Flume 331

7.4 Critical Flow Calculations 335

7.5 Equations for Uniform Open-Channel Flows..... 338

7.5.1 Laminar Open-Channel Flow 338

7.5.2 Reynolds Number and Transition..... 341

7.5.3 Turbulent Open-Channel Flow 342

7.6 Hydraulically Optimum Cross Section 348

7.7 Nonuniform Open-Channel Flow 351

7.7.1 Gradually Varied Flow 351

7.7.2 Rapidly Varied Flow..... 361

7.8 Summary 367

Problems..... 367

Chapter 8 Compressible Flow..... 377

8.1 Sonic Velocity and Mach Number 378

8.2 Stagnation Properties and Isentropic Flow 382

8.3 Flow through a Channel of Varying Area..... 386

8.4 Normal Shock Waves 397

8.5 Compressible Flow with Friction 404

8.6 Compressible Flow with Heat Transfer..... 409

8.7 Summary 416

Problems..... 416

Chapter 9 Turbomachinery 423

9.1 Equations of Turbomachinery..... 424

9.2 Axial-Flow Turbines..... 430

9.3 Axial-Flow Compressors, Pumps, and Fans..... 453

9.4 Radial-Flow Turbines 466

9.5 Radial-Flow Compressors and Pumps..... 470

9.6 Power-Absorbing versus Power-Producing Machines 476

9.7 Dimensional Analysis of Turbomachinery 478

9.8 Performance Characteristics of Centrifugal Pumps 479

9.9 Performance Characteristics of Hydraulic Turbines..... 487

9.10 Summary 488

Problems..... 489

Chapter 10 Measurements in Fluid Mechanics..... 495

10.1 Measurement of Viscosity 495

10.2 Measurement of Static and Stagnation Pressures 500

10.3 Measurement of Velocity..... 501

10.4 Measurement of Flow Rates in Closed Conduits 506

10.5 Measurements in Open-Channel Flows..... 531

10.6 Summary 536

Problems..... 537

Chapter 11 The Navier–Stokes Equations 543

11.1 Equations of Motion 543

11.2 Applications to Laminar Flow 546

11.2.1 Flow in a Circular Duct..... 546

11.2.2 Flow down an Inclined Plane 549

11.2.3 Flow through a Straight Channel..... 550

11.2.4 Plane Couette Flow..... 552

11.2.5 Flow between Two Rotating Concentric Cylinders 555

11.3 Graphical Solution Methods for Unsteady Laminar Flow Problems..... 557

11.3.1 Suddenly Accelerated Flat Plate..... 559

11.3.2 Unsteady Plane Couette Flow..... 562

11.3.3 Unsteady Flow between Concentric Circular Cylinders 563

11.3.4 Unsteady Flow in a Plane Channel (Start-Up Flow)..... 565

11.4 Introduction to Turbulent Flow 568

11.5 Summary 576

Problems..... 576

Chapter 12 Inviscid Flow..... 583

12.1 Equations of Two-Dimensional Inviscid Flows 583

12.1.1 Continuity Equation..... 584

12.1.2 Momentum Equation 584

12.2 Stream Function and Velocity Potential 585

12.3 Irrotational Flow 591

12.4 Laplace’s Equation and Various Flow Fields..... 595

12.4.1 Uniform Flow 597

12.4.2 Source Flow 597

12.4.3 Sink Flow..... 599

12.4.4 Irrotational Vortex Flow 601

12.5 Combined Flows and Superpositions 606

12.5.1 Flow about a Half-Body 606

12.5.2 Source and Sink of Equal Strengths..... 608

12.5.3 Flow about a Doublet 609

12.5.4 Flow about a Rankine Body..... 611

12.5.5 Flow about a Circular Cylinder..... 613

12.5.6 Flow about a Circular Cylinder with Circulation..... 617

12.6 Inviscid Flow Past an Airfoil..... 620

12.7 Summary 621

Problems..... 622

Chapter 13 Boundary-Layer Flow 627

13.1 Laminar and Turbulent Boundary-Layer Flow..... 628

13.2 Equations of Motion for the Boundary Layer 630

13.3 Laminar Boundary-Layer Flow over a Flat Plate..... 632

13.4 Momentum Integral Equation..... 638

13.5 Momentum Integral Method for Laminar Flow over a Flat Plate..... 640

13.6 Momentum Integral Method for Turbulent Flow over a Flat Plate 645

13.7 Laminar and Turbulent Boundary-Layer Flow over a Flat Plate 649

13.8 Summary 652

Problems..... 652

Appendices..... 657

Bibliography 707

Answers to Selected Problems 709

Index..... 713

This page intentionally left blank

Preface

Introduction to Fluid Mechanics, Fourth Edition is intended for use at the undergraduate level in a mechanical or civil engineering or applied sciences curriculum. It is assumed that the students have a knowledge of calculus and physics, so that learning to use mathematics to model physical principles in fluid mechanics proceeds without much difficulty.

The book is arranged into 13 chapters and is written using SI units as well as British gravitational units. To exclude either of these unit systems from any fundamental area of study would be premature at this time, although efforts have been made for many years at a national level to convert entirely to SI units. A brief description of the engineering system, complete with a discussion of g_c , is also included (for illustrative purposes only).

CONTENTS

The first chapter, which introduces the text, presents definitions appropriate to the study of fluid mechanics. Chapter 2 deals with fluid statics, including pressure measurement, forces exerted by fluids at rest, buoyancy, and stability. In Chapter 3, the basic equations of fluid mechanics are derived from a general conservation equation. The control volume concept is explained, and the continuity, momentum, energy, and Bernoulli equations are presented. Chapter 4 deals mainly with dimensional analysis and modeling and introduces the Rayleigh method, the Buckingham Pi method, and the inspection method. This chapter also discusses dimensional homogeneity, illustrates by example the use of dimensional analysis to correlate data, and shows mathematical techniques for modeling prototypes.

Chapter 5 provides an important application of the basic concepts. This application—*incompressible flow in conduits*—is of great significance to mechanical and civil engineers. Topics include laminar and turbulent flow, nominal pipe sizes, standard tubing sizes, friction factor and pipe roughness, minor losses, noncircular cross sections, and pump sizing for piping systems. Friction factor equations for the Moody diagram are given, as are correlations for coiled tubes and internally finned tubes. Chapter 6 continues with applications to fluid flows past objects and discusses lift and drag forces. It also presents analyses for flows past tractor-trailer trucks, automobiles, and bicycle-rider combinations. Chapter 7, on open-channel flow, is primarily of importance to civil engineers, and the first few sections follow a format similar to that found in classic hydraulics texts. Chapter 8 is an introduction to compressible flow, covering the basic concepts that lead to the solution of practical problems in the field.

In a one-semester course, completion of Chapter 8 could coincide with the end of the semester. The rest of the text is intended for use at an intermediate or second level of study in fluid mechanics. Chapter 9 provides a study of turbomachinery, including design criteria, a description of commercially available machines and installations, and the method used to select pumps and hydraulic turbines for various situations, as well as a section on windmill propellers. Chapter 10 surveys measurement techniques commonly employed in fluid mechanics, such as fluid properties, closed-conduit flows, and open-channel flows.

Some of the more mathematically oriented and classical topics of fluid mechanics then follow. Chapter 11 is an introduction to the equations of motion for isothermal systems (Navier-Stokes equations), and includes applications to a number of laminar flow problems. Chapter 12 presents simple solutions to the equations of inviscid flow and illustrates the method of superposition to obtain equations for more complex flows. Chapter 13 discusses boundary-layer flows; the boundary-layer equations are derived and applied to the problem of flow over a flat plate. The momentum integral equation is derived and applied to both laminar and turbulent flows over a flat plate.

Each chapter concludes with a “Problems” section. These problems are arranged so that the easier ones are presented first, which helps in building the students’ confidence and skill in learning the principles involved. The more difficult problems then allow the students to analyze the topic in more detail. The problems are designed to systematically improve the students’ ability to understand and apply the equations of fluid mechanics to various practical problems such as a flow from a draining coffee pot or drag force exerted on a bicycle–rider combination.

In addition, the end-of-chapter problems have been grouped together by topic. This feature makes it easier for the instructor to select and assign problems that pertain to the specific area under study. It will also be easier for the students to review specific portions of the text by solving the pertinent problems.

Computer and design problems are also included at the end of each of the first eight chapters. The computer problems are formulated so that the student can use a spreadsheet or any of the traditional programming languages to solve them. The design problems are open-ended and require the greater part of the semester to complete. Each design is set up to be completed by a group of student-engineers working together.

In adding new material, I have tried to achieve a thorough and comprehensible presentation of fluid mechanics from a practical viewpoint, without producing an encyclopedic and therefore inaccessible volume.

Learning is enhanced and strengthened when we use equations to mathematically model phenomena that we see and interact with every day. In all chapters, therefore, a strong emphasis is placed on solving practical problems. This approach makes learning a visual experience and provides the students with an introduction to the types of problems they are likely to encounter in practice.

The text has been used successfully in three different courses: a first course in fluid mechanics covering Chapters 1 through 6; an intermediate course in fluid mechanics covering Chapters 7, 8, 10, and 11; and a final course in turbomachinery covering Chapter 9, supplemented with information from other sources.

Regardless of how many times a manuscript is checked, the occasional mistake does seem to slip past. The author invites readers to report any errors to the publisher, so that misconceptions are not taught as truths. The author also invites readers’ comments, which will be gratefully accepted as advice on how to improve the text.

Acknowledgments

I wish to thank the many faculty members and students who wrote letters of encouragement, who made suggestions on how to improve the text, and who pinpointed portions of the text that required clarification. I am also greatly indebted and wish to extend my gratitude to my manuscript reviewers.

I extend my thanks also to CRC staff members, Jonathan Plant, engineering editor, for his guidance, patience, sense of humor, and ability to suggest things politely, and to the University of Memphis for various forms of help. Finally, I would like to acknowledge the encouragement and support of my lovely wife, Marla, who made many sacrifices during the preparation of the various editions of this text.

This page intentionally left blank

Introduction to Fluid Mechanics

Other texts by William S. Janna:

Engineering Heat Transfer, 2nd edition, CRC Press, Boca Raton, FL, 2000.

Most of the texts on heat transfer have focused on the mathematics of the subject, typically at an advanced level. Engineers need a reference that provides a strong, practical foundation in heat transfer that emphasizes real-world problems and helps develop problem-solving skills.

The second edition of *Engineering Heat Transfer* fulfills that need. This book emphasizes effective, accurate modeling of heat transfer problems. It contains several real-world examples to amplify theory and to show how to use the derived equations to model physical problems. Confidence-building exercises begin with easy problems and progress to more difficult ones. Problem-solving skills are developed methodically and thoroughly.

The text is concise and user-friendly. It covers the topics of conduction, convection, and radiation heat transfer in a manner that does not overwhelm the reader. It contains a multitude of drawings, graphs, and figures to clearly convey information that is critical to envisioning the modeling of problems in an abstract study like heat transfer.

The text is uniquely suited to the actual practice of engineering.

Design of Fluid Thermal Systems, 2nd edition, PWS Publishing Co., Boston, MA, 1998.

The course for which this book is intended is a capstone course in energy systems or thermal sciences that corresponds to the machine design course in mechanical systems. The text is divided into two major sections. The first is on piping systems, blended with the economics of pipe size selection and the sizing of pumps for piping systems. The second is on heat exchangers, or, more generally, devices available for the exchange of heat between two process streams.

“Show and Tell” exercises are provided in this text; these require students to provide brief presentations on various topics (e.g., various types of valves that are commonly used, venturi meters, and pump impellers).

The text also contains 51 project descriptions. A student group can select one of these design projects and devote the entire semester to finishing it.

Project management methods are described and students are taught how to complete task planning sheets to keep track of the progress made on the designs. Project report writing is also discussed, and a suggested format is provided.

When a student completes the course material, he/she will have mastered some practical design skills. For example, a student will acquire the ability to size a pipeline to meet least annual cost criteria, to select a pump and ensure that cavitation is avoided, and to select and size a heat exchanger to provide a required fluid outlet temperature or a heat transfer rate. The student will also gain the experience of working in a group and in observing the effective planning and management of project design activities.

The text is comprehensible and gives much practical information on design in the fluid thermal systems area. It relates industrial practice to fundamental engineering concepts in a capstone design experience.

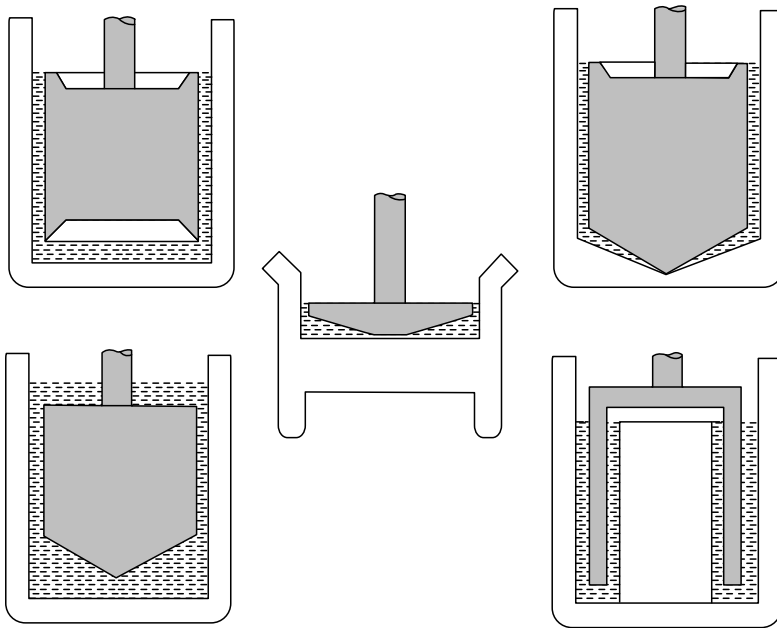
This page intentionally left blank

Author

William S. Janna received his BSME, MSME, and PhD from the University of Toledo. He joined the Mechanical Engineering Faculty of The University of New Orleans in 1976, where he became department chair, and served in that position for four years. Subsequently, he joined the University of Memphis in 1987 as chair of the Department of Mechanical Engineering. He served as associate dean for graduate studies and research in the Herff College of Engineering. His research interests include boundary-layer methods of solution for various engineering problems, modeling the melting of ice objects of various shapes, and the study of sublimation from various geometries. He is the author of three textbooks and a member of American Society of Mechanical Engineers (ASME). He teaches courses in heat transfer, fluid mechanics, and design of fluid/thermal systems. He has designed and constructed a number of experiments in the fluid mechanics and heat transfer laboratories.

This page intentionally left blank

1 Fundamental Concepts



Fluid mechanics is the branch of engineering that deals with the study of fluids— both liquids and gases. Such a study is important because of the prevalence of fluids and our dependence on them. The air we breathe, the water transported through pipes, and the blood in our veins are examples of common fluids. Further, fluids in motion are potential sources of energy that can be converted into useful work—for example, by a waterwheel or a windmill. Clearly, fluids are important, and a study of them is essential to the engineer. The objectives of this chapter are to define a fluid, to describe the unit systems used in the chapter, to discuss common properties of fluids, to establish features that distinguish liquids from gases, and to present the concept of a continuum.

1.1 DEFINITION OF A FLUID

A fluid is a substance that deforms continuously under the action of an applied shear stress. This definition can be easily illustrated if a fluid is compared to a solid. Recall from strength of materials how a solid material deforms when a shear stress is applied. Figure 1.1 shows a planar element Δx by Δy that is acted upon by shear stress τ . The element is fixed at its base and will deflect a finite amount until an equilibrium position is reached. The final position depends on the magnitude of the shear stress.

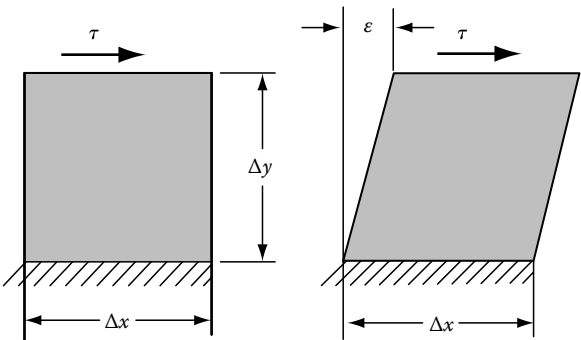


FIGURE 1.1 Deformation of a planar element.

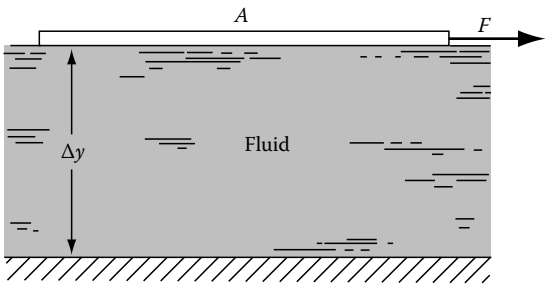


FIGURE 1.2 A fluid acted upon by an applied shear stress.

Consider next a fluid-filled space formed by two horizontal parallel plates that are a distance Δy apart (Figure 1.2). The upper plate has an area A in contact with the fluid. The upper plate is moved to the right when pulled with a force F ; the lower plate is stationary. The applied shear stress then is $\tau = F/A$. As soon as the plate is pulled, it continues to move but, unlike the solid, never reaches a final equilibrium position. The fluid deforms continuously.

1.2 DIMENSIONS AND UNITS

In this text, we use two unit systems: the British gravitational system and the international system (SI). Whatever the unit system, dimensions can be considered as either fundamental or derived. In the British system, the fundamental dimensions are length, time, and force. The units for each dimension are given in the following table:

British Gravitational System		
Dimension	Abbreviation	Unit
Length	L	foot (ft)
Time	T	second (s)
Force	F	pound-force (lbf)

Mass is a derived dimension with units of slug and defined in terms of the primary dimensions as

$$1 \text{ slug} = 1 \frac{\text{lbf} \cdot \text{s}^2}{\text{ft}} \quad (1.1)$$

Converting from the unit of mass to the unit of force is readily accomplished because the slug is defined in terms of the lbf (pound-force).

Example 1.1

An individual weighs 150 lbf.

- a. What is the person's mass at a location where the acceleration due to gravity is 32.2 ft/s^2 ?
- b. On the moon, the acceleration due to gravity is one-sixth of that on earth. What is the weight of this person on the moon?

SOLUTION

- a. Applying Newton's law, we write

$$F = ma$$

Substituting gives

$$150 \text{ lbf} = m(32.2 \text{ ft/s}^2)$$

Solving for mass, we obtain

$$m = \frac{150 \text{ lbf}}{32.2 \text{ ft/s}^2} = 4.66 \text{ lbf} \cdot \text{s}^2/\text{ft}$$

or

$$m = 4.66 \text{ slug}$$

- b. The mass is the same on the moon as on the earth. Again we apply Newton's law,

$$F = ma$$

where $m = 4.66 \text{ slug}$ and the acceleration due to gravity is

$$a = \frac{1}{6} 32.2 \text{ ft/s}^2 = 5.37 \text{ ft/s}^2$$

Substituting, the weight on the moon becomes

$$F = 4.66 \text{ slug} (5.37 \text{ ft/s}^2)$$

or

$$F = 25.0 \text{ lbf}$$

The second unit system we use is the international system (SI). In the SI system, there are three fundamental dimensions, as shown in the following table:

SI Unit System		
Dimension	Abbreviation	Unit
Mass	M	kilogram (kg)
Length	L	meter (m)
Time	T	second (s)

In this system, force is a derived dimension given in newtons (abbreviated N). The newton is defined in terms of the other units as

$$1 \text{ N} = 1 \frac{\text{kg} \cdot \text{m}}{\text{s}^2} \tag{1.2}$$

As with the British gravitational system, force and mass units are defined in terms of one another. Conversion is thus a relatively simple task.

Example 1.2

- a. What is the weight of 1 m^3 of water on earth’s surface if the water has a mass of $1\,000 \text{ kg}$?
- b. What is its weight on Mars, where the acceleration due to gravity is about two-fifths that on Earth?

SOLUTION

- a. We use Newton’s law,

$$F = ma$$

$$\text{where: } \begin{aligned} m &= 1\,000 \text{ kg} \\ a &= 9.81 \text{ m/s}^2 \end{aligned}$$

We then have

$$F = 1\,000 \text{ kg} \frac{9.81 \text{ m}}{\text{s}^2} = 9\,810 \text{ kg} \cdot \text{m/s}^2$$

or

$$F = 9\,810 \text{ N}$$

- b. On Mars, $a = \frac{2}{5}(9.81) = 3.92 \text{ m/s}^2$ and $m = 1\,000 \text{ kg}$. Hence, we obtain

$$F = 1\,000 \text{ kg} (3.92) \text{ m/s}^2 = 3\,920 \text{ kg} \cdot \text{m/s}^2$$

or

$$F = 3\,920 \text{ N}$$

Certain conventions are followed in using SI. For instance, in the preceding example, four-digit numbers were written with a space where one might normally place a comma. Other conventions and definitions will be pointed out as we encounter them.

It is permissible in SI to use prefixes with the units for convenience. Table A.1 gives a complete listing of the names of multiples and submultiples of SI units. As an example of the usage of prefixes, consider the answer to Example 1.2(b):

$$F = 3\,920\text{ N} = 3.920\text{ kN}$$

where, by definition, 10^3 is a factor by which the unit is multiplied and is represented by the lowercase letter k.

Mention has been made of derived dimensions. An example is area A , which has dimensions of L^2 —units of square feet in the English system and square meters in SI. In general, all derived dimensions are made up of fundamental dimensions.

For purposes of illustration, let us briefly examine the English engineering system of units. In this system, mass, length, time, and force are fundamental dimensions with units of pound-mass, foot, second, and pound-force, respectively (see the following table):

English Engineering System		
Dimension	Abbreviation	Unit
Mass	M	pound-mass (lbm)
Length	L	foot (ft)
Time	T	second (s)
Force	F	pound-force (lbf)

These units are related by Newton’s law, written as a proportionality, that force is proportional to the product of mass and acceleration:

$$F \propto ma$$

By introducing a constant of proportionality K , we obtain

$$F = Kma$$

Next let us define 1 lbf as the force required to accelerate a mass of 1 lbm at a rate of 32.2 ft/s^2 . By substitution into the previous equation, we get

$$1\text{ lbf} = K(1\text{ lbm})(32.2\text{ ft/s}^2)$$

Solving for the reciprocal of the constant yields

$$g_c = \frac{1}{K} = 32.2\text{ lbm} \cdot \text{ft/lbf} \cdot \text{s}^2 \tag{1.3}$$

where g_c is a constant that arises in equations in the English system to make them dimensionally correct. Thus, Newton’s law in the English system is written as

$$F = \frac{ma}{g_c} \tag{1.4}$$

Remember that $1/g_c = K$ and K was introduced as a proportionality constant; g_c is not the acceleration due to gravity. When one is using the British gravitational system or the SI system with equations of fluid mechanics, the conversion factor g_c is not necessary, nor is it used. The advantage of working in the English engineering system is that the pound-mass and the pound-force are equal numerically at locations where the acceleration due to gravity g is 32.2 ft/s^2 . In other words, an object having a mass of 10 lbm will weigh 10 lbf where the acceleration due to gravity is 32.2 ft/s^2 . The main disadvantage of using the English engineering system is that the equations of fluid mechanics are correctly written with g_c appearing where appropriate. This usage can be a source of confusion to the student. In the British gravitational and SI unit systems, g_c is not necessary because its effect is already accounted for by the way mass and force are related. For reference purposes, it is useful to note that

32.174 lbm = 1 slug

(1.5)

Other unit systems that have been developed are the British absolute and the CGS absolute. The dimensions and units of each are given in Table 1.1 along with those of the British gravitational, SI, and English engineering systems. Note that only in the English engineering system are both force and mass defined as fundamental dimensions. Thus, we must use the conversion factor g_c for converting mass units to force units and vice versa when working with the English engineering system. The other systems directly define these two variables in terms of each other.

Solving problems in fluid mechanics often requires us to convert from one set of units to another. For easing this burden, a set of conversion tables appears as Table A.2. The listing is alphabetical by physical quantity; factors are given as multipliers to change other units into SI units.

There is a controversy regarding the terms *weight* and *weighing*. When a substance is weighed, the result can be expressed as a force or as a mass. It is common to hear of something weighing 10 N. There are proponents of this type of reporting as well as proponents of the alternative—something weighing 10 kg. In this section, we shall take no formal stand; but to avoid confusion, we will arbitrarily interpret the act of weighing to produce a force and give the result with an accompanying value for gravity. When gravity is not noted, we assume 32.2 ft/s^2 (9.81 m/s^2).

The units for angular measurement are the radian (rad) or the degree ($^\circ$). There are 2π radians per 360° . It is important to remember that the radian is a dimensionless unit but the degree is not. Rotational speed is correctly specified in terms of radians per second (rad/s) or, alternatively, in units of revolutions per unit time. Here again, radians are dimensionless but revolutions are not. There are 2π radians per revolution.

TABLE 1.1
Conventional Systems of Units

Dimension	British Gravitational	SI	English Engineering	British Absolute	CGS Absolute
Mass (fundamental)		kg	lbm	lbm	g
Force (fundamental)	lbf		lbf		
Mass (derived)	slug				
Force (derived)		N		poundal	dyne
Length	ft	m	ft	ft	cm
Time	s	s	s	s	s
g_c (conversion factor)	—	—	$32.2 \frac{\text{lbm} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2}$	—	—

The unit for temperature (t) measurement in the British gravitational system is the degree Rankine ($^{\circ}\text{R}$). The Rankine scale is an absolute temperature scale. The degree Fahrenheit ($^{\circ}\text{F}$) is commonly used and is related to the degree Rankine by

$$t(^{\circ}\text{R}) = t(^{\circ}\text{F}) + 460 \quad (1.6)$$

In SI units, the unit for absolute temperature measurement is the degree Kelvin (K, correctly written without the $^{\circ}$ symbol). Also used is the degree Celsius ($^{\circ}\text{C}$). These two temperature scales are related by

$$t(\text{K}) = t(^{\circ}\text{C}) + 273 \quad (1.7)$$

1.3 PROPERTIES OF FLUIDS

The equations of fluid mechanics allow us to predict the behavior of fluids in various flow situations. To use the equations, however, there must be information regarding properties. The properties we discuss in this chapter include viscosity, pressure, density, kinematic viscosity, surface tension, specific heat, internal energy, enthalpy, and compressibility.

1.3.1 VISCOSITY

A fluid has many properties. One important property is **viscosity**, which is a measure of the resistance the fluid has to an externally applied shear stress. This property arises from the definition of a fluid, so we will examine it in that regard. Recall from Section 1.1 that a fluid is defined as a substance that deforms continuously under the action of an applied shear stress. Consider again a fluid-filled space formed by two horizontal parallel plates (Figure 1.3). The upper plate has an area A in contact with the fluid and is pulled to the right with a force F_1 at a velocity V_1 . If the velocity at each point within the fluid could be measured, a velocity distribution like that illustrated in Figure 1.3 would result. The fluid velocity at the moving plate is V_1 because the fluid adheres to that surface. This phenomenon is called the nonslip condition. At the bottom, the velocity is zero with respect to the boundary, owing again to the nonslip condition. The slope of the velocity distribution is dV_1/dy .

If this experiment is repeated with F_2 as the force, a different slope or strain rate results: dV_2/dy . In general, to each applied force there corresponds only one shear stress and only one strain rate. If data from a series of these experiments were plotted as τ versus dV/dy , Figure 1.4 would result for a fluid such as water. The points lie on a straight line that passes through the origin. The slope of the resulting line in Figure 1.4 is the viscosity of the fluid because it is a measure of the fluid's resistance to shear. In other words, viscosity indicates how a fluid will react (dV/dy) under the action of an external shear stress (τ).

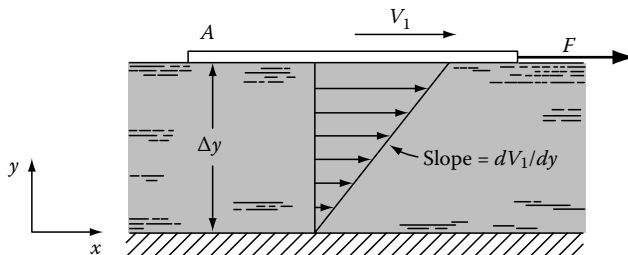


FIGURE 1.3 Shear stress applied to a fluid.

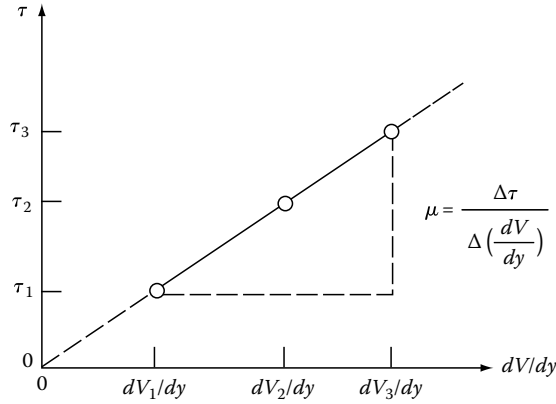


FIGURE 1.4 A plot of τ versus dV/dy (a rheological diagram) for Newtonian fluids.

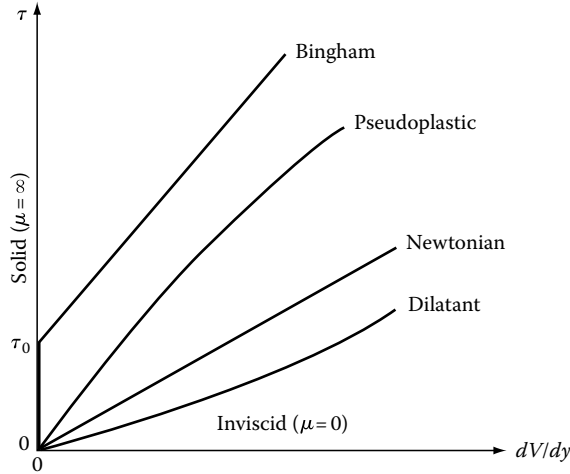


FIGURE 1.5 A rheological diagram for Newtonian and non-Newtonian time-independent fluids.

The plot of Figure 1.4 is a straight line that passes through the origin. This result is characteristic of a *Newtonian fluid*, but there are other types of fluids called *non-Newtonian fluids*. A graph of τ versus dV/dy , called a **rheological diagram**, is shown in Figure 1.5 for several types of fluids. Newtonian fluids follow Newton’s law of viscosity and are represented by the equation

$$\tau = \mu \frac{dV}{dy} \tag{1.8}$$

where: τ = the applied shear stress in dimensions of F/L^2 (lbf/ft² or N/m²)
 μ = the absolute or dynamic viscosity of the fluid in dimensions of $F \cdot T/L^2$ (lbf · s/ft² or N · s/m²)
 dV/dy = the strain rate in dimensions of $1/T$ (rad/s)

Examples of Newtonian fluids are water, oil, and air. If a fluid cannot be described by Equation 1.8, it is called a non-Newtonian fluid. On the basis of their behavior, these fluids are divided into three categories: time-independent, time-dependent, and viscoelastic.

1.3.1.1 Time-Independent Fluids

Wet beach sand and other water solutions containing a high concentration of powder are examples of **dilatant** fluids (Figure 1.5). These fluids exhibit an increase in viscosity with increasing shear stress. A power law equation (called the Ostwald–deWaele equation) usually gives an adequate description:

$$\tau = K \left(\frac{dV}{dy} \right)^n \quad (n > 1) \quad (1.9)$$

where: K is called a consistency index with dimensions of $(F \cdot T^n)/L^2$ (lbf · sⁿ/ft² or N · sⁿ/m²)
 n is a flow behavior index

Greases, mayonnaise, and starch suspensions are examples of **pseudoplastic** fluids (see Figure 1.5). These fluids exhibit a decrease in viscosity with increasing shear stress. Again a power law equation applies:

$$\tau = K \left(\frac{dV}{dy} \right)^n \quad (n < 1) \quad (1.10)$$

Chocolate mixtures, drilling muds, greases, paint, paper pulp, soap, toothpaste, and sewage sludge are examples of **Bingham plastic** fluids (see Figure 1.5). These fluids behave as solids until an initial yield stress τ_0 is exceeded. Beyond τ_0 , Bingham plastics behave like Newtonian fluids. The descriptive equation is

$$\tau = \tau_0 + \mu_0 \frac{dV}{dy} \quad (1.11)$$

1.3.1.2 Time-Dependent Fluids

A gypsum suspension is an example of a **rheopectic** fluid. A shear stress that increases with time gives the rheopectic fluid a constant strain rate. In Figure 1.3, τ_1 would have to increase with time to maintain a constant strain rate dV_1/dy .

Fast-drying paints, some liquid foods, and shortening are common examples of **thixotropic** fluids. These fluids behave in a manner opposite to rheopectic fluids. A shear stress that decreases with time gives a thixotropic fluid a constant strain rate. In Figure 1.4, τ_1 would have to decrease with time to maintain dV_1/dy .

1.3.1.3 Viscoelastic Fluids

Flour dough is an example of a **viscoelastic** fluid. Such fluids show both elastic and viscous properties. They partly recover elastically from deformations caused during the flow.

Most common fluids follow Newton's law of viscosity, however, and we will deal primarily with them in this text. The preceding paragraphs simply illustrate that many types of fluids exist. The absolute or dynamic viscosity of various Newtonian fluids appears in the property tables in the appendix—Table A.3 for air, Table A.4 for water, Table A.5 for common liquids, and Table A.6 for common gases.

Example 1.3

A fluid is placed in the area between two parallel plates. The upper plate is movable and connected to a weight by a cable as shown in Figure 1.6. Calculate the velocity of the plate for three cases.

- Assume the fluid to be linseed oil (Newtonian)
- Assume the fluid to be water
- Assume the fluid to be grease having $\tau_0 = 4 \text{ N/m}^2$ and $\mu_0 = 0.004 \text{ N} \cdot \text{s/m}^2$

In all cases, take $m = 0.001 \text{ kg}$, $\Delta y = 5 \text{ mm}$, $g = 9.81 \text{ m/s}^2$, and the area of contact $A = 0.5 \text{ m}^2$. Assume that steady state is achieved.

SOLUTION

- From Table A.5, μ for linseed oil is $0.033 \text{ N} \cdot \text{s/m}^2$. The force applied is $mg = 0.001 \text{ kg} (9.81 \text{ m/s}^2) = 0.0098 \text{ N}$, and the shear stress is $\tau = 0.0098 \text{ N} / 0.5 \text{ m}^2$ or $\tau = 0.02 \text{ N/m}^2$. By definition,

$$\tau = \mu \frac{dV}{dy}$$

or

$$\tau = \mu \frac{\Delta V}{\Delta y}$$

Now at $y=0$ we have $V=0$, and at $y=\Delta y=0.005 \text{ m}$ we have the velocity of interest. By substitution,

$$0.02 \text{ N/m}^2 = 0.033 \text{ N} \cdot \text{s/m}^2 \frac{V}{0.005 \text{ m}}$$

and

$$V = 0.00302 \text{ m/s} = 3 \text{ mm/s}$$

- From Table A.5, μ for water is $0.89 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$. Applying Newton's law of viscosity,

$$\tau = \mu \frac{dV}{dy}$$

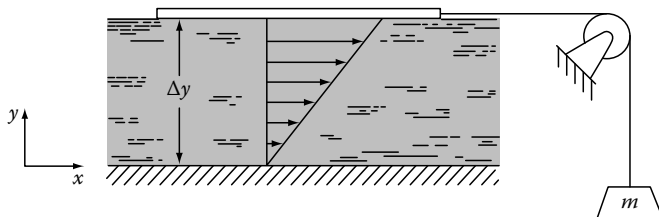


FIGURE 1.6 Sketch for Example 1.3.

we get

$$0.02 \text{ N/m}^2 = 0.89 \times 10^{-3} \text{ N} \cdot \text{s/m}^2 \frac{V}{0.005 \text{ m}}$$

or

$V = 0.11 \text{ m/s}$

- c. The applied shear stress is 0.02 N/m^2 , and the initial shear stress of the grease is 4 N/m^2 . The velocity of the plate is, therefore, $V=0 \text{ m/s}$. The plate will not move unless the applied shear stress exceeds 4 N/m^2 .

Example 1.4

The first two columns of Table 1.2 shows actual viscosity data obtained on Jif[®] creamy peanut butter. The data were obtained with TA Rheometer, which consists of a flat stationary surface and a rotating disk. A tablespoon of the liquid of interest is placed on the flat surface which is roughly 3 in. in diameter. The flat surface is then raised until the fluid touches the disk. The apparatus begins rotating the disk and simultaneously measuring the rotational speed and torque required. The torque is related directly to the applied shear stress (column 1 of the table), and the rotational speed is directly related to the strain rate (column 2). Assuming a power law relationship, determine the equation that best describes the data and the type of fluid tested.

SOLUTION

The data can be analyzed by hand with a calculator using equations for a least squares analysis. Alternatively, the data can be entered onto a spreadsheet and a trend line equation is provided. The latter of these two methods yields the following power law equation:

$$\tau = K \left(\frac{dV}{dy} \right)^n = 395.9 \left(\frac{dV}{dy} \right)^{0.1163}$$

A graph of the data is shown in Figure 1.7a. Comparing this graph with that of Figure 1.5, we conclude that the peanut butter is a **pseudoplastic fluid**.

The third column of Table 1.2 shows the apparent viscosity of the peanut butter, and is merely the numbers in column 1 divided by those in column 2. A graph of the apparent viscosity versus strain rate

TABLE 1.2
Viscosity Data for Jif[®] Creamy Peanut Butter

τ (Pa)	dV/dt (1/s)	μ (Pa · s)
268.4	0.06065	4426
310.5	0.5699	544.8
352.6	1.535	229.8
394.7	2.609	151.3
436.8	3.775	115.7
478.9	5.555	86.21
521.0	12.28	42.43
563.2	52.08	10.81
605.3	136.9	4.422

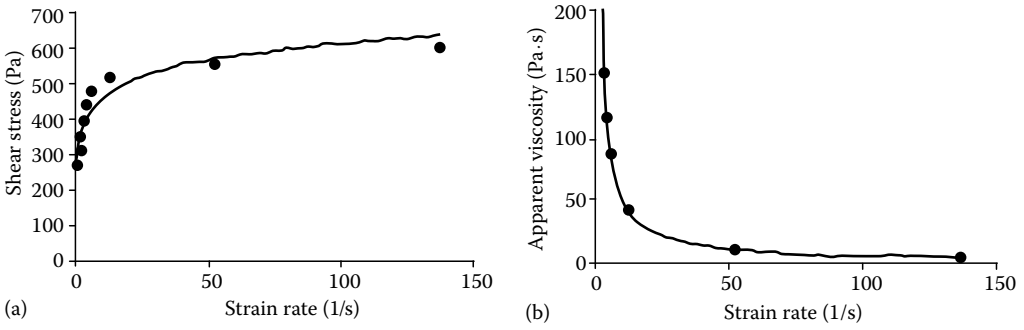


FIGURE 1.7 Graph of the viscosity data for Jif® creamy peanut butter.

for the last six data points is given in Figure 1.7b. We see that as the strain rate increases, the apparent viscosity decreases, and so the peanut butter is referred to as a **shear thinning** fluid. That is, as shear stress increases, the strain rate increases, and the apparent viscosity decreases.

1.3.2 PRESSURE

Pressure is defined as a normal force per unit area existing in the fluid. Pressure (p) has dimensions F/L^2 (lbf/ft² or N/m²) and is treated in detail in Chapter 2. Fluids, whether at rest or moving, exhibit some type of pressure variation—either with height or with horizontal distance. In closed-conduit flow, such as flow in pipes, differences in pressure from beginning to end of the conduit maintain the flow. Pressure forces are significant in this regard.

1.3.3 DENSITY

The **density** of a fluid is its mass per unit volume, represented by the letter ρ . If the mass of 1 ft³ of water is 1.94 slug, its density is $\rho = 1.94$ slug/ft³. If the mass of 1 m³ of liquid is 820 kg, its density is $\rho = 820$ kg/m³. Density has dimensions of M/L^3 . The density of various substances is given in Tables A.3 and A.6.

One quantity of importance related to density is specific weight. Whereas density is mass per unit volume, **specific weight** is weight per unit volume. Specific weight is related to density by

$$SW = \rho g \quad (1.12)$$

with dimension F/L^3 (lbf/ft³ or N/m³).

Another useful quantity is specific gravity, which is also related to density of a substance. The **specific gravity** of a substance is the ratio of its density to the density of water at 4°C:

$$s = \frac{\rho}{\rho_w} \quad (\rho_w = \text{density of water}) \quad (1.13)$$

Values of specific gravity of various substances appear in the property tables of the appendix: Table A.4 for water at various temperatures, Tables A.5 for common liquids, Table A.7 for various solids, and Table A.8 for various metals and alloys. For our purposes here, we will take ρ_w to be 1.94 slug/ft³ or 1 000 kg/m³.

1.3.4 KINEMATIC VISCOSITY

Absolute or dynamic viscosity μ has already been discussed. In many equations, however, the ratio of absolute viscosity to density often appears. This ratio is given the name of **kinematic viscosity** ν :

$$\nu = \frac{\mu}{\rho} \quad (1.14)$$

From Table A.5, for example, the density of ethylene glycol is $1\,100\text{ kg/m}^3$, whereas the dynamic viscosity is $16.2 \times 10^{-3}\text{ N}\cdot\text{s/m}^2$. Hence, the kinematic viscosity is

$$\nu = \frac{16.2 \times 10^{-3}\text{ N}\cdot\text{s/m}^2}{1\,100\text{ kg/m}^3} = 1.48 \times 10^{-5}\text{ m}^2/\text{s}$$

The dimensions of kinematic viscosity are L^2/T (ft^2/s or m^2/s).

It is important to note that the viscosity and density of fluids both change with temperature. This can easily be seen in Table A.3 for air and in Table A.4 for water. Table A.3, for example, shows that over the range -23.15°C to 146.85°C , density changes from 1.413 to 0.840 kg/m^3 . Viscosity varies from 15.99 to $23.66\text{ N}\cdot\text{s/m}^2$ over this same temperature range.

1.3.5 SURFACE TENSION

Surface tension is a measure of the energy required to reach below the surface of a liquid bulk and bring molecules to the surface to form a new area. Thus, surface tension arises from molecular considerations and has meaning only for liquid–gas or liquid–vapor interfaces. In the liquid bulk sketched in Figure 1.8, compare molecules located at point *A* well below the surface to those at point *B* near the surface. A fluid particle at *A* is drawn uniformly in all directions to its neighboring particles. A particle at *B* is drawn more strongly to liquid particles in its vicinity than to those in the vapor above the surface. Consequently, a surface tension exists; in water, this surface tension is strong enough to support the weight of a needle. Figure 1.9 further illustrates this phenomenon as a platinum–iridium ring is being moved through a liquid–gas interface.

The previous discussion concerned the surface tension at a liquid–gas interface, where the forces of attraction were cohesive forces. If the liquid is in contact with a solid, however, adhesive forces must be considered as well. Some fluids, such as water, contain molecules that are drawn more closely to glass than to each other. This effect is illustrated in Figure 1.10a, which depicts water in a glass tube. Adhesive forces (water to glass) are greater than cohesive forces (water to

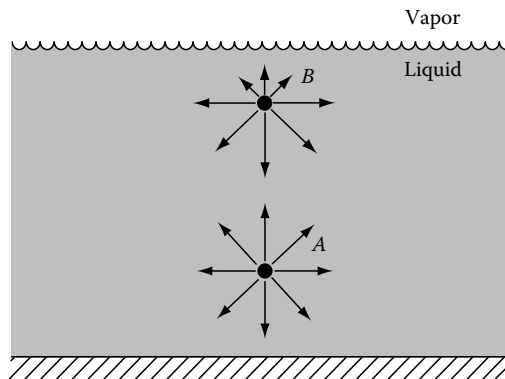


FIGURE 1.8 An illustration of differences in molecular attraction between two particles at separate locations.

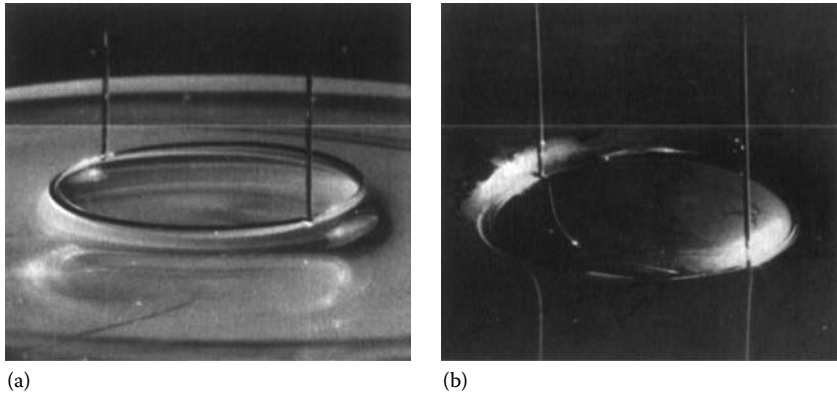


FIGURE 1.9 An illustration of surface tension. A platinum–iridium ring (ring circumference is 6 cm, wire diameter is 0.018 cm) (a) being pulled upward through the surface of a tap water–liquid soap mixture and (b) being pushed downward through the surface of liquid mercury of 90% purity.

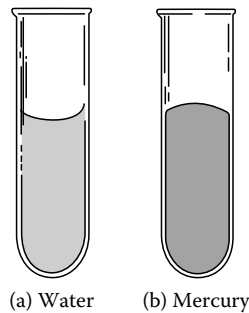


FIGURE 1.10 Capillary action in a glass tube showing a water meniscus and a mercury meniscus.

water). Mercury exhibits the opposite effect, as shown in Figure 1.10b. Mercury-to-mercury forces are greater than those between mercury and glass. The resulting curved surface, called a **meniscus**, illustrates this phenomenon. The surface tension of various liquids is given in Tables A.5 and A.9.

As stated earlier, surface tension is the energy required to bring molecules to the surface to form a new area; thus, the dimension of surface tension is energy/area by definition: $F \cdot L/L^2 = F/L$ (lbf/ft or N/m). Surface tension, represented by the letter σ , is important in studies of droplets and jet flows. In the majority of problems we will investigate, surface tension forces are negligible in comparison to pressure, gravity, and viscous forces.

Example 1.5

- Develop an expression to calculate the pressure inside a droplet of liquid.
- Determine the pressure inside of a 0.01-cm-diameter water droplet exposed to atmospheric pressure ($101\,300\text{ N/m}^2$).

SOLUTION

- A sketch of a droplet in equilibrium is shown in Figure 1.11. The pressure difference from inside to outside tends to expand the droplet. The pressure force is constrained by the surface

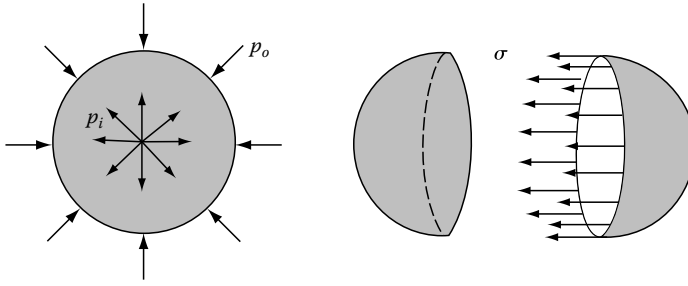


FIGURE 1.11 Sketch for Example 1.5.

tension. The bursting force is pressure difference times area, and this force is balanced by the surface tension force. A force balance on the droplet of Figure 1.11 gives

$$\left(\begin{array}{c} \text{Pressure} \\ \text{difference} \end{array} \right) \times \left(\begin{array}{c} \text{Cross-sectional} \\ \text{area} \end{array} \right) = \left(\begin{array}{c} \text{Surface} \\ \text{tension} \end{array} \right) \times \left(\begin{array}{c} \text{Surface} \\ \text{length} \end{array} \right)$$

or

$$(p_i - p_o)\pi R^2 = \sigma(2\pi R)$$

Solving, we get

$$p_i - p_o = \frac{2\sigma}{R}$$

b. From Table A.5 for water, we read

$$\sigma = 71.97 \times 10^{-3} \text{ N/m}$$

The pressure outside the droplet is $p_o = 101\,300 \text{ N/m}^2$, and the radius is $R = 0.01/2 = 0.005 \text{ cm} = 0.000\,05 \text{ m}$. The pressure inside the droplet is thus found as

$$p_i = p_o + \frac{2\sigma}{R} = 101\,300 \text{ N/m}^2 + \frac{2(71.97 \times 10^{-3}) \text{ N/m}}{0.000\,05 \text{ m}}$$

or

$$p_i = 104\,200 \text{ N/m}^2$$

Example 1.6

A capillary tube is one that has a very small inside diameter. When a capillary tube is immersed slightly in a liquid, the liquid will rise within the tube to a height that is proportional to its surface tension. This phenomenon is referred to as **capillary action**. Figure 1.12a depicts a glass capillary tube slightly immersed in water. As shown, the water rises by an amount h within the tube, and the angle between the meniscus and glass tube is θ . Perform a force balance on the system and develop a relationship between the capillary rise h and surface tension σ .

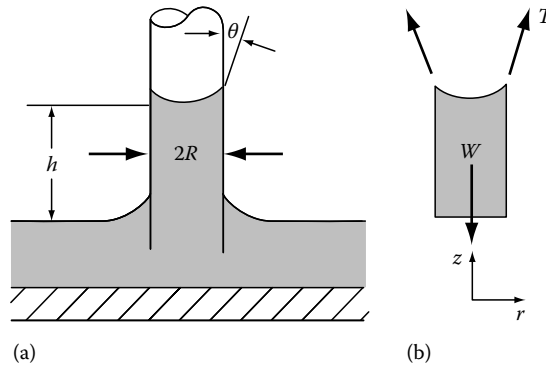


FIGURE 1.12 Capillary tube submerged in liquid and the resultant forces.

SOLUTION

Figure 1.12b shows a cross section of the liquid column of height h and diameter $2R$. Also shown are the forces that act—the weight of W of the column of liquid and the surface tension force T . The weight is found with

$$W = mg = \frac{m}{V} V g$$

where m/V is the density and volume is given by $V = \pi R^2 h$. Thus,

$$W = \rho(\pi R^2 h)g$$

The force due to surface tension acts at the circumference where the liquid touches the glass wall. The surface tension force is, therefore, the product of surface tension and circumference:

$$T = \sigma(2\pi R)$$

Summing forces in the vertical direction shows that the vertical component of the surface tension force must equal the weight of the liquid column:

$$W = T \cos \theta$$

or

$$\rho \pi R^2 h g = 2 \pi R \sigma (\cos \theta)$$

Solving for capillary height gives

$$h = \frac{2\sigma}{\rho R g} \cos \theta$$

1.3.6 SPECIFIC HEAT

The **specific heat** of a substance is the heat required to raise a unit mass of the substance by 1° . The dimension of specific heat is energy/(mass · temperature): $F \cdot L/(M \cdot t)$.* The process by which the

* Note that when the denominator of a unit is written in shilling style (with a slash, /), to avoid confusion parentheses are used if a product is involved.

heat is added also makes a difference, particularly for a gas. The specific heat for a gas that undergoes a process occurring at constant pressure involves a different specific heat than that for a constant volume process. For example, the specific heat at constant pressure c_p for carbon dioxide is 0.205 Btu/(lbm · °R), or 876 J/(kg · K), and the specific heat at constant volume c_v is 0.158 Btu/(lbm · °R), or 674 J/(kg · K). (Table A.6 gives the specific heat of various gases.) Also of importance when dealing with these properties is the **ratio of specific heats**, defined as

$$\gamma = \frac{c_p}{c_v}$$

For carbon dioxide, the ratio of specific heats γ is 1.30. For air $\gamma = 1.4$.

The Btu (British thermal unit) is the unit of energy measurement in the English engineering system. One Btu is defined as the energy required to raise the temperature of 1 lbm of water by 1°F. However, because we are using the British gravitational system, the units we will encounter for specific heat are Btu/(slug · °R). Although both specific heats vary with temperature for real substances, they are in many cases assumed to be constant to simplify calculations.

Example 1.7

Suppose that 3 kg of air is placed in a cylinder-piston arrangement, as in Figure 1.13. The piston is weightless, is free to move vertically without friction, and provides a perfect seal.

- How much heat must be added to increase the temperature of the air by 10 K?
- How much heat must be added for the same temperature increase if the piston is constrained?

SOLUTION

- As heat is added, the air expands and forces the piston to move upward. The expansion therefore takes place at constant pressure if we assume a frictionless piston. From the definition of specific heat at constant pressure,

$$\tilde{Q} = mc_p(T_2 - T_1)$$

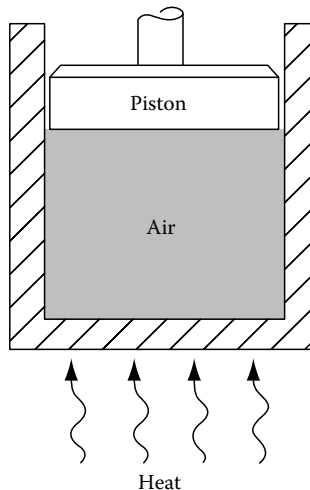


FIGURE 1.13 Sketch for Example 1.7.

where: $\tilde{Q}$ = heat added
the specific heat is assumed to be constant
 $T_2 - T_1$ is given as 10 K

The specific heat of air is 1 005 J/(kg · K) from Table A.6. By substitution,

$$\tilde{Q} = 3 \text{ kg}[1\,005 \text{ J}/(\text{kg} \cdot \text{K})](10 \text{ K})$$

Solving, we get

$$\tilde{Q} = 30\,150 \text{ J} = 30.2 \text{ kJ}$$

- b. With the piston held in place, the heat addition occurs at constant volume. Assuming constant specific heat, we have by definition

$$\tilde{Q} = mc_v(T_2 - T_1)$$

The specific heat at constant volume c_v is not found specifically in Table A.6 but can be determined from the data available. Table A.6 gives for air,

$$c_p = 1\,005 \text{ J}/(\text{kg} \cdot \text{K})$$

and

$$\gamma = \frac{c_p}{c_v} = 1.4$$

Thus, the specific heat we are seeking is

$$c_v = \frac{c_p}{1.4} = \frac{1\,005}{1.4} = 718 \text{ J}/(\text{kg} \cdot \text{K})$$

After substitution, we get

$$\tilde{Q} = 3 \text{ kg}[718 \text{ J}/(\text{kg} \cdot \text{K})](10 \text{ K})$$

or

$$\tilde{Q} = 21\,540 \text{ J} = 21.5 \text{ kJ}$$

More heat is required for the constant-pressure process because some of the added heat goes into work done in raising the piston. In the constant-volume process, by contrast, added heat goes directly into raising the temperature of the gas.

1.3.7 INTERNAL ENERGY

Internal energy is the energy associated with the motion of the molecules of a substance. Consider a quantity of gas. The gas can have three types of energy: energy of position (potential energy), energy of translation (kinetic energy), and energy of molecular motion (internal energy). In the preceding example, the heat added at constant volume went into internal energy of the oxygen.

The added heat did not increase the potential or kinetic energies but instead affected the motion of the molecules. This effect is manifested as an increase in temperature. In fact, for a perfect gas with constant specific heats, it can be shown that

$$\Delta u = c_v \Delta T \quad (1.15)$$

where Δu is a change in internal energy per unit mass with dimensions of energy/mass ($F \cdot L/M$).

1.3.8 ENTHALPY

A quantity that appears often in equations is $u + p/\rho$; this quantity is given the special name **enthalpy**, h . The ratio of p/ρ is often referred to as flow work. In Example 1.7, the air was heated at constant pressure. The added heat went into increasing the internal energy of the gas and work done by raising the piston. Again for the case of a perfect gas with constant specific heats, it can be shown that

$$\Delta h = c_p \Delta T \quad (1.16)$$

Enthalpy, like internal energy, has the dimension of energy/mass ($F \cdot L/M$).

Example 1.8

Two slugs of air at 14.7 lbf/in.^2 and 70°F are placed in a constant-volume container. Heat is added until the final temperature is 100°F . Calculate the change in internal energy for the air.

SOLUTION

Under the pressure and temperature conditions stated, the air can be assumed to have constant specific heats. From Table A.6 for air $c_p = 7.72 \text{ Btu/slug} \cdot ^\circ\text{R}$ and $c_p/c_v = 1.4$. Therefore, $c_v = 7.72/1.4 = 5.51 \text{ Btu/slug} \cdot ^\circ\text{R}$. The internal energy change is found with Equation 1.15:

$$\Delta u = c_v \Delta T = 5.51(100 - 70)$$

or

$$\Delta u = 165 \text{ Btu/slug}$$

Note that the units for specific heat contain $^\circ\text{R}$ in the denominator, but the air temperatures are given in $^\circ\text{F}$. The temperature difference of the air, however, is still 40° , whether or not the temperatures are first converted to $^\circ\text{R}$. A 1°F temperature difference equals a 1°R temperature difference. Likewise, a 1 K temperature difference equals a 1°C temperature difference.

1.3.9 COMPRESSIBILITY FACTOR/BULK MODULUS

Consider water at atmospheric pressure, 101.3 kN/m^2 , and at room temperature. The density of the water if measured would be about 1000 kg/m^3 . Suppose that the pressure exerted on the water is increased by a factor of 100 to 10130 kN/m^2 . The change in density, if measured, will be found to be less than 1% of the initial value, although the pressure exerted has been greatly increased. The property that describes this behavior is called the **compressibility factor**:

$$\beta = -\frac{1}{V} \left(\frac{\partial V}{\partial p} \right)_T \quad (1.17)$$

where: $\mathcal{V}$ = volume

$\partial\mathcal{V}/\partial p$ describes the change in volume with respect to pressure

the subscript notation indicates that the process is to occur at constant-temperature conditions

The reciprocal of the compressibility factor is the **isothermal bulk modulus**:

$$k = -\mathcal{V} \left(\frac{\partial p}{\partial \mathcal{V}} \right)_T \quad (1.18)$$

which can be written in difference form as

$$k = -\mathcal{V} \left(\frac{\Delta p}{\Delta \mathcal{V}} \right) = -\frac{\Delta p}{(\Delta \mathcal{V}/\mathcal{V})} \quad (1.19)$$

The dimensions of the change in volume $\Delta \mathcal{V}$ and the volume $\mathcal{V}$ are the same, so the denominator of the above equation is dimensionless. The isothermal bulk modulus k therefore has the same units as pressure.

The isothermal bulk modulus can be measured, but it is usually more convenient to calculate it using data on the velocity of sound in the medium. The **sonic velocity** in a liquid (or a solid) is related to the isothermal bulk modulus and the density by

$$a = \sqrt{\frac{k}{\rho}} \quad (1.20)$$

where a is the sonic velocity in the medium. Sonic velocity of various liquids is provided in Table A.5.

Example 1.9

Determine the change in pressure required to decrease the volume of liquid acetone by 1% from its value at room temperature and pressure.

SOLUTION

From Table A.5, we read

$$\rho = 0.787(1\,000) \text{ kg/m}^3$$

$$a = 1\,174 \text{ m/s}$$

The isothermal bulk modulus is calculated as

$$k = \rho a^2 = [0.787(1\,000) \text{ kg/m}^3](1\,174 \text{ m/s})^2$$

or

$$k = 1.085 \times 10^9 \text{ N/m}^2$$

The 1% decrease in volume means that $-(\Delta \mathcal{V}/\mathcal{V}) = 0.01$. Equation 1.19 is rearranged to solve for the change in pressure:

$$\Delta p = -k \left(\frac{\Delta \mathcal{V}}{\mathcal{V}} \right) = -1.085 \times 10^9 (-0.01)$$

Solving,

$$\Delta p = 1.085 \times 10^7 \text{ N/m}^2$$

Thus acetone initially at atmospheric pressure (101.3 kN/m^2) would have to experience a pressure increase of $10\,850 \text{ kN/m}^2$ to change its volume by 1%. This represents a 100-fold pressure increase to yield a negligible change in volume. All liquids typically behave in this way under the action of external pressure changes. Consequently, we can consider liquids, in general, to be incompressible. Although these calculations were made for volume changes, the conclusions apply to density changes as well ($\rho = m/V$).

1.3.10 IDEAL GAS LAW

In the discussion of isothermal bulk modulus, a relationship was stated between changes in pressure and changes in volume for liquids. For gases, we use an **equation of state** to obtain such a relationship. Many gases under suitable conditions can be described by the **ideal gas law**:

$$pV = mRT$$

Using this equation, the density can be expressed as

$$\rho = \frac{p}{RT} = \frac{m}{V} \quad (1.21)$$

where: T = temperature in absolute units

R is the gas constant (values of which are given in Table A.6 for various gases)

The gas constant for any gas can be obtained by dividing the universal gas constant by the molecular weight (called molecular mass in SI) of the gas. The universal gas constant is

$$\begin{aligned} \bar{R} &= 49,709 \text{ ft} \cdot \text{lbf}/(\text{slugmol} \cdot \text{R}) = 1545 \text{ ft} \cdot \text{lbf}/(\text{lbmol} \cdot \text{R}) \\ &= 8\,312 \text{ N} \cdot \text{m}/(\text{mol} \cdot \text{K}) \end{aligned} \quad (1.22)$$

(The molecular weight has units of slug/slugmol in the British gravitational system. In SI, the molecular mass has units of kg/mol. The mass unit does not appear in the denominator.) The ideal gas law closely approximates the behavior of most real gases at moderate pressures.

By way of comparison, let us calculate the percent change in density of a gas under a change of pressure. Consider a volume of air under a pressure of 100 kN/m^2 and again at a pressure of 500 kN/m^2 . Thus,

$$\frac{p_1}{p_2} = \frac{100}{500} = \frac{1}{5}$$

From the ideal gas law applied to both states, and assuming constant temperature,

$$\frac{\rho_2}{\rho_1} = \frac{p_2}{p_1} = 5$$

and the percent change in density is

$$\left(\frac{\rho_2 - \rho_1}{\rho_1} \right) 100 = 400\%$$

This result is in contrast to liquids, the density of which changes less than 1% for $p_2 = 100p_1$.

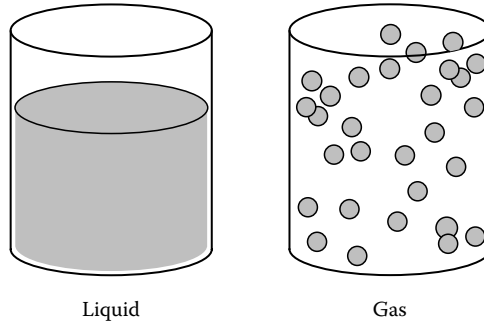


FIGURE 1.14 An illustration of one difference between a liquid and a gas.

1.4 LIQUIDS AND GASES

Although liquids and gases are both fluids, there are significant differences between them. We have already seen that liquids are incompressible, whereas gases are not. Another difference that is more obvious is that a liquid retains its own volume but takes the shape of its container. A gas takes the volume and the shape of its container. This difference is illustrated in Figure 1.14.

1.5 CONTINUUM

There are two possible mathematical approaches to the treatment of problems in fluid mechanics. In the **microscopic approach**, fluid behavior is described by specifying motion of the individual molecules. This is done traditionally using concepts from probability theory. In the **macroscopic approach**, fluid behavior is described by specifying motion of small fluid volumes containing many molecules. The macroscopic approach uses the average effect of many molecules and means that we are treating the fluid as a continuous medium or a **continuum**. In this section, we use the continuum approach throughout.

Now let us redefine pressure with regard to the concept of a continuum. Consider a fluid particle made up of many molecules. We are interested in the average effects of these many molecules. Pressure at a point in a continuum is defined as a time-averaged normal force exerted by molecules on a unit surface. The area of the unit surface must be small, but large enough (compared to intermolecular distances) to yield representative results. If the unit area were too small, it is possible that no molecules would strike it. Thus a zero normal force would be obtained, and pressure at a point in this case would have no significance. Mathematically, pressure at a point in a continuum is defined as

$$p = \lim_{A \rightarrow A^*} \frac{F}{A}$$

Here A^* is a very small area not equal to zero but experiencing enough molecular collisions to be representative of the fluid bulk; F is the time-averaged normal force exerted by the collisions.

In a similar fashion, we can redefine density with regard to the concept of a continuum. Density is a mass per unit volume; mathematically,

$$\rho = \lim_{V \rightarrow V^*} \frac{M}{V}$$

where: V is a volume that contains a mass M of fluid

V^* is a small volume not equal to zero but containing a large enough number of molecules that it is representative of the fluid

If V^* were allowed to shrink to zero, it would contain no molecules and density would have no significance.

To get an idea of how small V^* can be, consider a cube of air at room temperature and pressure that is 0.01 mm on each side. The 0.01-mm dimension is smaller than most measuring instruments and probes used in engineering, yet the cube contains 3×10^{10} molecules. So the 0.01-mm dimension is consistent with the continuum approach.

PROBLEMS

Dimensions and Units

- 1.1 Determine the following conversions:
 - a. The number of teaspoons per tablespoon
 - b. The number of milliliters per cup
- 1.2 At a location where $g = 32.0 \text{ ft/s}^2$, what weight does a mass of 6 slugs have?
- 1.3 An object has a mass of 46 kg and weighs 450 N on a spring scale. Determine the acceleration due to gravity at this location.
- 1.4 A plastic milk container is labeled with the following information:

Net 128 fluid ounces (1 gal)(3.78 L)


Table A.2 lists the ounce, the gallon, and the liter as units for volume. If the specific gravity of milk is 1.03, determine the mass of the milk in the container and express it in kilograms.
- 1.5 Soft drinks are available in what are advertised to be 2-L bottles. Previously, the same soft drinks were available in 1/2-gal sizes. Could the manufacturers use the same container in both cases? (Assume that the smaller container can take a 10% increase in liquid.)
- 1.6 On the earth's surface, 1 ft^3 of water weighs 62.4 lbf.
 - a. What is the mass of 1 ft^3 of water on the earth where the acceleration due to gravity is 32.2 ft/s^2 ?
 - b. What is the weight of 1 ft^3 of water on the moon where the acceleration due to gravity is one-sixth that on the earth?
- 1.7 What is the conversion factor between Btu/h and horsepower? Use the conversion factors from Table A.2 to determine the answer.
- 1.8 What is the weight of 1 gal of water in pound-force and in newton?

Fluid Properties: Density


- 1.9 Graph the density of air as a function of temperature.
- 1.10 Water has a density of 1000 kg/m^3 . What is its density in terms of each of the unit systems listed in Table 1.1?
- 1.11 The earth may be considered as a sphere whose diameter is 8000 mi and whose density is roughly approximated to be 5600 kg/m^3 . What is the mass of the earth in pounds-mass and in kilograms?
- 1.12 It is commonly known that there are 16 oz in 1 lb. However, Table A.2 lists the ounce as a unit of volume for liquids. Consider a $\frac{1}{2}$ lbf glass that weighs 1 lbf when filled with 8 oz of liquid. Determine the liquid density in British gravitational units and in SI units. Also calculate the specific weight in both unit systems.
- 1.13 What is the weight of 1 ft^3 of carbon tetrachloride? Express the result in newtons.
- 1.14 What is the mass in kilograms of 5 ft^3 of kerosene?

Fluid Properties: Viscosity

- 1.15** In Example 1.3(c), what is the minimum mass required to move the upper plate?
- 1.16** If the mass in Example 1.3(c) is 0.25 kg, determine the plate velocity.
- 1.17** Referring to Figure 1.6, assume that the fluid in the space is turpentine. What weight is required to move the plate at 5 cm/s?
- 1.18** Referring to Figure 1.6, it is known that a force of 0.89 N will move the upper plate to the right at 12 cm/s. For an area of contact of 0.16 m^2 and mercury in the space, determine Δy .
- 1.19** Referring to Figure 1.6, let the area of contact be 0.75 m^2 and Δy be 1 cm. The fluid inside is castor oil. Determine the velocity of the upper plate if the pulling force is due to a mass of 25 g.
- 1.20** Graph absolute and kinematic viscosity of air as a function of temperature.
- 1.21** A weightless plate is moving upward in a space as shown in Figure Pl.21. The plate has a constant velocity of 2.5 mm/s, and kerosene is placed on both sides. The contact area for either side is 2.5 m^2 . The plate is equidistant from the outer boundaries with $\Delta y = 1.2 \text{ cm}$. Find the force F .

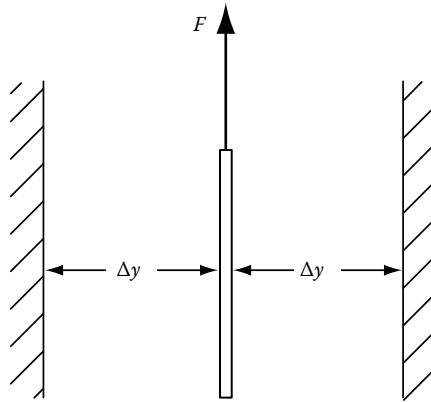**FIGURE P1.21**

- 1.22** Referring to Figure Pl.21, the plate is being pulled upward in a space filled with chloroform. The plate velocity is 12 in./s and $\Delta y = 0.05 \text{ in.}$ The force is 2 lbf. Determine the area of contact of each side of the plate.
- 1.23** In Figure Pl.23, the total space between stationary boundaries is 1 cm. Ethylene glycol is placed on the left side and propylene glycol is placed on the right. When the infinite plate that separates the liquids is pulled upward, it finds an equilibrium position. Determine the lateral location of the plate if it has a thickness of 1 mm.

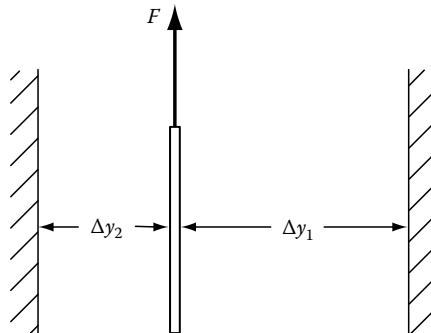**FIGURE P1.23**

- 1.24 Figure P1.23 illustrates an infinite plate being pulled upward in a space filled with ethyl alcohol on the right and an unknown fluid on the left. The plate is not equidistant from the boundaries; in fact, $\Delta y_1 = 2\Delta y_2$. Determine the viscosity of the unknown fluid.
- 1.25 What type of fluid is described by the following shear stress–strain rate data?

τ (N/m ²)	0.4	0.82	2.50	5.44	8.80
dV/dy (rad/s)	0	10	50	120	200

- 1.26 What type of fluid is described by the following shear stress–strain rate data?

τ (N/m ²)	0	0.005 8	0.008 9	0.010 7	0.011
dV/dy (rad/s)	0	25	50	75	100

- 1.27 What type of fluid has the following shear stress–strain rate relationship?

τ (lbf/ft ²)	0	4	9	14	19
dV/dy (rad/s)	0	12.5	25.0	37.5	50.0

- 1.28 Actual tests on vaseline yielded the following data:

τ (N/m ²)	0	200	600	1 000
dV/dy (1/s)	0	500	1 000	1 200

Graph the data and determine the fluid type.

- 1.29 Kraft[®] mayonnaise was tested in the laboratory, and the following data were obtained. Is this a Newtonian fluid, and is it a shear thinning fluid?

Shear Stress (Pa)	Shear Rate (1/s)
130.4	11.39
174.2	92.15
195.2	172.8
211.7	253.4
225.8	334.1
235.2	414.8
243.4	495.4
250.9	576.2
257.3	656.8
263.6	737.5
269.6	818.1
274.6	898.8
279.6	979.5
284.7	1060
289.1	1141

1.30 Honey was tested in the laboratory, and the following data were obtained. Is honey a Newtonian fluid?

Shear Stress (Pa)	Shear Rate (1/s)
63.9	4.832
127	10.37
190.1	15.88
253.2	22.29
316.3	28.73
379.4	34.59
442.5	40.64
505.6	46.11
568.7	53.15
631.8	59.01
694.9	64.96
758	70.97
821.1	77.24
884.2	83.08

1.31 Consider the act of spreading soft butter on bread with a knife. In essence, we have a stationary surface (the bread), a moving surface (the knife), and a Newtonian fluid occupying the space in between. The part of the knife in contact with the butter has dimension of 9 cm × 1.6 cm. The knife is moved across the bread at a rate of 5 cm/s. The average thickness of the butter during the process is about 2 mm (a rough approximation).

- a. Calculate the shear stress exerted on the butter if the force required to move the knife is 0.07 N.
- b. Calculate the strain rate.
- c. Calculate the absolute viscosity of the butter.

1.32 Figure P1.32 shows a shaft 4 in. in diameter moving through a well-oiled sleeve that is 12 in. long. The force required to move the shaft is 25 lbf, and the shaft velocity is 5 in./s. The oil-filled clearance between the shaft and sleeve is 0.005 in. Calculate the viscosity of the lubricating oil (a Newtonian fluid).

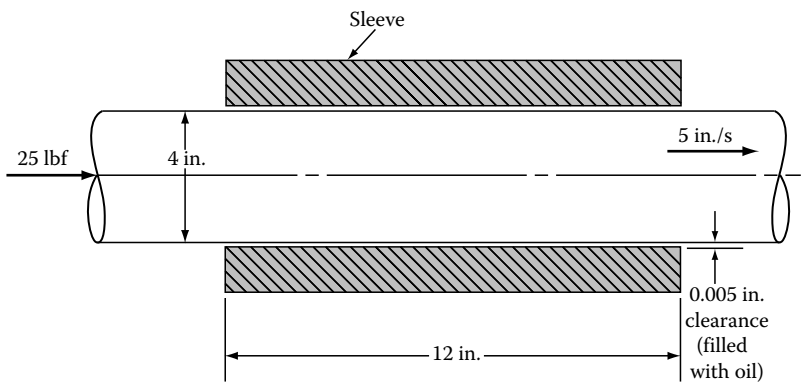


FIGURE P1.32

1.33 Mayonnaise is tested in the laboratory to obtain its rheological diagram. Two data points are

- (A) $\tau = 4.63 \times 10^{-2} \text{ lbf/ft}^2 \quad dV/dy = 25 \text{ rad/s}$
- (B) $\tau = 6.52 \times 10^{-2} \text{ lbf/ft}^2 \quad dV/dy = 50 \text{ rad/s}$

Determine the consistency index and the flow behavior index. Calculate the strain rate if the shear stress is increased to 7×10^{-2} lbf/ft².

- 1.34** Two data points on a rheological diagram of a certain grease are

(A) $\tau = 8.72 \times 10^{-3} \text{ N/m}^2 \quad dV/dy = 20 \text{ rad/s}$

(B) $\tau = 2.10 \times 10^{-3} \text{ N/m}^2 \quad dV/dy = 40 \text{ rad/s}$

Determine the consistency index and the flow behavior index. Calculate the strain rate if the shear stress is increased to $3 \times 10^{-2} \text{ N/m}^2$.

- 1.35** A highly viscous slow-drying paint has a viscosity μ_0 of $0.029 \text{ lbf} \cdot \text{s/ft}^2$. At a shear stress of 2.7 lbf/ft^2 , the strain rate is 74.5 rad/s . Calculate its initial yield stress.
- 1.36** Determine the kinematic viscosity of acetone in the unit systems listed in Table 1.1.
- 1.37** What is the change in dynamic viscosity of water from 0°C to 100°C ? Express the result in terms of percentage of viscosity at 0°C . Repeat for the kinematic viscosity.
- 1.38** A fluid with a viscosity of 8 cp (centipoise) has a density of 59 lbm/ft^3 . What is its kinematic viscosity in the CGS system?

Fluid Properties: Surface Tension

- 1.39** Calculate the pressure inside a 2-mm-diameter drop of acetone exposed to atmospheric pressure (101.3 kN/m^2).
- 1.40** Determine the pressure inside a water droplet of diameter $500 \mu\text{m}$ in a partially evacuated chamber where $p = 70 \text{ kN/m}^2$.
- 1.41** Calculate the pressure inside a $\frac{1}{16}$ -in.-diameter drop of chloroform in contact with air at a pressure of 14.7 lbf/in.^2 .
- 1.42** A drop of benzene is 1 mm in diameter and is in contact with air at a pressure of 100 kN/m^2 .
- Calculate its internal pressure.
 - If the pressure difference (inside minus outside) for the benzene droplet is the same as that for a mercury droplet, what is the diameter of the mercury droplet?
- 1.43** If a small-diameter tube is immersed slightly in a liquid, the rise of a column of liquid inside is due to surface tension. This phenomenon is referred to as capillary action, examples of which are illustrated in Figure Pl.43. The weight of the liquid column in the tube equals the product of force due to the pressure difference across the gas–liquid interface and the tube area. These are also equal to the peripheral force around the tube circumference due to surface tension. Thus, we write

$$\rho gh(\pi R^2) = \sigma 2\pi R \cos \theta$$

The capillary rise can be solved for in terms of surface tension as

$$h = \frac{2\sigma}{\rho Rg} \cos \theta$$

As shown in Figure Pl.43, three cases can exist, depending on the value of the angle θ . When θ equals $\pi/2$, there is no rise in the tube. The angle θ is usually taken as 0° for water and 140° for mercury, if the tube is made of glass.

- Determine the height h to which water at room temperature would rise in a 4-mm-diameter tube.
- Determine the height h to which mercury at room temperature would rise in a 4-mm-diameter tube.

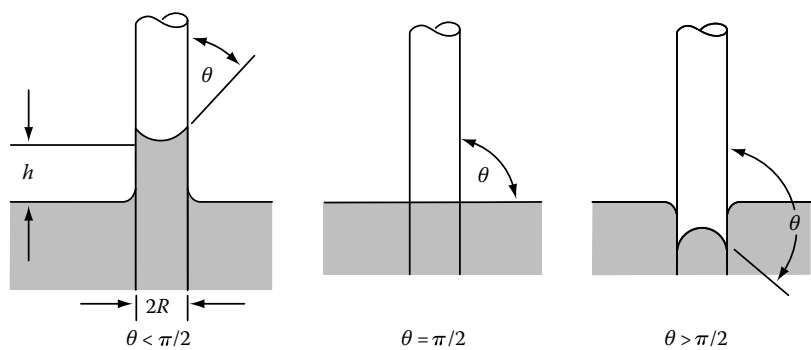


FIGURE P1.43

1.44 Following are surface tension data for water given as a function of temperature. If a 6-mm-diameter tube is inserted into a sample at each temperature, the capillary rise as explained in Problem 1.43 would vary according to

$$h = \frac{2\sigma}{\rho Rg} \cos \theta$$

Determine h for each temperature and plot h versus T .

T (°C)	σ (N/m)
0	75.6×10^{-3}
10	74.2×10^{-3}
18	73.1×10^{-3}
30	71.2×10^{-3}
40	69.6×10^{-3}
50	67.9×10^{-3}
60	66.2×10^{-3}
70	64.4×10^{-3}
80	62.6×10^{-3}
100	58.9×10^{-3}

1.45 An interesting variation of the capillary tube method of measuring surface tension is the *hyperbola method*. With the hyperbola method, two glass plates that have a small angle between them are positioned vertically as shown in Figure Pl.45. The glass plates (5 in. $\times$ 5 in.) are separated by a small wedge at one end and held together by two binder clips at the other end. A transparency of graph paper is attached to one of the plates. If the plates are partially submerged, liquid rises between them and, when viewed from the side, the liquid surface forms a hyperbola. An x - y coordinate system is imposed on the graph paper. The x -axis is the free surface of the liquid in the reservoir and the y -axis is at the touching edges of the plates. Readings of x - y pairs of various points on the hyperbola are taken and can be used to calculate surface tension with

$$\sigma = \frac{xy\theta}{2} \rho g = (\text{geometry factors}) \cdot \rho g$$

Suppose that the fluid used in the hyperbola method is water and that the angle θ is 1° . Determine the equation of the hyperbola and sketch its shape. Is there any similarity between the above equation and that derived for the capillary tube?

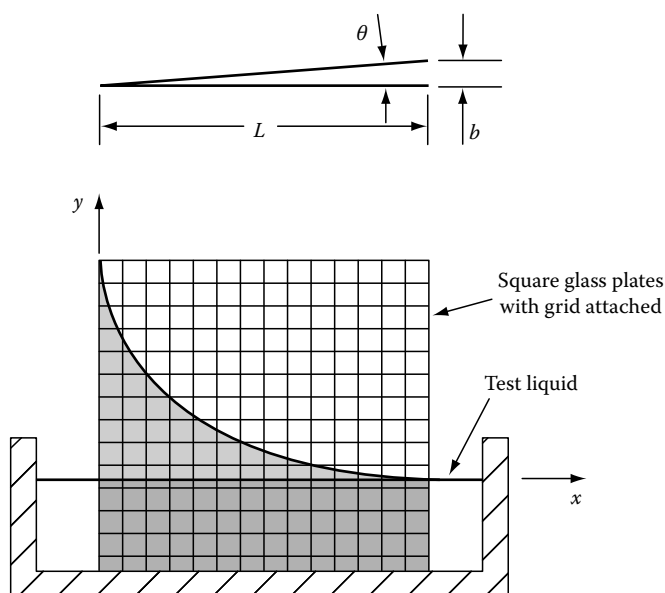


FIGURE P1.45 Schematic of the apparatus used in the hyperbola method.

- 1.46 A capillary tube that is 0.2 in. in diameter has its end submerged in mercury. The capillary depression (see Problem 1.43) is 0.052 in. Calculate the surface tension of the mercury.
- 1.47 Determine the height h to which ethyl alcohol at room temperature would rise in a 5-mm-diameter tube. The contact angle is 0° . (See Problem 1.43.)
- 1.48 The surface tension of benzene is measured with a capillary tube whose inside diameter is 4 mm. The contact angle is 0° . What is the expected height h to which the benzene will rise in the tube? (See Problem 1.43.)
- 1.49 Determine the height h to which carbon tetrachloride at room temperature would rise in a 3-mm-diameter tube given that the contact angle is 0° . (See Problem 1.43.)
- 1.50 The surface tension of glycerin at room temperature is measured with a capillary tube. If the inside diameter of the tube is 2.5 mm and the contact angle is 0° , what is the expected rise of glycerin in the tube? (See Problem 1.43.)
- 1.51 Determine the height h to which octane at room temperature would rise in a 2-mm-diameter tube given that the contact angle is 0° . (See Problem 1.43.)
- 1.52 When glass tubes are used with mercury, instrumentation guides recommend tubes with a minimum bore of 10 mm to avoid capillary error. Estimate the height mercury rises in a tube of this diameter. (See Problem 1.43.)

Fluid Properties: Specific Heat, Internal Energy, and Enthalpy

- 1.53 Figure P1.53 depicts 0.1 slugs of air in a piston-cylinder arrangement. Heat is removed from the air so that the air temperature is reduced by 25°F . Assuming a frictionless, movable piston, determine the amount of heat removed.

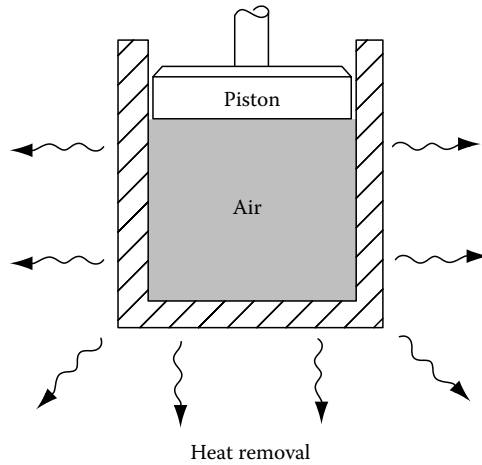


FIGURE P1.53

- 1.54 The vessel in Figure P1.53 contains 1.5 kg of carbon dioxide. The gas is cooled so that its temperature is decreased by 25°C . Determine the amount of heat removed per unit mass of carbon dioxide. Assume a frictionless, movable piston.
- 1.55 A rigid vessel contains 8 kg of argon heated by 50 kJ of energy. Determine the temperature change of the gas.
- 1.56 Carbon dioxide is inside of a constant-volume container. Initially, the carbon dioxide is at 101.3 kN/m^2 and 25°C . The container is heated until the gas reaches 50°C . What is the change in the internal energy of the gas?
- 1.57 One kg of gas is in a piston-cylinder arrangement. It is desired to raise the temperature of the gas by 25°C . When heat is added, the piston is free to move due to a frictionless seal. If the gas is helium, will more heat be required than if it were hydrogen? Calculate the heat required in both cases and also calculate the change in enthalpy for each gas.
- 1.58 Figure P1.58 shows two constant-volume containers that are equal in size and in contact with one another. The air and its container are at 120°F , whereas the hydrogen and its container are at 60°F . The containers are well insulated except where they touch. Heat is transferred from the air to the hydrogen, and both fluids and container eventually reach the same final temperature. The mass of air is twice that of the hydrogen. Calculate the final temperature.

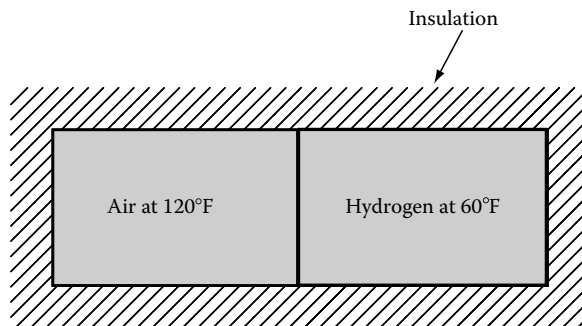


FIGURE P1.58

Fluid Properties: Isothermal Bulk Modulus

- 1.59** The pressure exerted on a liquid increases from 500 to 1 000 kPa. The volume decreases by 1%. Determine the bulk modulus of the liquid.
- 1.60** Determine the coefficient of compressibility for the liquid of Problem 1.59.
- 1.61** Water at 45°F has a bulk modulus of about 300,000 lbf/in.². Determine the pressure rise required to decrease its volume by 1%.
- 1.62** Water at 20°C has a bulk modulus of 21.8×10^8 N/m². Determine the pressure change required to decrease its volume by 1%.
- 1.63** What is the bulk modulus of a liquid whose volume decreases by 0.5% for a pressure increase of 1,000 lbf/in.²? For a density of 1.8 slug/ft³, what is the sonic velocity in the liquid?
- 1.64** What is the bulk modulus of a liquid whose volume decreases by 0.5% for a pressure increase of 60 kN/m²?
- 1.65** What change in pressure is required to decrease the volume of benzene by 1%?
- 1.66** The volume of glycerin changes by 2% under the action of a change in pressure. What is the change in pressure required to do this?

Fluid Properties: Ideal Gas Law

- 1.67** What is the density of air at 30°C and 300 kN/m²?
- 1.68** With the ideal gas law, derive an expression that is useful for relating pressures and volumes at the beginning and end of a process that occurs at constant temperature and constant mass.
- 1.69** Use the ideal gas law to derive an expression that is useful for relating temperatures and volumes at the beginning and end of a process that occurs at constant pressure and constant mass.
- 1.70** Beginning with the universal gas constant as

$$\bar{R} = 49.709 \text{ ft} \cdot \text{lbf/slugmol} \cdot ^\circ \text{R}$$

use the conversion factor table to determine its value in SI units.

- 1.71** A piston-cylinder arrangement contains 0.07 slug of air. Heat is removed from the air until the air temperature has been reduced by 15°F. For a frictionless piston, determine the change in volume experienced by the air if the pressure remains constant at 2500 lbf/ft².
- 1.72** Carbon dioxide gas exists in a chamber whose volume is 5 ft³. The temperature of the gas is uniform at 40°C and the pressure is 3 atm. What is the mass of carbon dioxide contained?
- 1.73** A rigid vessel containing 8 kg of argon is heated until its temperature increases by 20°C. Determine the final pressure of the argon if its initial temperature is 28°C and its pressure is 150 kN/m².
- 1.74** A certain gas has a molecular mass of 40. It is under a pressure of 2.5 atm and a temperature of 25°C. Determine its density and pressure in CGS absolute units.
- 1.75** Table A.3 gives properties of air at atmospheric pressure and for various temperatures. Atmospheric pressure is 101.3 kN/m². With this information, verify values of density in the table corresponding to any four temperatures of your choice.
- 1.76** A gas mixture has a density of 0.01 kg/m³ when a pressure of 4 atm is exerted on it. Determine its molecular mass if its temperature is 40°C.
- 1.77** The carbon dioxide gas inside of a constant-volume container is initially at 101.3 kN/m² and 25°C. The container is heated until the gas reaches 50°C. Calculate the final pressure of the gas.
- 1.78** What volume of air would have the same weight of 1 ft³ of carbon dioxide if both are at room temperature and atmospheric pressure?

Computer Problems

- 1.79 Prepare a plot of density of water as a function of temperature. Determine an equation for the density.
- 1.80 Prepare a graph of absolute viscosity of water as a function of temperature and generate an equation for the graph.
- 1.81 Prepare a plot of kinematic viscosity of water as a function of temperature. What is the equation of the graph?
- 1.82 In the petroleum industry, the specific gravity of a substance (usually oil) is expressed in terms of degrees API, or °API (American Petroleum Institute). The specific gravity and the °API are related by

$$^{\circ}\text{API} = \frac{141.5}{\text{Specific gravity}} - 131.5$$

Graph °API (vertical axis) versus specific gravity over the range that encompasses all fluids in Table A.5.

- 1.83 A Saybolt viscometer is used in the petroleum industry to measure viscosity of lubricating oils. The test oil is placed in a cup surrounded by a constant-temperature bath. At time zero (a stopwatch is started), test oil is allowed to flow out of the bottom of the cup, through an orifice. The oil leaves in the form of a stream and is collected in a calibrated beaker. When 60 mL of oil flows through the orifice, the elapsed time is recorded. The time required for 60 mL of oil to flow through the orifice is thus experimentally determined. The viscosity of the oil is expressed in terms of the elapsed time; for example, one would say that the oil has “a viscosity of 100 Saybolt universal seconds.” This is abbreviated as “100 SUS.” The equation to convert SUS to units of m^2/s is given by

$$\nu \text{ (m}^2/\text{s)} = 0.224 \times 10^{-6} \text{ (SUS)} - \frac{185 \times 10^{-6}}{\text{SUS}}$$

Graph this equation as ν on the vertical axis versus SUS. Allow SUS to vary from 34 to 115 in increments of 5 SUS. (The equation is valid over this range only.)

Design Problems

1.84 Conversion of Units

The discussion of converting the unit system used in the United States to SI is a recurring one. There are a number of difficulties and problems that arise in doing so. Some of these difficulties are encountered in this problem.

Consider the food industry and the desirability of marketing cookbooks that currently contain recipes written in the U.S. customary system. Commonly, found recipes direct the user to combine carefully measured specific amounts of various ingredients into a mix for further processing (e.g., heating, cooking, baking, etc.). The specific amounts are listed in terms of cups, tablespoons, teaspoons, and so on. Converting recipes from these units to SI units is easy, but will the converted recipe be easy to follow, be convenient to use, and produce a dish of the same quality?

Locate a recipe for baking bread. The recipe selected should contain at least six ingredients, including yeast, and involve some baking.

- a. Convert the quantities listed to SI units, remembering to convert oven temperature as well.
- b. Note how much time was involved in making the conversion.
- c. Consult an experienced bread baker and ask about unit systems used.
- d. Select a recipe book and estimate how much time it would take to convert all recipes in the book.

- e. If possible, purchase measuring spoons and containers that are calibrated in SI (or metric) units.
- f. If possible, have the two breads prepared—one using the original bread recipe and one using the converted recipe. Compare the results.

1.85 A New System for Measuring Time

It is proposed to convert the current method for measuring time into a decimal system. Thus, the second, the minute, and the hour as we know them would no longer be used. (There would still be 365 days/year, however.) It will be necessary to devise new units for measuring time—for the moment, refer to them as “no. 1 time units,” “no. 2 time units,” and so on, as necessary, in the new system that you will define. These units are related such that there are 10 (or 100 or 10^n) no. 1 time units per no. 2 time unit.

- a. Determine how time is to be broken down. For example, we now have years–months–days–hours–minutes–seconds
Change the system so that we will have years–months–days–no. 1 time units–no. 2 time units–etc.
- b. The conversions between the new time units must be factors of 10. Names for the new time units must be selected; that is, new names for no. 1 time unit, no. 2 time unit, and so on must be assigned.
- c. Completely define the new time-measurement system.
- d. Apply your new system to the current conventions of the 8-h working day and 40-h working week, and define new work-time standards. Select other time-dependent definitions (such as “bake for 25 min”) and redefine them.
- e. Determine how clocks would have to be modified in order to conform to your new time standard.
- f. Consult electrical engineers who work with microprocessors and determine how your new time definitions would affect their industry.
- g. Justify your new system and give an opinion on whether such a conversion should be made.

1.86 A Falling Shaft Viscometer

Figure P1.86 shows a rough sketch of a circular shaft that is free to move vertically in a stationary sleeve. The clearance is to be filled with a liquid. It is desired to use such a design to


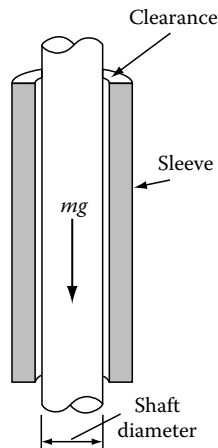


FIGURE P1.86

measure the absolute viscosity of the liquid in the clearance. The shaft will move under the action of gravity, and the presence of the liquid will keep the shaft centered within the sleeve. In this type of apparatus, the shaft is released from rest and, as it moves, it eventually reaches a constant velocity. That is, the shaft accelerates initially, but after a very short time (usually less than 1 s), its velocity no longer changes. This “final,” or “terminal,” shaft velocity is to be measured. The greater the fluid viscosity, the lower the shaft velocity. Of the fluids to be tested, ethylene glycol is the most viscous and octane is the least viscous.

- a. Select a shaft diameter and a sleeve diameter, and determine the clearance.
- b. Select a shaft and sleeve length. Remember that when the shaft is released, the distance d it falls must be measurable. The time interval t must also be measured so that the terminal velocity $V = d/t$ can easily be calculated with little error.
- c. Design a method for making sure that liquid is continually fed into the clearance space. An airspace should not form.
- d. Make up an analysis for determining viscosity using your design and the data obtained.

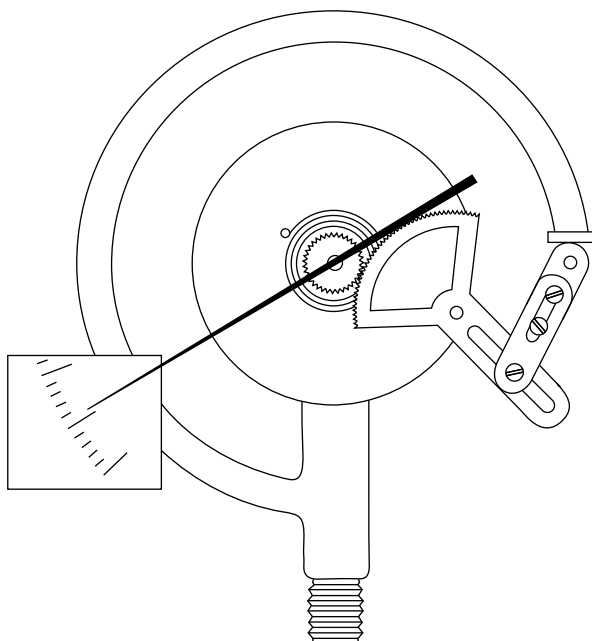2 Fluid Statics



In this chapter, we study the forces present in fluids at rest. Knowledge of force variations—or, more appropriately, pressure variations—in a static fluid is important to the engineer. Specific examples include water retained by a dam or bounded by a levee, gasoline in a tank truck, and accelerating fluid containers. In addition, fluid statics deals with the stability of floating bodies and submerged bodies and has applications in ship hull design and in determining load distributions for flat-bottomed barges. Thus, fluid statics concerns the forces that are present in fluids at rest, with applications to various practical problems.

The objectives of this chapter are to discuss pressure and pressure measurement, to develop equations for calculating forces on submerged surfaces, and to examine problems involving the stability of partially or wholly submerged bodies.

2.1 PRESSURE AND PRESSURE MEASUREMENT

Because our interest is in fluids at rest, let us determine the pressure at a point in a fluid at rest. Consider a wedge-shaped particle exposed on all sides to a fluid as illustrated in Figure 2.1a. Figure 2.1b is a free-body diagram of the particle cross section. The dimensions Δx , Δy , and Δz are small and tend to zero as the particle shrinks to a point. The only forces considered to be acting on the particle are due to pressure and gravity. On either of the three surfaces, the pressure force is $F = pA$. By applying Newton's second law in the x - and z -directions, we get, respectively,

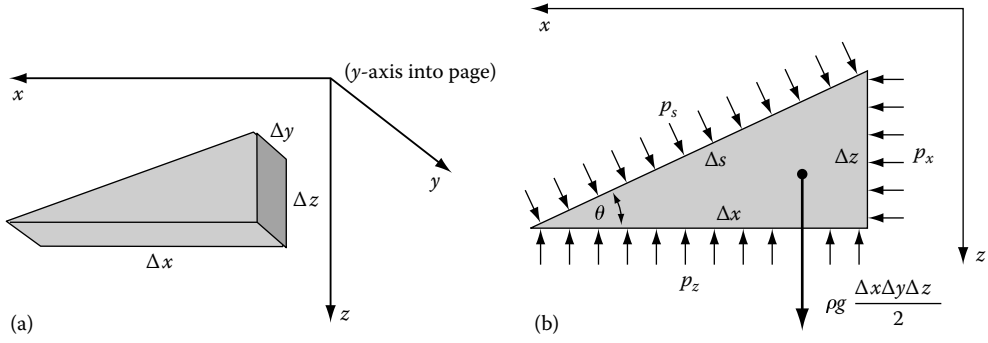


FIGURE 2.1 A wedge-shaped particle.

$$\begin{aligned}\sum F_x &= p_x \Delta z \Delta y - p_s \Delta s \Delta y \sin \theta = \left(\frac{\rho}{2} \Delta x \Delta y \Delta z \right) a_x = 0 \\ \sum F_z &= p_z \Delta x \Delta y - p_s \Delta s \Delta y \cos \theta - \rho g \frac{\Delta x \Delta y \Delta z}{2} \\ &= \left(\frac{\rho}{2} \Delta x \Delta y \Delta z \right) a_z = 0\end{aligned}$$

where: p_x , p_z , and p_s are average pressures acting on the three corresponding faces
 a_x and a_z are the accelerations
 ρ is the particle density

The net force equals zero in a static fluid. After simplification, with $a_x = a_z = 0$, these two equations become

$$p_x \Delta z - p_s \Delta s \sin \theta = 0$$

and

$$p_z \Delta x - p_s \Delta s \cos \theta - \frac{\rho g}{2} \Delta x \Delta z = 0$$

The third term on the left-hand side of the second equation can be neglected because it is a higher-order term containing $\Delta x \Delta z$, which is very small in comparison to the other terms. From the geometry of the wedge, we find that

$$\Delta z = \Delta s \sin \theta$$

and

$$\Delta x = \Delta s \cos \theta$$

with θ being arbitrarily chosen. Substituting into the pressure equations yields

$$\left. \begin{aligned} p_x &= p_s \\ p_z &= p_s \end{aligned} \right\} \quad p_x = p_z = p_s \quad (2.1)$$

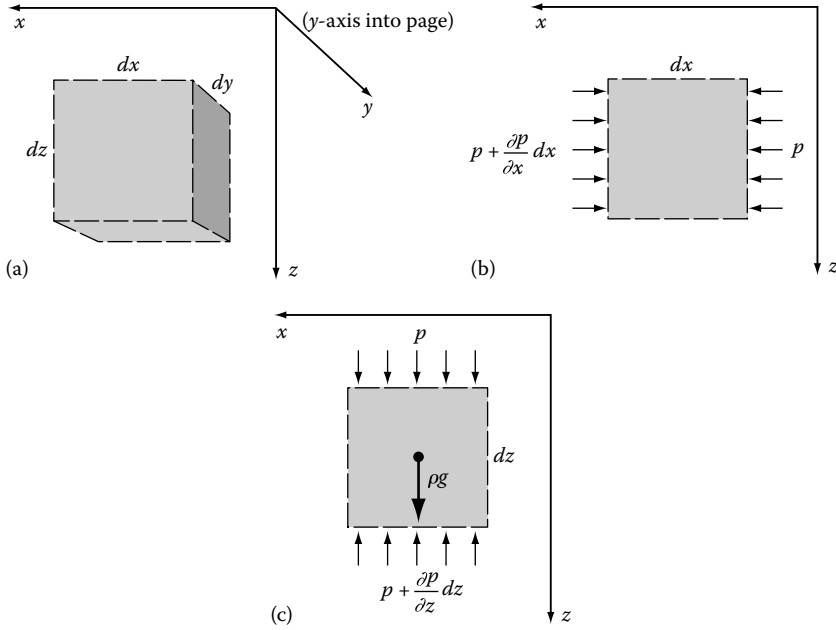


FIGURE 2.2 An element of fluid at rest.

which illustrates that pressure at a point is the same in all directions. This concept was shown for a two-dimensional model, but the proof is easily extended to three dimensions.

From the preceding paragraphs, we have seen that the forces acting on a fluid at rest are due to pressure and gravity. It is therefore important to learn how these forces vary in a static fluid. Consider an element of a fluid at rest, as illustrated in Figure 2.2a. The element chosen has a volume $dx \, dy \, dz$ and is sketched in a coordinate system where the positive z -direction is downward, coincident with the direction of the gravity force. Figure 2.2b is a view of the element looking in the positive y -direction; the force acting on the right face is $p \, dy \, dz$ and that on the left face is $[p + (\partial p / \partial x) dx] dy \, dz$, both normal to their respective surfaces. Summing forces in the x -direction, we have the following for a static fluid:

$$\sum F_x = 0 = p \, dy \, dz - \left(p + \frac{\partial p}{\partial x} dx \right) dy \, dz$$

Simplifying, we get

$$\frac{\partial p}{\partial x} = 0 \quad (2.2)$$

which means that pressure does not vary with respect to x . A similar argument can be made for the forces in the y -direction, which would yield

$$\frac{\partial p}{\partial y} = 0 \quad (2.3)$$

Thus, Equations 2.2 and 2.3 show that there is no variation of pressure in any lateral direction.

Figure 2.2c gives a free-body diagram for the z -direction. Summing forces, we obtain

$$\sum F_z = 0 = p \, dx \, dy + \rho g \, dx \, dy \, dz - \left(p + \frac{\partial p}{\partial z} dz \right) dx \, dy$$

or

$$dp = \rho g \, dz \quad (2.4)$$

Therefore, pressure does vary in a static fluid in the z -direction—it increases with depth, as shown by Equation 2.4. Integrating both sides yields

$$\int_{p_1}^{p_2} dp = \int_{z_1}^{z_2} \rho g \, dz \quad (2.5)$$

where point 1 is a reference point such as the free surface of a liquid and point 2 is a point of interest. For incompressible fluids, the density is a constant, and Equation 2.5 can be easily evaluated to give

$$p_2 - p_1 = \rho g(z_2 - z_1) = \rho g \, \Delta z \quad (2.6)$$

where Δz is the depth below the liquid surface. This relationship is the basic equation of hydrostatics and is often written as

$$\Delta p = \rho g z \quad (2.7)$$

Example 2.1

A cylindrical open-topped tank that serves as a reservoir for octane before it is piped to another location is 140 ft in diameter. Determine the pressure difference between the top and the bottom of the walls due to the octane when the tank is filled to a depth of 30 ft.

SOLUTION

We use the hydrostatic equation

$$p_2 - p_1 = \rho g(z_2 - z_1)$$

Section 1 refers to the free surface of the octane and section 2 is at the bottom. For octane, $\rho = 0.701(1.94 \text{ slug/ft}^3)$ (Table A.5). By substitution,

$$p_2 - p_1 = \Delta p = 0.701(1.94 \text{ slug/ft}^3)(32.2 \text{ ft/s}^2)(30 - 0)\text{ft}$$

or

$$\Delta p = 1310 \text{ lbf/ft}^2$$

The result is independent of diameter.

Example 2.2

A cup of coffee is 7 cm in diameter and filled to a depth of 8 cm with coffee (assume properties are the same as for water). Calculate the pressure difference between the surface of the coffee and the bottom of the cup.

SOLUTION

The hydrostatic equation applies with $\rho = 1\,000\text{ kg/m}^3$ for water:

$$\Delta p = \rho g z = (1\,000\text{ kg/m}^3)(9.81\text{ m/s}^2)(0.08\text{ m})$$

$$\Delta p = 785\text{ N/m}^2$$

The result is independent of the cup diameter.

Equation 2.5 was integrated for the case of incompressible fluids (constant density), which is reasonable for liquids. The hydrostatic equation resulted. Gases, on the other hand, are compressible fluids with properties that are related by the ideal gas law, under certain simplifying conditions:

$$\rho = \frac{p}{RT}$$

By substitution into Equation 2.4, we get

$$dp = \frac{p}{RT} g dz$$

or

$$\frac{dp}{p} = \frac{g}{RT} dz$$

For constant temperature, this equation can be integrated from point 1 to point 2, yielding

$$\int_{p_1}^{p_2} \frac{dp}{p} = \frac{g}{RT} \int_{z_1}^{z_2} dz$$

$$\ell n \frac{p_2}{p_1} = \frac{g}{RT} (z_2 - z_1)$$

Rearranging, we get

$$z_2 - z_1 = \frac{RT}{g} \ell n \frac{p_2}{p_1} \quad (2.8)$$

In the most common example of a compressible fluid, our atmosphere, temperature is not a constant throughout but varies with height in the troposphere according to

$$T = T_0 - \alpha h \quad (2.9)$$

where: T is the temperature at any point from sea level (where $T = T_0$) to an altitude h of approximately $\sim 36,000$ ft, or 11 km
 α is called a lapse rate ($3.6^\circ\text{F}/1000$ ft or $6.5^\circ\text{C}/\text{km}$)

The stratosphere, the layer above the troposphere, can be described by the same ideal gas equation. A lapse rate equation is not necessary for the stratosphere because it is approximately isothermal.

Whether the fluid is compressible or incompressible, it is important to note that pressure variations in static fluids are the result of gravity. The pressure increases with depth in either case.

Example 2.3

Graph the relationship between pressure and elevation in the stratosphere assuming it to be isothermal at -57°C . The stratosphere begins at an altitude of approximately 11 000 m, where the pressure is 22.5 kPa. Extend the graph to an elevation of 20 000 m.

SOLUTION

In this case, Equation 2.8 applies, but it must first be modified. Equation 2.8 was derived from Equation 2.4, but Equation 2.4 is based on the assumption that the positive z -direction is coincidental with the direction of the gravity force. In this example, we are dealing with the atmosphere, and we are quoting measurements of altitude using the earth's surface as a reference. So the positive z -direction is upward, which is opposite from the direction of the gravity force. Therefore, if we use Equation 2.8, we must account for this discrepancy. We can do so by using a negative g . Thus,

$$\Delta z = z_2 - z_1 = \frac{RT}{-g} \ln \frac{p_2}{p_1}$$

We select as our reference $z_1 = 11\,000$ m, where $p_1 = 22.5$ kPa. From Table A.6 we read $R = 286.8$ J/(kg $\cdot$ K) for air, and we were given $T = 57^\circ\text{C} = 216$ K. In applying the preceding equation, let $z_1 = z =$ any value ranging from 11 to 20 km and $p_2 = p =$ the corresponding pressure.

Substituting gives

$$z - 11\,000 = -\frac{286.8(216)}{9.81} \ln \frac{p}{22\,500}$$

or

$$z = 11\,000 - 6\,315 \ln \left(\frac{p}{22\,500} \right)$$

Rearranging yields

$$\frac{11\,000 - z}{6\,315} = \ln \frac{p}{22\,500}$$

Solving for pressure, we get

$$p = 22\,500 \exp \left(\frac{11\,000 - z}{6\,315} \right)$$

A graph of this equation is provided in Figure 2.3.

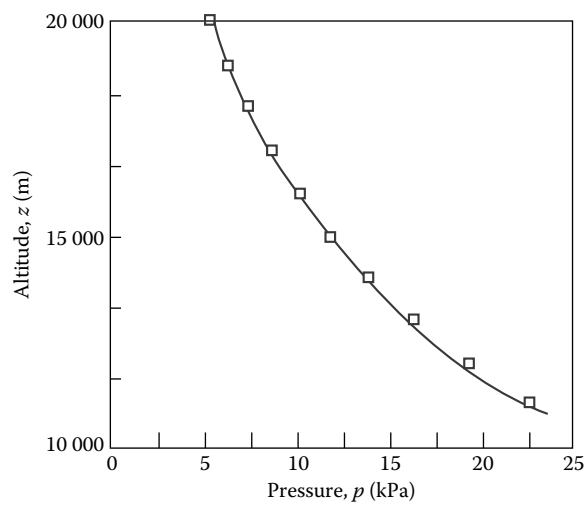


FIGURE 2.3 Pressure variation with elevation in the stratosphere.

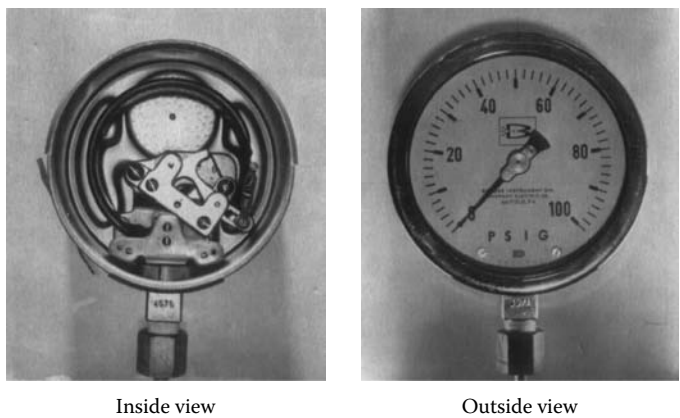


FIGURE 2.4 A bourdon-tube pressure gauge.

It is instructive at this point to examine techniques for measuring pressure. One common method in industry is the use of a **bourdon-tube pressure gauge** (Figure 2.4). The gauge consists of a housing that contains a fitting at the bottom for attachment to a pressure vessel. The fitting is connected to a curved tube that is elliptical in cross section. The other end of the bourdon tube is in turn connected to a rack-and-pinion assembly. The pinion shaft extends through the face of the gauge. A needle is pressed onto the pinion shaft outside the face. The face of the gauge is marked appropriately with numbers, and the gauge is calibrated. When a high-pressure fluid enters the fitting, the pressure is contained internally by the bourdon tube, which tends to straighten out. In the process, the rack is pulled and the pinion and needle rotate. When an equilibrium position is reached, the pressure is read directly on the face of the gauge. These gauges register the difference in pressure across the bourdon tube. When disconnected and exposed to atmospheric pressure, the dial is calibrated to read zero; readings from these instruments are therefore called **gauge pressures**.

Alternatively, one can measure **absolute pressure** as opposed to gauge pressure. Absolute pressure is zero only in a complete vacuum. Thus by definition,

$$p_g + p_{\text{atm}} = p \quad (2.10)$$

where: p_g = gauge pressure
 p_{atm} = atmospheric pressure
 p = absolute pressure

Commonly used British units of pressure are psig (lbf/in.² gauge pressure) and psia (lbf/in.² absolute). In the SI system, the unit of pressure is the pascal (Pa), where $1 \text{ Pa} = 1 \text{ N/m}^2$.

It is important to be able to measure **atmospheric pressure** because it relates gauge pressure to absolute pressure. One technique is to use a **barometer**. This device consists of a tube that is inverted while submerged and full of liquid. For a sufficiently long tube, this operation results in the configuration represented schematically in Figure 2.5a. The space above the liquid in the tube is almost a complete vacuum. Because the reservoir is open to the atmosphere, the pressure at section 2 is atmospheric pressure. The difference in pressure between points 2 and 1 is sufficient to support the weight of the liquid column. A free-body diagram of the liquid is shown in Figure 2.5b. Summing forces gives

$$\sum F = 0 = p_{\text{atm}}A - \rho gAz - 0$$

or, for a barometer,

$$p_{\text{atm}} = \rho g z \quad (2.11)$$

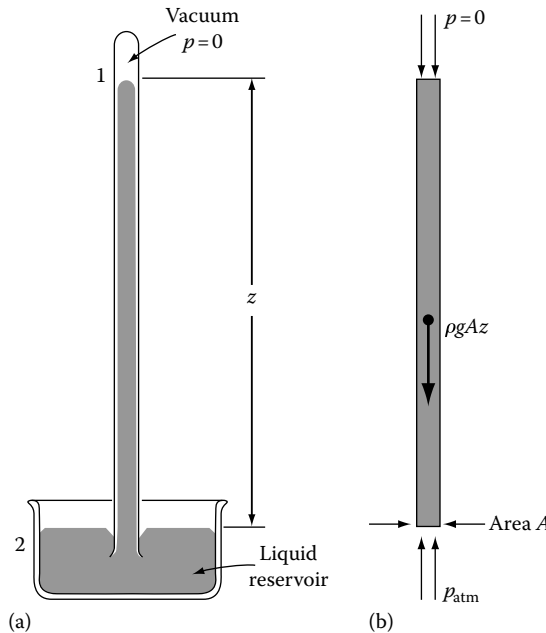


FIGURE 2.5 Schematic of a barometer.

Dividing by 144 yields

$$p = 11.2 \text{ psia}$$

b. If we use Equation 2.10, we obtain

$$p_g = 11.2 - 14.7$$

or

$$p_g = -3.5 \text{ psig}$$

However, a bourdon-tube gauge would indicate 0 psig because it reads relative to local atmospheric pressure.

c. Applying the hydrostatic equation, we get

$$p = \rho g z = 13.6 \left(1\,000 \text{ kg/m}^3 \right) \left(9.81 \text{ m/s}^2 \right) (0.58 \text{ m})$$

Solving, we obtain

$$\rho = 77.4 \text{ kPa}$$

d. Let us derive an equation to find the equivalent height in meters of water. Writing the hydrostatic equation for each liquid gives

$$p = \rho g z|_{\text{Hg}} = \rho g z|_{\text{H}_2\text{O}}$$

After simplification and rearrangement, we get

$$\frac{\rho_{\text{Hg}}}{\rho_{\text{H}_2\text{O}}} = s = \frac{z_{\text{H}_2\text{O}}}{z_{\text{Hg}}}$$

where the ratio of densities as written is the specific gravity of mercury. Thus,

$$z_{\text{H}_2\text{O}} = 13.6 z_{\text{Hg}} = 13.6(0.58 \text{ m})$$

$$z_{\text{H}_2\text{O}} = 7.89 \text{ m}$$

The analysis of the barometer shows that vertical columns of liquid can be used to measure pressure. One device used to effect this measurement is the **manometer**. A sketch of a U-tube manometer is given in Figure 2.7. One leg of the manometer is attached to a tank whose pressure is to be measured. The other leg is open to the atmosphere and is long enough to prevent the manometer liquid from overflowing. We can now use the hydrostatic equation to relate p to p_{atm} :

$$p_A + \rho_1 g z_1 = p_B$$

which states that the pressure at A plus the weight per unit area of a column of liquid equals the pressure at B . In other words, the difference in pressure between points A and B is the weight per unit area of the column of liquid with height z_1 and density ρ_1 . Next we can write

$$p_B = p_C$$

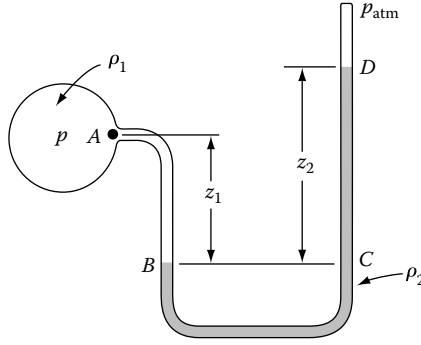


FIGURE 2.7 A simple U-tube manometer.

because both are at the same elevation. Finally,

$$p_C = p_D + \rho_2 g z_2$$

Combining these three equations, we get

$$p_A + \rho_1 g z_1 = p_D + \rho_2 g z_2$$

Now $p_A = p =$ pressure of interest and $p_D =$ atmospheric pressure. By substitution and after rearrangement, we have the following for the manometer of Figure 2.7:

$$p - p_{\text{atm}} = (\rho_2 z_2 - \rho_1 z_1)g$$

Another application of manometers is in the measurement of pressure differential between two fluid reservoirs, as illustrated in Figure 2.8. Applying the hydrostatic equation to each leg yields

$$p_A + \rho_1 g z_1 = p_D + \rho_3 g z_3 + \rho_2 g z_2$$

and

$$p_A - p_D = (\rho_3 z_3 + \rho_2 z_2 - \rho_1 z_1)g$$

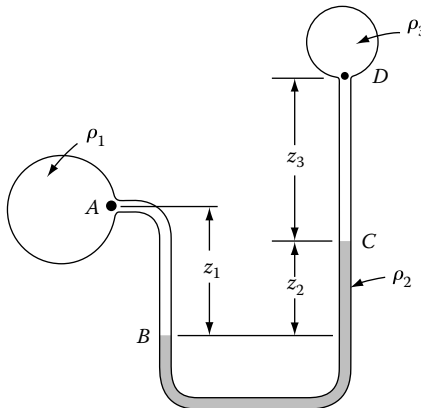


FIGURE 2.8 Use of a manometer to measure differential pressure.

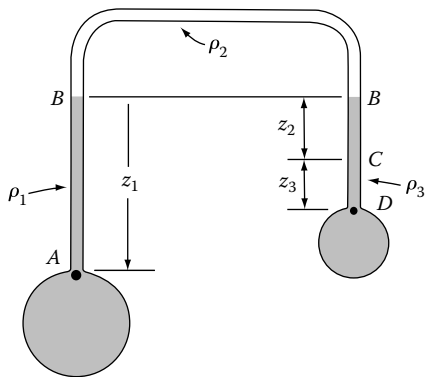


FIGURE 2.9 An inverted U-tube differential manometer.

In many cases, an inverted U-tube is used as a manometer, as shown in Figure 2.9, where again the hydrostatic equation applies:

$$p_B + \rho_1 g z_1 = p_A$$

$$p_B + \rho_2 g z_2 = p_C$$

$$p_C + \rho_3 g z_3 = p_D$$

By substitution, we obtain

$$p_D - \rho_3 g z_3 - \rho_2 g z_2 + \rho_1 g z_1 = p_A$$

After rearranging, we get

$$p_A - p_D = (\rho_1 z_1 - \rho_2 z_2 - \rho_3 z_3)g$$

Example 2.5

Figure 2.10 shows a portion of a pipeline that conveys benzene. A gauge attached to the line reads 150 kPa. It is desired to check the gauge reading with a benzene-over-mercury U-tube manometer. Determine the expected reading Δh on the manometer.

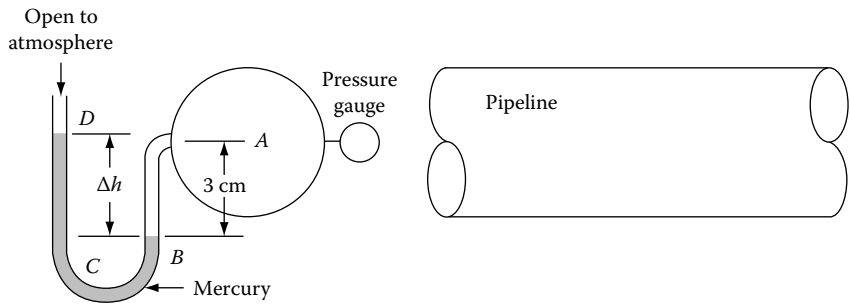


FIGURE 2.10 Sketch for Example 2.5.

SOLUTION

From Table A.5, we read

$$\rho = 876 \text{ kg/m}^3 \text{ (benzene)}$$

$$\rho = 13\,000 \text{ kg/m}^3 \text{ (mercury)}$$

Applying the hydrostatic equation to the manometer gives

$$p_A + \rho g(0.03) = p_D + \rho_{\text{Hg}} g \Delta h$$

Rearranging and solving for Δh gives

$$\Delta h = \frac{p_A - p_D + \rho g(0.03)}{\rho_{\text{Hg}} g}$$

The pressures are given as

$$p_A = 150\,000 \text{ N/m}^2 \quad \text{and} \quad p_D = 0 \text{ N/m}^2$$

The 150 kPa is a pressure reading from a gauge. Substituting gives

$$\Delta h = \frac{150\,000 \text{ N/m}^2 - 0 \text{ N/m}^2 + 876 \text{ kg/m}^3 (9.81 \text{ m/s}^2) (0.03 \text{ m})}{13\,600 \text{ kg/m}^3 (9.81 \text{ m/s}^2)}$$

Solving,

$$\Delta h = 1.13 \text{ m}$$

2.2 HYDROSTATIC FORCES ON SUBMERGED PLANE SURFACES

Consider a vertical surface that is in contact with liquid on one side (Figure 2.11). If we apply the hydrostatic equation to each point of the wall and sketch the pressure variation, a distribution triangular in cross section results: a pressure prism. The pressure distribution is linear, and pressure increases with depth. Mathematically, it is more convenient for us to replace the distribution shown with a single force R_f acting at a distance z_r below the surface. Both R_f and z_r are yet to be determined. We will develop expressions for them from a general approach.

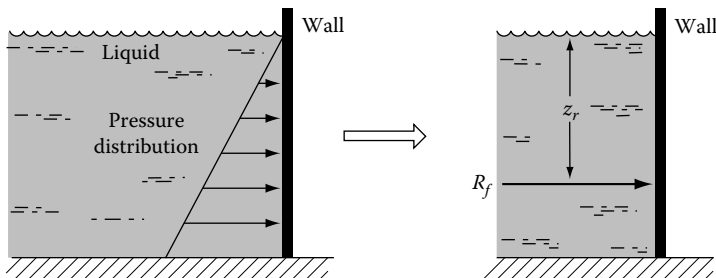


FIGURE 2.11 Pressure distribution and equivalent force on a submerged surface.

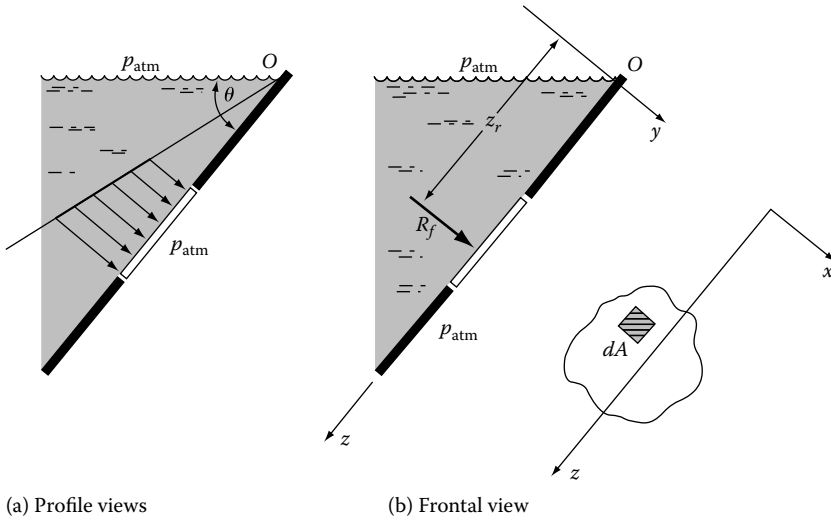


FIGURE 2.12 A submerged, inclined plane surface.

Figure 2.12 gives a profile view of a submerged, inclined plane surface having an irregular cross section (shown in frontal view). Also shown is the pressure distribution acting on the surface. An element of area dA has a force dR_f acting on it given by

$$dR_f = p \, dA$$

From the hydrostatic equation, p is found in terms of the space variable z as

$$p = \rho g z \sin \theta$$

where $z \sin \theta$ is the vertical depth to dA . Note that atmospheric pressure acts on both sides and does not affect the resultant force or its location. The element of force acting on dA becomes

$$dR_f = (\rho g z \sin \theta) dA$$

Integration yields the total force exerted on the submerged plane as

$$R_f = \rho g \sin \theta \iint z \, dA \quad (2.12)$$

Recall from statics that the centroid of a plane area can be calculated with

$$z_c = \frac{\iint z \, dA}{A}$$

With this definition, Equation 2.12 now becomes

$$R_f = \rho g z_c A \sin \theta \quad (2.13)$$

where z_c is the distance to the centroid of the portion of the plane in contact with the liquid as measured from the liquid surface in the z -direction.

To find the location of R_f , let us write an expression for $z_r R_f$, the moment exerted about point O :

$$\begin{aligned} z_r R_f &= \iint z p \, dA = \iint z(\rho g z \sin \theta) \, dA \\ &= \rho g \sin \theta \iint z^2 \, dA \end{aligned} \quad (2.14)$$

The integral on the right-hand side is recognized as the second moment of area of the submerged plane about the x -axis (Figure 2.12):

$$I_{xx} = \iint z^2 \, dA$$

Rather than using I_{xx} , it is more convenient to use a moment of area that passes through the centroid of the submerged plane. With the parallel axis theorem, we get

$$I_{xx} = I_{xxc} + A z_c^2$$

Substituting into Equation 2.14 yields

$$z_r R_f = \rho g \sin \theta (I_{xxc} + A z_c^2)$$

Combining with Equation 2.13, we get

$$z_r = \frac{(\rho g)(\sin \theta)(I_{xxc} + A z_c^2)}{(\rho g)(\sin \theta)(z_c A)}$$

or

$$z_r = z_c + \frac{I_{xxc}}{z_c A} \quad (2.15)$$

which is independent of liquid properties.

To determine the lateral location in the x -direction (Figure 2.12), we follow the same procedure. The moment about the z -axis is

$$\begin{aligned} x_r R_f &= \iint x p \, dA \\ &= \rho g \sin \theta \iint x z \, dA \end{aligned} \quad (2.16)$$

By definition, the product of inertia is

$$I_{xz} = \iint x z \, dA$$

Using the parallel axis theorem, we get

$$I_{xz} = I_{xzc} + A x_c z_c$$

where I_{xz_c} is a second moment about the centroid of the submerged plane and x_c is the distance from the z -axis to the centroid. Thus, Equation 2.16 becomes

$$x_r R_f = \rho g \sin \theta (I_{xz_c} + A x_c z_c)$$

Combining this result with Equation 2.13, we obtain

$$x_r = x_c + \frac{I_{xz_c}}{z_c A} \tag{2.17}$$

Equation 2.13 provides a means for determining the magnitude of the resultant force acting on a submerged plane surface. Equations 2.15 and 2.17 give the location of that force vertically from the free surface and laterally from an assigned coordinate axis. For areas that are symmetric, x_r is coincident with the centroid because when one of the centroidal axes is an axis of symmetry, $I_{xz_c} = 0$. The moments of inertia of various plane areas are given in Table B.1.

Example 2.6

A plywood sheet 4×8 ft is used as a form for poured concrete (Figure 2.13). The sheet is hinged at the top, and a stop is nailed down at the floor. The concrete is poured to a depth of 3 ft 2 in. Assume that the specific gravity of concrete is 2.4.

- a. Sketch the pressure prism.
- b. Calculate the magnitude and location of the resultant force.
- c. Find the force exerted on the stop while the concrete is still in liquid form.

SOLUTION

- a. The pressure prism is triangular and starts at zero at the top. At the bottom,

$$\begin{aligned} p &= \rho g z = (2.4)(1.94 \text{ slug/ft}^3)(32.2 \text{ ft/s}^2) \left(3 \text{ ft} + \frac{2}{12} \text{ ft} \right) \\ &= 474 \text{ lbf/ft}^2 \end{aligned}$$

The distribution is sketched in Figure 2.13.

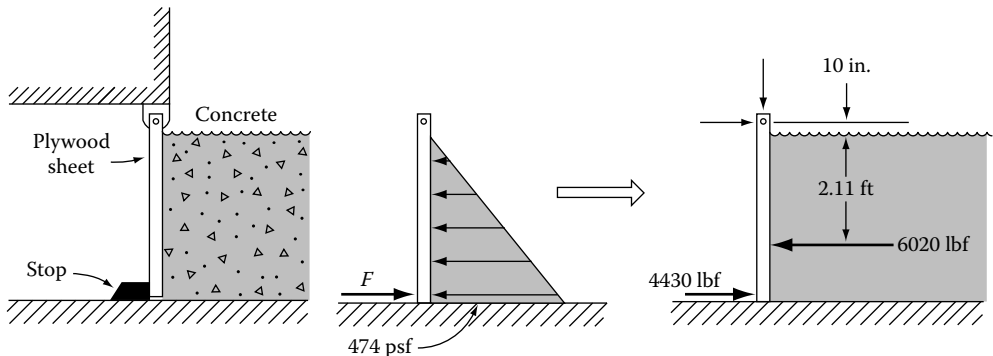


FIGURE 2.13 Sketch for Example 2.6.

- b. The magnitude of the resultant force is

$$R_f = \rho g z_c A \sin \theta$$

with

$$z_c = \frac{z}{2} = \frac{3.17 \text{ ft}}{2} = 1.58 \text{ ft}$$

and

$$A = zb = (3.17 \text{ ft})(8 \text{ ft}) = 25.4 \text{ ft}^2$$

The angle θ in this case is $\pi/2$ rad. Hence,

$$R_f = 2.4(1.94 \text{ slug/ft}^3)(32.2 \text{ ft/s}^2)(1.58 \text{ ft})(25.4 \text{ ft}^2)$$

from which we get

$$R_f = 6020 \text{ lbf}$$

The force is located laterally 4 ft from either end. For a rectangle,

$$I_{xxc} = \frac{bz^3}{12} \quad (\text{Table B.1})$$

Therefore,

$$I_{xxc} = \frac{(8 \text{ ft})(3.17 \text{ ft})^3}{12} = 21.2 \text{ ft}^4$$

Substituting into Equation 2.15, we get

$$z_r = z_c + \frac{I_{xxc}}{z_c A} = 1.58 \text{ ft} + \frac{21.2 \text{ ft}^4}{(1.58)(25.4)}$$

$$z_c = 2.11 \text{ ft} \quad (\text{measured downward from the surface})$$

Because I_{xxc} is always positive, $z_r > z_c$.

- c. The force on the stop is found by summing moments about the top:

$$\sum M = 0$$

$$4(F) = \left(\frac{10}{12} + 2.11 \right) 6020$$

Solving, we get

$$F = 4430 \text{ lbf}$$

These results are given in Figure 2.13.

Example 2.7

A container manufactured to store bags of ice is sketched in Figure 2.14. As shown, the slanted surface contains an access door; how well it seals when closed must be tested. The method involves filling the container with water to a predetermined depth. Calculate the force exerted on the door and the location of the force for $H = 70\text{ cm}$ and $\theta = 30^\circ$.

SOLUTION

Figure 2.15a shows the pressure prism that acts on the door. Figure 2.15b shows the equivalent force R_f and its location z_r . Note that the origin is found by extending the plane of the door to the surface level of the water. The force R_f is found with

$$R_f = \rho g z_c A \sin \theta$$

For water, Table A.5 gives $\rho = 1\,000\text{ kg/m}^3$. The distance to the centroid z_c from the origin is measured along the slant:

$$z_c = \frac{0.70}{\sin 30^\circ} = 1.4\text{ m}$$

The area of the access door is calculated to be

$$A = (0.3\text{ m})(0.4\text{ m}) = 0.12\text{ m}^2$$

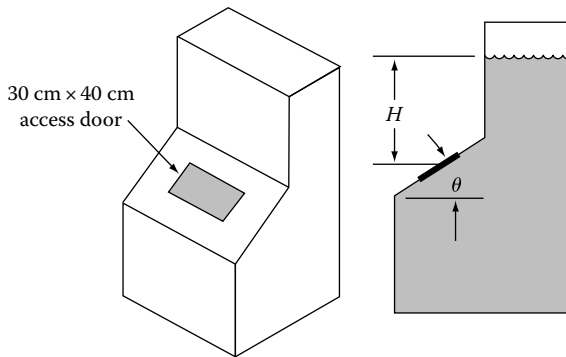


FIGURE 2.14 Ice container filled with liquid for Example 2.7.

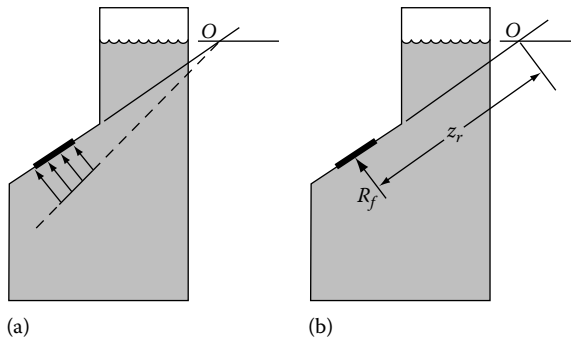


FIGURE 2.15 Profile views of container showing pressure prism, resultant force, and location.

Substituting, we get

$$R_f = (1\,000\text{ kg/m}^3)(9.81\text{ m/s}^2)(1.4\text{ m})(0.12\text{ m}^2)\sin 30^\circ$$

or

$$R_f = 824\text{ N}$$

The force acts at a distance z_r from the origin, which is given by

$$z_r = z_c + \frac{I_{xxc}}{z_c A}$$

For a rectangular door, Table B.1 gives

$$I_{xxc} = \frac{bz^3}{12} = \frac{0.4(0.3)^3}{12} = 9.0 \times 10^{-4}\text{ m}^4$$

Substituting,

$$z_r = 1.4 + \frac{9.0 \times 10^{-4}}{1.4(0.12)}$$

or

$$z_r = 1.41\text{ m}$$

Example 2.8

The gas tank of an automobile is sketched in a profile view in Figure 2.16. The lower edge of a semicircular plug is located 1 cm from the tank floor. The tank is filled to a height of 20 cm with gasoline

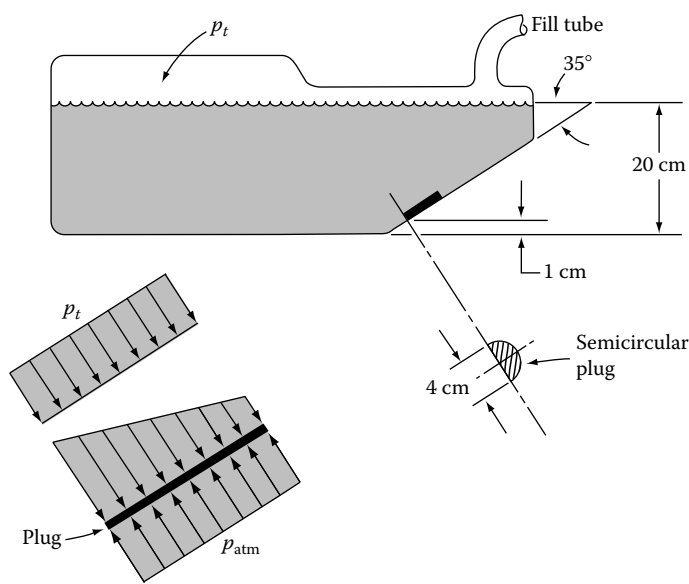


FIGURE 2.16 Sketch of a gas tank and plug for Example 2.8.

and pressurized to 130 kPa. Calculate the force exerted on the semicircular plug. Assume that gasoline properties are the same as those for octane.

SOLUTION

A free-body diagram of the plug is shown in Figure 2.16. We identify three pressure distributions: one due to overpressure p_i of 130 kPa, one due to gasoline in contact with the plug, and one due to atmospheric pressure p_{atm} . Furthermore, the three pressure distributions can be replaced with three resultant forces.

The first resultant force we seek is due to the overpressure and is given by

$$R_{f1} = p_i A$$

where $p_i = 130\,000 \text{ N/m}^2$ and $A = \pi D^2/8 = \pi(4)^2/8 = 6.28 \text{ cm}^2$. Thus

$$R_{f1} = (130\,000 \text{ N/m}^2)(6.28 \times 10^{-4} \text{ m}^2)$$

or

$$R_{f1} = 81.6 \text{ N}$$

This result is independent of fluid density. Although the information is not asked for in the problem statement, this force acts at the centroid of the plug.

The second force is that associated with the gasoline in contact with the plug and is given by

$$R_{f2} = \rho g z_c A \sin \theta$$

Using the data of Table B.1, we write

$$z_c = \frac{20 \text{ cm}}{\sin \theta} - \frac{1 \text{ cm}}{\sin \theta} - \left[\frac{4(2 \text{ cm})}{3\pi} \right]$$

or

$$z_c = 32.3 \text{ cm}$$

From Table A.5 for octane, $\rho = 701 \text{ kg/m}^3$. Substituting, we get

$$R_{f2} = (701 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.323 \text{ m})(6.28 \times 10^{-4} \text{ m}^2) \sin 35^\circ$$

Solving,

$$R_{f2} = 0.8 \text{ N}$$

This force acts at a distance z_r from the free surface, as given by Equation 2.15.

The third force is due to atmospheric pressure and is given by

$$R_{f3} = p_{\text{atm}} A = (101\,300 \text{ N/m}^2)(6.28 \times 10^{-4} \text{ m}^2)$$

or

$$R_{f3} = 63.6 \text{ N}$$

Like R_{f1} , the force R_{f3} acts at the centroid of the plug.

The total resultant force acting on the plug is calculated with

$$R_f = R_{f1} + R_{f2} + R_{f3} = 81.6 + 0.8 - 63.6$$

or

$$R_f = 18.8 \text{ N}$$

2.3 HYDROSTATIC FORCES ON SUBMERGED CURVED SURFACES

As we saw in previous examples, there are many cases of plane surfaces in contact with fluids. Another important area of interest involves determining forces on submerged curved surfaces. The hull of a floating ship is a curved surface in contact with liquid, as is the wall or sides of a drinking glass or funnel or culvert. To develop equations for these cases, consider the configuration illustrated in Figure 2.17a. A curved surface is shown in profile and projected frontal views. Let us examine the element of area dA . The force acting is $p dA$ (Figure 2.17b). It is convenient to resolve this force into vertical and horizontal components, dR_v and dR_h , respectively. We write the horizontal component of this force directly as

$$dR_h = p dA \cos \theta$$

where $dA \cos \theta$ is the vertical projection of dA . Integrating this expression gives a result similar to that for a submerged plane:

$$R_h = \rho g z_c A_v \quad (2.18)$$

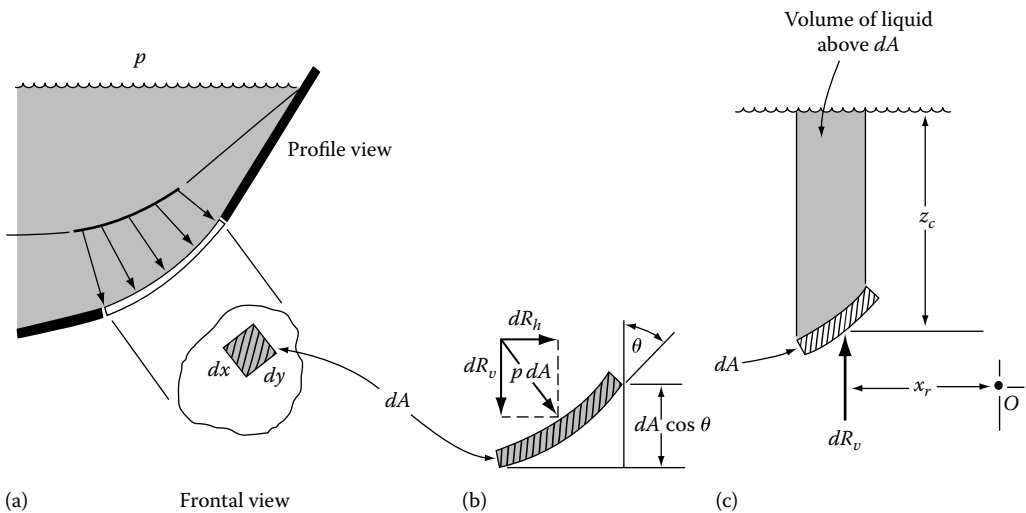


FIGURE 2.17 A submerged, curved surface.

where: $\rho g z_c$ = pressure at the centroid of the surface
 A_v = its area projected onto a vertical plane

The line of action, or location, of the horizontal force R_h is found by summing moments as was done for the plane surfaces in Section 2.2. The result is the same equation as was derived there except that we are now working with the vertical projection of the area—namely, A_v :

$$z_r = z_c + \frac{I_{xxc}}{z_c A_v}$$

Here z_c is the distance from the free surface to the centroid of the area A_v . The second moment of inertia I_{xxc} also applies to the vertical projected area A_v .

Next consider the vertical component of force, which is given by

$$dR_v = p dA \sin \theta$$

where $dA \sin \theta$ is the horizontal projection of dA . Combining this result with the hydrostatic equation, we obtain

$$dR_v = \rho g z_c dA \sin \theta \quad (2.19)$$

where again z_c , as shown in Figure 2.17c, is the vertical distance from the liquid surface to the centroid of dA . The quantity $z_c dA \sin \theta$ is the volume of liquid above dA . Equation 2.19 thus becomes

$$dR_v = \rho g dV$$

and, after integration, yields

$$R_v = \rho g V \quad (2.20)$$

Therefore, the vertical component of force acting on a submerged curved surface equals the weight of the liquid above it.

The location of R_v is found by first specifying an origin, point O in Figure 2.17c, and taking moments about it:

$$dR_v x_r = \rho g x dV$$

Integrating over the entire submerged curved surface gives

$$R_v x_r = \rho g \iiint x dV$$

Combining this equation with Equation 2.20, we get

$$\begin{aligned} x_r &= \frac{(\rho g) \iiint x dV}{(\rho g) V} \\ x_r &= \frac{\iiint x dV}{V} \end{aligned} \quad (2.21)$$

Thus, x_r is located at the centroid of the volume above the surface.

Example 2.9

A concrete culvert that contains water is 2.0 m in diameter. Determine the forces exerted on the portion labeled A–B in Figure 2.18 if the culvert is filled halfway. Determine also the location of the forces. Culvert length (into the paper) from joint to joint is 2.5 m.

SOLUTION

The horizontal force is given by Equation 2.18:

$$R_h = \rho g z_c A_v$$

where: z_c = distance from the liquid surface to the centroid of the vertical projection of the surface in contact with the liquid

$$z_c = \frac{D}{4} = \frac{2.0}{4} \quad \text{or} \quad z_c = 0.5 \text{ m}$$

The vertical projection is a rectangle with area

$$A_v = \left(\frac{2.0}{2} \right) (2.5) = 2.5 \text{ m}^2$$

By substitution, we get

$$R_h = (1\,000 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.5 \text{ m})(2.5 \text{ m}^2)$$

Solving, we obtain

$$R_h = 12.3 \text{ kN}$$

The vertical projected area is a rectangle whose second moment of inertia is given by

$$I_{xxc} = \frac{bz^3}{12} = \frac{2.5(2.0/2)^3}{12} = 0.208 \text{ m}^4$$

The line of action of the horizontal force R_h then is

$$z_r = z_c + \frac{I_{xxc}}{z_c A_v} = 0.5 + \frac{0.208 \text{ m}^4}{0.5(2.5)}$$

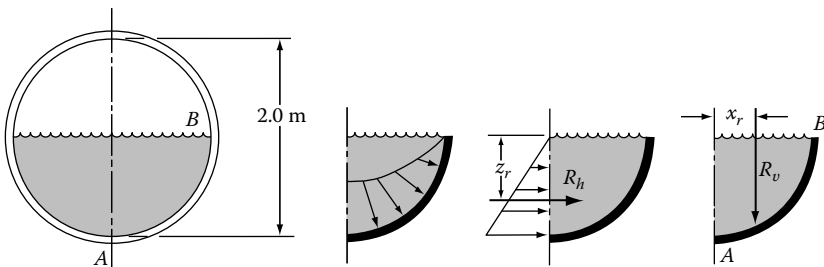


FIGURE 2.18 Cross section of a half-filled culvert.

or

$$z_r = 0.667 \text{ m below the free surface}$$

The vertical force is given by Equation 2.20:

$$R_v = \rho g V$$

and

$$V = \frac{1}{4} \left(\frac{\pi D^2}{4} \right) b = \frac{1}{4} \left[\frac{\pi (2.0)^2}{4} \right] (2.5) \text{ m}^3$$

so

$$V = 1.96 \text{ m}^3$$

Therefore,

$$R_v = (1\,000 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(1.96 \text{ m}^3)$$

or

$$R_v = 19.2 \text{ kN}$$

The line of action of the vertical force passes through the centroid of the quarter circle at a distance into the page of 1.25 m. Referring to Table B.1, the centroid of the quarter circle is given by

$$x_r = \frac{4R}{3\pi} = \frac{4(2.0/2)}{3\pi}$$

or

$$x_r = 0.42 \text{ m from the centerline}$$

Thus, R_h acts at a depth z_r below the centroid of the plane area formed by the projection of the curved surface onto a vertical plane normal to R_h , and R_v acts through the centroid of the liquid volume.

Example 2.10

When the culvert described in Example 2.9 was installed and still empty, it was buried halfway in mud (Figure 2.19). Determine the forces acting on half the submerged portion, assuming that the mud has a density equal to that of water.

SOLUTION

As before, there is a horizontal and a vertical force component. The horizontal force is given by Equation 2.18 with $z_c = 0.5 \text{ m}$ and $A_v = 2.5 \text{ m}^2$ as in Example 2.9:

$$R_h = \rho g z_c A_v = (1\,000 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.5 \text{ m})(2.5 \text{ m}^2)$$

$$R_h = 12.3 \text{ kN}$$

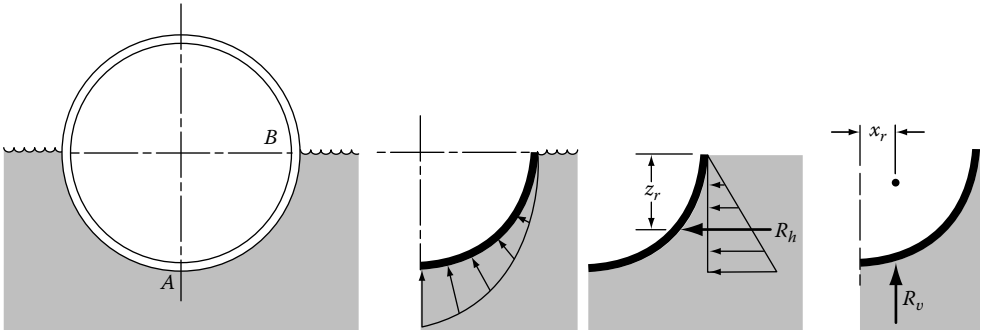


FIGURE 2.19 A partially submerged culvert.

In comparing Figures 2.18 and 2.19, note that the pressure distributions are equal but opposite in direction. Therefore, R_v in Example 2.9 is the same in magnitude as the vertical force in this example (just like the horizontal forces). Hence,

$$R_v = \rho g V = (1\,000\text{ kg/m}^3)(9.81\text{ m/s}^2)(1.96\text{ m}^3)$$

$R_v = 19.2\text{ kN}$

Again R_h acts at a depth z_r below the centroid of the plane area formed by the projection of the curved surface onto a vertical plane normal to R_h , and R_v acts through the centroid of the displaced volume. From Example 2.9,

$$z_r = 0.667\text{ m below the free surface}$$

and

$$x_r = 0.42\text{ m from the centerline}$$

Example 2.11

Figure 2.20a shows a gate that is 4 ft wide (into the page) and has a curved cross section. When the liquid level gets too high, the moments due to liquid forces act to open the gate and allow some liquid to escape. For the dimensions shown, determine whether the liquid is deep enough to cause the gate to open. Take the liquid to be castor oil.

SOLUTION

Figure 2.20b is a sketch of the gate with the pressure distributions acting on it. Figure 2.20c is of the equivalent forces and their locations. We now proceed to calculate the magnitude of the forces and to evaluate the moment these forces exert about the hinge. The force R_h is given by Equation 2.18:

$$R_h = \rho g z_c A_v$$

For castor oil, $\rho = 0.96(1.94)\text{ slug/ft}^3$ from Table A.5. The distance to the centroid of the vertical projected area is $z_c = 0.5\text{ ft}$. The vertical projected area becomes $A_v = 1(4) = 4\text{ ft}^2$. The horizontal force is then

$$R_h = 0.96(1.94\text{ slug/ft}^3)(32.2\text{ ft/s}^2)(0.5\text{ ft})(4\text{ ft}^2)$$

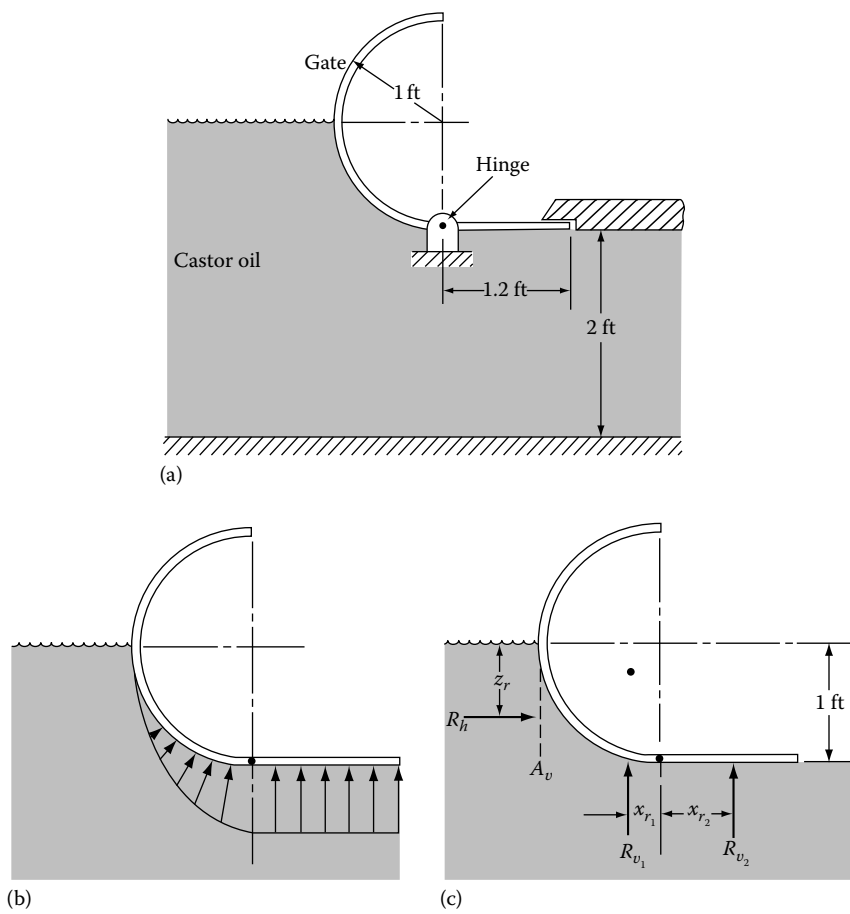


FIGURE 2.20 A liquid-retaining gate.

or

$$R_h = 120 \text{ lbf}$$

Now for A_v , which is a rectangle 4 ft wide $\times$ 1 ft tall,

$$I_{x_{cc}} = \frac{4(1)^3}{12} = 0.333 \text{ ft}^4$$

The line of action of the horizontal force R_h is then

$$z_r = z_c + \frac{I_{x_{cc}}}{z_c A_v} = 0.5 + \frac{0.333}{0.5(4)}$$

or

$$z_r = 0.667 \text{ ft from the free surface}$$

The vertical force acting on the curved part of the gate is given by

$$R_{v1} = \rho g V$$

where $\mathcal{V}$ is the displaced volume of the liquid. Thus,

$$\begin{aligned}\mathcal{V} &= \frac{1}{4} \left(\frac{\pi D^2}{4} \right) b = \frac{1}{4} \left(\frac{\pi (2)^2}{4} \right) (4) \\ &= 3.14 \text{ ft}^3\end{aligned}$$

The vertical force is

$$R_{v1} = 0.96 (1.94 \text{ slug/ft}^3) (32.2 \text{ ft/s}^2) (3.14 \text{ ft}^3) = 188 \text{ lbf}$$

The line of action of this vertical force is through the centroid of the displaced volume. Hence,

$$\begin{aligned}x_{r1} &= \frac{4R}{3\pi} = \frac{4(1)}{3\pi} \\ &= 0.424 \text{ ft from the hinge}\end{aligned}$$

The third force to consider is also a vertical force due to the weight of the liquid. At a depth of 1 ft,

$$p = \rho g z = 0.96 (1.94 \text{ slug/ft}^3) (32.2 \text{ ft/s}^2) (1 \text{ ft}) = 60 \text{ lbf/ft}^2$$

The equivalent force R_{v2} is the product of pressure and area over which the pressure acts:

$$\begin{aligned}R_{v2} &= pA = (60 \text{ lbf/ft}^2) (1.2 \text{ ft})(4 \text{ ft}) \\ &= 288 \text{ lbf}\end{aligned}$$

The line of action of this force is

$$x_{r2} = 0.6 \text{ ft to the right of the hinge}$$

To find out whether the gate tends to open, we sum moments about the hinge, assuming counter-clockwise to be positive (an arbitrary decision). If our answer turns out negative, then we know that the forces exert moments that will open the gate. Thus,

$$\begin{aligned}\sum M &= R_{v2}(x_{r2}) - R_{v1}(x_{r1}) - R_h(1 \text{ ft} - z_r) \\ &= 288(0.6) - 188(0.424) - 120(1 - 0.667)\end{aligned}$$

Solving, we get

$$\sum M = +53.1 \text{ ft lbf}$$

Because our answer is positive, we conclude that the gate will remain closed.

2.4 EQUILIBRIUM OF ACCELERATING FLUIDS

In the problems we have discussed thus far, forces due to pressure variations were simple to compute because the fluid was at rest and hence there were no shear stresses between adjacent layers of fluid. A liquid transported at a uniform rate of acceleration is also motionless with respect to its container. Consequently, there are no shear stresses, and here too forces due to pressure

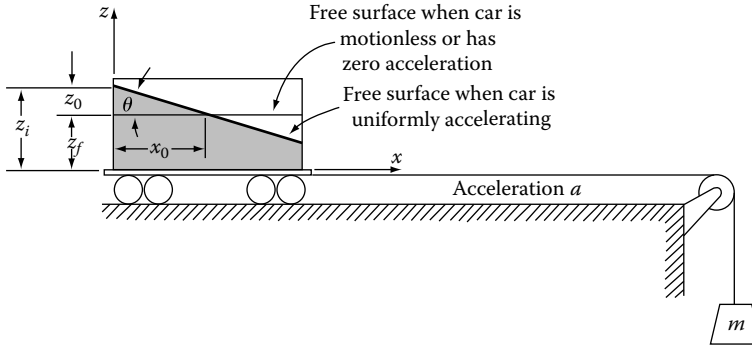


FIGURE 2.21 An experiment to investigate a uniformly accelerating liquid.

variations are simple to calculate. Uniformly rotating fluids represent another case of interest. When a liquid is rotating at a constant angular velocity, it is acted upon by centripetal acceleration forces. Because the liquid is at rest with respect to its container, forces due to pressure variations are again simple to calculate.

To illustrate this phenomenon, consider the setup shown in Figure 2.21. A rectangular transparent box is attached to a model railroad flatcar that is free to traverse a track. A rope tied to the car is wrapped over a pulley and attached to a weight. As the weight falls, the car accelerates at a . Next we establish a coordinate system that moves with the car as shown in Figure 2.21. The positive x -axis is in the direction of motion of the car, the y -axis is directed inward to the plane of the paper, and the z -axis is upward. Applying Newton's law to the liquid in each of these directions gives the following pressure variations:

$$\frac{\partial p}{\partial x} = -\rho a \quad (2.22a)$$

$$\frac{\partial p}{\partial y} = 0 \quad (2.22b)$$

$$\frac{\partial p}{\partial z} = -\rho g \quad (2.22c)$$

Integration of Equation 2.22a yields

$$p = -\rho ax + f_1(y, z) + C_1 \quad (2.23a)$$

where f_1 is a function of y and z and C_1 is a constant of integration. Both naturally become zero when the partial derivative with respect to x is taken. Integration of Equation 2.22c yields

$$p = -\rho gz + f_2(x, y) + C_2 \quad (2.23b)$$

Taking the derivative of p in both equations with respect to y , we obtain

$$\frac{\partial p}{\partial y} = \frac{\partial f_1}{\partial y} \quad (2.24)$$

and

$$\frac{\partial p}{\partial y} = \frac{\partial f_2}{\partial y}$$

Inspection of Equation 2.22*b* leads to the conclusion that neither f_1 nor f_2 is a function of y . Equating Equations 2.23*a* and 2.23*b*, we get

$$-\rho ax + f_1(z) + C_1 = -\rho gz + f_2(x) + C_2$$

which leads to

$$f_1(z) = -\rho gz$$

$$f_2(x) = -\rho ax$$

$$C_1 = C_2$$

Therefore, the pressure in Equation 2.23 becomes

$$p = -\rho ax - \rho gz + C_1 \quad (2.25)$$

The constant C_1 is evaluated at the left edge of the tank where $x = 0$, $z = z_i$ = height of the liquid at the left wall, and $p = p_s$ = surface pressure. Substitution into Equation 2.25 gives

$$p_s = -\rho gz_i + C_1$$

or

$$C_1 = p_s + \rho gz_i$$

The pressure is then

$$p - p_s = \rho[g(z_i - z) - ax] \quad (2.26)$$

The equation of the free surface results when $p = p_s$ in Equation 2.26:

$$g(z_i - z) = ax$$

$$z = z_i - \frac{ax}{g} \quad (2.27)$$

This is a straight line with intercept z_i and slope $-a/g$.

Example 2.12

A lawn fertilizer company has a flatbed truck on which a rectangular, plastic tank is transported to various job sites. The tank is sketched in Figure 2.22. As indicated, the tank is 4 ft long, 3 ft tall, and 5 ft wide (into the plane of the page). The tank is filled to a depth of 2 ft with liquid fertilizer (specific gravity = 0.97). The truck can accelerate at a rate equal to $a = g/2$. Determine the equation of the free surface of the fertilizer at this rate.

SOLUTION

The surface during acceleration is shown in Figure 2.22. From the geometry, the slope of the line is

$$\tan \theta = \frac{z_0}{x_0} = \frac{a}{g} = \frac{g/2}{g} = 0.5$$

or

$$z_0 = 0.5x_0$$

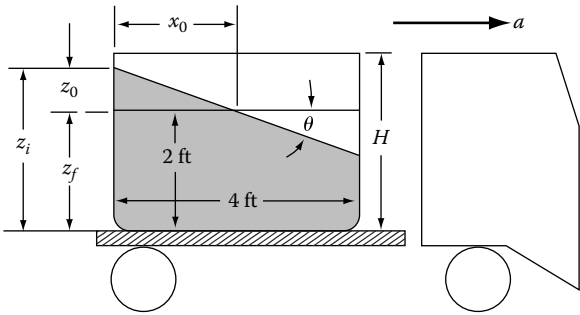


FIGURE 2.22 Accelerating truck with tank attached.

With $x_0 = 2$ ft, $z_0 = 0.5(2) = 1$ ft. Also,

$$z_i = z_f + z_0 = 2 + 1 \text{ ft} = 3 \text{ ft}$$

The free surface then is given by

$$z = z_i - \left(\frac{a}{g}\right)x$$

or

$$z = 3 - 0.5x \text{ ft}$$

This equation is independent of fluid properties. Although the problem statement specified liquid fertilizer, the same equation would result for any liquid.

Consider next a liquid-filled cylindrical container rotating at a constant angular velocity (Figure 2.23). Cylindrical coordinates appear in the figure with the origin at the center of the bottom of the tank. The acceleration in the θ -direction is zero. The acceleration in the r -direction is $-r\omega^2$,

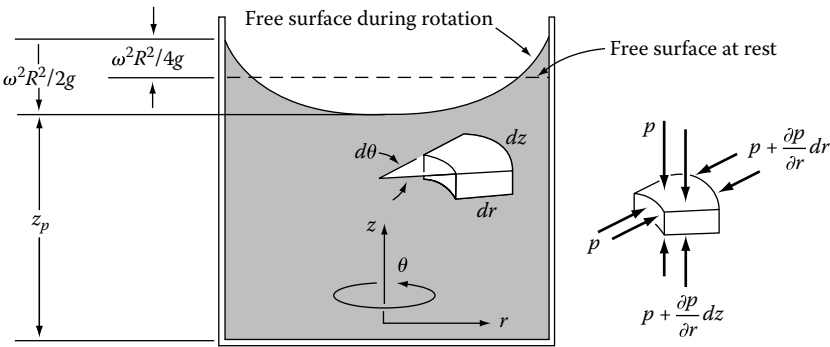


FIGURE 2.23 A rotating cylinder of radius R containing a liquid.

where ω is the angular velocity. The acceleration in the z -direction is due to gravity. Applying Newton's law in the r - and z -directions to the forces acting on a fluid element yields

$$p dz(r d\theta) - \left(p + \frac{\partial p}{\partial r} dr \right) dz(r d\theta) = -\frac{r\omega^2}{g} \rho g dr(r d\theta) dz$$

and

$$p dr(r d\theta) - \left(p + \frac{\partial p}{\partial z} dz \right) dr(r d\theta) = \rho g(r d\theta) dr dz$$

These equations simplify to

$$\frac{\partial p}{\partial r} = \frac{r\omega^2}{g} \rho g$$

$$\frac{\partial p}{\partial z} = -\rho g$$

Integration brings

$$p = \frac{r^2\omega^2}{2g} \rho g + f_1(\theta, z) + C_1 \quad (2.28a)$$

$$p = -\rho g z + f_2(r, \theta) + C_2 \quad (2.28b)$$

where: f_1 and f_2 are functions of two variables
 C_1 and C_2 are constants of integration

Differentiation of both equations with respect to θ yields

$$\frac{\partial p}{\partial \theta} = \frac{\partial f_1}{\partial \theta}$$

$$\frac{\partial p}{\partial \theta} = \frac{\partial f_2}{\partial \theta}$$

Because there is no acceleration in the θ -direction, both these equations equal zero. Therefore, neither f_1 nor f_2 is a function of θ . Equating Equations 2.28a and 2.28b, we obtain

$$\frac{r^2\omega^2}{2g} \rho g + f_1(z) + C_1 = -\rho g z + f_2(r) + C_2$$

after which we conclude that

$$f_1(z) = -\rho g z$$

$$f_2(r) = \frac{r^2\omega^2}{2g} \rho g$$

$$C_1 = C_2$$

Equation 2.28 now becomes

$$p = \frac{r^2 \omega^2}{2g} \rho g - \rho g z + C_1 \quad (2.29)$$

At $r=0$, we get $z=z_p$ and $p=p_s$ = surface pressure. By substitution, we obtain

$$p_s = -\rho g z_p + C_1$$

$$C_1 = p_s + \rho g z_p$$

Thus, Equation 2.29 finally becomes

$$p - p_s = \rho g \left[\frac{r^2 \omega^2}{2g} - (z - z_p) \right] \quad (2.30)$$

The equation of the free surface results if p is set equal to p_s :

$$z = \frac{r^2 \omega^2}{2g} + z_p \quad (2.31)$$

which is the equation of a parabola. The liquid in the rotating cylinder forms a paraboloid of revolution. For this geometry, it can be shown that the distance between the bottom of the parabola and the top of the liquid at the wall is $R^2 \omega^2 / 2g$ by setting $r=R$ in Equation 2.31. It can also be shown that the distance between the free surface before rotation to the bottom of the parabola is $R^2 \omega^2 / 4g$.

Example 2.13

The rotating cylinder of Figure 2.23 is 30 cm in diameter and 42 cm high. It is filled to a depth of 35 cm with liquid. Determine the angular velocity required to spill liquid over the top.

SOLUTION

Equation 2.31 is the free-surface equation:

$$z = \frac{r^2 \omega^2}{2g} + z_p$$

If $r=R$, then $z=0.42$ m. Thus,

$$0.42 \text{ m} = \frac{R^2 \omega^2}{2g} + z_p$$

It is known that the free-surface height at rest is

$$0.35 \text{ m} = z_p + \frac{R^2 \omega^2}{4g}$$

Combining these equations, we get

$$0.42 \text{ m} - \frac{R^2 \omega^2}{2g} = 0.35 \text{ m} - \frac{R^2 \omega^2}{4g}$$

or

$$0.07 \text{ m} = \frac{R^2 \omega^2}{4g}$$

Solving for the angular velocity, we obtain

$$\omega^2 = \frac{4(0.07 \text{ m})(9.81 \text{ m/s}^2)}{(0.15 \text{ m}^2)} = 122$$

$$\omega = 11.0 \text{ rad/s} = 1.76 \text{ rev/s}$$

Therefore, liquid will spill over the top when

$$\omega > 11.0 \text{ rad/s}$$

2.5 FORCES ON SUBMERGED BODIES

When a body is submerged, the fluid exerts a net force on it in an upward direction. For example, a cube submerged in a fluid will have hydrostatic pressure acting on its lower surface and on its upper surface. The pressure exerted on its lower surface is greater than that exerted on its upper surface because pressure increases with depth. The difference in these pressures multiplied by the area over which they act is defined as the **buoyant force**, a force that acts in the direction opposite to that of the gravity force.

To illustrate this definition in more detail, consider the submerged object shown in Figure 2.24a. The object has dimensions $a \times b \times c$. Figure 2.24b shows the same object in a two-dimensional profile view. The pressure distributions acting on the upper and lower surfaces are found with

$$p_u = \rho g z_1$$

and

$$p_l = \rho g z_2$$

Forces are easier to work with than pressure distributions, and so we find it convenient to replace the pressures with equivalent forces. These forces are shown in Figure 2.24c and are determined using

$$R_u = p_u A = \rho g z_1 (ac)$$

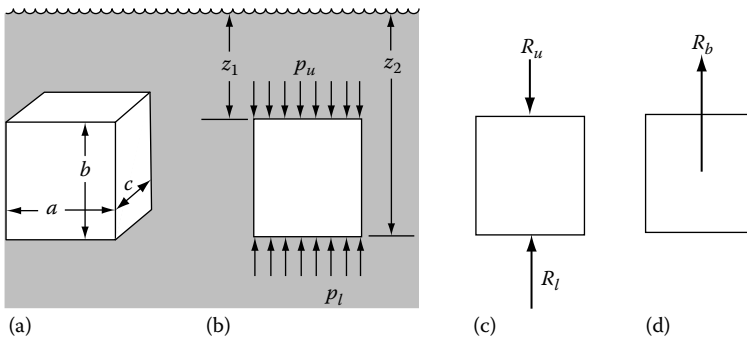


FIGURE 2.24 A submerged object and the hydrostatic forces acting on it.

and

$$R_l = p_l A = \rho g z_2 (ac)$$

In order to simplify this development even further, we combine these two hydrostatic forces into one force that we have already defined as the **buoyant force** R_b :

$$R_b = R_l - R_u = p_l A - p_u A = \rho g z_2 (ac) - \rho g z_1 (ac)$$

or

$$R_b = \rho g (z_2 - z_1) (ac)$$

We see from the figure that $(z_2 - z_1) = b$, so that the buoyant force can be rewritten as

$$R_b = \rho g (abc) = \rho g \mathcal{V}$$

where the volume $\mathcal{V}$ of the object is (abc) . The buoyant force therefore equals the weight of the volume of liquid displaced by the object.

Thus, we have illustrated the definition of the buoyant force as being the difference in hydrostatic forces (due to pressures) acting in the vertical direction on the object. Also, we have concluded that for the object of Figure 2.24, a consequence of our definition is that the buoyant force equals the weight of the liquid displaced by the object. To establish this fact with more mathematical rigor, however, we should work with an object of arbitrary shape to determine if the same conclusion can be drawn.

Consider an irregularly shaped submerged object as shown in Figure 2.25. A rectangular coordinate system is established with the z -direction positive downward. Choose a slice having a cross-sectional area dA and length $z_2 - z_1$. At 1 we have a pressure p_1 , and at 2 we have p_2 ; both act over an area equal to dA . The buoyant force is due to this difference in pressure and is therefore equal to

$$dR_b = (p_2 - p_1) dA$$

acting upward. From hydrostatics, $p = \rho g z$. Substituting, we have

$$\begin{aligned} dR_b &= (\rho g z_2 - \rho g z_1) dA \\ &= \rho g (z_2 - z_1) dA \end{aligned}$$

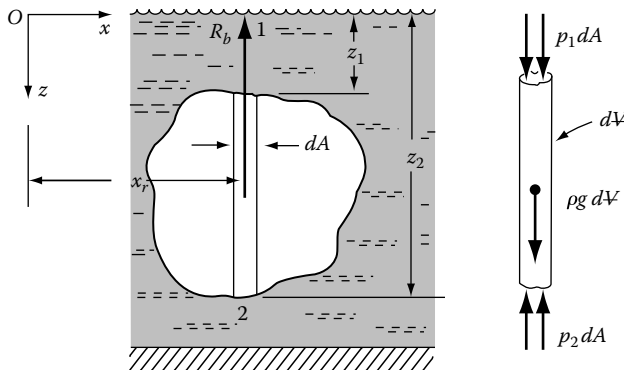


FIGURE 2.25 A submerged body.

But the volume of the element is $(z_2 - z_1)dA$, and our equation becomes

$$dR_b = \rho g dV$$

Integrating over the entire volume gives the total vertical force:

$$R_b = \rho g \iiint dV \quad (2.32)$$

Thus, the buoyant force equals the weight of the volume of fluid displaced. This concept is known as **Archimedes' principle**. (Recall that pressure does not vary with horizontal distance, so there are no unbalanced forces in the x - or y -direction).

With reference to Figure 2.25, we can now evaluate the moment of the buoyant force about the origin:

$$R_b x_r = \rho g \iiint x dV$$

Combining with Equation 2.32, we obtain an expression for the line of action of R_b :

$$x_r = \frac{\iiint x dV}{V} \quad (2.33)$$

Thus, the buoyant force acts through the centroid of the submerged volume: the **center of buoyancy**.

When the buoyant force exceeds the object's weight while submerged in a liquid, the object will float in the free surface. A portion of its volume will extend above the liquid surface, as illustrated in Figure 2.26. In this case,

$$dR_b = (\rho g z_2 - \rho_a g z_1) dA$$

where ρ_a is the air density or density of the fluid above the liquid. For most liquids,

$$\rho_a \ll \rho$$

and thus we can write

$$dR_b = \rho g z_2 dA = \rho g dV_s$$

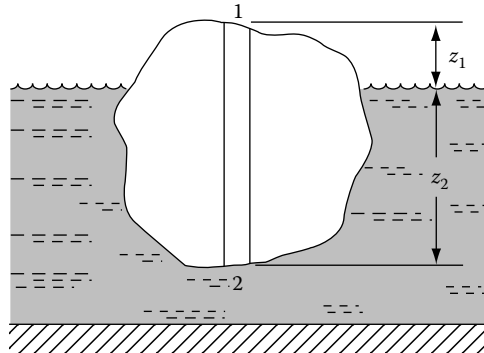


FIGURE 2.26 A floating body.

where dV_s is the submerged volume. Integration gives

$$R_b = \rho g \iiint dV_s \quad (2.34)$$

Thus, the buoyant force exerted on a floating body equals the weight of the displaced volume of liquid. It can be shown that this force acts at the center of buoyancy of only the submerged volume.

Example 2.14

Figure 2.27 shows a 4-cm-diameter cylinder floating in a basin of water, with 5 cm extending above the surface. If the water density is $1\,000\text{ kg/m}^3$, determine the density of the cylinder.

SOLUTION

A free-body diagram of the cylinder includes gravity and buoyancy forces. The total weight of the object is supported by the buoyant force that acts on the submerged portion of the cylinder. Summing these forces, we get

$$mg = R_b$$

or

$$\rho_c V g = \rho V_s g$$

or

$$\rho_c = \frac{\rho V_s}{V}$$

where ρ_c is the density of the cylinder and V_s is the volume of the submerged portion of the cylinder. Thus,

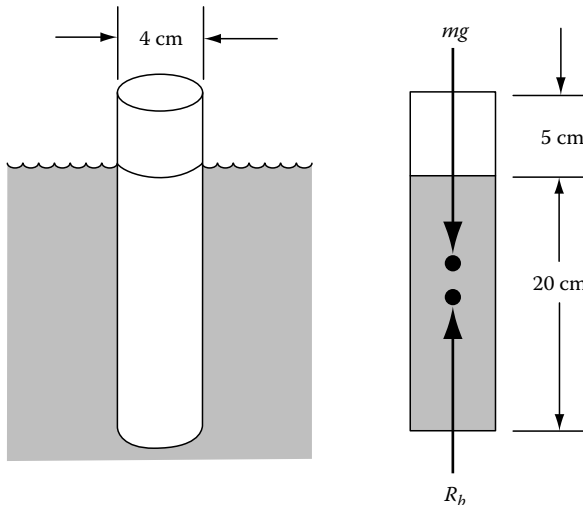


FIGURE 2.27 A cylinder floating in the surface of a liquid.

$$V = \left(\frac{\pi D^2}{4} \right) L$$

and

$$V_s = \left(\frac{\pi D^2}{4} \right) L_s$$

where $L_s = 20$ cm as indicated in Figure 2.27. Substituting,

$$\rho_c = \frac{\rho(\pi D^2/4)L_s}{(\pi D^2/4)L} = \frac{\rho L_s}{L}$$

$$\rho_c = 1\,000 \left(\frac{20}{25} \right)$$

or

$$\rho_c = 800 \text{ kg/m}^3$$

2.6 STABILITY OF SUBMERGED AND FLOATING BODIES

In this section, we consider two cases of stability: objects that are submerged and objects that are floating. An object is considered to be in stable equilibrium if it returns to its original position after being displaced slightly from that position. For the case of a submerged object, consider a gondola being carried in air by a balloon as sketched in Figure 2.28. Since the hot air in the balloon is lighter than ambient air at ground level, the balloon rises to a height at which atmospheric density nearly

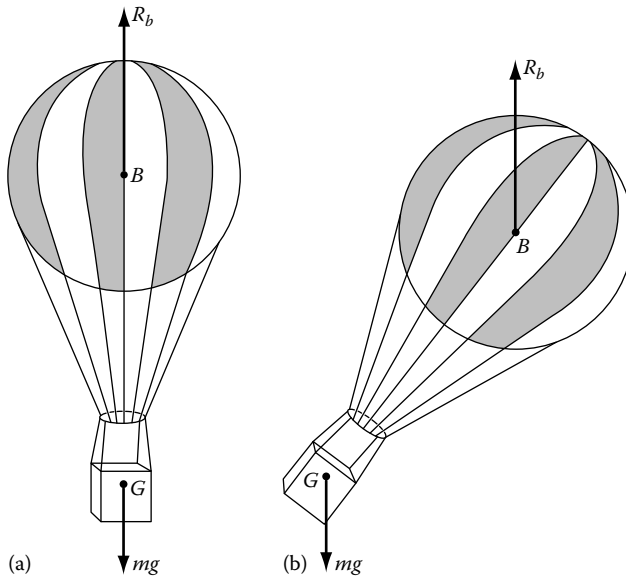


FIGURE 2.28 A balloon and basket submerged in air.

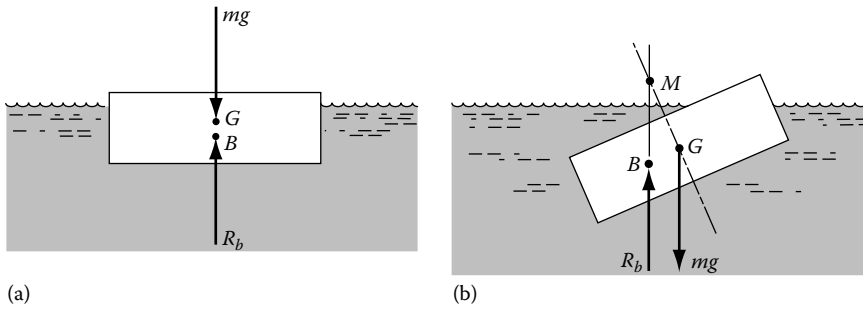


FIGURE 2.29 Stability of a floating body.

equals hot air density (accounting for the weight of the balloon). The buoyant force is shown to act through the center of buoyancy B . The weight of the system is shown to act at the center of gravity G . If the system is disturbed by, say, a gust of wind, then the buoyant force and the weight together form a moment that returns the balloon and basket to the equilibrium position. The system depicted in Figure 2.28a is then considered stable. For submerged bodies, we conclude that when the center of buoyancy lies directly above the center of gravity in a static position, the system is considered stable.

For the case of a body floating in a liquid surface, the stability requirements can be examined by using the body sketched in Figure 2.29. The buoyant force acts through B , and the weight acts through point G . Figure 2.29a depicts a stable situation; yet, unlike the submerged body of Figure 2.28, G is above B . Thus a somewhat different criterion is necessary for floating bodies.

First extend the line of action of R_b until it intersects the centerline of the body (Figure 2.29b). The point of intersection is called the **metacenter** M . The distance MG is known as the metacentric height. The force R_b acts through M . The object is stable if the metacenter lies above the center of gravity because in this case a restoring moment is set up when the object is disturbed from its equilibrium position.

Example 2.15

Figure 2.30a shows a bar of soap floating in a basin of water. Sketch its position for 0° , 30° , 60° , and 90° from the position of Figure 2.30a. Show the center of buoyancy (B) and the center of gravity (G), and comment on the stability.

SOLUTION

Figure 2.30 shows all the positions with comments on the stability.

The preceding example shows how an intuitive analysis can be performed on a stability problem. In many cases, however, a mathematical approach is necessary. Consider the hull of a ship as sketched in Figure 2.31. A plan view is shown as well as a cross-sectional view at $A-A$. From the previous discussion, we know that there is a buoyant force acting at B and the weight of the entire ship acting at G . The weight of only the submerged volume V_s also acts at B . When the ship is rolled (rotated about axis $y-y$), it becomes deflected through an angle θ known as the angle of heel. As shown in Figure 2.31c, the submerged volume changes geometry, and the center of buoyancy moves to B' . Correspondingly, a restoring moment is set up; this moment is given as $\Delta R_b x_0$. The weight of the submerged volume (equal to the weight of liquid displaced) now acts through B' . Summing moments about B , we have

$$\Delta R_b x_0 = \rho g V_s r \tag{2.35}$$

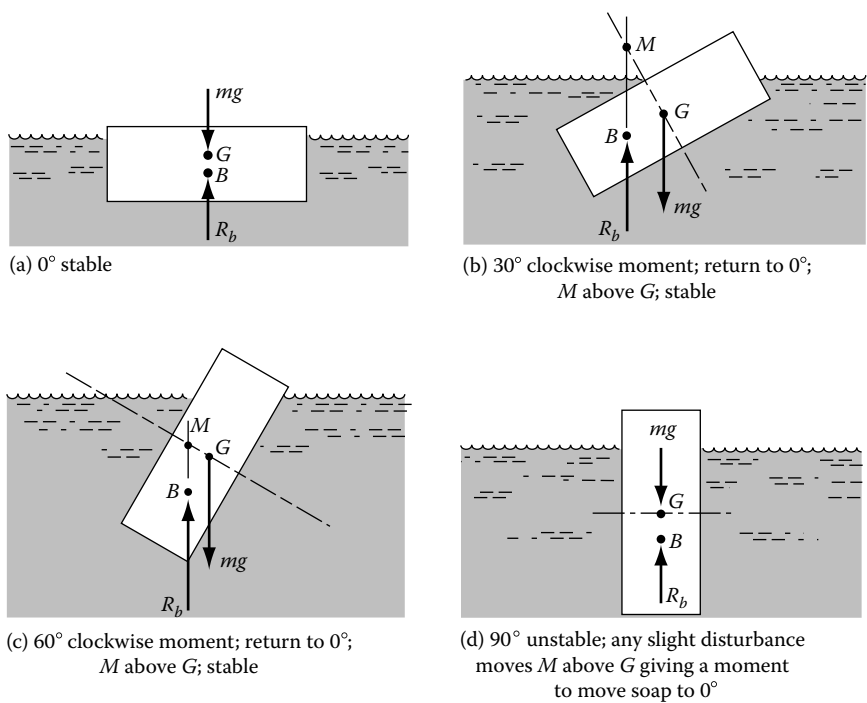


FIGURE 2.30 Solution to Example 2.15.

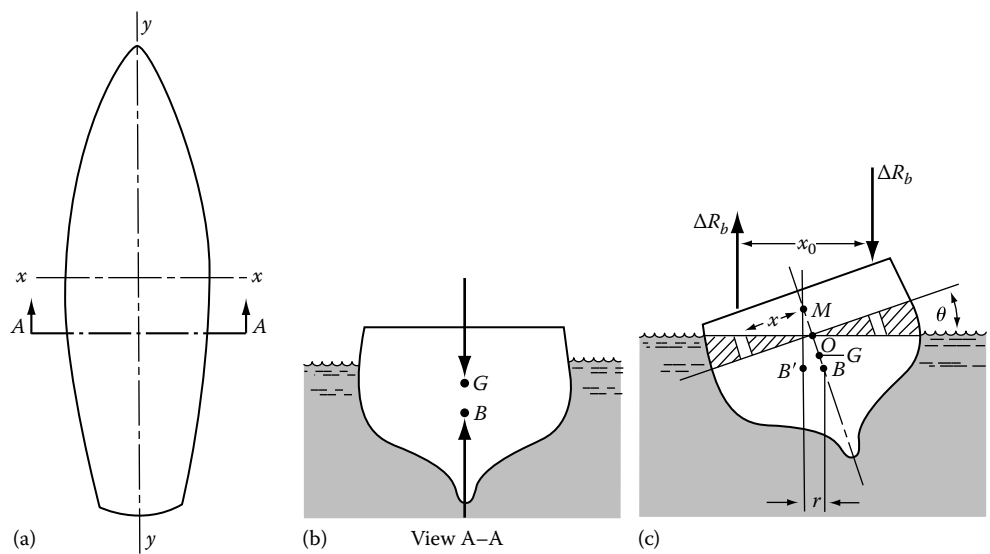


FIGURE 2.31 A sketch for calculating metacentric height.

The magnitude of $\Delta R_b x_0$ can be determined again by taking moments about point O , where the liquid surface intersects the cross section at the centerline. Choose an element of area dA a distance x from O . The volume of this element is $x \tan \theta \, dA$ or, for small θ , $x\theta \, dA$. The buoyant force due to it is $(\rho g x \theta \, dA)$. The moment of the element about O is $\rho g x^2 \theta \, dA$; therefore,

$$\Delta R_{b,x_0} = \iint \rho g x^2 \theta \, dA \quad (2.36)$$

Equating Equations 2.35 and 2.36 gives

$$\rho g \theta \iint x^2 dA = \rho g \nabla_s r$$

The double integral is recognized as the moment of inertia about axis y - y of the ship. After simplification, we obtain

$$\theta I_{yyc} = \nabla_s r \quad (2.37)$$

Now $r = MB \sin \theta = MB\theta$, for small θ . Combining this result with Equation 2.37, we have

$$\theta I_{yyc} = \nabla_s MB\theta$$

or

$$MB = \frac{I_{yyc}}{\nabla_s} \quad (2.38)$$

The metacentric height is found in terms of distance to be

$$MB = MG + GB$$

Thus, $MG = MB - GB$ or

$$MG = \frac{I_{yyc}}{\nabla_s} - GB$$

The criteria for stability become

$$MG = \frac{I_{yyc}}{\nabla_s} - GB > 0 \rightarrow \frac{I_{yyc}}{\nabla_s} > GB \quad (\text{stable}) \quad (2.39a)$$

$$MG = \frac{I_{yyc}}{\nabla_s} - GB = 0 \rightarrow \frac{I_{yyc}}{\nabla_s} = GB \quad (\text{neutral}) \quad (2.39b)$$

$$MG = \frac{I_{yyc}}{\nabla_s} - GB < 0 \rightarrow \frac{I_{yyc}}{\nabla_s} < GB \quad (\text{unstable}) \quad (2.39c)$$

Example 2.16

It is known that a long log floats with its axis horizontal. A very short log, however, floats with its axis vertical. Determine the maximum length of a cylindrical walnut log 40 cm in diameter that will cause it to float with its axis vertical.

SOLUTION

For walnut, the specific gravity ranges from 0.64 to 0.70 (Table A.7); we will use the average value of 0.67. Take the log as floating horizontally and about to tip to a vertical position. In this instance, then, I_{yyc} is the same for either position. We will calculate length L by using Equation 2.39b:

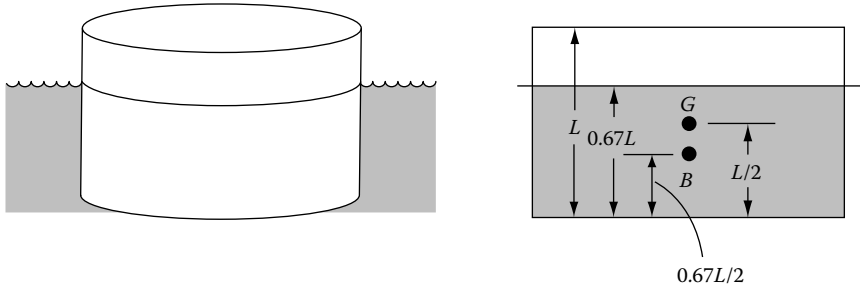


FIGURE 2.32 Floating log with axis vertical showing distances from bottom.

$$\frac{I_{\text{yyc}}}{V_s} = GB \quad (\text{neutral stability})$$

Note that if L is larger than that calculated here, the log remains horizontal; if L is shorter, the log becomes vertical. From Table B.1 for a cylinder,

$$I_{\text{yyc}} = \frac{\pi D^4}{64} = \frac{\pi(0.4)^4}{64} = 1.26 \times 10^{-3} \text{ m}^4$$

For a vertical log, G is $L/2$ from the bottom. The log has $s = 0.67$, and thus B is $0.67L/2$ from the bottom because the log is only 67% submerged, as shown in Figure 2.32. Hence,

$$GB = \frac{L}{2} - \frac{0.67L}{2} = 0.165L$$

With submerged volume given as

$$V = \frac{0.67\pi D^2 L}{4} = \frac{0.67\pi(0.4)^2 L}{4} = 8.42 \times 10^{-2} L \text{ m}^3$$

Equation 2.39b becomes, after substitution,

$$\frac{1.26 \times 10^{-3}}{8.42 \times 10^{-2} L} = 0.165L$$

or

$$L^2 = 0.0907$$

Solving, we get

$$L = 0.301 \text{ m} = 30.1 \text{ cm}$$

2.7 SUMMARY

In this chapter, we discussed pressure and its measurement by manometers and pressure gauges. We examined the pressure distributions existing in a static fluid in contact with submerged plane and curved surfaces. Moreover, we developed equations that are useful in finding forces and their

locations that were equivalent to the pressure variations existing in static fluids. It was shown that accelerating liquid containers can be analyzed by methods of fluid statics. Finally, we derived expressions for predicting hydrostatic forces on submerged bodies and discussed the criterion of stability for submerged and for floating bodies.

PROBLEMS

The Hydrostatic Equation

- 2.1 Repeat the derivation in Section 2.1 for a three-dimensional prism to prove that pressure at a point is independent of direction.
- 2.2 A hydraulic jack is used to bend pipe as shown in Figure P2.2. What force F_2 is exerted on the pipe if F_1 is 100 lbf, assuming pressure is constant throughout the system.

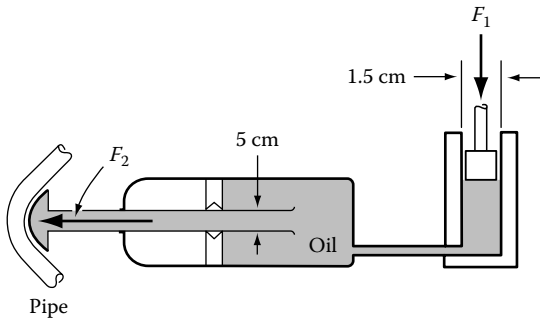


FIGURE P2.2

- 2.3 A hydraulic elevator is lifted by a 10 in. diameter cylinder under which oil is pumped (Figure P2.3). Determine the output pressure of the pump as a function of z if the weight of the elevator and occupants is 1600 lbf. Take the specific gravity of the oil to be 0.86. The elevator cylinder does not contain oil.

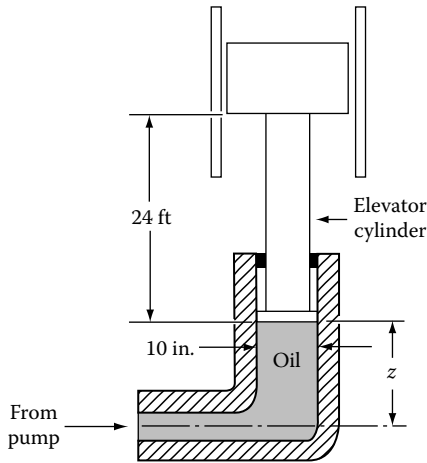


FIGURE P2.3

- 2.4 A suited diver can dive to a depth at which the pressure is 1 814 kPa. Calculate the depth in seawater where this pressure exists.
- 2.5 A free diver (unsuited) can dive to a depth at which the pressure is about 71 psi. What is the corresponding depth in seawater?

- 2.6 The deepest descent in seawater of a diving bell is 1370 ft. The deepest descent in seawater of a human-carrying vessel is 35,820 ft. What is the pressure at each of these depths?
- 2.7 A cylindrical tank is used to store methyl alcohol after its production and before it is pumped to its user. The tank is 75 ft in diameter and is filled to a depth of 20 ft. Calculate the pressure exerted at the bottom of the walls.
- 2.8 Linseed oil can be mixed with powders to produce paint. The oil is shipped via rail in tank cars that are 6 ft in diameter and 40 ft long. Calculate the pressure exerted at the bottom of a full tank.
- 2.9 The pressure at the bottom of an open top tank of ethyl alcohol is 17 psia. What is the depth of the liquid?
- 2.10 Water towers are often used to maintain city water pressure. In many locations, the static pressure is 65 psig. Calculate the height of liquid in a water tower that is necessary to maintain this pressure.
- 2.11 The output pressure of a pump is 3.0 psi. The pump is used to deliver propyl alcohol to a tank, as shown in Figure P2.11. To what depth can the tank be filled at this pump pressure, provided that inflow stops when pump pressure equals hydrostatic pressure in the tank? Ignore frictional losses.

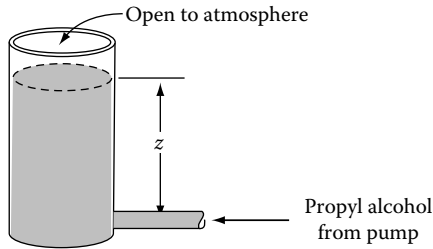


FIGURE P2.11

- 2.12 Methyl alcohol and gasoline (assume octane) are mixed together in an open fuel tank. The methyl alcohol soon absorbs water from the atmosphere, and the water–alcohol mix separates from the gasoline, as shown in Figure P2.12. Find the pressure at the bottom of the tank wall.

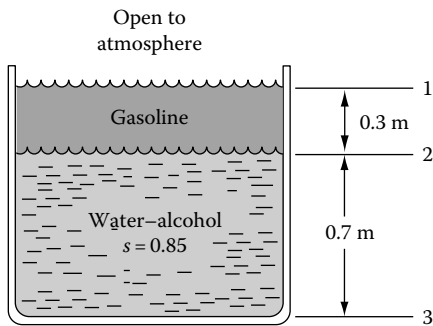


FIGURE P2.12

- 2.13 A tank is filled to a depth of 10 ft with liquid. Using the same axis scales, sketch p versus z according to the hydrostatic equation for (a) water, (b) ether, and (c) carbon disulfide.
- 2.14 A common drinking glass is 7 cm in diameter and filled to a depth of 12 cm with water. Calculate the pressure difference between the top and the bottom of the glass sides.
- 2.15 Figure P2.15 shows a tank containing three liquids. What is the expected reading on the pressure gauge?

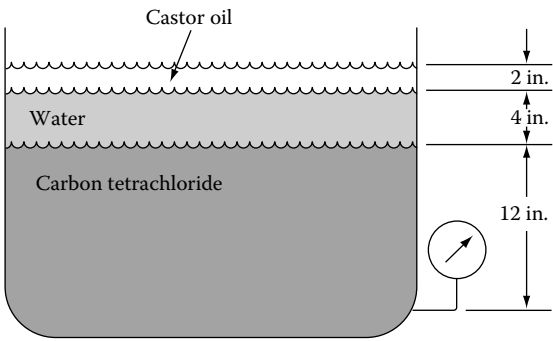


FIGURE P2.15

2.16 A concrete dam is constructed as shown in Figure P2.16. When the water level on the left is 30 ft, determine the pressure at the bottom of the dam.

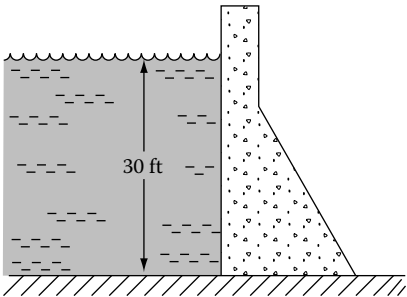


FIGURE P2.16

2.17 A floating cover is used in oil- and gasoline-storage tanks to keep moisture out (Figure P2.17). If the cover weighs 300 N and the depth of gasoline (assume octane) is 8 m, determine the pressure at the bottom of the tank wall.

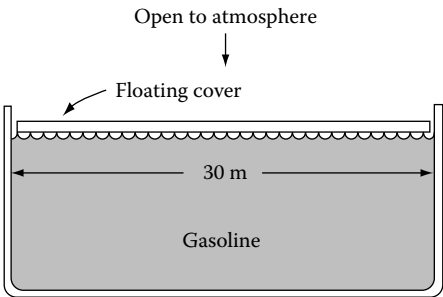


FIGURE P2.17

2.18 Figure P2.18 shows a tank containing turpentine. The tank bottom has a plug with a cable attached that leads to a weight W . It is desired to have the plug close when the turpentine depth is 1.1 m. Calculate the weight required to do this.

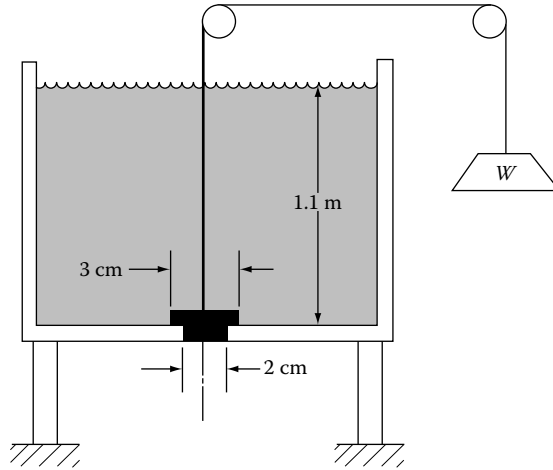


FIGURE P2.18

The Atmosphere

- 2.19** At what atmospheric elevation is the pressure equal to 15 kPa if the temperature is -57°C ? Assume a lapse rate of $6.5^\circ\text{C}/\text{km}$ from sea level, where the temperature is taken to be 288 K.
- 2.20** Calculate the atmospheric pressure at an elevation of 50,000 ft. Express the answer in kPa, psia, and psig.
- 2.21** Verify that the pressure variation in the stratosphere is given by

$$p = 22\,500 \exp\left(\frac{11\,000 - z}{6\,315}\right)$$

where $T = -57^\circ\text{C}$ = a constant, $z \geq 11\,000$ m, and $p = 22.5$ kPa at $z = 11\,000$ m.

- 2.22** It was stated that in the troposphere the temperature is given by

$$T = T_0 - \alpha h$$

where T is the temperature from sea level to 11 000 m, T_0 is the temperature at sea level ($= 288$ K), α is the lapse rate ($= 6.5^\circ\text{C}/\text{km}$).

- Starting with the differential form of the hydrostatic equation (Equation 2.4), substitute for ρ from the ideal gas law; for temperature, substitute the equation given here.
- Separate the variables and integrate from $p_1 = 101.3$ kPa ($z_1 = 0$) to $p_2 = p$ ($z_2 = 11\,000$ m).
- Show that

$$p = 101.3 \text{ kPa} (1 - 0.000\,022\,6z)^{5.26}$$

- Plot p versus z for $0 \leq z \leq 11\,000$ m.
 - Combine this plot with the result for $z \geq 11\,000$ m.
- 2.23** At what elevation is atmospheric pressure equal to 7 kN/m²? Use the equation in Problem 2.21 or in Problem 2.22 as appropriate.

- 2.24** At what elevation is atmospheric pressure equal to 4 psia? Use the equation in Problem 2.21 or in Problem 2.22 as appropriate.
- 2.25** The elevation above sea level at Denver, Colorado, is 5283 ft, and the local atmospheric pressure there is 83.4 kPa. If the temperature there is 75°F, calculate the local air density and the barometric pressure in centimeters of mercury.
- 2.26** Select a city and use a reference text to determine its elevation above sea level. Use the appropriate equation (as found in Example 2.3 or in Problem 2.22) to calculate the local atmospheric pressure there. Express the result in centimeters of mercury. Use a temperature of 25°C if necessary.
- 2.27** Determine the height of mercury in a barometer if atmospheric pressure is 10 psia.
- 2.28** At an elevation of 12 km, atmospheric pressure is 19 kN/m². Determine the pressure at an elevation of 20 km if the temperature at both locations is −57°C.

Manometry

- 2.29** Figure P2.29 shows a tank containing linseed oil and water. Attached to the tank 3 ft below the water–linseed oil interface is a mercury manometer. For the dimensions shown, determine the depth of the linseed oil.

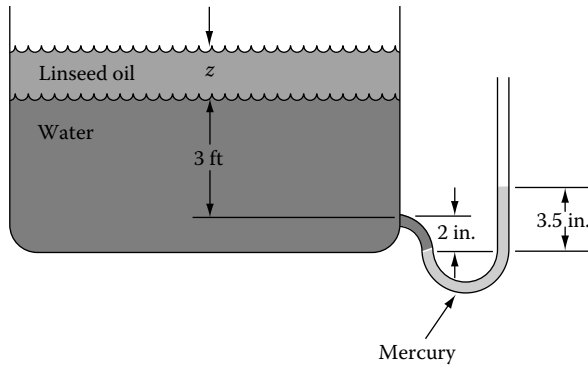


FIGURE P2.29

- 2.30** Determine the pressure above the glycerine in Figure P2.30.

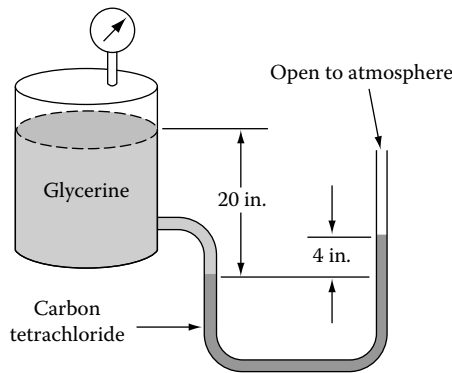


FIGURE P2.30

- 2.31** Figure P2.31 shows a manometer and a gauge attached to the bottom of a tank of kerosene. The gauge reading is 2 psig. Determine the height z of mercury in the manometer.

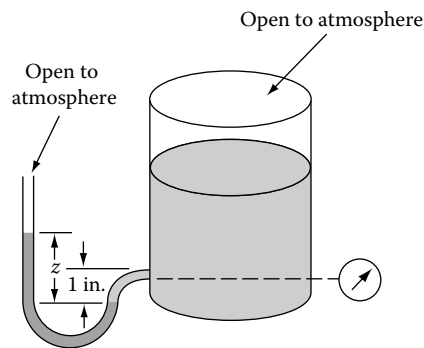


FIGURE P2.31

2.32 A pump is a device that puts energy into a liquid in the form of pressure. The inlet side of a pump usually operates at less than atmospheric pressure. As shown in Figure P2.32, a manometer and a vacuum gauge are connected to the inlet side of a pump, and the vacuum gauge reads the equivalent of 34 kPa (absolute).

- a. Express the gauge reading in psig.
- b. Calculate the deflection when the manometer liquid is mercury.

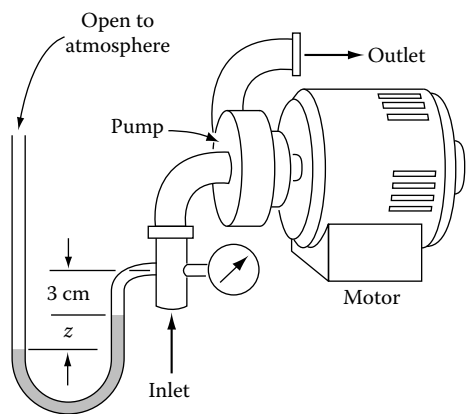


FIGURE P2.32

2.33 Two pipelines are connected with a manometer, as shown in Figure P2.33. Determine the pressure p_2 if the manometer deflection is 28 in. of water and p_1 is 50 psig. The fluid in each pipe is air.

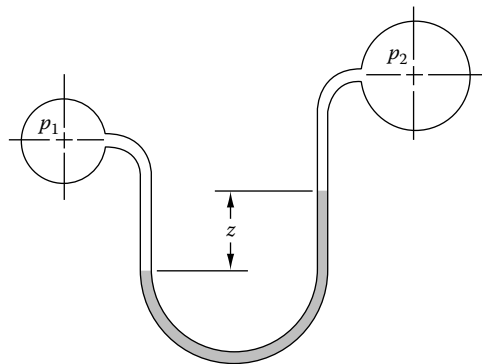


FIGURE P2.33

2.34 Figure P2.34 shows a pressure vessel containing propylene glycol with a manometer attached. The propylene glycol level within the manometer rises 6 in. above the top of the vessel. Determine the pressure at the top of the vessel.

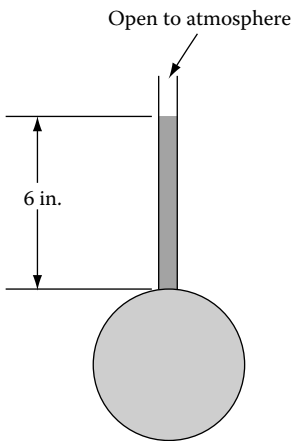


FIGURE P2.34

2.35 If turpentine pressure is 20 psi, find the water pressure for the system shown in Figure P2.35.

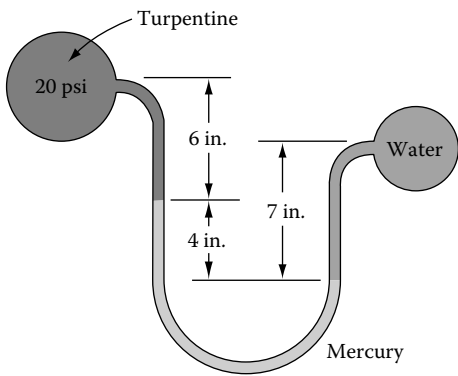


FIGURE P2.35

2.36 Calculate the air pressure in the tank shown in Figure P2.36. Take atmospheric pressure to be 101.3 kPa.

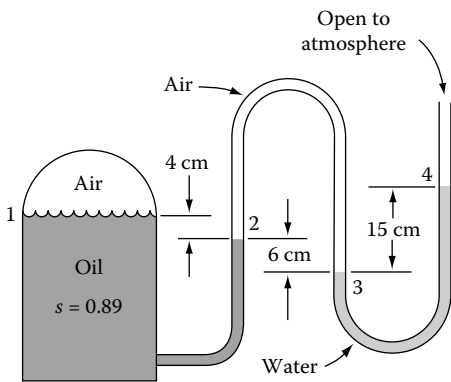


FIGURE P2.36

- 2.37 The pressure difference between two vessels containing air is to be measured. A manometer that is 12 in. tall is available, and the maximum pressure difference between the two vessels is 2.5 psi. Methyl alcohol, water, and mercury are available as manometer liquids. Are any of them suitable?
- 2.38 The pressure of the air in Figure P2.38 is 10.7 kPa, and the manometer fluid is of unknown specific gravity s . Determine s for the deflections shown.

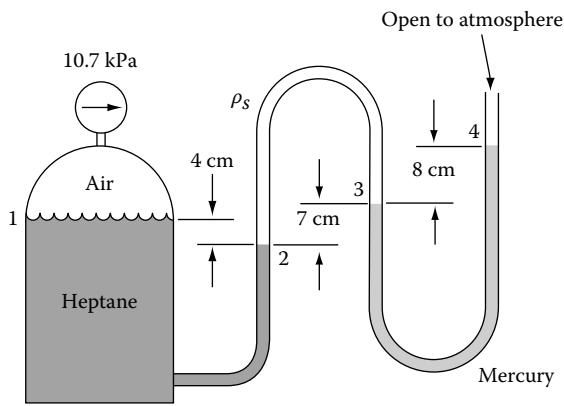


FIGURE P2.38

- 2.39 For the sketch of Figure P2.39 (all dimensions in inches), determine the pressure of the linseed oil if the glycerine pressure is 150 psig.

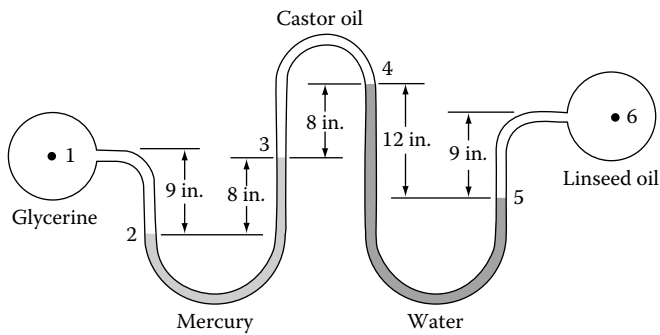


FIGURE P2.39

- 2.40 Find z in Figure P2.40 if $p_2 - p_1 = 3.0$ psig.

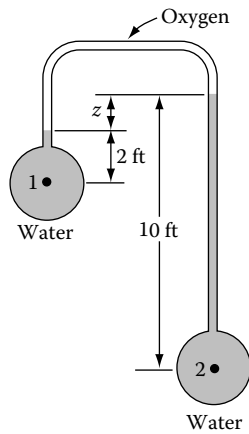


FIGURE P2.40

2.41 Two pipes containing air are connected with two manometers, as shown in Figure P2.41. One manometer contains glycerine, and the difference in liquid levels is 10 cm. The other manometer contains an unknown liquid, and it shows a difference in liquid levels of 15 cm. What is the density of the unknown liquid?

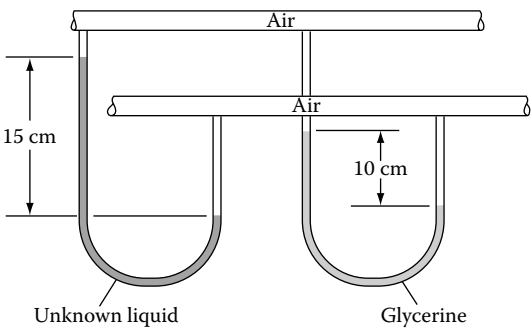


FIGURE P2.41

2.42 An inverted U-tube manometer is connected to two sealed vessels, as shown in Figure P2.42. Heptane is in both vessels, and the manometer shows a difference in heptane levels of 10 cm. Calculate the pressure difference between the two vessels.

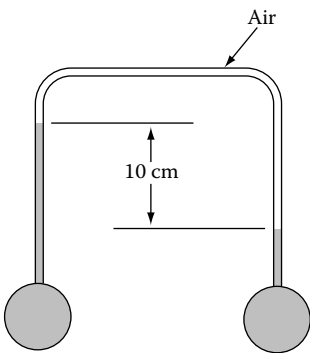


FIGURE P2.42

2.43 A manometer is used to measure pressure in a tank as a check against a simultaneous measurement with a gauge. The tank liquid is benzene; the manometer fluid is mercury. For the configuration shown in Figure P2.43, determine the gauge pressure at A.

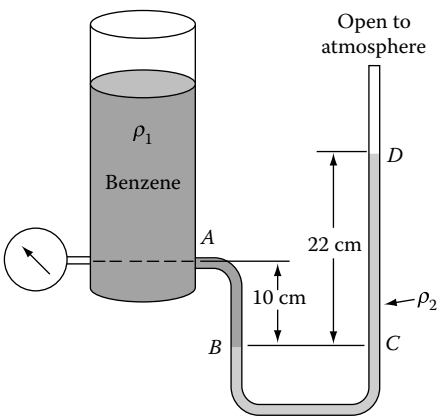


FIGURE P2.43

Forces on Submerged Plane Surfaces

2.44 Figure P2.44 shows a rectangular retaining door holding water. Sketch the pressure prism and determine the resultant force on the door and its location.

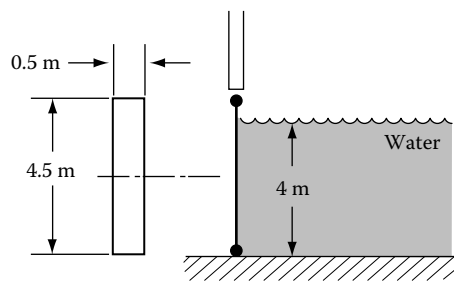


FIGURE P2.44

2.45 Figure P2.45 shows a rectangular gate holding water. Floating atop the water is a layer of oil. For the dimension shown,

- a. Sketch the pressure prism for water only in contact with the door
- b. Sketch an additional pressure distribution due to the oil
- c. Determine the magnitudes of the resultant forces

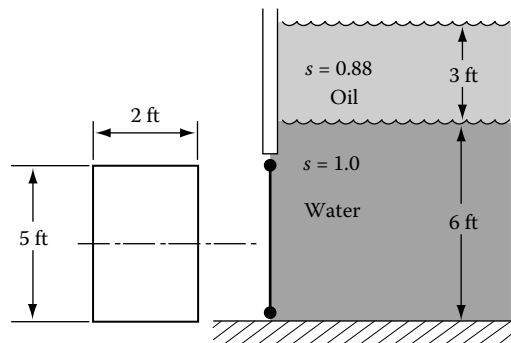


FIGURE P2.45

2.46 A rectangular gate is holding water that has a layer of kerosene over it. With both liquids in contact with the gate as shown in Figure P2.46:

- a. Sketch the pressure prisms
- b. Determine the magnitude of the resultant forces

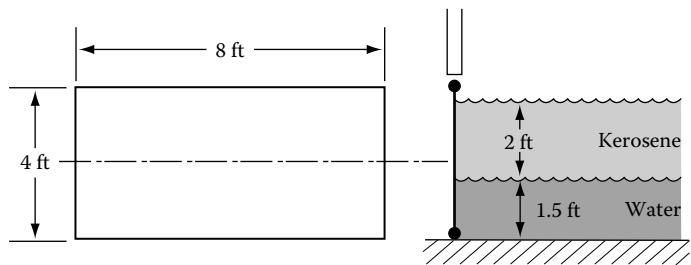


FIGURE P2.46

- 2.47 A rectangular gate is used to separate carbon disulfide from liquid ether as shown in Figure P2.47. The gate is 0.4 m wide. Determine the height of ether that is required to balance the force exerted by the carbon disulfide such that the moment about O is zero.

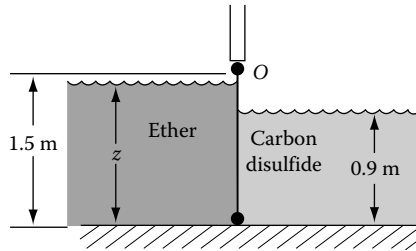


FIGURE P2.47

- 2.48 A rectangular gate 3 ft wide is used as a partition to separate glycerine and water as shown in Figure P2.48. A stop is located on the floor of the water side of the gate. Calculate the force required to hold the door closed.

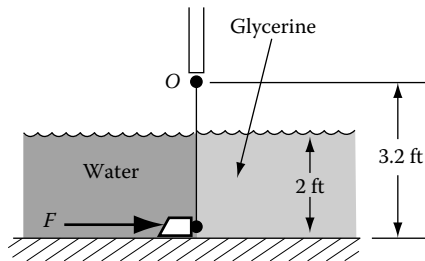


FIGURE P2.48

- 2.49 A rectangular gate 1.6 m wide is used as a partition as shown in Figure P2.49. One side has linseed oil filled to a depth of 10 m. The other has two fluids—castor oil over water. Determine the depth of castor oil required to keep the door stationary (no moment about point O).

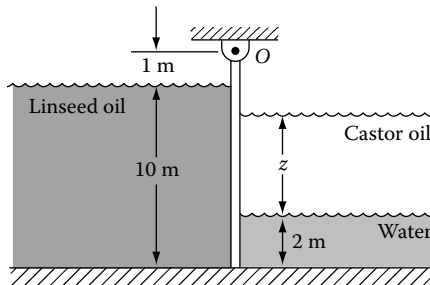


FIGURE P2.49

- 2.50 A hinged rectangular door 2 ft wide is free to rotate about point O but is held securely by a block at A . On the left side of the door is methyl alcohol filled to a depth of 3 ft. Find the restraining force at A . (See Figure P2.50.)

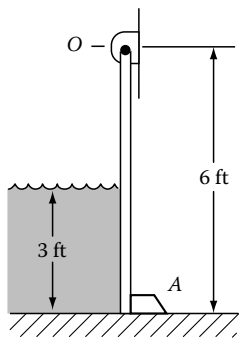


FIGURE P2.50

2.51 A rectangular gate is used as a retaining wall for seawater as shown in Figure P2.51. The gate is hinged at point O located 1 m from the bottom. Determine the depth of seawater required for the resultant force to be located at the hinge. The gate width into the page is 1.8 m.

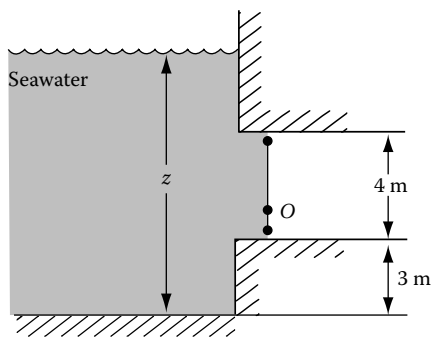


FIGURE P2.51

2.52 Figure P2.52 shows triangular retaining door holding acetone. Sketch the pressure prism and determine the resultant force on the door and its location.

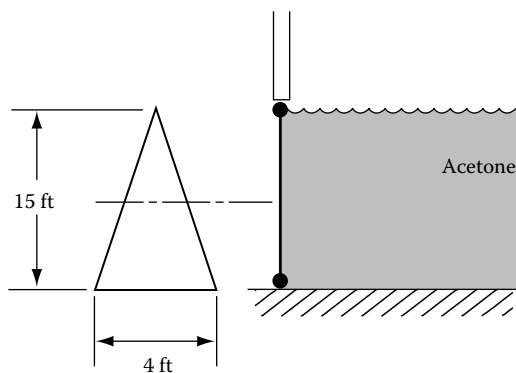


FIGURE P2.52

2.53 A porthole in the wall of a loaded ship is just below the surface of the water as shown in Figure P2.53. Sketch the pressure prism for the window, determine the magnitude of the resultant force, and find its location.

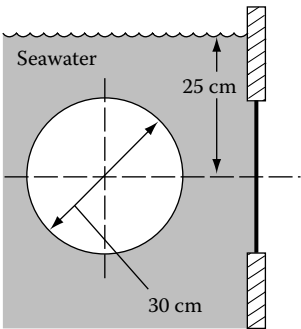


FIGURE P2.53

2.54 An aquarium is designed such that a viewing window is elliptical, as shown in Figure P2.54. Sketch the pressure prism for the window, determine the magnitude of the resultant force, and find its location.

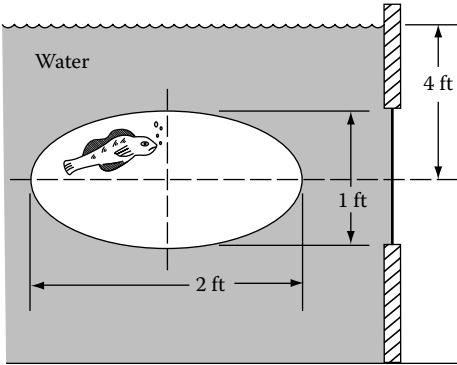


FIGURE P2.54

2.55 Figure P2.55 shows a 4-ft-wide (into the page) gate that has an L-shaped cross section and is hinged at its corner. The gate is used to ensure that the water level does not get too high. Once the level rises over a certain point, the fluid forces acting on the gate tend to open it and release some liquid. Determine the height z above which the gate tends to open.

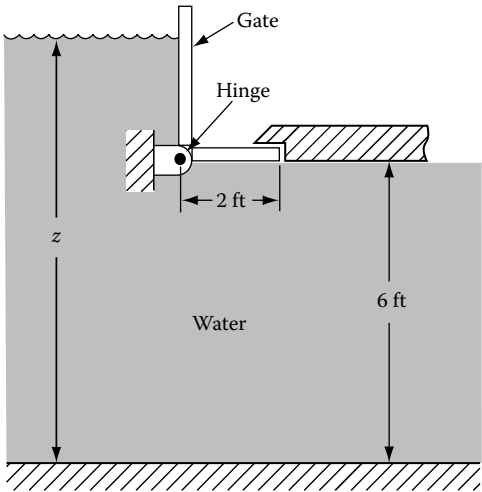


FIGURE P2.55

2.56 Figure P2.56 shows a hinged gate used as a retainer for castor oil. The liquid depth to the horizontal portion of the gate is 5 ft, and the gate itself is to be designed so that the oil depth does not exceed 5 ft. When the depth is greater than 5 ft, the fluid forces act to open the gate, and some oil escapes through it. The gate is 2 ft wide (into the page). Determine the angle θ required for the gate to open when necessary.

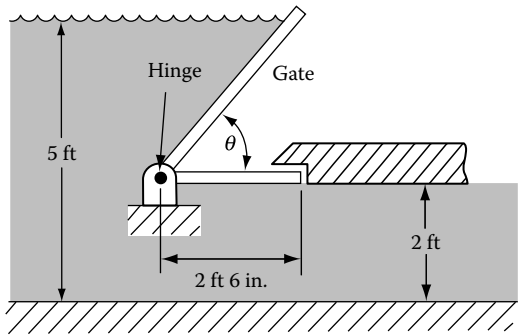


FIGURE P2.56

2.57 A dam is constructed as in Figure P2.57. Determine the resultant force and its location acting on the inclined surface. Perform the calculations assuming a unit width into the page.

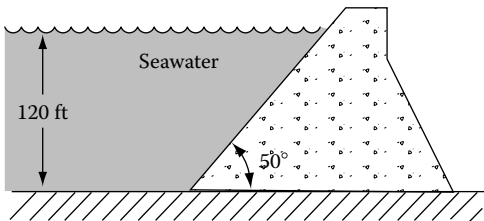


FIGURE P2.57

2.58 A tank having one inclined wall contains chloroform as shown in Figure P2.58. The inclined wall has a rectangular plug 20 cm wide by 40 cm high. Determine the force exerted on the plug if a pressure gauge at the tank bottom reads 17 kPa (gauge).

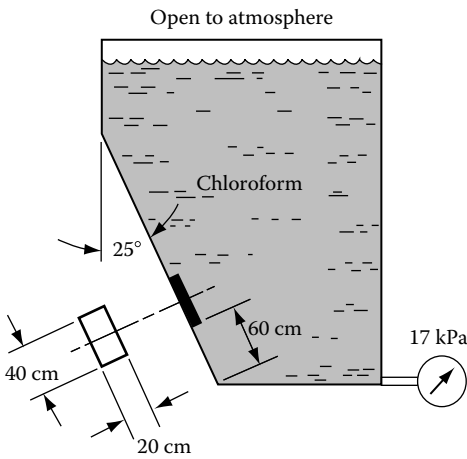


FIGURE P2.58

2.59 A small, narrow, flat-bottomed fishing boat is loaded down with two crew members and a catch of fish. The rear of the boat is a plane inclined at an angle θ of 75° with the horizontal. Thirty centimeters below the water surface is a hole in the boat plugged with a cork that is 8 cm in diameter. Determine the force and its location on the cork due to the saltwater if the liquid density is 1025 kg/m^3 . (See Figure P2.59.)

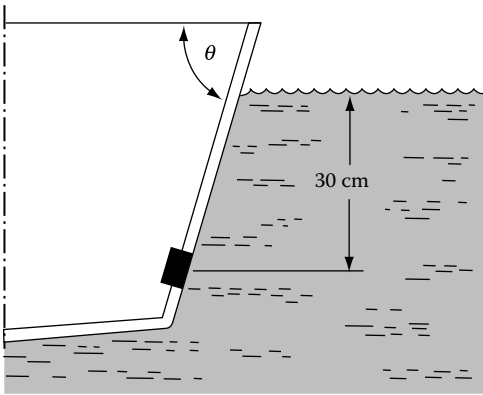


FIGURE P2.59

2.60 Figure P2.60 shows a tank that contains hexane. A circular gate in the slanted portion of one wall is 6 in. in diameter. Determine the resultant force acting on the gate and its location.

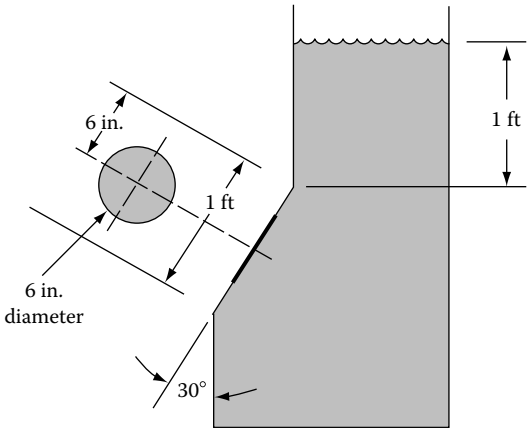


FIGURE P2.60

2.61 Figure P2.61 shows an inclined wall of a tank containing water. The tank wall contains a plug held in place by a weight. The liquid depth can be maintained constant in the tank, and the depth can be controlled by the amount of weight W that is used. For the conditions shown, determine the weight required to keep the plug in place.

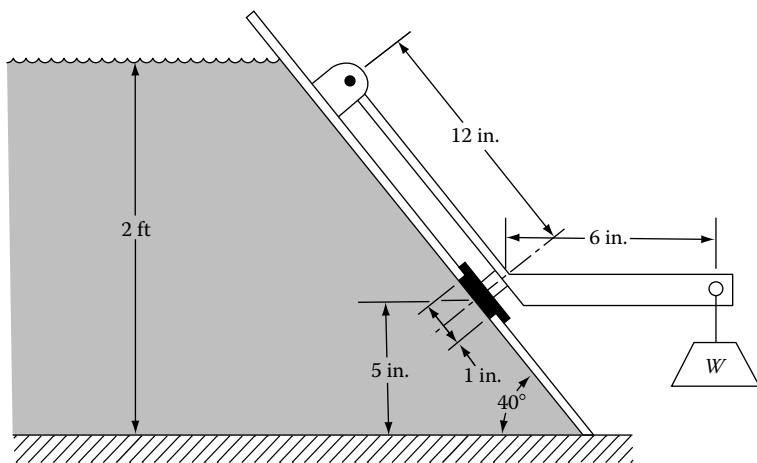


FIGURE P2.61

2.62 A trough formed by two sides of wood is used to convey water. Every 0.8 m, a turnbuckle and wire are attached to support the sides. Calculate the tension in the wire using the data in Figure P2.62.

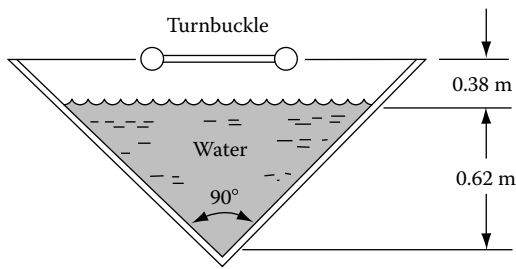


FIGURE P2.62

2.63 The location of the force due to a pressure distribution is written in terms of the centroid, second moment, and area according to

$$z_r = z_c + \frac{I_{xc}}{z_c A}$$

Write the equation for z_c and for z_r in terms of depth h for a rectangular gate that is completely in contact with liquid.

2.64 The location of the force due to a pressure distribution is written in terms of the centroid, second moment, and area according to

$$z_r = z_c + \frac{I_{xc}}{z_c A}$$

Write the equation for z_c and for z_r in terms of depth h for a circular gate that is completely in contact with liquid.

- 2.65** The location of the force due to a pressure distribution is written in terms of the centroid, second moment, and area according to

$$z_r = z_c + \frac{I_{xxc}}{z_c A}$$

Write the equation for z_c and for z_r in terms of depth h for a triangular gate that is completely in contact with liquid. The orientation of the gate is the same as that shown in Table B.1.

- 2.66** The location of the force due to a pressure distribution is written in terms of the centroid, second moment, and area according to

$$z_r = z_c + \frac{I_{xxc}}{z_c A}$$

Write the equation for z_c and for z_r in terms of depth h for a semicircular gate that is completely in contact with liquid. The orientation of the gate is the same as that shown in Table B.1.

- 2.67** The location of the force due to a pressure distribution is written in terms of the centroid, second moment, and area according to

$$z_r = z_c + \frac{I_{xxc}}{z_c A}$$

Write the equation for z_c and for z_r in terms of depth h for an elliptical gate that is completely in contact with liquid. The orientation of the gate is the same as that shown in Table B.1.

Forces on Submerged Curved Surfaces

- 2.68** The reservoir of a tank truck is elliptical in cross section—4 ft high, 6 ft wide, and 12 ft long. Calculate the forces exerted on one of the lower quadrants of the tank when half-filled with gasoline (Figure P2.68). Take gasoline properties to be the same as those for octane.

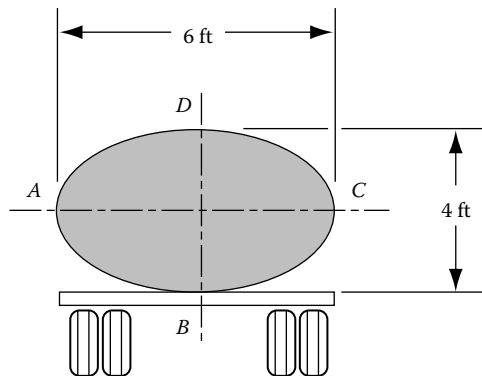


FIGURE P2.68

- 2.69** Find the forces exerted on the portion labeled ABC of the elliptical tank truck of Figure P2.68 when it is half-filled with gasoline. Take gasoline properties to be the same as those for octane.
- 2.70** The tank truck of Figure P2.68 has ends as sketched as in Figure P2.70. Determine the horizontal force acting on the end when the tank is filled with gasoline (assume the same properties as octane).

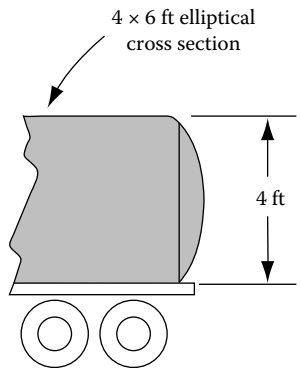


FIGURE P2.70

2.71 In many regions of the United States, home heating is effected by burning propane. A side view of a typical propane storage tank is sketched in Figure P2.71. Determine the forces exerted on quadrant DE for the case when the tank is filled to the top (point B). Tank length into the page is 2 m.

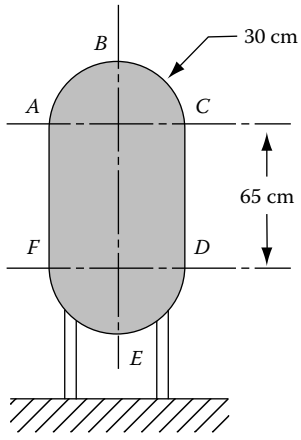


FIGURE P2.71

- 2.72** In many regions of the United States, home heating is effected by burning propane. A side view of a typical propane storage tank is sketched in Figure P2.71. Determine the forces exerted on the bottom portion labeled FED for the case when the tank is filled to the top (point B). Tank length into the page is 2 m.
- 2.73** In many regions of the United States, home heating is effected by burning propane. A side view of a typical propane storage tank is sketched in Figure P2.71. Sketch the pressure distribution acting on quadrant DE for the case when the tank is filled to the top (point B). Tank length into the page is 2 m.
- 2.74** A side view of a typical fuel storage tank is sketched in Figure P2.71. Sketch the pressure distribution acting on quadrant BC if the tank is filled with gasoline (assume it is octane). Tank length into the page is 2 m.
- 2.75** Figure P2.75 shows a seawater-retaining gate with a curved portion. When the water level gets to a certain height, the fluid forces acting on the gate open it, and the seawater passes through. The gate is 1 m wide (into the page) and is to be designed so that the water depth does not exceed 2 m. Determine the length L of the straight portion of the gate required to do this.

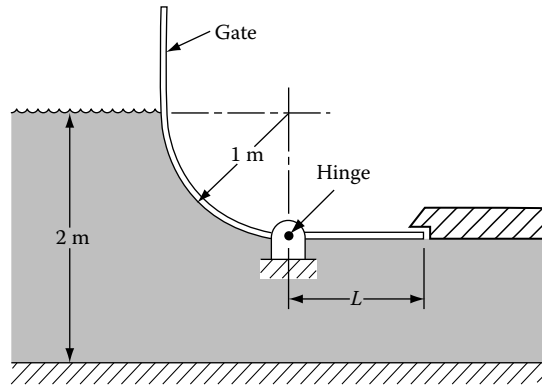


FIGURE P2.75

2.76 Figure P2.76 shows the side view of a tank with a curved gate. The gate width into the page is 24 in. The tank contains glycerine and is filled to a depth of 32 in. Determine the magnitude and location of the forces acting on the gate.

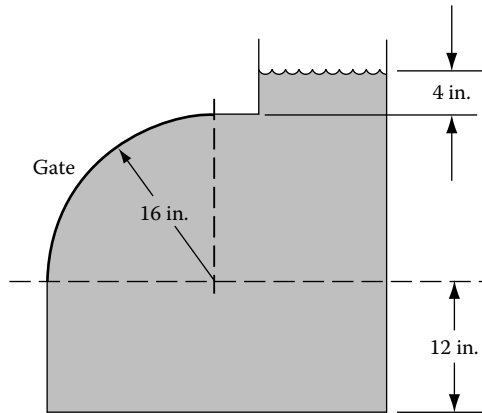


FIGURE 2.76

Equilibrium of Accelerating Fluids

- 2.77** At what acceleration must the car of Figure 2.21 be moving for the fluid to spill over the rear wall? The tank attached to the car is 6 in. long and 4 in. high. It is filled to a depth of 2 in. with linseed oil.
- 2.78** The car of Figure 2.21 is traveling at a constant velocity of 15 cm/s but goes around a curve of radius 56 cm. Viewing the car from the front, what is the equation of the surface? The tank attached to the car is 20 cm long and 10 cm high. It is filled to a depth of 5 cm with linseed oil.
- 2.79** The car of Figure 2.21 is decelerating uniformly at $\frac{1}{2}g$. Determine the free surface of the liquid. The car is 6 in. long and 4 in. high. It is filled to a depth of 2 in. with linseed oil.
- 2.80** A passenger in a car is holding a cup of coffee. The cup has an inside diameter of 7.8 cm and an internal height of 8 cm. The cup is filled with liquid to a height of 7 cm. The car accelerates uniformly from rest until it reaches 40 mi/h. What is the maximum acceleration rate that can be attained without spilling coffee over the top of the cup if the passenger holds the cup level?
- 2.81** At what rate of deceleration will the liquid level of Figure 2.22 just reach the top of the tank?
- 2.82** The liquid container of Figure 2.23 is rotating at 1.5 rev/s. Determine the shape of the liquid surface. The tank diameter is 1 ft; tank height is 18 in.; and the liquid depth when the tank is stationary is 6 in.

- 2.83** The liquid acceleration experiment depicted in Figure 2.21 is to be run with glycerin. The tank measures 6 in. long and 4 in. high. Glycerine is poured in until its height is 2 in. The weight is allowed to fall freely. Owing to wheel and pulley friction, the car accelerates at only $0.7g$. Determine the free surface of the glycerine.

Forces on Submerged Bodies

- 2.84** Derive an equation for the buoyant force exerted on a submerged cylinder with its axis vertical.
- 2.85** A 1.2-ft^3 block of aluminum is tied to a piece of cork, as shown in Figure P2.85. What volume of cork is required to keep the aluminum from sinking in castor oil?

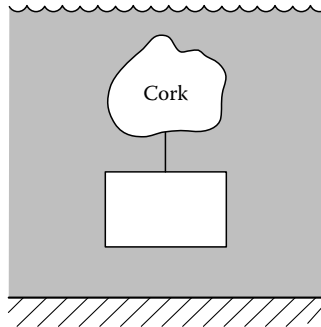


FIGURE P2.85

- 2.86** What percentage of total volume of an ice cube will be submerged when the ice cube is floating in water?
- 2.87** A copper cylinder of diameter 4 cm and length 15 cm weighs only 14 N when submerged in liquid. Determine the liquid density.
- 2.88** A cylinder 8 cm in diameter is filled to a depth of 30 cm with liquid. A cylindrical piece of aluminum is submerged in the liquid, and the level rises 4 cm. The weight of the aluminum when submerged is 2.5 N. Determine the liquid density.
- 2.89** A glass is filled to a depth d with linseed oil and allowed to float in a tank of water. To what depth can the glass be filled with linseed oil such that the tank water will just reach the brim of the glass? (See Figure P2.89).

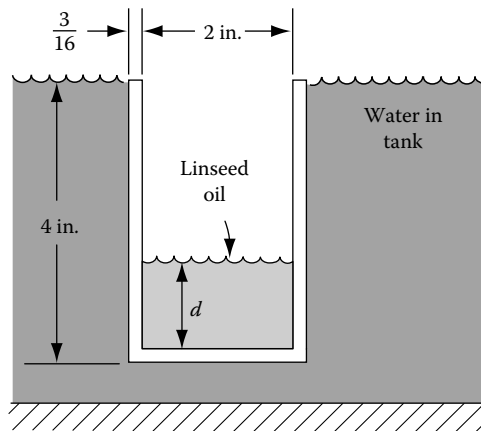


FIGURE P2.89

2.90 A cube of material is 4 in. on a side and floats at the interface between kerosene and water, as shown in Figure P2.90. Find the specific gravity of the material.

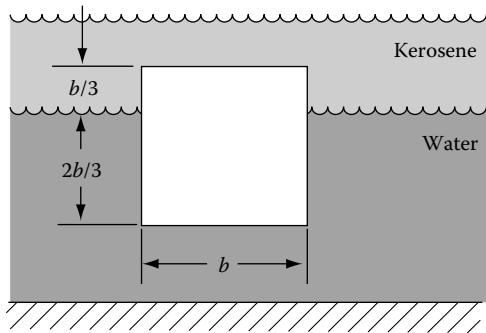


FIGURE P2.90

2.91 A block of tin of cross-sectional area 2 m^2 is resting on the flat bottom of a tank, as in Figure P2.91. No water can get beneath the block, which is only 0.1 m high. The water depth is 30 m .

- a. Determine the force required to lift the block just off the bottom.
- b. When the block has been raised just 1 cm and the water can get beneath it, determine the force required to lift the block further.

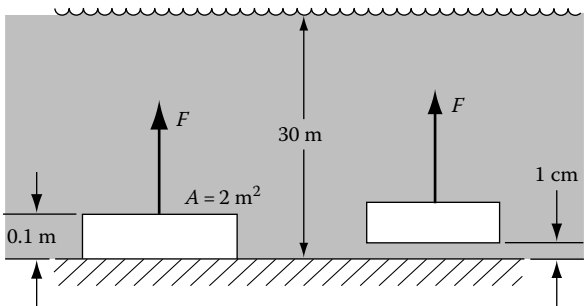


FIGURE P2.91

2.92 A flat barge carrying a load of dirt is sketched in Figure P2.92. The barge is 30 ft wide, 60 ft long, and 8 ft high. The barge is submerged 6.5 ft . Determine the weight of the dirt load if the weight of the barge is $400,000\text{ lbf}$.

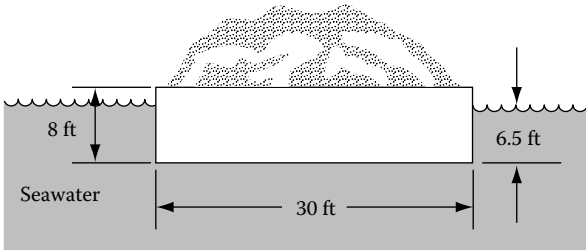


FIGURE P2.92

- 2.93** A bar of soap of dimensions 10 cm long, 5 cm wide, and 3 cm tall is floating in a basin of water with 8 mm extending above the surface. If the water density is 997 kg/m^3 , determine the density of the soap. (See Figure P2.93.)

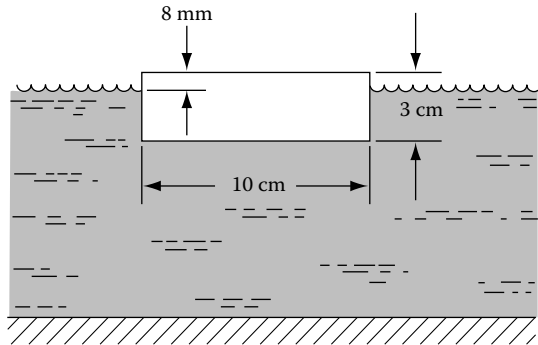


FIGURE P2.93

Stability of Submerged and Floating Bodies

- 2.94** Rework Example 2.16 for a balsa log.
- 2.95** Figure P2.95 shows a prismatic body, such as a barge, floating in water. The body is 6 m wide and 18 m long, and it weighs 1.96 MN. Its center of gravity is located 30 cm above the water surface. Determine the metacentric height if Δz is 30 cm.

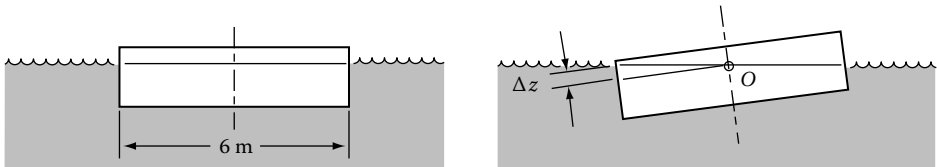


FIGURE P2.95

- 2.96** Figure P2.95 shows a prismatic body, such as a barge, floating in water. The body is 6 m wide and 18 m long, and it weighs 1.96 MN. Its center of gravity is located 30 cm above the water surface. Determine the restoring couple if Δz is 30 cm.

Computer Problems

- 2.97** Figure P2.97 shows a tank with two chambers. The oil level in the tank can vary, and when oil fills the tank, air in the smaller chamber escapes through a one-way valve. As oil drains out of the tank, a certain volume remains in the smaller chamber, which serves as a depth gauge. The oil will not drain out of the smaller chamber until the level falls below point A. Determine the air pressure in the topmost portion of the smaller chamber as a function of z . Let z vary from 1 to 10 ft in 1-ft increments. When $z = 10$ ft, the air pressure equals 14.7 psia. Produce a chart and/or a graph of air pressure versus depth z .

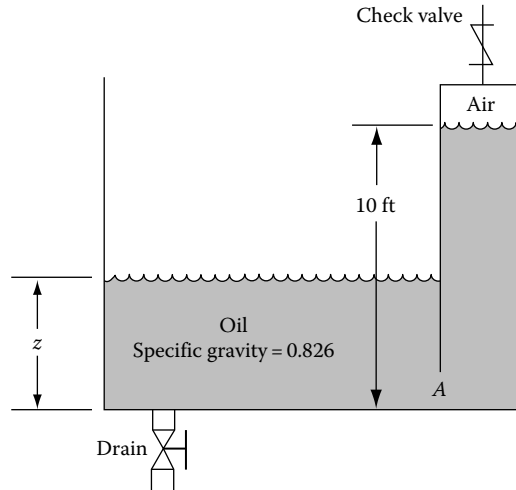


FIGURE P2.97

2.98 Figure P2.98 shows a tank with a curved gate at the bottom. The gate extends 24 cm into the page. Derive an equation for the horizontal force acting on the gate in terms of the depth. Allow the depth from tank bottom to vary from 10 to 20 cm in 1-cm increments. Produce a chart and/or a graph of horizontal force versus depth z .

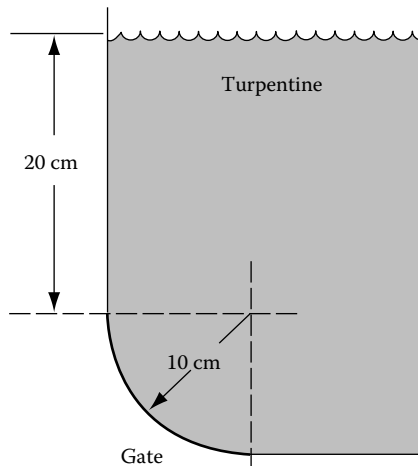


FIGURE P2.98

- 2.99** Figure P2.98 shows a tank with a curved gate at the bottom. The gate extends 24 cm into the page. Derive an equation for location z_r of the horizontal force acting on the gate in terms of the depth. Allow the depth from tank bottom to vary from 10 to 20 cm in 1-cm increments. Produce a chart and/or a graph of the location z_r versus depth z .
- 2.100** Figure P2.98 shows a tank with a curved gate at the bottom. The gate extends 24 cm into the page. Derive an equation for the vertical force acting on the gate in terms of the depth. Allow the depth from tank bottom to vary from 10 to 20 cm in 1-cm increments. Produce a chart and/or a graph of vertical force versus depth z .
- 2.101** Figure P2.98 shows a tank with a curved gate at the bottom. The gate extends 24 cm into the page. Derive an equation for location of the vertical force acting on the gate in terms of the depth. Allow the depth from tank bottom to vary from 10 to 20 cm in 1-cm increments. Produce a chart and/or a graph of the location of the vertical force versus depth z .

Design Problems**2.102 A Method for Verifying the Hydrostatic Equation**

The hydrostatic equation says that pressure varies linearly with increasing depth for static fluids:

$$p = \rho gh$$

This result stems from our mathematical description of how fluids behave. It is always appropriate, however, to experimentally verify mathematical results. Consider a fluid in contact with a vertical gate as shown in Figure P2.102. It is desired to design an apparatus similar to the one in the figure with provision for measuring pressure at a number of points along the gate.

- Design a tank to be used for the experiment. Explain how the dimensions selected were determined.
- Determine the number of places where pressure is to be measured.
- Determine how the pressure is to be measured at the selected points. All pressures should be displayed simultaneously.
- Justify your design.

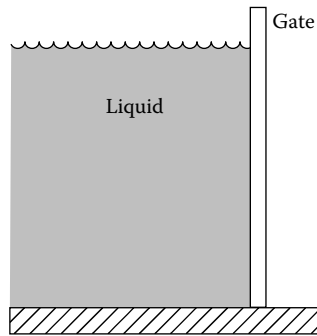


FIGURE P2.102

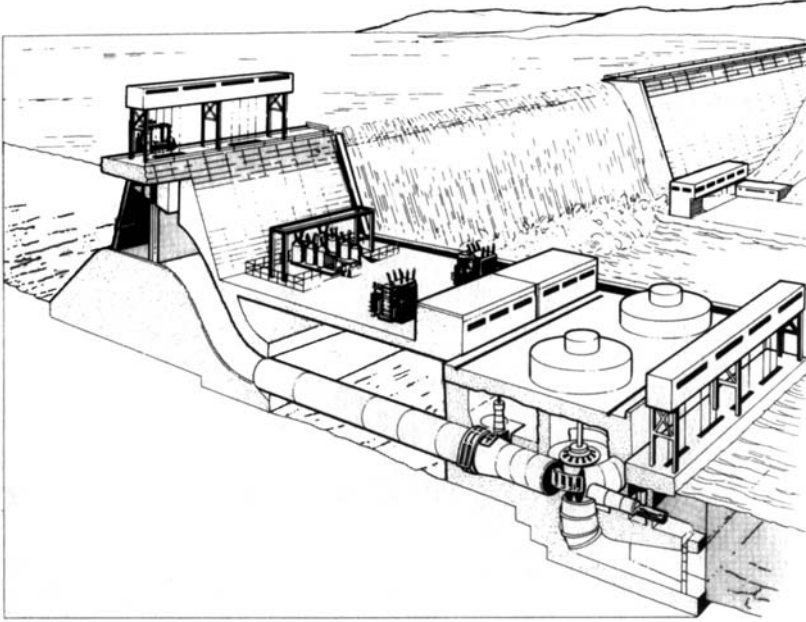
2.103 Measuring Density of an Oil Finish

In a company that markets linseed-oil finishes, control of product quality is essential. The oil finish is a liquid that contains linseed oil mixed with several chemicals. It has been determined that if the density of the liquid is in the range 950–1000 kg/m³, then the product is acceptable. The oil finish is transported in a pipeline. It has been suggested that a sample of the liquid be withdrawn from this line and the liquid density be measured by using the concept of buoyant force.

- Design a method, using the concept of buoyant force, to measure density; that is, by measuring the weight of a submerged object, determine if the oil sample is within acceptable limits. Select object, container, scale, and so on. Give reasons for the decisions made.
- Determine how much of the liquid is required to make a measurement of density.
- Show a schematic of the entire process, from obtaining a liquid sample to returning the sample to a holding tank.

This page intentionally left blank

3 Basic Equations of Fluid Mechanics



The purposes of this chapter are to discuss the behavior of fluids while they are flowing, to present a unified mathematical approach to solving fluid flow problems, and to derive the basic equations of fluid mechanics. The continuity, momentum, and energy equations are derived for a general case. The Bernoulli equation is developed from the momentum and energy equations.

Before we begin a discussion of the equations, it is important to examine types of flows and how they can be characterized. **Closed-conduit flows** are completely enclosed by restraining solid surfaces; examples are flow through a pipe and flow between parallel plates where there is no free surface. **Open-channel flows** have one surface exposed to atmospheric pressure; examples are flow in a river and flow in a spillway. In **unbounded flows**, the fluid is not in contact with any solid surface; examples are the jet that issues from a household faucet and the jet from a can of spray paint.

3.1 KINEMATICS OF FLOW

In flow situations, solution of a problem often requires determination of a velocity. As we will see, however, velocity varies in the flow field. Moreover, the flow can be classified according to how the velocity varies. If the parameters of both the fluid and the flow are constant at any cross section normal to the flow, or if they are represented by average values over the cross section, the flow is

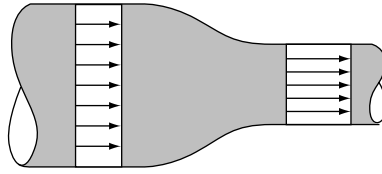


FIGURE 3.1 One-dimensional flow where velocity and pressure are uniform at any cross section.

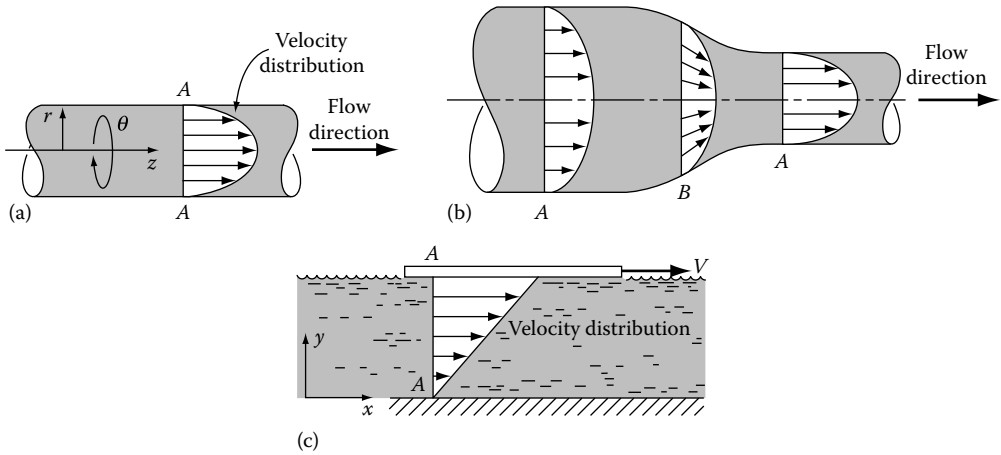


FIGURE 3.2 Two-dimensional flow.

said to be **one-dimensional**. Velocity distributions for one-dimensional flow are illustrated in Figure 3.1. Although flow velocity may change from point to point, it is constant at each location.

A flow is said to be **two-dimensional** if the fluid or the flow parameters have gradients in two directions. In Figure 3.2a—flow in a pipe—the velocity at any cross section is parabolic. The velocity is thus a function of the radial coordinate; a gradient exists. In addition, a pressure gradient exists in the axial direction that maintains the flow. That is, a pressure difference from inlet to outlet is imposed on the fluid that causes flow to occur. The flow is one-directional, but because we have both a velocity and a pressure gradient, it is two-dimensional. Another example of two-dimensional flow is given in Figure 3.2b. At the constant-area sections, the velocity is a function of one variable. At the convergent section, velocity is a function of two space variables. In addition, a pressure gradient exists that maintains the flow. Figure 3.2c gives another example of a one-directional, two-dimensional flow; gradients exist in two dimensions.

It is possible to assume one-dimensional flow in many cases in which the flow is two-dimensional to simplify the calculations required to obtain a solution. An average constant velocity, for example, could be used in place of a parabolic profile, although the parabolic profile gives a better description of the flow of real fluids because velocity at a boundary must be zero relative to the surface (except in certain special cases such as rarefied gas flows).

A flow is said to be **three-dimensional** when the fluid velocity or flow parameters vary with respect to all three space variables. Gradients thus exist in three directions.

Flow is said to be **steady** when conditions do not vary with time or when fluctuating variations are small with respect to mean flow values, and the mean flow values do not vary with time. A constant flow of water in a pipe is steady because the mean liquid conditions (such as velocity and pressure) at one location do not change with time. If flow is not steady, it is called **unsteady**; mean flow conditions do change with time. An example would be the flow of water through a pipe during

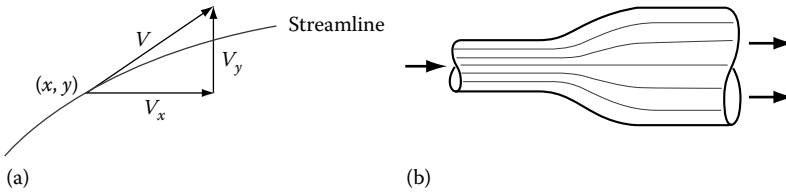


FIGURE 3.3 (a) Velocity vector at a point on a streamline. (b) Streamlines in a diverging duct.

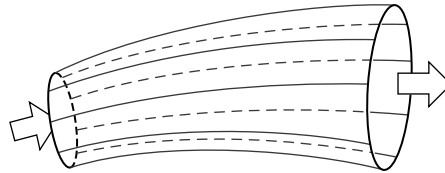


FIGURE 3.4 A streamtube formed by a bundle of streamlines.

the closing or opening of a valve. Emptying a sink creates an unsteady flow. In some unsteady flows, it may be permissible or even necessary to assume that steady flow exists to obtain a solution. The flow is then assumed to be **quasi-steady**.

Consider a $\frac{1}{4}$ -in.-diameter tube used to siphon water from a tank 4 ft in diameter. The flow is unsteady; as the water level in the tank decreases, the velocity of the water in the tube decreases. Because the change in tank level is comparatively slow, however, the time dependence is not strong. Consequently, equations developed for steady flow could be applied to this unsteady problem at selected instants of time. An inaccuracy is involved in this procedure, however, and the question ultimately reduces to whether or not the magnitude of the error is acceptable. The final test of this approximation (or any mathematical model) is how well it describes the physical phenomena in question.

Velocity at a point has magnitude and direction. Velocity at a point is thus a vector quantity. It is often helpful to sketch the direction of velocity at each point in the flow field by using **streamlines**. Streamlines are tangent to the velocity vector throughout the flow field. The magnitude of the velocity at every point in the cross section is not specified—only direction. Furthermore, there is no flow across a streamline. Figure 3.3a shows a single streamline, and Figure 3.3b illustrates streamlines of flow in a diverging duct.

A passageway for the fluid made up of a “bundle” of streamlines is called a **streamtube** (Figure 3.4). It is referred to as a passageway because its wall or boundary is made up of streamlines across which there is no flow. A pipe is an example of a streamtube.

Streaklines are yet another aid in visualizing flow direction. A **streakline** is defined as the locus of all fluid particles that have passed through a point. If we injected dye into the flow of a fluid at a single point, the dye would follow the path of the fluid particles passing through the point. A photograph of the flow pattern would then show a streak of dye: a streakline. If the flow varies with time, successive photographs show different streaklines. For steady flow, however, the flow does not vary with time; streaklines and streamlines are coincident. With these definitions and concepts of flow behavior, we can now proceed with the development of the equations of fluid mechanics.

3.2 CONTROL VOLUME APPROACH

As we saw in the last section, there are many types of flow. We now address the question of how to determine the velocity in the flow field. There are two possible approaches: the *Lagrangian approach* and the *Eulerian approach*.

The **Lagrangian approach** is used in solid mechanics and involves describing the motion of a particle by position as a function of time. This approach might be used in describing the motion of an object falling under the action of gravity: $s = \frac{1}{2}gt^2$. At any time, distance from the body's original position is known. This approach is difficult to use in fluid mechanics, however, because a fluid is a continuous medium—a single fluid volume changes shape, and different particles within the fluid volume are traveling at different velocities. In other words, because of the nature of fluids, the Lagrangian approach is generally not a desirable method for analysis. There are some problems in fluid mechanics, however, where this approach can be used.

The **Eulerian** (or control volume) **approach** is preferred in fluid mechanics. In this method, we choose a region in the flow field for study. As an example, consider flow draining from a sink, as illustrated in Figure 3.5. A **control volume** is chosen about the region of study and is bounded by the dashed line called the **control surface**. Everything outside is called the **surroundings**. We can choose the control volume or shape of the control surface as necessary for convenience in solving the problem. In general, the shape of the control volume is selected such that fluid and flow properties can be evaluated at locations where mass crosses the control surface—or, if no mass enters or exits, where energy crosses the control surface. Furthermore, the control surface can move or change shape with time (as in Figure 3.5). The control volume is to fluids as the free-body diagram is to solids. The Eulerian approach lends itself nicely to the solution of fluid mechanics problems.

Our objective is to develop equations of fluid dynamics that, in effect, are conservation equations: the continuity equation (conservation of mass), the momentum equation (conservation of linear momentum), and the energy equation (conservation of energy). Each will be developed from a general conservation equation.

Let us define N as a flow quantity (mass, momentum, or energy) associated with a fluid volume or system of particles. Let n represent the flow quantity per unit mass. Thus,

$$N = \iiint n\rho dV \quad (3.1)$$

Consider a system of particles at two different times: $\mathcal{V}_1$ at t_1 and $\mathcal{V}_2$ at t_2 . Referring to Figure 3.6, we see that $\mathcal{V}_1$ is bounded by the solid line and $\mathcal{V}_2$ is bounded by the double line. Note that $\mathcal{V}_1$ consists of $\mathcal{V}_A$ and $\mathcal{V}_B$; $\mathcal{V}_2$ consists of $\mathcal{V}_B$ and $\mathcal{V}_C$. The control volume is bounded by the dashed line. The amount of flow quantity N contained in $\mathcal{V}_1$ is the amount in $\mathcal{V}_A$ and the amount in $\mathcal{V}_B$ at t_1 which is $N_{A_1} + N_{B_1}$. The amount of flow quantity contained in $\mathcal{V}_2$ is the amount in $\mathcal{V}_B$ and $\mathcal{V}_C$ at t_2 , which is $N_{B_2} + N_{C_2}$. During the time interval, the change in N is, therefore,

$$\begin{aligned} \Delta N &= (N_{B_2} + N_{C_2}) - (N_{A_1} + N_{B_1}) \\ &= N_{B_2} - N_{B_1} + N_{C_2} - N_{A_1} \end{aligned}$$

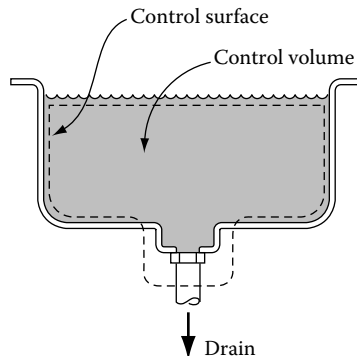


FIGURE 3.5 A control volume about the liquid in a sink.

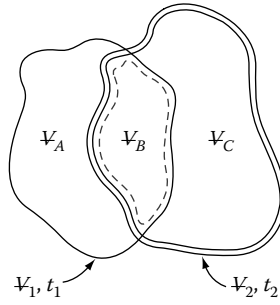


FIGURE 3.6 A fluid volume at two different times.

On a per-unit-time basis with $t_2 - t_1 = \Delta t$, we have

$$\frac{\Delta N}{\Delta t} = \frac{N_{B_2} - N_{B_1}}{\Delta t} + \frac{N_{C_2} - N_{A_1}}{\Delta t} \quad (3.2)$$

We now take the limit as Δt approaches zero to obtain an instantaneous time rate of change of flow quantity N :

$$\lim_{\Delta t \rightarrow 0} \frac{\Delta N}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{N_{B_2} - N_{B_1}}{\Delta t} + \lim_{\Delta t \rightarrow 0} \frac{N_{C_2} - N_{A_1}}{\Delta t} \quad (3.3)$$

where:

$$\lim_{\Delta t \rightarrow 0} \frac{\Delta N}{\Delta t} = \frac{dN}{dt} \Big|_{\text{system}} = \begin{cases} \text{instantaneous rate of} \\ \text{change of flow} \\ \text{quantity } N \end{cases}$$

$$\lim_{\Delta t \rightarrow 0} \frac{N_{B_2} - N_{B_1}}{\Delta t} = \frac{\partial N}{\partial t} \Big|_{\text{control volume}} = \begin{cases} \text{rate of accumulation (or} \\ \text{storage) of flow quantity} \\ N \text{ in control volume} \end{cases}$$

$$\lim_{\Delta t \rightarrow 0} \frac{N_{C_2} - N_{A_1}}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\delta N}{\Delta t} = \begin{cases} \text{net rate out (out minus in)} \\ \text{of flow quantity } N \\ \text{from control volume} \end{cases}$$

To obtain a specific limiting expression for this last term, consider a differential area dA through which fluid particles flow (Figure 3.7). The fluid velocity at dA is $\tilde{V}$, which has components normal

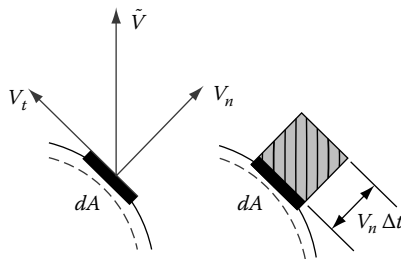


FIGURE 3.7 Flow through a differential area dA .

and tangential to dA : V_n and V_t . The tangential velocity carries no fluid out of the control volume with it; all fluid leaving dA is in the V_n direction. During the time interval Δt , the mass of fluid crossing dA is

$$dm = \rho dV$$

The differential volume of fluid dV is the product of cross-sectional area and height:

$$dV = (V_n \Delta t) dA$$

so that

$$dm = \rho(V_n \Delta t) dA$$

The amount of the quantity N being taken across the area dA is

$$\delta N = n dm$$

or

$$\delta N = n \rho V_n \Delta t dA$$

Dividing by Δt gives

$$\frac{\delta N}{\Delta t} = n \rho V_n dA$$

and in the limit

$$\lim_{\Delta t \rightarrow 0} \frac{\delta N}{\Delta t} = \iint_{\substack{\text{Control} \\ \text{Surface}}} n \rho V_n dA$$

By substitution into Equation 3.3, we have the **general conservation equation**:

$$\underbrace{\frac{dN}{dt}}_{\text{total particles}} \bigg|_S = \underbrace{\frac{\partial N}{\partial t}}_{\text{amount stored}} \bigg|_{\text{CV}} + \underbrace{\iint_{\text{CS}} n \rho V_n dA}_{\text{net rate out (out minus in)}} \quad (3.4)$$

where: S = system
 CV = control volume
 CS = control surface

Equation 3.4 gives a relationship between the various quantities associated with a system of particles. In words, Equation 3.4 says

$$\left(\begin{array}{c} \text{instantaneous time} \\ \text{rate of change in } N \\ \text{for a system of particles} \end{array} \right) = \left(\begin{array}{c} \text{instantaneous time} \\ \text{rate of accumulation of } N \\ \text{within the control volume} \end{array} \right) + \left(\begin{array}{c} \text{amount of } N \text{ leaving} \\ \text{the control volume minus} \\ \text{the amount of } N \text{ entering} \end{array} \right)$$

3.3 CONTINUITY EQUATION

The continuity equation is a statement of conservation of mass. The flow quantity N becomes m , and $n = m/m = 1$. Equation 3.4 becomes

$$\left. \frac{dm}{dt} \right|_S = \left. \frac{\partial m}{\partial t} \right|_{CV} + \iint_{CS} \rho V_n dA$$

For a system of particles, mass is constant because it can be neither created nor destroyed. Thus

$$\left. \frac{\partial m}{\partial t} \right|_{CV} + \iint_{CS} \rho V_n dA = 0 \quad (3.5)$$

In other words, the mass entering the control volume equals mass stored plus mass leaving. For steady flow with no storage, the mass entering equals mass leaving. For steady flow, Equation 3.5 becomes

$$\iint_{CS} \rho V_n dA = 0 \quad (3.6)$$

For incompressible fluids (liquids), ρ is a constant, and we obtain the following for steady incompressible flow:

$$\iint_{CS} V_n dA = 0 \quad (3.7)$$

This equation states that the volume of fluid entering the control volume per unit time equals the amount leaving. Equation 3.7 also states that a velocity distribution normal to the control surface must be integrated over the cross-sectional area at exits and inlets to the control volume.

For many flow situations, however, a velocity distribution may not be known or derivable; in such cases, it is more convenient to use an average velocity at a cross section that is independent of area. (This assumes that we have one-dimensional flow or at least flow that can be treated as one-dimensional.) Thus, by definition,

$$\iint V_n dA = V \iint dA = VA$$

or

$$V = \frac{\iint V_n dA}{A} \quad (3.8)$$

in which V is the average velocity. The product $AV = Q$ is known as the **volume flow rate** with dimensions of L^3/T (m^3/s or ft^3/s). Also used in fluid mechanics is the term $\dot{m}$, defined as the **mass flow rate**, where $\dot{m} = \rho Q = \rho AV$. The mass flow rate has dimensions of M/T (kg/s or $slug/s$).

To illustrate the concept of average velocity, again consider flow in a pipe (Figure 3.2a). Take the velocity distribution to be

$$V_z = 5 \left(1 - \frac{r^2}{R^2} \right) \text{ft/s}$$

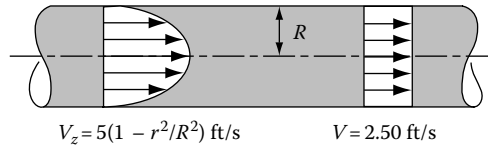


FIGURE 3.8 Definition of average velocity.

where R is the pipe radius. This equation gives the velocity at any radial location within the pipe, and is defined as the instantaneous velocity. At a control surface normal to the axial direction, $V_z = V_n$ and the average velocity is

$$\begin{aligned} V &= \frac{\int_0^{2\pi} \int_0^R 5(1 - r^2/R^2)r \, dr \, d\theta}{\pi R^2} = \frac{\int_0^R 5(1 - r^2/R^2)2\pi r \, dr}{\pi R^2} \\ &= \frac{10\pi(r^2/2 - r^4/4R^2)|_0^R}{\pi R^2} = 10\left(\frac{1}{2} - \frac{1}{4}\right) \\ &= 2.5 \text{ ft/s} \end{aligned}$$

where we have used $dA = r \, dr \, d\theta$ for cylindrical coordinates in the integral.

Physically, this result means we can replace the velocity distribution with an average velocity such that the volume flow rate remains unchanged (see Figure 3.8). In various practical problems, volume flow rate and area are known but velocity distribution is not. In many cases, an average velocity is all that can be determined.

By using average velocity, the continuity equation becomes

$$\sum_{\text{in}} \rho AV = \sum_{\text{out}} \rho AV + \left. \frac{\partial m}{\partial t} \right|_{\text{CV}} \quad (3.9)$$

For steady flow with no storage of mass,

$$\sum_{\text{in}} \rho AV = \sum_{\text{out}} \rho AV \quad (3.10)$$

Example 3.1

A pipeline with a 30 cm inside diameter is carrying liquid at a flow rate of $0.025 \text{ m}^3/\text{s}$. A reducer is placed in the line, and the outlet diameter is 15 cm. Determine the velocity at the beginning and end of the reducer.

SOLUTION

Select the control volume as shown in Figure 3.9. Flow crosses the control surface at sections 1 and 2, where the streamlines are all parallel and flow properties are all known or can be determined. There is no mass stored. Applying Equation 3.6, we get

$$\iint_{\text{CS}} \rho V_n \, dA = 0 \quad (\text{mass flow out} - \text{mass flow in}) = 0$$

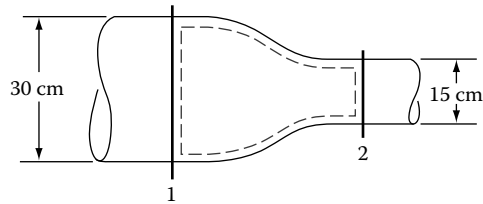


FIGURE 3.9 Sketch for Example 3.1.

or

$$\iint_2 \rho V_n dA - \iint_1 \rho V_n dA = 0$$

With a liquid flowing, $\rho_1 = \rho_2$. Using the concept of average velocity, we have

$$A_2 V_2 = A_1 V_1 = Q \text{ (a constant)}$$

Now Q is given as $0.025 \text{ m}^3/\text{s}$. So at section 1,

$$V_1 = \frac{Q}{A_1} = \frac{0.025 \text{ m}^3/\text{s}}{(\pi/4)(0.30)^2 \text{ m}^2} = 0.35 \text{ m/s}$$

At section 2,

$$V_2 = \frac{Q}{A_2} = \frac{0.025}{(\pi/4)(0.15)^2} = 1.4 \text{ m/s}$$

Although diameter was halved, the velocity changed by a factor of 4.

Example 3.2

A 4-ft-diameter tank containing solvent (acetone) is sketched in Figure 3.10. The solvent is drained from the bottom of the tank by a pump so that the velocity of flow in the outlet pipe is constant at 3 ft/s. If the outlet pipe has an inside diameter of 1 in., determine the time required to drain the tank from a depth of 3 ft to a depth of 6 in.

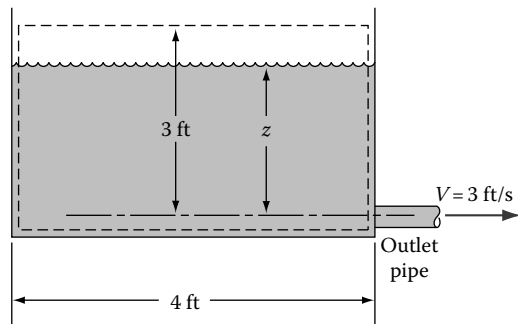


FIGURE 3.10 Circular tank of solvent being drained.

SOLUTION

We choose the control volume to be the volume of liquid in the tank at any time. The flow is unsteady; the continuity equation applies:

$$\left. \frac{\partial m}{\partial t} \right|_{CV} + \iint_{CS} \rho V_n dA = 0$$

We now evaluate each term in the equation. The volume of fluid in the tank at any time is given by

$$V = \frac{\pi(4)^2}{4} z = 12.57z \text{ ft}^3$$

The density of acetone from Table A.5 is $0.787(1.94) \text{ slug/ft}^3$. The mass of acetone in the tank is

$$m = \rho V = 0.787(1.94)(12.57z) = 19.2z \text{ slugs}$$

The rate of change of mass in the tank then becomes

$$\frac{\partial m}{\partial t} = 19.2 \frac{\partial z}{\partial t} = 19.2 \frac{dz}{dt}$$

where the exact differential notation is used because depth z varies only with time t .

The second term in the continuity equation is evaluated for mass leaving and mass entering the control volume:

$$\iint_{CS} \rho V_n dA = \iint_{\text{out}} \rho V_n dA - \iint_{\text{in}} \rho V_n dA$$

In this case, density is constant and average velocity is given. With no mass entering, we therefore have

$$\iint_{CS} \rho V_n dA = \rho AV|_{\text{out}} - 0 = 0.787(1.94) \frac{\pi(1/12)^2}{4} (3) \quad (3)$$

or

$$\iint_{CS} \rho V_n dA = 0.025$$

Substituting into the continuity equation yields

$$19.2 \frac{dz}{dt} + 0.025 = 0$$

Rearranging and separating variables, we get

$$dz = -0.00130 dt$$

When the depth in the tank is 3 ft, the corresponding time is 0. When the depth is 0.5 ft, the corresponding time is t , which is the time we seek. Integrating between these limits gives

$$\int_3^{0.5} dz = -0.00130 \int_0^t dt$$

or

$$(0.5 - 3) = -0.00130(t - 0)$$

Solving for time, we obtain

$$t = \frac{2.5}{0.00130}$$

$$t = 1920 \text{ s} = 32 \text{ min} = 0.53 \text{ h}$$

Example 3.3

In most metalworking shops, plate steel is cut by means of an oxyacetylene torch. Oxygen for cutting is supplied via tanks 30 cm in diameter by 1.3 m tall. These tanks are charged to an internal pressure of 13 800 kPa gauge. A valve 12.5 mm in diameter is located at the top of the tank. If the tank valve is opened fully, oxygen escapes at 1.5 m/s. Assuming that this exit velocity is constant, determine the tank pressure after 60 s. Take the temperature in the tank to be unchanging and equal to 25°C.

SOLUTION

Select the control volume to include the entire tank contents and to cross just upstream of the valve perpendicular to the flow direction, as in Figure 3.11. Thus, flow leaves the control volume at the location where flow properties are known or can be determined.

The continuity equation is

$$\left. \frac{\partial m}{\partial t} \right|_{\text{CV}} + \iint_{\text{CS}} \rho V_n dA = 0$$

To evaluate the first term, we find the mass in the tank at any time to be $m = \rho V$. Assuming an ideal gas, $\rho = p/RT$. For a constant-temperature process,

$$\left. \frac{\partial m}{\partial t} \right|_{\text{CV}} = \frac{V}{RT} \frac{dp}{dt}$$

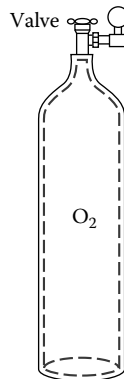


FIGURE 3.11 Sketch for Example 3.3.

Take the tank to be a right circular cylinder; thus,

$$V = \text{area} \times \text{height} = \frac{\pi(0.3)^2(1.3)}{4} = 0.0919 \text{ m}^3$$

From Table A.6 for oxygen, $R = 260 \text{ J}/(\text{kg} \cdot \text{K})$ and $T = 25 + 273 = 298 \text{ K}$. We now have

$$\left. \frac{\partial m}{\partial t} \right|_{\text{CV}} = \frac{0.0919}{(260)(298)} \frac{dp}{dt} = 1.19 \times 10^{-6} \frac{dp}{dt}$$

The second term of the continuity equation, evaluated where mass crosses the control surface, becomes

$$\begin{aligned} \iint_{\text{CS}} \rho V_n dA &= \rho A V|_{\text{outlet}} = \frac{p}{RT} \frac{\pi D^2}{4} V \\ &= \frac{p}{260(298)} \frac{\pi(0.0125)^2}{4} (1.5) = 2.37 \times 10^{-9} p \end{aligned}$$

By substitution, we have

$$1.19 \times 10^{-6} \frac{dp}{dt} = -2.37 \times 10^{-9} p$$

After rearranging, we get

$$\int_{13800}^p \frac{dp}{p} = \int_0^{60} -2.0 \times 10^{-3} dt$$

Upon integration, we obtain

$$\ln \frac{p}{13800} = 2.0 \times 10^{-3} (60) = -0.12$$

or

$$p = 13800 e^{-0.12}$$

Solving, we get

$$p = 12200 \text{ kPa}$$

3.4 MOMENTUM EQUATION

As we have seen, the continuity equation is a conservation of mass equation with which we can account for mass transfers across boundaries and mass storage within control volumes. Next, we will derive a conservation of momentum equation and use the same technique in applying it. Because there are expressions for linear momentum and for angular momentum, we will derive equations for each.

3.4.1 LINEAR MOMENTUM EQUATION

We will apply the general conservation equation: Let N be momentum mV , and n , which is N per unit mass, becomes V . By substitution into Equation 3.4, the general conservation equation, we obtain

$$\left. \frac{d}{dt}(mV) \right|_S = \left. \frac{\partial}{\partial t}(mV) \right|_{CV} + \iint_{CS} V \rho V_n dA \quad (3.11)$$

In addition, we have from Newton's law for the system

$$\sum F_x = \frac{d}{dt}(mV)_x$$

$$\sum F_y = \frac{d}{dt}(mV)_y$$

$$\sum F_z = \frac{d}{dt}(mV)_z$$

Combining these equations with Equation 3.11, we obtain a conservation of linear momentum equation for the three principal directions:

$$\sum F_x = \left. \frac{d}{dt}(mV)_x \right|_S = \left. \frac{\partial}{\partial t}(mV)_x \right|_{CV} + \iint_{CS} V_x \rho V_n dA \quad (3.12a)$$

$$\sum F_y = \left. \frac{d}{dt}(mV)_y \right|_S = \left. \frac{\partial}{\partial t}(mV)_y \right|_{CV} + \iint_{CS} V_y \rho V_n dA \quad (3.12b)$$

$$\sum F_z = \left. \frac{d}{dt}(mV)_z \right|_S = \left. \frac{\partial}{\partial t}(mV)_z \right|_{CV} + \iint_{CS} V_z \rho V_n dA \quad (3.12c)$$

Two velocities appear in the integrands of the last terms on the right-hand sides of the preceding equations. One of the velocities refers to a principal flow direction; for example, V_x . The other velocity, V_n , is normal to the control surface where mass crosses the boundary. These two velocities are not always equal. Because force and velocity have magnitude and direction, they are vectors. Thus, Equation 3.12 can be written in vector form as

$$\sum \mathbf{F} = \left. \frac{d}{dt}(m\mathbf{V}) \right|_S = \left. \frac{\partial}{\partial t}(m\mathbf{V}) \right|_{CV} + \iint_{CS} \mathbf{V}(\rho \mathbf{V} \cdot d\mathbf{A}) \quad (3.13)$$

This equation is a conservation of linear momentum equation. As required by Newton's law, the term $\sum \mathbf{F}$ represents all forces applied externally to the control volume. These include forces due to gravity, electric and magnetic fields, surface tension effects, pressure forces, and viscous forces (friction). The first term on the right-hand side represents the rate of storage of linear momentum in the control volume. The last term is a net rate out (out minus in) of linear momentum from the control volume. For steady one-dimensional flow, Equation 3.13 becomes, for any direction i ,

$$\sum F_i = \iint_{CS} V_i \rho V_n dA$$

For one fluid stream entering and one leaving the control volume, we have the following for one-dimensional flow:

$$\begin{aligned}\sum F_i &= V_{2i}\rho_2 A_2 V_2 - V_{1i}\rho_1 A_1 V_1 \\ &= V_i \rho A V|_{\text{out}} - V_i \rho A V|_{\text{in}}\end{aligned}$$

or

$$\begin{aligned}\sum F_i &= \dot{m}(V_{2i} - V_{1i}) \\ &= \dot{m}(V_{\text{out}} - V_{\text{in}})_i \text{ direction}\end{aligned}\tag{3.14}$$

The momentum equation can be used to set up a general equation for frictional effects existing within a pipe, for a certain type of phenomenon in open channel flow, and for other kinds of applications-oriented problems. Because such applications will appear later in the text, we devote our study of the linear momentum equation here to some general one-dimensional problems for which Equation 3.14 applies.

Example 3.4

A gardener is squirting the side of a house with a hose. The nozzle produces a $\frac{1}{2}$ -in.-diameter jet having a velocity of 5 ft/s. Determine the force exerted by the jet on the wall when the angle between the jet and the house is 90° .

SOLUTION

A schematic of the jet in the vicinity of the wall is shown in Figure 3.12, along with the control volume selected. Also shown is the restraining force, F_z , which acts in the negative z -direction. For a smooth wall, the jet is divided upon impact into a thin sheet that travels in all directions, similar to a faucet jet striking a flat-bottomed sink. Flow crosses the control volume boundary at locations where liquid and flow properties can be determined. We have the continuity and momentum equations at our disposal. Recall that the continuity equation involves only the magnitude of each velocity, whereas the velocities in the momentum equation are dependent on the direction selected. Applying the one-dimensional continuity equation, we get

$$\rho_1 A_1 V_1 = \rho_2 A_2 V_2$$

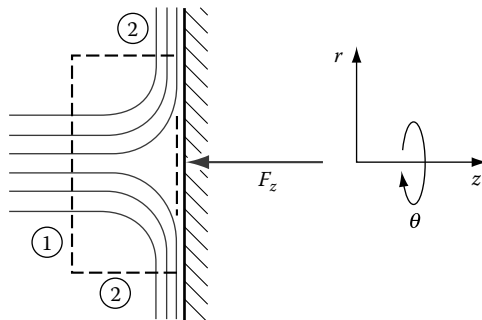


FIGURE 3.12 Sketch of the axisymmetric jet of Example 3.4.

Because the fluid is a liquid (incompressible), $\rho_1 = \rho_2$, and so

$$A_1 V_1 = A_2 V_2$$

We have not yet discussed frictional effects. However, in problems of this type, the effect of friction is to reduce the velocity of the liquid as it flows through the control volume. Assuming frictionless flow, we write

$$V_1 = V_2$$

Combining with the previous equation, we further conclude that $A_1 = A_2$.

The control volume has the external force acting directly on it. In this case, because of symmetry, we have forces only in the z -direction. We therefore write

$$\sum F_z = \dot{m}(V_{\text{out}} - V_{\text{in}})_z$$

The sum of the external forces acting on the control volume is the restraining force F_z acting in the negative z -direction, which equals the force exerted by the jet. Note that the velocity of flow out of the control volume in the z -direction is zero; the flow entering in the z -direction is denoted as V_1 . By substitution,

$$\begin{aligned} \sum F_z &= \rho_1 A_1 V_1 (0 - V_1) = -\rho_1 A_1 V_1^2 \\ -F_z &= -(1.94 \text{ slug/ft}^3) \frac{\pi \left(\frac{1}{2}\right)^2 \text{ft}^2 (5 \text{ ft/s})^2}{(12)^2} \end{aligned}$$

Solving, we get

$$F_z = 0.066 \text{ lbf}$$

Note that the control volume was set up so that fluid crosses the control surface at a right angle.

Example 3.5

A vane in the shape of a flat plate is struck by a free jet. The vane has a velocity of V_v and is moving in the opposite direction of the jet (Figure 3.13a). Develop an expression for the force exerted on the vane.

SOLUTION

Select a control volume as shown in the figure. Note that the control volume is moving with the vane and that the flow properties can be evaluated where fluid crosses the control surface. For convenience, let us impose a velocity of V_v acting to the right of each velocity currently in the

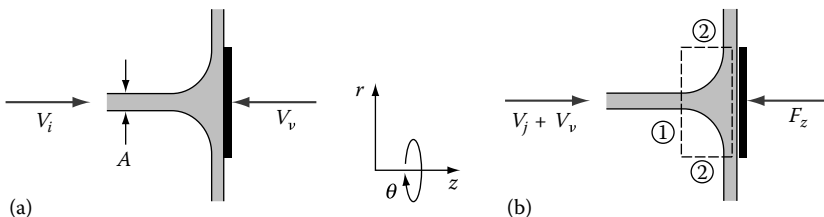


FIGURE 3.13 Sketch of the axisymmetric jet of Example 3.5.

figure. This arrangement will render the vane and the control volume motionless. The jet velocity now becomes $V_j + V_v$. The continuity equation for steady, one-dimensional flow of an incompressible fluid becomes

$$A_1 V_1 = A_2 V_2$$

where $V_1 = V_j + V_v$ and $V_1 = V_2$ for frictionless flow. The momentum equation for the z -direction is

$$\sum F_z = \dot{m}(V_{\text{out}} - V_{\text{in}})_z$$

The only external force acting on the control volume is F_z , the restraining force required to hold the vane stationary, which equals the force exerted by the jet. Thus,

$$-F_z = \dot{m}(0 - V_1) = \rho A(V_j + V_v)[0 - (V_j + V_v)]$$

$$F_z = \rho A(V_j + V_v)^2$$

If the vane were moving to the right instead, we would obtain

$$F_z = \rho A(V_j - V_v)^2$$

In this case, the force is zero when the vane is traveling at the jet velocity.

Example 3.6

Figure 3.14 shows a jet of water striking a curved vane, which turns the jet through an angle of 120° . The vane is moving to the right at a velocity of 1 m/s. The jet velocity is 2.5 m/s and its cross-sectional area is 0.03 m^2 . Assuming no frictional losses between the jet and the surface, determine the reaction forces F_x and F_y .

SOLUTION

Figure 3.14a shows the jet impacting the moving vane. Figure 3.14b shows the vane rendered stationary. Also shown are the reaction forces and the x - y axes. The control volume we select is moving with the vane itself and is set up so that fluid crosses the control surface at right angles. We use the relative velocity $V_j - V_v$, which is that of the jet with respect to the vane. For water, Table A.5 shows $\rho = 1\,000 \text{ kg/m}^3$. The one-dimensional steady-flow continuity equation for incompressible flow is

$$A_1 V_1 = A_2 V_2$$

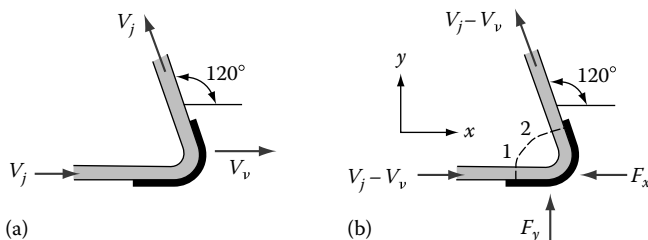


FIGURE 3.14 A liquid jet striking a moving vane.

where $V_1 = V_2 = V_j - V_v$ for frictionless flow. The momentum equation applied in the x -direction is

$$\begin{aligned} -F_x &= \dot{m}(V_{\text{out rel}} - V_{\text{in rel}})_x \\ &= \rho A(V_j - V_v)[-(V_j - V_v) \cos 60^\circ - (V_j - V_v)] \\ F_x &= \rho A(V_j - V_v)^2 (\cos 60^\circ + 1) \end{aligned}$$

Substituting,

$$F_x = 1\,000(0.03)(2.5 - 1)^2(\cos 60^\circ + 1)$$

Solving,

$$F_x = 101.3 \text{ N}$$

Applying the momentum equation in the y -direction, we write

$$\begin{aligned} F_y &= \dot{m}(V_{\text{out rel}} - V_{\text{in rel}})_y \\ &= \rho A(V_j - V_v)[(V_j - V_v) \sin 60^\circ - 0] \\ F_y &= \rho A(V_j - V_v)^2 \sin 60^\circ \end{aligned}$$

Substituting and solving gives

$$F_y = 1\,000(0.03)(2.5 - 1)^2 \sin 60^\circ$$

$$F_y = 58.5 \text{ N}$$

3.4.2 ANGULAR MOMENTUM EQUATION

In some problems of fluid mechanics, it is necessary to be able to evaluate moments exerted by moving fluid volumes. This condition is especially true in the case of rotating machinery such as turbines and pumps. The equation that is applicable in these instances is known as the **angular momentum equation**. This equation is derivable by using the linear momentum equation.

Consider a control volume in the xy plane, as illustrated in Figure 3.15. It is located a distance r from the origin; and as fluid passes through the control volume, a force is exerted. The force can be resolved into two components—one normal and one tangential to r . The torque exerted by the force equals the product of force and moment arm. In differential form, we have

$$dT_0 = r dF_t$$

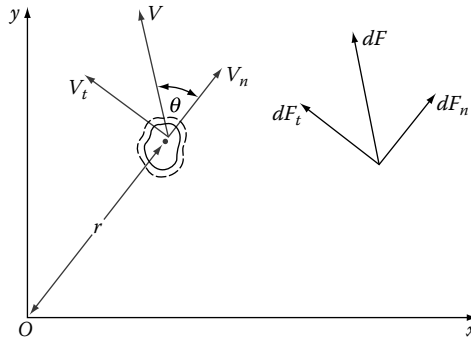


FIGURE 3.15 Definition sketch for derivation of the angular momentum equation.

where: dT_0 is the differential torque exerted about the origin
 dF_t is the tangential component of the differential force perpendicular to r

Because the force is regarded as being caused by fluid motion through the control volume, we can use the linear momentum equation (Equation 3.12) applied in the tangential direction to obtain the following:

$$dF_t = \frac{\partial}{\partial t}(V_t dm) + (V_t \rho V_n dA)$$

The differential torque is then

$$dT_0 = r \frac{\partial}{\partial t}(V_t dm) + r(V_t \rho V_n dA)$$

By integrating this expression over all control volumes that contribute to the total torque, we get

$$T_0 = \frac{\partial}{\partial t} \iiint_{CV} rV_t dm + \iint_{CS} rV_t(\rho V_n dA) \quad (3.15)$$

The left-hand side represents the sum of all externally applied torques on the control volume. The first term on the right-hand side represents a storage of angular momentum in the control volume; the last term is the net rate out (out minus in) of angular momentum from the control volume.

As seen in Figure 3.15, $V \sin \theta = V_r$. Equation 3.15 thus becomes

$$T_0 = \frac{\partial}{\partial t} \iiint_{CV} rV \sin \theta dm + \iint_{CS} rV \sin \theta(\rho V_n dA) \quad (3.16)$$

Using vector notation, we define the cross product as

$$\mathbf{r} \times \mathbf{V} = rV \sin \theta$$

Equation 3.16 can thus be written in vector form as

$$T_0 = \frac{\partial}{\partial t} \iiint_{CV} (\mathbf{r} \times \mathbf{V}) dm + \iint_{CS} (\mathbf{r} \times \mathbf{V})(\rho \mathbf{V} \cdot d\mathbf{A}) \quad (3.17)$$

Although derived from two-dimensional considerations, Equation 3.17 is applicable to the three-dimensional case.

Example 3.7

Figure 3.16 shows a plan view of a two-nozzle lawn-sprinkler head. The sprinkler discharges water at a rate of 2 ft³/min and rotates at 1 rev/s. The length from pivot to nozzle exit is 12 in., and the nozzles produce jets that are $\frac{1}{4}$ in. in diameter. Determine the external resisting torque due to friction in the bearings. The angle between the radial direction and the nozzle-jet direction is 25°.

SOLUTION

Select a control volume as shown in Figure 3.16 (bounded by the dashed line). The flow properties are easily determined at locations where liquid crosses the control surface.

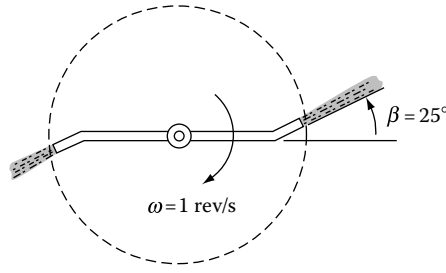


FIGURE 3.16 Plan view of a sprinkler head.

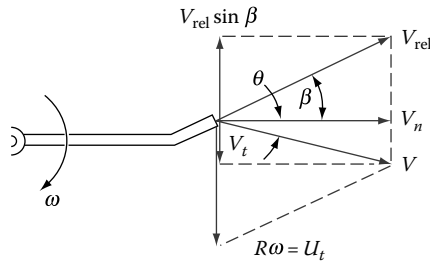


FIGURE 3.17 Velocity diagram for flow out of one sprinkler nozzle.

It is instructive to sketch a velocity diagram for flow at the exit (Figure 3.17). We now identify each of the velocities as follows:

V = absolute velocity leaving nozzle as seen by stationary observer

V_{rel} = relative velocity leaving as seen by the observer moving with nozzle

V_t = tangential velocity component of V

U_t = rotational tip speed of nozzle

$V_{\text{rel}} \sin \beta$ = tangential component of relative velocity

From Figure 3.17, it is apparent that

$$V_t + U_t = V_{\text{rel}} \sin \beta$$

or

$$V_t = V_{\text{rel}} \sin \beta - R\omega$$

The relative velocity is perpendicular to the nozzle exit. Therefore, for one nozzle, we have

$$Q|_1 = AV_{\text{rel}} = \frac{\pi D^2}{4} V_{\text{rel}}$$

or

$$V_{\text{rel}} = \frac{4Q}{\pi D^2}$$

where D is the nozzle exit diameter, and the volume flow rate is one-half of that given in the problem statement. The tangential velocity now becomes

$$V_t = \frac{4Q}{\pi D^2} \sin \beta - R\omega$$

In this case, there is no mass or angular momentum storage. Applying the angular momentum equation (Equation 3.15), we get the following for steady flow:

$$T_0 = \iint_{CS} r V_t (\rho V_n dA)$$

which is written for one nozzle. With the efflux at $r=R$ and no inflow in the tangential direction, the preceding equation becomes, for two nozzles:

$$T_0 = 2\rho R \iint_{CS} V_t (V_n dA)$$

Substituting and integrating yield

$$\begin{aligned} T_0 &= 2\rho R \iint \left(\frac{4Q}{\pi D^2} \sin \beta - R\omega \right) V_n dA \\ &= 2\rho QR \left(\frac{4Q}{\pi D^2} \sin \beta - R\omega \right) \end{aligned}$$

All quantities on the right-hand side were given in the problem statement:

$$\begin{aligned} Q|_{\text{nozzle}} &= 1 \text{ ft}^3/\text{min} = 0.0166 \text{ ft}^3/\text{s} \\ D &= \frac{1}{4} \text{ in.} = 0.0208 \text{ ft} \\ \beta &= 25^\circ \\ R &= 12 \text{ in.} = 1 \text{ ft} \\ \omega &= 1 \text{ rev/s} = 6.28 \text{ rad/s} \end{aligned}$$

We therefore obtain

$$T_0 = 2(1.94)(0.0166)(1) \left[\frac{4(0.0166)}{\pi(0.0208)^2} \sin 25 - 1(6.28) \right]$$

$$T_0 = 0.925 \text{ ft} \cdot \text{lbf CCW}$$

3.5 ENERGY EQUATION

In this section, we will develop an equation that expresses the conservation of energy. When energy crosses the boundary of a system, the energy in the system changes by an equal amount. So a decrease in the energy of a system equals the increase in energy of the surroundings and vice versa. Energy can cross a system boundary in the form of heat transfer (to or from the system), in the form of work (done by or on the system), or by mass entering or leaving. A process during which no heat is transferred to or from a system is known as an **adiabatic process**.

The law of conservation of energy states that for a system of particles,

$$E_2 - E_1 = \tilde{Q} - W'$$

or

$$dE = d\tilde{Q} - dW'$$

where: $E_2 - E_1$ is the change in energy experienced by the system
 $\tilde{Q}$ is the heat added to the system
 W' is work done by the system

The total energy is a property of the system and includes internal, kinetic, and potential energies:

$$E = U + KE + PE$$

On a per-unit-mass basis, we have

$$e = \frac{E}{m} = u + \frac{V^2}{2} + gz$$

Heat and work are not properties of the system, but they do represent energy transfers moving across the system boundaries in specific forms.

In applying the general conservation expression (Equation 3.4), $N = E$ and $n = e$. After substitution, we obtain

$$\left. \frac{dE}{dt} \right|_S = \left. \frac{\partial E}{\partial t} \right|_{CV} + \iint_{CS} e \rho V_n dA$$

which becomes

$$\left. \frac{dE}{dt} \right|_S = \frac{d\tilde{Q}}{dt} - \frac{dW'}{dt} = \left. \frac{\partial E}{\partial t} \right|_{CV} + \iint_{CS} e \rho V_n dA$$

or

$$\frac{d(\tilde{Q} - W')}{dt} = \left. \frac{\partial E}{\partial t} \right|_{CV} + \iint_{CS} \left(u + \frac{V^2}{2} + gz \right) \rho V_n dA \quad (3.18)$$

The term W' consists of all forms of work crossing the boundary—shaft work, electric and magnetic work, viscous shear work, and flow work. The last of these forms represents work done by the fluid system in pushing mass into or out of the control volume. Thus

$$\frac{dW'}{dt} = \frac{dW}{dt} + \frac{dW_f}{dt} \quad (3.19)$$

where dW_f/dt is flow work per unit time. To develop an expression for dW_f/dt , consider an element of mass dm leaving a control volume through an area dA , as shown in Figure 3.18. The fluid in the control volume must work against the external pressure p to move dm out. With work = force $\times$ distance, we have

$$\left. \frac{dW_f}{dt} \right|_{\text{out}} = p dA \left. \frac{dL}{dt} \right|_{\text{out}} = p V_n dA|_{\text{out}} = \frac{p}{\rho} \rho V_n dA|_{\text{out}}$$

Similarly, for an element of mass entering, work is being done on the system.

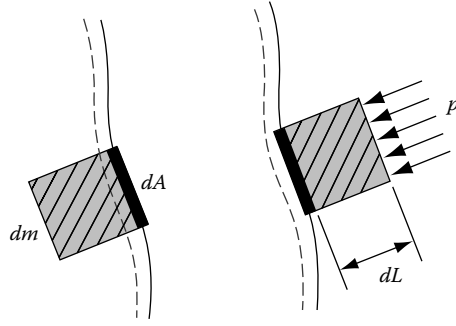


FIGURE 3.18 Sketch for the development of an expression for flow work W_f .

Therefore,

$$\left. \frac{dW_f}{dt} \right|_{\text{in}} = -p \, dA \left. \frac{dL}{dt} \right|_{\text{in}} = -\frac{p}{\rho} \rho V_n \, dA \Big|_{\text{in}}$$

Combining equations, we obtain the flow work as

$$\left. \frac{dW_f}{dt} \right|_S = \frac{p}{\rho} \rho V_n \, dA \Big|_{\text{out}} - \frac{p}{\rho} \rho V_n \, dA \Big|_{\text{in}}$$

which can be written as

$$\left. \frac{dW_f}{dt} \right|_S = \iint_{\text{CS}} \frac{p}{\rho} \rho V_n \, dA \quad (3.20)$$

Substitution of Equations 3.19 and 3.20 into Equation 3.18 gives

$$\frac{d(\tilde{Q} - W)}{dt} - \iint_{\text{CS}} \frac{p}{\rho} \rho V_n \, dA = \frac{\partial E}{\partial t} \Big|_{\text{CV}} + \iint_{\text{CS}} \left(u + \frac{V^2}{2} + gz \right) \rho V_n \, dA$$

Combining the integral terms gives

$$\left. \frac{d}{dt} (\tilde{Q} - W) \right|_S = \frac{\partial E}{\partial t} \Big|_{\text{CV}} + \iint_{\text{CS}} \left(u + \frac{p}{\rho} + \frac{V^2}{2} + gz \right) \rho V_n \, dA$$

Enthalpy is a property defined as $h = u + p/\rho$; the conservation of energy equation now becomes

$$\left. \frac{d}{dt} (\tilde{Q} - W) \right|_S = \frac{\partial E}{\partial t} \Big|_{\text{CV}} + \iint_{\text{CS}} \left(h + \frac{V^2}{2} + gz \right) \rho V_n \, dA \quad (3.21)$$

A special form of the energy equation results for the case of steady, one-dimensional flow:

$$\left. \frac{d}{dt} (\tilde{Q} - W) \right|_S = \left[\left(h + \frac{V^2}{2} + gz \right) \right]_{\text{out}} - \left[\left(h + \frac{V^2}{2} + gz \right) \right]_{\text{in}} \rho AV \quad (3.22)$$

For many incompressible flows, $\tilde{Q}$ is usually assumed to be zero, and changes in internal energy are frequently negligible. Equation 3.22 then reduces to

$$-\frac{dW}{dt} = \dot{m} \left[\left(\frac{p}{\rho} + \frac{V^2}{2} + gz \right) \Big|_{\text{out}} - \left(\frac{p}{\rho} + \frac{V^2}{2} + gz \right) \Big|_{\text{in}} \right] \quad (3.23)$$

For compressible flows, however, the change in internal energy is significant.

We will deal primarily with energy conversions between various forms of thermal and mechanical energies. We will not consider energy transfers in nuclear or chemical reactions; nor will we examine work done as a result of magnetic, capillary, or electric effects. Equation 3.18 is generally known as the first law of thermodynamics, which, as we noted earlier, is a statement of the conservation of energy. For greater detail, the reader is referred to any text on classic engineering thermodynamics.

Example 3.8

Using the generalized dimensions of mass (M), length (L), and time (T), examine the units of each term in Equation 3.23.

SOLUTION

$$\begin{aligned} \text{Power: } \frac{dW}{dt} &= \frac{F \cdot L}{T} = \frac{M \cdot L}{T^2} \frac{L}{T} = \frac{M \cdot L^2}{T^3} \\ \text{First term: } \dot{m} \left(\frac{p}{\rho} \right) &= \frac{M}{T} \frac{F}{L^2} \frac{L^3}{M} = \frac{L}{T} \frac{M \cdot L}{T^2} = \frac{M \cdot L^2}{T^3} \\ \text{Second term: } \dot{m} \left(\frac{V^2}{2} \right) &= \frac{M}{T} \frac{L^2}{T^2} = \frac{M \cdot L^2}{T^3} \\ \text{Third term: } \dot{m}(gz) &= \frac{M}{T} \frac{L}{T^2} L = \frac{M \cdot L^2}{T^3} \end{aligned}$$

In the English system, horsepower (hp) is a common unit for power, and the British thermal unit (BTU) is a common unit for heat transfer, internal energy, and enthalpy. In the SI system, the watt (W) is the unit for power, and the joule (J) is the unit for energy.

Example 3.9

Turbines convert the energy contained within a fluid into mechanical energy or shaft work. Turbines are often used in power plants with generators to produce electricity. One such installation is in a dam as shown in Figure 3.19. Water is permitted to flow through a passageway to the turbine, after which the water drains downstream. For the data given in Figure 3.19, determine the power available to the turbine when the discharge at the outlet is $30 \text{ m}^3/\text{s}$.

SOLUTION

Select a control volume with mass flows crossing the surface at points where properties are known. Point 1 is the reservoir surface with velocity downward. Point 2 is the exit of the passageway downstream from the turbine. Assuming negligible heat transfer, no change in internal energy of the water, and steady, one-dimensional flow, Equation 3.23 applies:

$$-\frac{dW}{dt} = \dot{m} \left[\left(\frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) - \left(\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) \right]$$

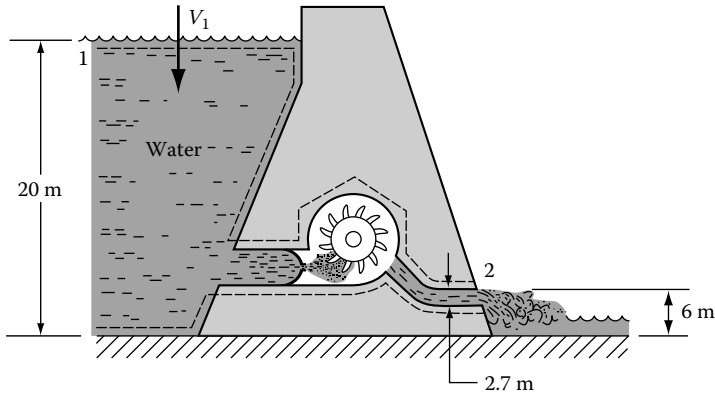


FIGURE 3.19 Sketch for Example 3.9.

We now evaluate each known term of the equation:

$$\dot{m} = \rho A_1 V_1 = \rho A_2 V_2 = \rho Q = (1\,000\text{ kg/m}^3)(30\text{ m}^3/\text{s}) = 30\,000\text{ kg/s}$$

$$p_1 = p_2 = p_{\text{atm}}$$

$$V_2 = \frac{Q}{A_2} = \frac{30}{\pi(2.7)^2/4}\text{ m/s} = 5.24\text{ m/s}$$

Compared to the velocity at 2, $V_1 \approx 0$. Moreover, $z_1 = 20\text{ m}$ and $z_2 = 6\text{ m}$. By substitution,

$$\begin{aligned} -\frac{dW}{dt} &= (30\,000\text{ kg/s}) \left[\frac{(5.24)^2}{2} + 9.81(6) - 9.81(20) \right] \\ &= (30\,000\text{ kg/s})(-123.6\text{ N} \cdot \text{m/kg}) \end{aligned}$$

or

$$\frac{dW}{dt} = 3\,708\,000\text{ N} \cdot \text{m/s} = +3.7\text{ MW}$$

where the positive sign indicates work done by the fluid. Thus, by measuring various flow quantities, we have determined that 3.7 MW of power have left the water and are available for doing shaft work on the turbine.

Example 3.10

A schematic of a garden fountain is given in Figure 3.20. A pump located beneath a water reservoir discharges a single jet vertically upward to a height of 6 ft above the reservoir surface. Determine the rate of work being done by the pump if the volume flow of liquid is 250 gpm. Neglect friction.

SOLUTION

The control volume we select includes all the water in the reservoir, the pump and piping, and the amount discharged. We identify point 1 as the reservoir surface, whereas point 2 is at the top of the jet.

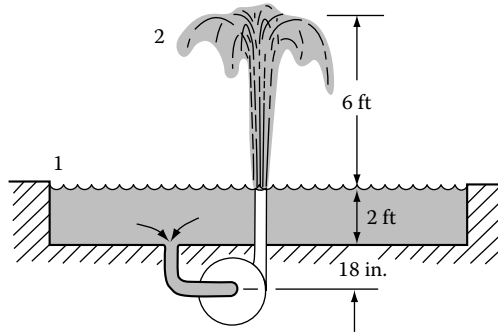


FIGURE 3.20 Sketch for Example 3.10.

Properties are known at both locations. Assuming negligible heat transfer, no change in internal energy, and steady, one-dimensional flow, Equation 3.23 applies:

$$-\frac{dW}{dt} = \dot{m} \left[\left(\frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) - \left(\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) \right]$$

We next evaluate each term in the equation. The volume flow rate is given as

$$Q = 250 \text{ gal/min} \times 2.229 \times 10^{-3} = 0.557 \text{ ft}^3/\text{s}$$

The water density is 1.94 slug/ft^3 , and so the mass flow rate is

$$\dot{m} = \rho Q = (1.94 \text{ slug/ft}^3)(0.557 \text{ ft}^3/\text{s}) = 1.08 \text{ slug/s}$$

The pressure at sections 1 and 2 is equal to atmospheric pressure:

$$p_1 = p_2 = p_{\text{atm}}$$

The water velocity at the reservoir surface is zero; the water velocity at the top of the jet is also zero:

$$V_1 = V_2 = 0$$

If we let the reservoir surface be a datum from which to make vertical measurements, we have

$$z_1 = 0$$

and

$$z_2 = 6 \text{ ft}$$

Substituting these parameters into Equation 3.23 gives

$$-\frac{dW}{dt} = (1.08 \text{ slug/s}) \left\{ \left[0 + 0 + (32.2 \text{ ft/s}^2)(6 \text{ ft}) \right] - (0 + 0 + 0) \right\}$$

Solving,

$$\frac{dW}{dt} = -208.8 \text{ ft} \cdot \text{lbf/s}$$

This power goes entirely into raising the water a distance of 6 ft. The negative sign indicates that work was done on the fluid. The horsepower is the customary unit for power in the English system. There are, by definition, 550 ft · lbf/s per horsepower. The pump power required is

$$\frac{dW}{dt} = -\frac{208.8 \text{ ft} \cdot \text{lbf/s}}{550 \text{ ft} \cdot \text{lbf/(s} \cdot \text{hp)}}$$

or

$$\frac{dW}{dt} = -0.38 \text{ hp}$$

Therefore, the pump must deliver 0.38 hp to the water in order to raise it by 6 ft.

3.6 BERNOULLI'S EQUATION

The **Bernoulli equation** gives a relationship between pressure, velocity, and position or elevation in a flow field. Normally, these properties vary considerably in the flow, and the relationship between them if written in differential form is quite complex. The equations can be solved exactly only under very special conditions. Therefore, in most practical problems, it is often more convenient to make assumptions to simplify the descriptive equations. The Bernoulli equation is a simplification that has many applications in fluid mechanics. We will derive it in two ways. First, consider a flow tube bounded by streamlines in the flow field as illustrated in Figure 3.21. Recall that a streamline is everywhere tangent to the velocity vector and represents the path followed by a fluid particle in the stream; no flow crosses a streamline. Because the flow is steady and frictionless, viscous effects are neglected. Pressure and gravity are the only external forces acting. For this analysis, we will select a control volume, apply the momentum equation, and finally integrate the result along the streamtube. In the s -direction for the control volume, we have

$$\sum F_s = \iint_{CS} V_s \rho V_n dA$$

Evaluating each term separately, we obtain

$$\sum F_s = p\delta A - (p + dp)\delta A - \rho g ds \delta A \cos \theta$$

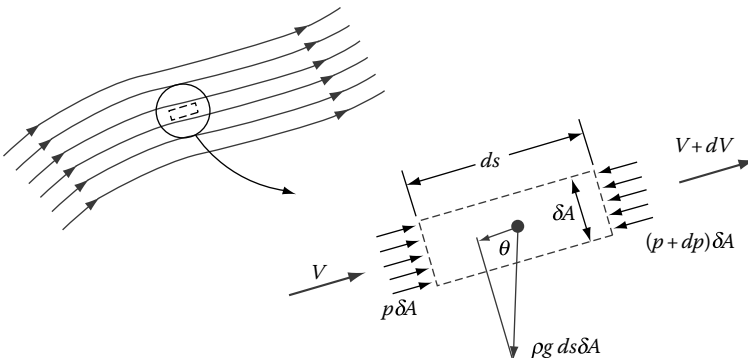


FIGURE 3.21 A differential control volume for the derivation of Bernoulli's equation.

where θ is the angle between the s -direction and gravity. Also,

$$\int_{CS} V_s \rho V_n dA = (V + dV - V) \rho V \delta A$$

By substitution, we get

$$-dp \delta A - \rho g ds \delta A \cos \theta = \rho V dV \delta A$$

The term δA divides out; $ds \cos \theta$ is dz . Therefore, after simplification, we get

$$\frac{dp}{\rho} + V dV + g dz = 0$$

Integrating between points 1 and 2 along the streamtube gives

$$\int_1^2 \frac{dp}{\rho} + \frac{1}{2} (V_2^2 - V_1^2) + g(z_2 - z_1) = 0$$

For the special case of an incompressible fluid, density is constant (not a function of pressure), and the equation then becomes

$$\frac{p_2 - p_1}{\rho} + \frac{V_2^2 - V_1^2}{2} + g(z_2 - z_1) = 0 \quad (3.24)$$

or

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{a constant} \quad (3.25)$$

Equation 3.25 is the Bernoulli equation for steady, incompressible flow along a streamline with no friction (no viscous effects).

The Bernoulli equation can be developed from the one-dimensional energy equation (Equation 3.21):

$$\frac{d}{dt}(\tilde{Q} - W) \Big|_s = \dot{m} \left[\left(h_2 + \frac{V_2^2}{2} + gz_2 \right) - \left(h_1 + \frac{V_1^2}{2} + gz_1 \right) \right]$$

Now let us briefly examine the conditions under which this equation becomes identical to the Bernoulli equation. For an incompressible flow with no shaft work, the energy equation reduces to

$$\frac{d\tilde{Q}}{dt} \Big|_s = \dot{m} \left[\left(u_2 + \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) - \left(u_1 + \frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) \right]$$

Now compare this equation to the Bernoulli equation for steady, frictionless, one-dimensional, incompressible flow (Equation 3.24). We conclude that for both equations to be identical, any change in internal energy of the fluid must equal the amount of heat transferred. It can be seen that for an incompressible flow with no work, no heat transfer, and no changes in internal energy, the energy equation and the Bernoulli equation derived from the momentum equation become identical.

Thus, under certain flow conditions, the energy and momentum equations reduce to the same expression. Hence, the Bernoulli equation is referred to as the **mechanical energy equation**. For many flow problems, only the continuity and Bernoulli equations are required for a description of the flow.

Example 3.11

Consider the flow of water through a venturi meter, as shown in Figure 3.22. Liquid passing through encounters a contraction to the throat area, followed by a gradual expansion to the original diameter. A manometer is placed in the line to measure the pressure difference from the inlet to the throat. For the dimensions given, determine the volume flow rate of water through the meter.

SOLUTION

We select the control volume so that liquid and flow properties are known or can be determined, as shown in the figure. Next, we assume one-dimensional, incompressible flow. The continuity and Bernoulli equations apply and are written from section 1 to section 2:

$$Q = A_1 V_1 = A_2 V_2$$

and

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

All measurements of height z are made from the centerline, so for a horizontal meter, $z_1 = z_2$. Rearranging the Bernoulli equation gives

$$\frac{p_1 - p_2}{\rho} = \frac{V_2^2 - V_1^2}{2}$$

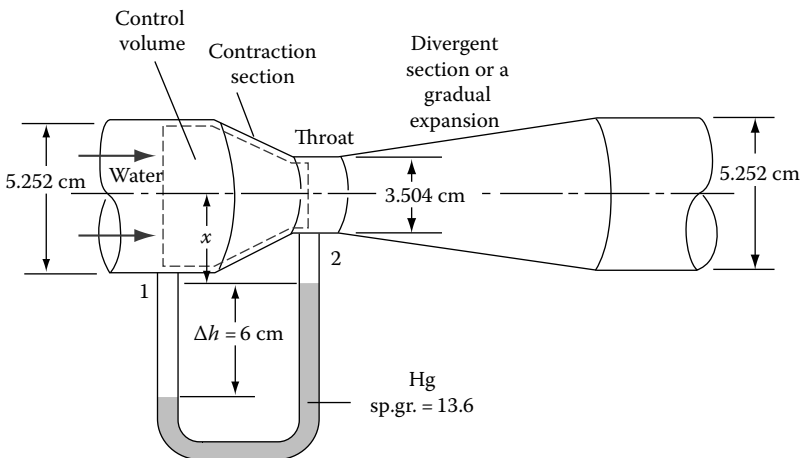


FIGURE 3.22 Flow of water through a venturi meter with pressure drop measured by a water-over-mercury U-tube manometer.

From the continuity equation,

$$V_1 = \frac{Q}{A_1}$$

and

$$V_2 = \frac{Q}{A_2}$$

Combining these equations with the Bernoulli equation and simplifying gives

$$\frac{p_1 - p_2}{\rho} = \frac{1}{2} \left(\frac{Q^2}{A_2^2} - \frac{Q^2}{A_1^2} \right) \quad (i)$$

We now relate the manometer reading to the pressure difference. Assuming that the pressure varies negligibly across the pipe cross section (which is the case for a real flow situation), we select the pipe centerline as a reference location. Applying the hydrostatic equation from the centerline, we get

$$p_1 + \rho g x + \rho g \Delta h = p_2 + \rho g x + \rho_m g \Delta h$$

where ρ is the flowing fluid and ρ_m is the manometer fluid. The term $\rho g x$ cancels from both sides of this equation, so that the distance x does not enter into the calculations. The pressure drop from 1 to 2 then is

$$p_2 - p_1 = \rho_m g \Delta h - \rho g \Delta h$$

or

$$\frac{p_2 - p_1}{\rho} = g \Delta h \left(\frac{\rho_m}{\rho} - 1 \right)$$

Combining this result with Equation i yields

$$g \Delta h \left(\frac{\rho_m}{\rho} - 1 \right) = \frac{Q^2}{2} \left(\frac{1}{A_2^2} - \frac{1}{A_1^2} \right)$$

Solving for volume flow rate, we get

$$Q = \sqrt{\frac{2g \Delta h (\rho_m / \rho - 1)}{1/A_2^2 - 1/A_1^2}}$$

We now evaluate all terms on the right-hand side:

$$A_1 = \frac{\pi D_1^2}{4} = \frac{\pi (0.05252)^2}{4} = 0.00217 \text{ m}^2$$

and

$$A_2 = \frac{\pi D_2^2}{4} = \frac{\pi (0.03504)^2}{4} = 0.000964 \text{ m}^2$$

From Table A.5 for mercury, $\rho = 13.6(1\,000)\text{ kg/m}^3$; for water, $\rho = 1\,000\text{ kg/m}^3$. Thus

$$\frac{\rho_m}{\rho} = \frac{13.6(1\,000)}{1\,000} = 13.6$$

and

$$\Delta h = 0.06\text{ m}$$

Substituting these quantities into the volume-flow-rate equation, we find

$$Q = \sqrt{\frac{2(9.81)(0.06)(13.6 - 1)}{(1/0.000\,964)^2 - (1/0.002\,17)^2}}$$

or

$$Q = 0.004\,16\text{ m}^3/\text{s}$$

Example 3.12

A siphon is set up to remove gasoline from a tank as illustrated in Figure 3.23. Quarter-inch-inside-diameter flexible tubing is used. Estimate the exit velocity at the instant shown and the volume flow rate.

SOLUTION

We will select a control volume such that point 1 is the velocity of the downward-moving liquid surface and point 2 is the end of the tube from which gasoline flows. Assuming quasi-steady, one-dimensional flow of an incompressible fluid, we can write the continuity and Bernoulli equations as

$$Q = A_1 V_1 = A_2 V_2$$

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

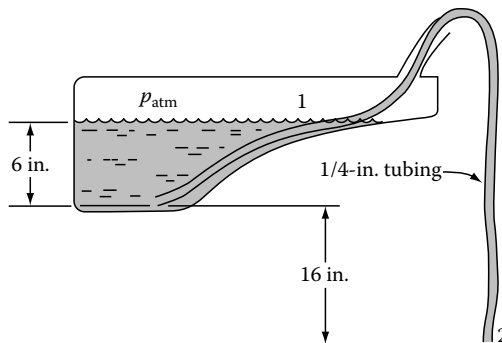


FIGURE 3.23 Siphoning gasoline from a tank.

The area of the reservoir at point 1 is much larger than that at point 2, so we regard V_1 in Bernoulli's equation as being negligible. Note also that $p_1 = p_2 = p_{\text{atm}}$ Bernoulli's equation becomes

$$gz_1 - gz_2 = \frac{V_2^2}{2}$$

or

$$V_2 = \sqrt{2g(z_1 - z_2)}$$

This result is independent of liquid properties. Taking measurements from $z_2 = 0$, we have $z_1 = 22$ in. By substitution,

$$V_2 = \sqrt{2(32.2)\left(\frac{22}{12}\right)} = 10.86 \text{ ft/s}$$

The volume flow rate is

$$Q = A_2 V_2 = \frac{\pi}{4} \frac{(0.25)^2}{(12)^2} 10.86 = 0.0037 \text{ ft}^3/\text{s}$$

This is an unsteady-flow problem because z_1 changes with time. In unsteady-flow problems, however, it is often necessary to assume a quasi-steady process wherein we can apply the steady-flow equations to any instant in time for the flow depicted. A more accurate description is obtained if a differential equation for z_1 is written and solved starting with the unsteady form of the continuity equation.

In Section 3.3, we solved a draining tank problem; specifically in Example 3.2, we had a tank that was being drained with a pipe. The exit velocity was constant. In a more realistic model, however, the fluid leaving a tank through a pipe at the bottom will have a velocity that varies with liquid height in the tank. We can formulate such problems now with the continuity and Bernoulli equations together.

Consider a tank of liquid with an attached pipe as indicated in Figure 3.24. Liquid drains from this tank and encounters friction within the pipe, which we assume is negligible. In the quasi steady draining tank problems, we have considered thus far, the liquid surface velocity in the tank is

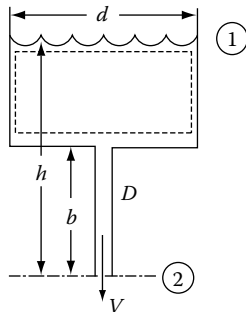


FIGURE 3.24 The unsteady draining tank problem.

assumed negligible. In this analysis, however, it is our desire to determine how the depth of liquid in the tank varies with time, and account for the volume of liquid in the tank. We consider unsteady flow from the draining tank and we wish to determine how long it will take for the tank to drain from an initial depth to some final depth.

As indicated in Figure 3.24, the tank is circular and has a diameter d . The pipe diameter is D , and the distance from the pipe exit to the free surface of the liquid in the tank is h . The distance from tank bottom to pipe exit is b , which is a constant. We identify the free surface of liquid in the tank as section 1, and the pipe exit as section 2. The equation relating areas and velocities at any time is

$$A_1 V_1 = A_2 V_2$$

At any time and for any depth, the velocity of the liquid surface at 1 (V_1) in terms of the velocity in the pipe is given by

$$V_1 = \frac{A_2}{A_1} V_2 \quad (3.26)$$

The Bernoulli equation written from 1 (free surface in tank) to 2 (pipe exit) is

$$\frac{p_1 g_c}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2 g_c}{\rho g} + \frac{V_2^2}{2g} + z_2$$

Evaluating properties, we have

$$p_1 = p_2 = p_{\text{atm}} \quad z_2 = 0 \quad z_1 = h \quad V_2 = V$$

Simplifying Equation 3.26, and substituting these values, the Bernoulli equation becomes

$$\frac{V_1^2}{2g} + h = \frac{V_2^2}{2g}$$

or

$$\left(\frac{A_2}{A_1}\right)^2 \frac{V^2}{2g} + h = \frac{V^2}{2g}$$

which simplifies to

$$h = \frac{V^2}{2g} \left[1 - \left(\frac{A_2}{A_1}\right)^2 \right]$$

Solving for velocity,

$$V = \left[\frac{2gh}{1 - (A_2/A_1)^2} \right]^{1/2} \quad (3.27)$$

This is the equation of motion relating depth of liquid in the tank to efflux velocity. Note that if we assume the velocity at section 1 (V_1) is much smaller than the velocity in the exit pipe (V_2), the area ratio is negligible. Incorporating this assumption gives the familiar result: $V = \sqrt{2gh}$.

Next, we will write the unsteady continuity equation for the tank liquid:

$$0 = \frac{\partial m}{\partial t} + \iint_{CS} \rho V_n dA \quad (3.5)$$

where $\partial m / \partial t$ is the change of mass in the tank, and the integral term must be evaluated at locations where mass leaves the tank and where mass enters the tank. The mass of liquid in the tank at any time is

$$m = \rho V = \rho \frac{\pi d^2}{4} (h - b) = \frac{\pi d^2}{4} \rho h - \frac{\pi d^2}{4} \rho b$$

Noting that b is a constant, the change of mass in the tank with respect to time is

$$\frac{\partial m}{\partial t} = \frac{\pi d^2}{4} \rho \frac{dh}{dt}$$

which is the first term on the right-hand side of Equation 3.5. The second term—the integral term—becomes

$$\iint_{CS} \rho V_n dA = \iint_{\text{out}} \rho V_n dA - \iint_{\text{in}} \rho V_n dA$$

With no fluid entering the tank, the preceding equation reduces to

$$\iint_{CS} \rho V_n dA = \rho \frac{\pi D^2}{4} V - 0$$

Substituting this equation and Equation 3.27 into Equation 3.5, we get

$$0 = \frac{\pi D^2}{4} \rho \frac{dh}{dt} + \rho \frac{\pi D^2}{4} V$$

or

$$0 = A_1 \frac{dh}{dt} + A_2 V$$

Rearranging,

$$\frac{dh}{dt} = -\frac{A_2}{A_1} V \quad (3.28)$$

For the draining tank problem, then, Equation 3.28 must be solved simultaneously with Equation 3.27. This will take into account the variation of liquid height and efflux velocity with time, as well as the fluid volume within the tank. A solution to Equation 3.28 can be obtained by direct integration. Note that Equations 3.27 and 3.28 are independent of fluid properties.

Substituting Equation 3.27 into Equation 3.28 gives

$$\begin{aligned}\frac{dh}{dt} &= -\frac{A_2}{A_1} \left[\frac{2gh}{1 - (A_2/A_1)^2} \right]^{1/2} \\ \frac{dh}{dt} &= - \left[\frac{2(A_2/A_1)^2 gh}{1 - (A_2/A_1)^2} \right]^{1/2}\end{aligned}\quad (3.29a)$$

All terms on the right-hand side of this equation except h are constants. The equation can thus be rewritten as

$$\frac{dh}{dt} = -C_1 h^{1/2} \quad (3.29b)$$

where

$$C_1 = \left[\frac{2(A_2/A_1)^2 g}{1 - (A_2/A_1)^2} \right]^{1/2}$$

Rearranging Equation 3.29b, we have

$$h^{-1/2} dh = -C_1 dt$$

We can integrate this expression from time = 0 (where $h = h_0$) to some future time t (where $h = h$):

$$\int_{h_0}^h h^{-1/2} dh = - \int_0^t C_1 dt$$

The result is

$$2(h^{1/2} - h_0^{1/2}) = -C_1 t$$

Solving for the height h at any time,

$$h = \left(h_0^{1/2} - C_1 t/2 \right)^2 \quad (3.30)$$

This equation gives the variation of liquid height in the tank with depth. Substituting into Equation 3.27 gives the variation of velocity also with time. Fluid properties, specifically density, does not enter into the equations.

Example 3.13

The 20-cm-diameter ($=d$) tank of Figure 3.24 contains water and it is being drained by the attached piping system. The pipe itself has an inside diameter of 5.1 cm. Neglecting friction, determine the variation of velocity and height with time if the height h is allowed to vary from an initial value of 1 m to 0.5 m.

SOLUTION

For water, the density is $\rho = 1\,000\text{ kg/m}^3$. With the tank diameter of 0.2 m, we calculate

$$A_1 = \frac{\pi d^2}{4} = \frac{\pi(0.2)^2}{4} = 0.031\,42\text{ m}^2$$

The pipe area is

$$A_2 = \frac{\pi D^2}{4} = \frac{\pi(0.051)^2}{4} = 0.002\text{ m}^2$$

The area ratio then is

$$\left(\frac{A_2}{A_1}\right)^2 = \left(\frac{0.002}{0.031\,42}\right) = 0.0041$$

The constant then becomes

$$C_1 = \left[\frac{2(A_2/A_1)^2 g}{1 - (A_2/A_1)^2} \right] = \left[\frac{2(0.004\,1)(9.81)}{1 - (0.004\,1)} \right]^{1/2} = 0.284$$

Rearranging Equation 3.30 and solving for time, we have

$$t = -\frac{2(h^{1/2} - h_0^{1/2})}{C_1}$$

Substituting $h = 0.5\text{ m}$, $h_0 = 1\text{ m}$, the time is

$$t = -\frac{2(0.5^{1/2} - 1^{1/2})}{0.284}$$

$$t = 2.06\text{ s}$$

3.7 SUMMARY

In this chapter, we developed the basic equations of fluid mechanics by using the control volume approach. The continuity, momentum, and energy equations were written by beginning with the general conservation equation. The momentum and the energy equations both gave the Bernoulli equation for frictionless flow with no external heat transfer and no shaft work. Various examples were solved to illustrate the use of the expressions, but compressible flows have been reserved for Chapter 8 because a different mathematical formulation is necessary. Frictional or viscous forces were not included because they too will be covered in later chapters. The purpose of this chapter has been to present the basic equations and show how they are derived.

PROBLEMS**Average Velocity****3.1** By integrating the expression

$$V_z = V_{\max} \left(1 - \frac{r^2}{R^2} \right)$$

over the cross-sectional area of a circular duct, show that the average velocity is $\frac{1}{2} V_{\max}$.

3.2 Flow through a pipe under certain conditions has a velocity distribution given by

$$\frac{V_z}{V_{\max}} = \left(1 - \frac{r}{R}\right)^{1/7}$$

Determine the average velocity in the pipe.

3.3 Consider flow through the tubing arrangement illustrated in Figure P3.3. The velocity distribution in the 24-in. pipe is given by

$$V_z = 2 \left(1 - \frac{r^2}{R^2}\right) \text{ft/s}$$

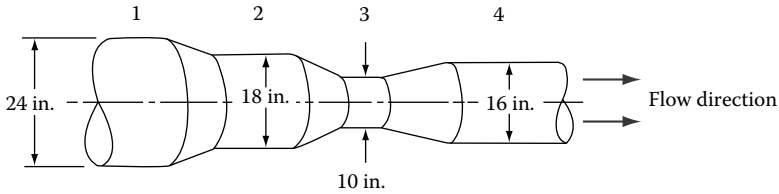


FIGURE P3.3

Calculate the volume flow rate through the system, and determine the average velocity at section 2. Is the result dependent on fluid properties?

3.4 The velocity distribution in the 24-in. pipe of Figure P3.3 is given by

$$V_z = 0.8 \left(1 - \frac{r^2}{R^2}\right) \text{m/s}$$

Determine the volume flow rate through the system and the average velocity at section 3.

3.5 With regard to the piping system of Figure P3.3, express the average velocity at section 4 in terms of the average velocity at sections 1, 2, and 3.

3.6 Air is flowing through the configuration of Figure P3.3 at a mass flow rate of 0.003 slug/s. Assuming ideal gas behavior, calculate the velocity at section 1 if $p_1 = 18$ psia and $T_1 = 520^\circ\text{R}$.

Continuity Equation—Steady Flow

3.7 The fuel tank of a lawnmower measures 3 in. $\times$ 3.5 in. $\times$ 1 in. The tank is filled with gasoline (assume octane), and the engine is started. After $3\frac{1}{2}$ h of running, the tank is empty. The cap of the fuel tank contains four vent holes, each $\frac{1}{16}$ in. diameter. Determine the velocity of the air entering the vent holes when the engine is running.

3.8 Figure P3.8 shows a T-joint found in a water piping system. At section 1, the velocity is given by

$$V_z = 1 \left(1 - \frac{r^2}{R^2}\right) \text{ft/s}$$

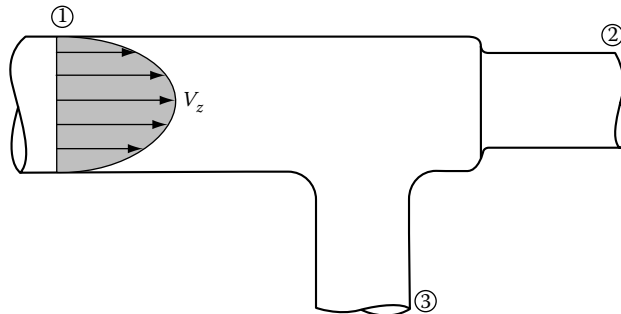


FIGURE P3.8

The pipe radius R at section 1 is 3 in. At sections 2 and 3, the radius is 2 in. Measurements indicate that two-thirds of the total flow entering at section 1 leaves at section 2. Determine the average velocity at sections 2 and 3.

- 3.9** A long pipe has an inside diameter of 12 cm. Air enters the pipe at a pressure of 150 kPa and a temperature of 20°C. The mass flow rate of air is 0.05 kg/s. The pipe is heated by an external source, and the air thus becomes warmed as it travels through. At the exit, the air pressure is 140 kPa, and the temperature is 80°C. Is the velocity at the inlet equal to the velocity at the exit? Is the volume flow rate of the air at the inlet equal to the volume flow rate of the air at the outlet? Assume ideal gas behavior.
- 3.10** Freon-12 refrigerant enters a condenser (a heat exchanger) as vapor and leaves it as a liquid. Energy removed from the Freon-12 causes it to condense, and liquid leaves the exchanger at a velocity of 1 ft/s. The condenser is made of $\frac{1}{4}$ -in.-ID tubing, as indicated in Figure P3.10. Calculate the mass flow rate of Freon-12 entering the condenser.

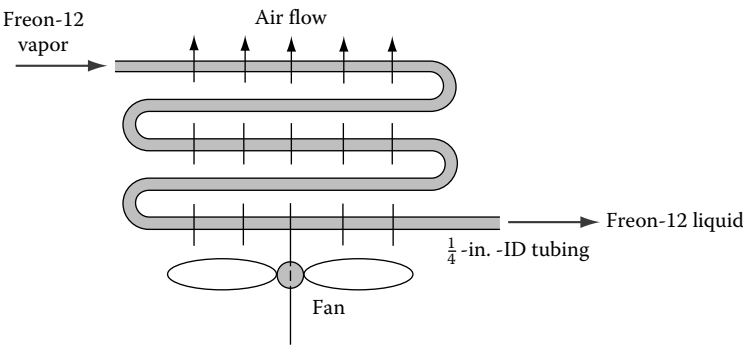


FIGURE P3.10

- 3.11** Figure P3.11 shows a jet pump that consists of a tube within a tube. Air is forced into the smaller tube at a pressure of 700 kPa, a temperature of 300 K, and a velocity of 3 m/s. This high-velocity jet draws atmospheric air into the larger tube at a pressure of 101.3 kPa, a temperature of 300 K, and a velocity of 8 m/s. Determine the velocity of the air drawn in by the jet.

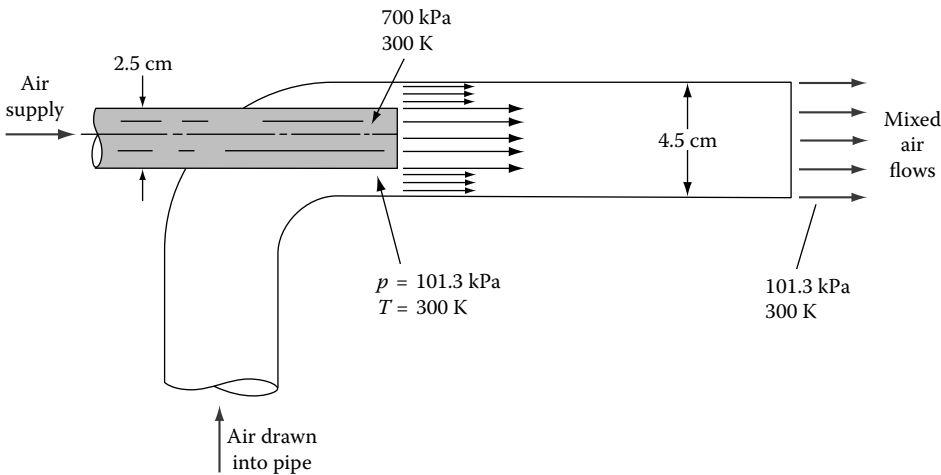


FIGURE P3.11

Continuity Equation—Unsteady Flow

- 3.12** Figure P3.12 shows a 30-m-diameter fuel tank used to store heptane, which enters the tank through a 32-cm-ID inlet line. The average velocity of flow in the inlet is 2 m/s. The initial depth of heptane in the tank is 1 m. Determine the time required for the heptane depth to reach 6 m.

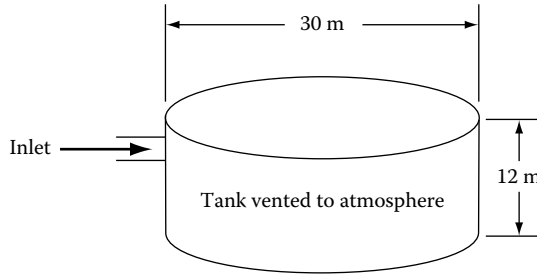


FIGURE P3.12

- 3.13** A tank with a volume of 3 ft^3 is charged to an internal pressure of 2000 psig with carbon dioxide. The gas is to provide an inert environment for a welding operation. The tank valve is regulated to allow $10 \text{ ft}^3/\text{h}$ to escape. Assuming that the temperature in the tank remains constant at 65°F , estimate the tank pressure after 1 h of use. The escaping carbon dioxide is at 14.7 psia and 65°F .
- 3.14** An air compressor is used to pressurize an initially evacuated tank. The tank is 36 in. in diameter and 58 in. long. The supply line is 6 in. in diameter and conveys a flow of 5 ft/s. The air compressor's output pressure and temperature are constant at 50 psia and 90°F . The tank temperature of 70°F is also constant. Calculate the time required for the tank pressure to reach 15 psia.
- 3.15** A circular swimming pool 16 ft in diameter is being filled with two garden hoses, each having an inside diameter of $\frac{3}{4}$ in. The velocities of flow from the hoses are 6 ft/s and 4 ft/s. Calculate the time required to fill the pool to a depth of 4.5 ft. (See Figure P3.15.) If we start filling the pool by 8:00 A.M., will we be able to swim in a filled pool by noon?

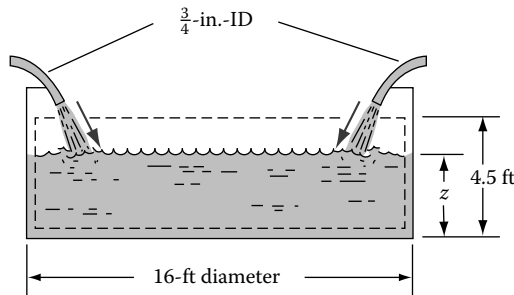


FIGURE P3.15

Linear Momentum Equation

- 3.16** A typical fire hose is 10 cm in diameter and can deliver $1 \text{ m}^3/\text{s}$ of water. A nozzle attached to the end changes the flow into a jet 6 cm in diameter. This flow strikes a flat wall at 90° . Calculate the force exerted by the jet on the wall.
- 3.17** A two-dimensional jet in the form of a liquid sheet strikes a piece of angle iron, as shown in Figure P3.17. Derive an expression for the force F .

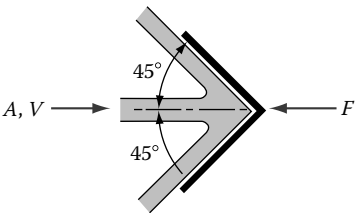


FIGURE P3.17

- 3.18** The vane in Figure P3.17 is moving to the right at half the jet velocity. Determine the force F .
- 3.19** A two-dimensional jet in the form of a liquid sheet impinges on a semicircular, concave object as shown in Figure P3.19. Derive an expression for the force.

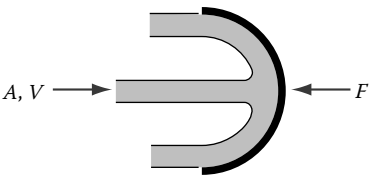


FIGURE P3.19

- 3.20** The vane in Figure P3.19 is moving to the left at a velocity equal to one-fourth of the jet velocity. Determine the force F .
- 3.21** A two-dimensional jet in the form of a liquid sheet impinges on a semicircular object, as shown in Figure P3.21. Develop an expression for the restraining force.

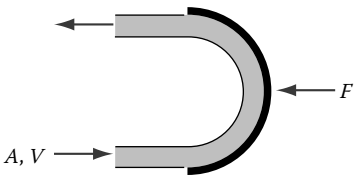


FIGURE P3.21

- 3.22** The vane in Figure P3.21 moves to the right at a velocity equal to one-third the jet velocity. Determine the force F .
- 3.23** The vane in Figure P3.21 moves to the right such that the force is exactly half that obtained if the jet is stationary. Determine the vane velocity in terms of the jet velocity.
- 3.24** A two-dimensional jet in the form of a liquid sheet is turned through an angle of 30° by a curved vane, as shown in Figure P3.24. Derive an expression for the restraining forces required to hold the vane stationary.

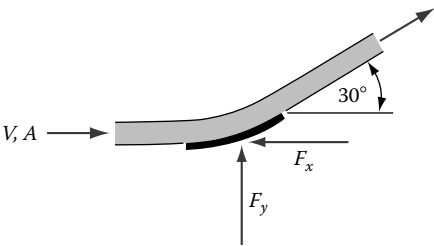


FIGURE P3.24

- 3.25** The forces F_x and F_y of Figure P3.25 are such that their magnitudes are related by $F_y = 2F_x$. Determine the angle θ through which the vane turns the liquid jet. The angle should vary over the range $0 \leq \theta \leq 90^\circ$.

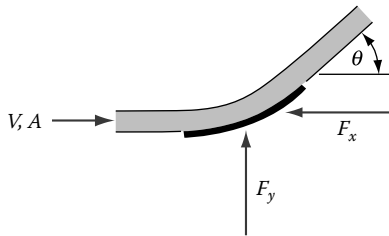


FIGURE P3.25

- 3.26** A two-dimensional jet in the form of a liquid sheet is turned through an angle of 110° by a curved vane, as shown in Figure P3.26. Derive an expression for the forces exerted on the object by the liquid.

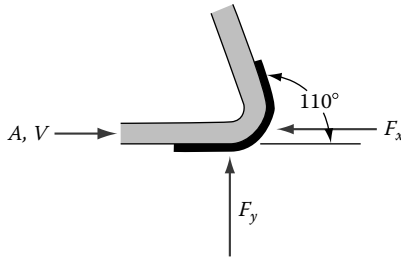


FIGURE P3.26

- 3.27** The forces F_x and F_y of Figure P3.27 are such that their magnitudes are related by $F_x = 3F_y$. Determine the angle through which the vane turns the liquid jet. The angle should range from 90° to 180° .

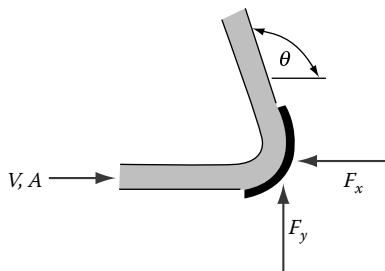


FIGURE P3.27

- 3.28** A liquid jet of velocity V and area A_1 strikes a vane that has a sharp-edged orifice, as shown in Figure P3.28. Liquid that leaves through the orifice has a volume flow rate equal to one-half

that of the incoming jet. For frictionless flow, determine the force required to hold the plate stationary.

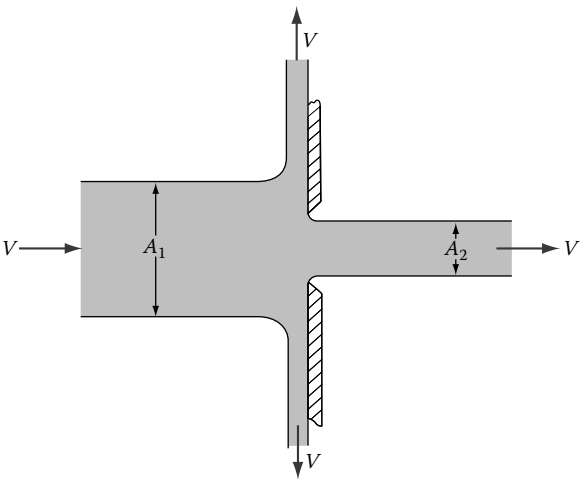


FIGURE P3.28

3.29 A liquid jet strikes a plate containing a sharp-edged orifice, as shown in Figure P3.29. The liquid jet velocity approaching the plate is V . For frictionless flow, determine the forces exerted on the plate by the liquid.

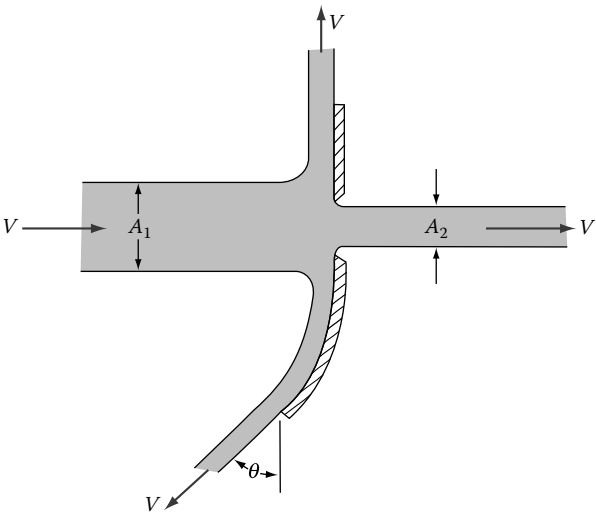


FIGURE P3.29

3.30 A liquid jet of velocity V and area A strikes a vane, as shown in Figure P3.30. The jet is deflected into two separate directions. Determine a relationship between the areas (inlet and both exits) if the magnitudes of the restraining forces are related by $F_x = 2F_y$ and the angle θ is 35° . Assume frictionless flow.

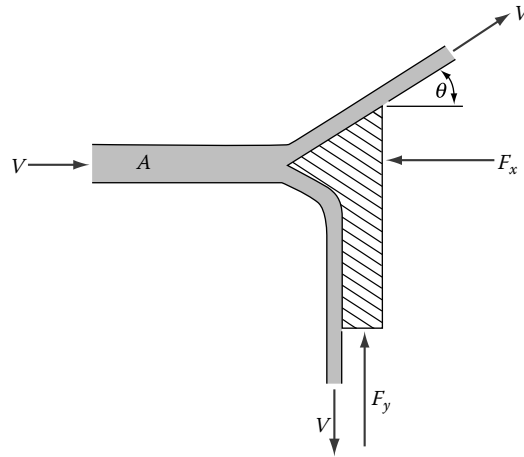


FIGURE P3.30

- 3.31** A water jet of velocity 12 ft/s and a cross-sectional area of 5 ft² strike a curved vane, as shown in Figure P3.31. The vane is moving at a velocity of 3 ft/s in the positive x -direction, and it deflects the jet through an angle θ of 60°. Assuming no frictional losses between the jet and the surface, determine the reaction forces.

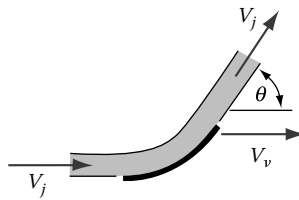


FIGURE P3.31

- 3.32** Figure P3.32 shows a water jet of velocity V and area A that impacts a curved vane. Determine the forces exerted on the vane.

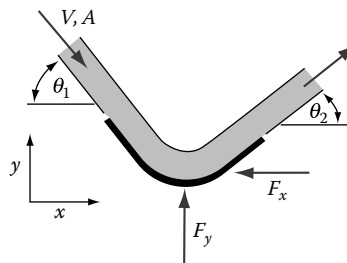


FIGURE P3.32

Angular Momentum Equation

- 3.33** In Example 3.7, assume that the torque due to bearing friction is 0.120 N · m and $\omega = 2$ rev/s. Determine the angle β if all other parameters remain unchanged.
- 3.34** In Example 3.7, what torque is required to hold the sprinkler head stationary?
- 3.35** A three-nozzle sprinkler head is shown schematically in Figure P3.35. For the given conditions, show that the angular velocity is given by

$$\omega = \frac{4Q}{\pi D^2 R} \sin \beta - \frac{T_0}{3\rho Q R^2}$$

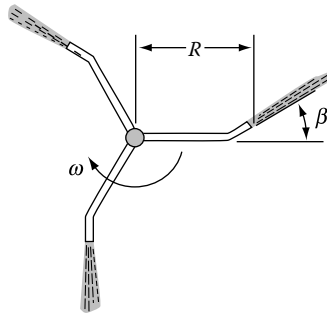


FIGURE P3.35

- 3.36** A three-nozzle sprinkler head is shown schematically in Figure P3.35. The total flow through the sprinkler is 10.2 gpm of water, and the torque due to friction is 0.15 ft · ibf. Each nozzle produces a jet that is 9 mm in diameter, and all nozzles are identical. Determine the angular velocity. (Use the results of the previous problem.)
- 3.37** For the sprinkler head of Problem 3.35, assume that the bearings are frictionless and determine how the flow rate should be increased in order to double the angular velocity.
- 3.38** The sprinkler head of Figure P3.38 discharges an equal amount of water through each nozzle. If the jet diameter produced by each nozzle is the same, determine an equation for the speed of rotation assuming no friction.

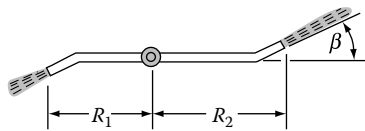


FIGURE P3.38

- 3.39** Power is the product of rotational speed and torque. Determine the power or rate of work done by the water of Example 3.7. Express the answer in units of horsepower.

The Energy Equation

- 3.40** An amusement park has a water slide consisting of a curving channel, down which people slide on rubber mats. Water is pumped to the top of the slide, which is 60 ft high (see Figure P3.40). The inlet pipe to the pump is 6 in. in diameter; the outlet pipe to the slide is 4 in. in diameter. Determine the power required by the pump if the flow rate is 1 ft³/s. Neglect friction.

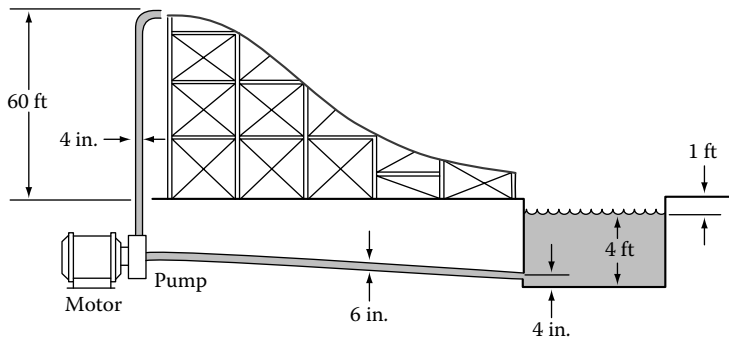


FIGURE P3.40

- 3.41** An axial-flow window fan is used to ventilate a room. The fan is placed in a square housing $60\text{ cm} \times 60\text{ cm}$, which can be taken as the flow area. Typically, the difference in pressure across the fan is 0.08 cm of water. Determine the flow rate of air removed from the room if the fan power is 25 W . Take the room temperature to be 25°C . Neglect friction and assume the air to behave as an incompressible fluid (a good assumption at moderate temperatures and pressures).
- 3.42** An air turbine is used with a generator to generate electricity. Air at the turbine inlet is at 700 kPa and 25°C . The turbine discharges air to the atmosphere at a temperature of 11°C . Inlet and outlet air velocities are 100 m/s and 2 m/s , respectively. Determine the work per unit mass delivered to the turbine from the air.
- 3.43** Diesel engines are used as motive power for pumping water. To recapture some of the energy contained in the diesel exhaust gases, they are to be run through a turbine. The exhaust gases enter the turbine in a line with a 12-in. inside diameter at a velocity of 10 ft/s with a temperature and pressure of 1200°F and 25 psia , respectively. At the turbine exit, the gases are at 600°F , 14.7 psia , and they have a velocity of 5 ft/s . Determine the work per unit mass delivered to the turbine and the horsepower. Take the properties of the exhaust gases to be the same as those for carbon dioxide and assume ideal gas behavior. (Enthalpy changes equal specific heat at constant pressure times temperature changes.) The process is considered to be adiabatic.
- 3.44** A steam turbine is used with an alternator in power plants for generation of electricity. Steam at 800 kPa and 400°C (enthalpy $= 3\,267.5\text{ kJ/kg}$) traveling at 80 m/s enters the turbine from the boiler. The steam exits from the turbine; at a point 12 m below the inlet, the pressure is 10 kPa , the temperature is 100°C (enthalpy $= 2\,687.5\text{ kJ/kg}$), and the velocity is 65 m/s . Determine the work per unit mass delivered to the turbine. (*Note:* These enthalpy values, taken from thermodynamics textbooks, are based on actual steam data.) Neglect heat-transfer effects.
- 3.45** A pump is used in a piping system to move oil from one tank to another tank at a higher elevation, as indicated in Figure P3.45. The flow velocity in the piping system is 2 m/s , and the oil has a specific gravity of 0.87 . The pipe has an inside diameter of 10.23 cm . Determine the power required to pump the oil under these conditions.

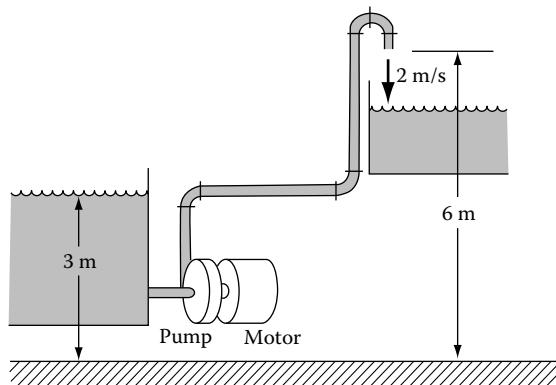


FIGURE P3.45

The Bernoulli Equation

- 3.46** Equation 3.24 was derived for an incompressible fluid. Derive a corresponding expression for an ideal gas at constant temperature.
- 3.47** A household faucet produces a jet that gets smaller in diameter as it approaches the sink. At a certain flow, water coming out will fill an 8-oz glass in 8 s and produce a jet diameter at faucet exit of $\frac{1}{2}\text{ in.}$ If the sink bottom is 8 in. below the faucet exit, what is the jet diameter at impact?

- 3.48** In Lake Geneva (Switzerland), there is a water jet (called the *Jet d'Eau*) that is discharged 130 m straight upward (measured from the surface of the lake). The exit of the discharge pipe is 20 cm in diameter. Calculate the velocity of the water as it leaves the pipe and the volume flow rate of the water.
- 3.49** A venturi meter is a device placed in a pipeline and is calibrated to give the volume rate of liquid through it as a function of pressure drop (see Figure P3.49). For a flow rate of $4 \text{ ft}^3/\text{s}$ through the $16 \times 8 \text{ in.}$ meter shown, determine the reading Δh on the manometer. Assume that the liquid in the meter and in the manometer is water.

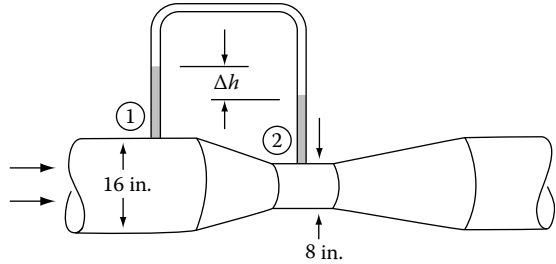


FIGURE P3.49

- 3.50** Linseed oil flows steadily through the system of Figure P3.50. A linseed-oil-over-water U-tube manometer between the 3- and 5-cm sections reads 6 cm. The oil is discharged through a 2-cm diameter exit. Calculate the exit velocity of the linseed oil.

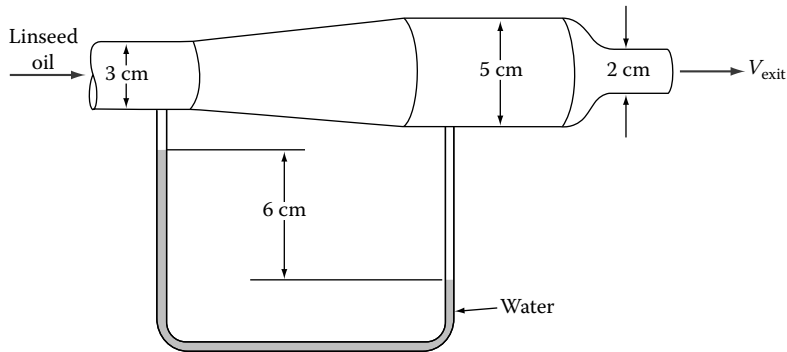


FIGURE P3.50

- 3.51** Water flows steadily through the system shown in Figure P3.51. The 4-in. section leads to a 3-in. throat, followed by a divergent section and, finally, a nozzle whose exit diameter is 2 in. An air-over-water manometer is connected between the 4-in. and 3-in. sections. Determine the expected reading Δh on the manometer if the velocity at the exit is 8 ft/s .

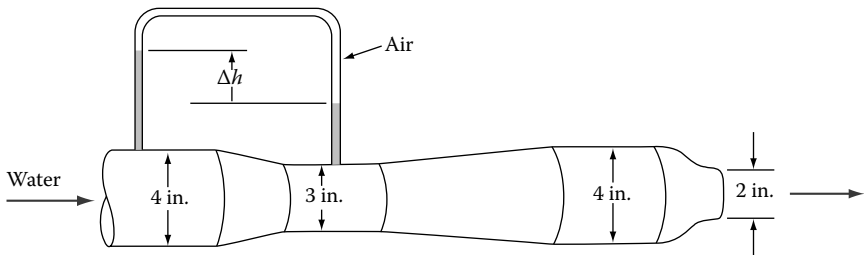


FIGURE P3.51

- 3.52** An open-top tank is discharging glycerine through an opening onto which an elbow has been placed, as in Figure P3.52. Determine the height of the glycerine jet, assuming frictionless flow and a tank diameter that is much greater than the exit pipe diameter.

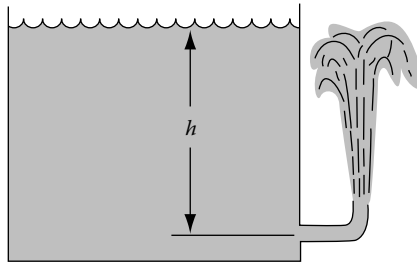


FIGURE P3.52

- 3.53** Suppose the tank of Figure P3.52 is capped tightly and the space above the liquid surface is pressurized with compressed air. Determine the air pressure that would be required to make the liquid jet rise to a level equal to $2h$.
- 3.54** Water flows into a 1-m-diameter tank at a rate of $0.006 \text{ m}^3/\text{s}$, as illustrated in Figure P3.54. Water also leaves the tank through a 5-cm-diameter hole near the bottom. At a certain height h , the efflux equals the influx. Determine the equilibrium height h .

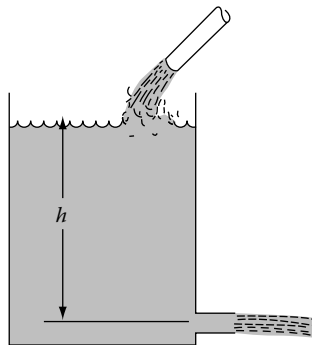


FIGURE P3.54

- 3.55** Water flows into the tank of Figure P3.54 at a rate of $0.1 \text{ ft}^3/\text{s}$. Water also leaves the tank through a 1-in.-diameter hole near the bottom. At a certain height h , the efflux and the influx are equal. Determine the equilibrium height h .
- 3.56** How does doubling the volume inflow of Problem 3.55 affect the equilibrium height?
- 3.57** Determine the exit velocity of the water for the system of Figure P3.57 at the instant shown.

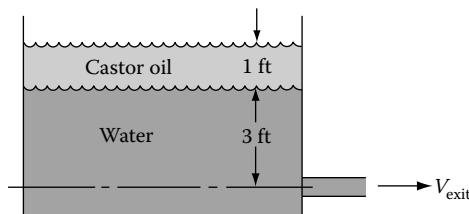


FIGURE P3.57

3.58 A garden hose is used as a siphon to empty a pool, as shown in Figure P3.58. The inside diameter of the hose is $\frac{1}{2}$ in. and the pool diameter is 12 ft. Find the rate of water discharge through the hose.

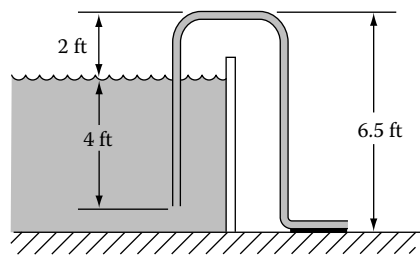


FIGURE P3.58

3.59 Figure P3.59 shows a pressurized tank that contains air and water. An exit pipe attached near the tank bottom directs the liquid upward in the form of a jet to a height h . Derive an equation that relates the height h attained to the pertinent variables of the problem.

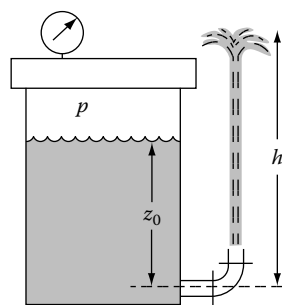


FIGURE P3.59

3.60 A siphon is used to drain a tank of water, as shown in Figure P3.60. The siphon tube has an inside diameter of 3 in., and at the exit there is a nozzle that discharges liquid in a 2-in.-diameter jet. Assuming no losses in the system, determine the volume flow rate through the siphon. Also calculate the flow velocity in the 3-in.-ID tube.

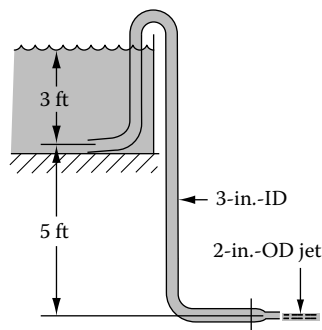


FIGURE P3.60

3.61 A pot contains coffee that is being drained through a valve. For the conditions shown in Figure P3.61, determine the velocity at the valve exit, where the jet diameter is 0.375 in. The inside diameter of the pot is 10 in.

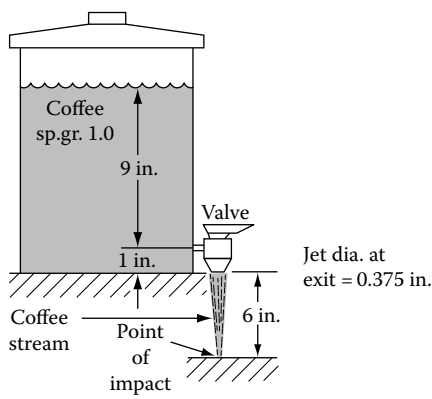


FIGURE P3.61

3.62 Referring to Figure P3.61, determine the diameter of the jet of coffee at its point of impact.
3.63 Figure P3.63 shows a water nozzle attached to a 3-in.-ID hose. The nozzle discharges a 1-in.-OD jet, and the pressure in the hose just upstream of the nozzle is 15 psig. Determine the volume flow rate through the nozzle if it is held horizontally.

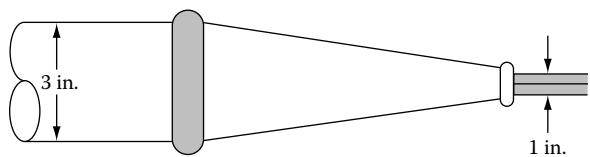


FIGURE P3.63

3.64 A fire hydrant expelling water is shown schematically in Figure P3.64. The impact of the jet is measured to occur at $L = 5$ ft. Determine pressure within the hydrant if the nozzle is 18 in. above the ground. Take the kinetic energy within the center of the hydrant to be negligible.

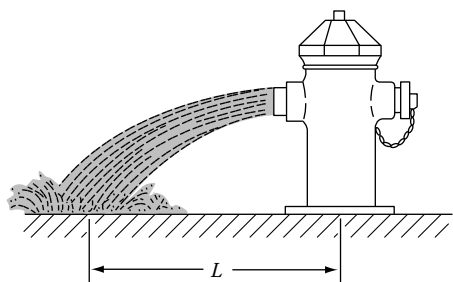


FIGURE P3.64

- 3.65** A hose whose outlet is inclined at an angle of 60° with the horizontal has an inside diameter of 4.3 in. A nozzle at the end has a diameter of 1.9 in. The maximum height attained by a jet of water from the nozzle is 3 ft above the nozzle exit. Determine the pressure inside the hose.
- 3.66** The tallest building in a small community is 60 ft tall. For fire protection, the fire marshal wants to be able to direct a water jet so that at the top of its trajectory, it will reach the roof of this building. If the water nozzle is to be located 30 ft from the building, determine the required water velocity at the nozzle exit. See Figure P3.66.

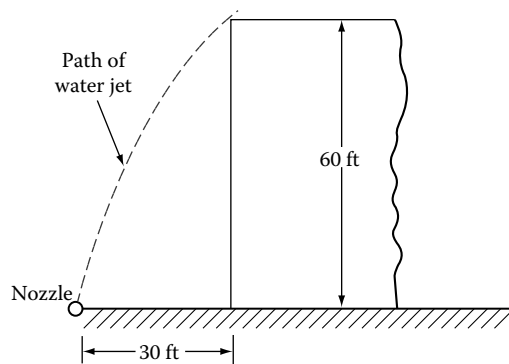


FIGURE P3.66

- 3.67** How long will it take a water particle to travel from the nozzle exit to the roof of the building in P3.66?
- 3.68** Consider water flow through an enlargement placed in a circular duct (Figure P3.68). A manometer is placed in the line and used to measure pressure difference across the expansion. For the dimension given, calculate the volume flow rate through the pipe. Take the manometer fluid to be mercury.

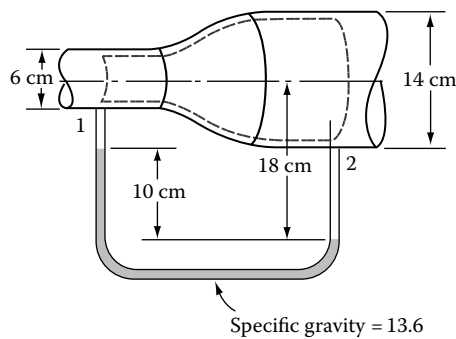


FIGURE P3.68

Unsteady Draining Tank Problems

- 3.69** Figure P3.61 shows a draining pot of coffee. For the conditions shown, determine the time required for the pot to drain from a coffee depth of 10 in. to a depth of 2 in., as measured from the bottom of the pot. The pot inside diameter is 10 in.
- 3.70** Lemonade (sp. gr. = 1.02) is drained through a hole in the side of a container, as shown in Figure P3.70. Calculate the outlet velocity through the side wall for a depth that ranges from 6 ft to 6 in. using an increment of 6 in. Graph velocity versus depth. The inside diameter of the container is 75 cm, and the hole diameter is 7 cm.

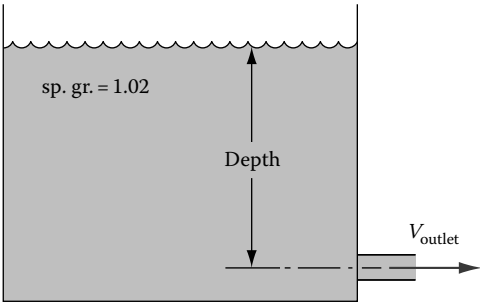


FIGURE P3.70

3.71 Figure P3.71 shows a tank being drained by a 10-cm-ID siphon tube. Determine the time it takes to drain the tank from a depth of 1 m to a depth of 10 cm.

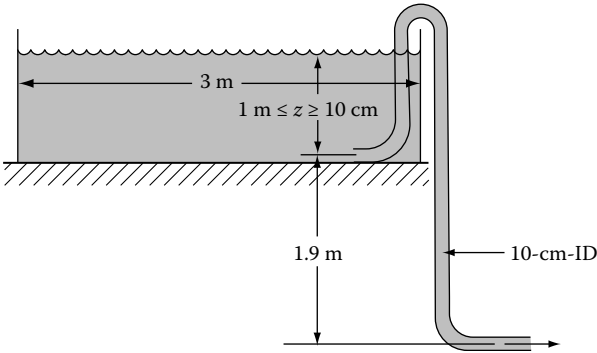


FIGURE P3.71

3.72 Figure P3.72 shows a 3-gallon tank positioned 6 ft ($= h_2$) above a reference plane. Such tanks were used extensively in the nineteenth century with toilets. When the tank plug was pulled up, water drained out through a 6-ft- (approximately) long tube to the toilet. The tank is 18 in. wide ($= w$) by 6 in. into the page. Determine the variation of velocity with liquid tank depth for a height h_1 that varies from 9 in. to 2 in. The tube inside diameter is $1\frac{1}{4}$ in.

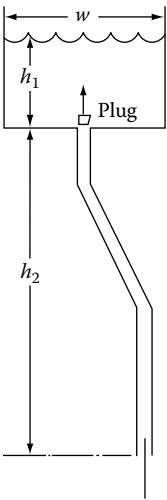


FIGURE P3.72

3.73 A $45^\circ (= \theta)$ funnel (see Figure P3.73) contains linseed oil that is draining out of the attached tube. The tube itself has an inside diameter of 1.1 cm ($= D$) and is 5 cm ($= h_2$) long. The funnel and the tube are one-piece cast plastic. Determine the variation of the efflux velocity with time for a height h_1 that varies from 16 cm to 4 cm.

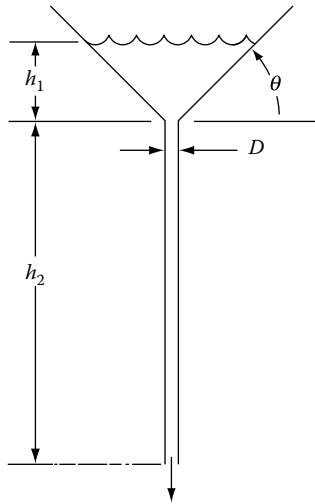


FIGURE P3.73

3.74 Figure P3.74 shows a vane impacted by a jet of liquid. The jet inlet area is 0.5 m^2 and inlet velocity is 1 m/s. The angle θ_1 is 45° and the angle θ_2 can vary from 0 to 90° .

- a. Determine the x -directed force exerted on the vane allowing θ_2 to vary in increments of 10° .
- b. Determine the y -directed force exerted on the vane by allowing θ_2 to vary in increments of 10° .
- c. Graph F_x and F_y , as a function of θ_2 .

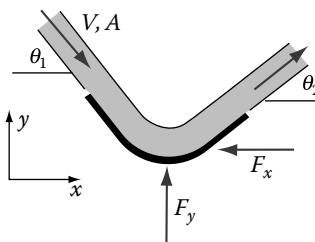


FIGURE P3.74

3.75 For the configuration of Figure P3.74 and the situation described in Problem 3.74, determine and graph the ratio F_x/F_y as a function of θ_2 .

3.76 Figure P3.74 shows a vane impacted by a jet of liquid. The jet inlet area is 1 ft^2 and inlet velocity is 2 ft/s. The angle θ_2 is 60° and the angle θ_1 can vary from 0° to 90° .

- a. Determine the x -directed force exerted on the vane by allowing θ_1 to vary in increments of 10° .
- b. Determine the y -directed force exerted on the vane by allowing θ_1 to vary in increments of 10° .
- c. Graph F_x and F_y as a function of θ_1 .

- 3.77** For the configuration shown in Figure P3.74 and the situation described in Problem 3.76, determine and graph the ratio F_x/F_y as a function of θ_1 .
- 3.78** The turbine in the dam of Example 3.9 is used to generate power and the output is a function of the upstream water height. Allow the upstream height h to vary from 10 to 20 m in 1-m increments and determine the corresponding output power. Owing to frictional effects, the exit velocity downstream of the turbine is given by

$$V_2 = 1.17h^{0.5}$$

All other conditions remain unchanged. Graph power as a function of upstream height.

Design Problems

3.79 Design of a Tank-Type Flow Meter

Flow meters are used in pipelines to determine the flow rate. Consider a pipeline that discharges kerosene into a tank. It is desired to install a “tank-type” meter at the pipe exit to get an indication of the volume flow rate. Figure P3.79 is a sketch of the proposed design. Kerosene enters the tank through a 5.252-cm-ID pipeline and leaves the tank under the action of gravity. The kerosene flow rate varies from 0 to 10 gpm; the higher the flow rate, the greater the liquid depth h . Note that in the proposed design, a sight glass is attached; however, with a translucent plastic tank, the liquid level can be seen without a sight glass.

- Select dimensions for the design of a tank-type flow meter.
- Determine a tank cross section (square, circular, rectangular, etc.); select a tank material (metal versus plastic) appropriate for use with the liquid. Note that the tank need not have a constant cross section. The tank could be shaped like a funnel, for example. Does the tank need a sight glass?
- Select an outlet diameter, and determine how the depth h varies with flow rate. (*Note:* There can be several outlets along the vertical part of the tank wall, if necessary.)
- Explain all design decisions.

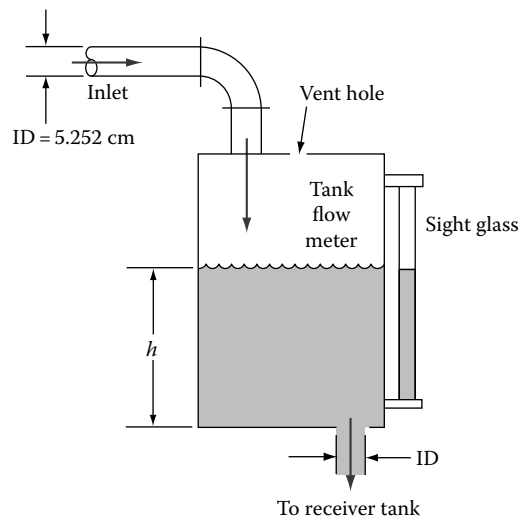


FIGURE P3.79

3.80 Design of a Water Lift

An amusement park director wishes to install a water lift. The proposed design, which is intended to lift children a vertical distance of 1 m, is shown in Figure 3.80. As indicated, the child stands at the end of a plank or lever. A water jet is then directed upward at the bottom of the lever and the child is lifted. The child then steps off to a platform. The design of such a device has many aspects, but here the interest is limited to the lever, the impact object, and the water jet. Prior to making any decisions on these items, it is first necessary to consider the weight to be lifted.

- a. Weight: Determine the maximum weight that is to be lifted. What can be expected regarding a typical or maximum weight of any person using the lift?
- b. Lever: The lever shown in the figure is one that pivots about a point. As it moves, the axis labeled A–A rotates through an angle θ . Is a lever design that keeps A–A aligned vertically a better one? How long should the lever be and how should it be hinged? What material should be used? Design a lever for this system.
- c. Impact object: What is the shape of the object to be impacted by the water jet? If the lever rotates as indicated in the sketch, the orientation of the object with respect to the jet also changes. Design an impact object for this system.
- d. Water jet: Select a jet diameter and velocity at the exit of the nozzle, assuming the jet diameter equals the nozzle exit diameter. As the object moves away from the nozzle, the jet has further to travel before impact. The velocity and area of the jet change with height. Is it better to let the nozzle move with the object? If so, account for this movement by requiring the jet to lift 1.15 times the agreed-upon weight of part (a). Compose the specifications for the nozzle, water jet velocity, jet diameter, and flow rate.
- e. Comment on all decisions made and on whether this water lift is feasible.


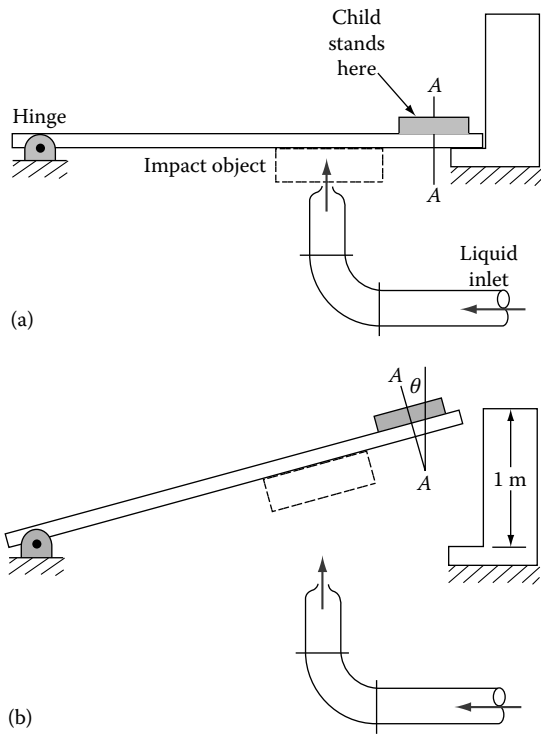


FIGURE P3.80

This page intentionally left blank

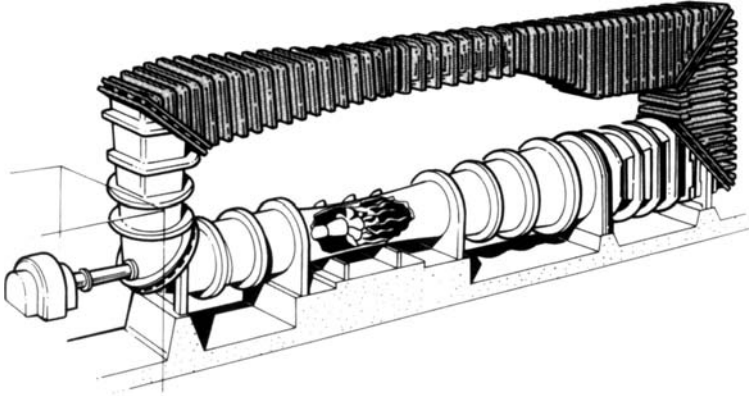4 Dimensional Analysis and Dynamic Similitude



In the preceding chapter, we wrote equations that are basic to the study of fluid mechanics. We were able to apply them and solve them for many practical problems under special conditions. In a number of cases, the descriptive equations cannot be solved exactly, however. Consequently, we must formulate an alternative method of analysis. In this chapter, we will develop such a method by relying initially on the fact that equations must be dimensionally homogeneous. Further, we will define several dimensionless ratios that are commonly encountered in various flow situations. We will also see how these dimensionless ratios are used to advantage in correlating experimental data and in modeling problems.

Modeling problems involve testing a model of a prototype. Consider, for example, a company that wishes to manufacture an airplane. Under ideal conditions, a prototype might be built and tested in a wind tunnel in which a controlled airflow can be directed past the plane. Tests and measurements would be made on the stationary plane while it is in the wind tunnel. If the airplane is large, however, a sizable wind tunnel is needed with huge fans and a tremendous power requirement, since speeds in excess of 500 mi/h may be necessary. The cost of building a prototype aircraft and testing it in an appropriate facility can therefore be prohibitive. Alternatively, a scale model of the plane can be built and tested in a smaller tunnel. Measurements on the model can then be scaled up to predict performance of the prototype even though the prototype has not been built. Clearly, the cost is considerably less. Modeling wind flow past a building, for example, is an economical way of finding the effect of a hurricane on the structure. Thus, modeling problems have many useful applications. In this chapter, we will see how dimensionless ratios are used in modeling problems.

4.1 DIMENSIONAL HOMOGENEITY AND ANALYSIS

An equation must be dimensionally homogeneous. That is, each term in the equation must have the same dimensions or units. To compare dimensions of various terms within an equation, it is

convenient to first convert the dimensions into fundamental units. Suppose we are working within the British gravitational system, in which force (F), length (L), and time (T) are considered fundamental. Mass (M) is a derived unit defined as $M = F \cdot T^2/L$. Consider, for example, Bernoulli's equation, derived in Chapter 3:

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{a constant}$$

If we use the generalized notation, the dimensions of each term become

$$\begin{aligned}\frac{p}{\rho} &= \frac{F}{L^2} \frac{L^3}{M} = \frac{F}{L^2} L^3 \frac{L}{F \cdot T^2} = \frac{L^2}{T^2} \\ \frac{V^2}{2} &= \frac{L^2}{T^2} \\ gz &= \frac{L}{T^2} L = \frac{L^2}{T^2}\end{aligned}$$

Thus, each term has dimensions of L^2/T^2 in a system in which F , L , and T dimensions are considered fundamental (British gravitational system). We could reformulate the dimensions of the Bernoulli equation in the system in which only mass (M), length (L), and time (T) are fundamental (SI system). Force is a derived unit defined as $F = M \cdot L/T^2$. Evaluating the Bernoulli equation in this system, we get

$$\begin{aligned}\frac{p}{\rho} &= \frac{M \cdot L}{T^2} \frac{1}{L^2} \frac{L^3}{M} = \frac{L^2}{T^2} \\ \frac{V^2}{2} &= \frac{L^2}{T^2} \\ gz &= \frac{L}{T^2} L = \frac{L^2}{T^2}\end{aligned}$$

In Chapter 1, we discussed the English engineering system, in which force, mass, length, and time are considered fundamental. In this system, equations are often written with a conversion factor because mass and force are both considered fundamental. Bernoulli's equation, for example, would be written as

$$\frac{p}{\rho} + \frac{V^2}{2g_c} + \frac{gz}{g_c} = \text{a constant}$$

where $g_c = 32.2 \text{ lbm} \cdot \text{ft}/(\text{lbf} \cdot \text{s}^2)$. Thus, g_c has dimensions of $M \cdot L/(F \cdot T^2)$. The dimensions of each term in the Bernoulli equation become

$$\begin{aligned}\frac{p}{\rho} &= \frac{F}{L^2} \frac{L^3}{M} = \frac{F \cdot L}{M} \\ \frac{V^2}{2g_c} &= \frac{L^2}{T^2} \frac{F \cdot T^2}{M \cdot L} = \frac{F \cdot L}{M} \\ \frac{gz}{g_c} &= \frac{L}{T^2} \frac{F \cdot T^2}{M \cdot L} L = \frac{F \cdot L}{M}\end{aligned}$$

TABLE 4.1
Dimensions and Units of Common Parameters in Fluid Mechanics

Symbol	Quantity	Dimensional System			SI	Units—British Gravitational or English
		F, L, T	M, L, T	F, M, L, T		
A	Area	L^2	L^2	L^2	m^2	ft^2
a	Acceleration	L/T^2	L/T^2	L/T^2	m/s^2	ft/s^2
a	Sonic velocity	L/T	L/T	L/T	m/s	ft/s
F	Force	F	$M \cdot L/T^2$	F	$N = kg \cdot m/s^2$	lbf
L	Length	L	L	L	m	ft
m	Mass	$F \cdot T^2/L$	M	M	kg	$slug$ or lbm
$\dot{m}$	Mass flow rate	$F \cdot T/L$	M/T	M/T	kg/s	$slug/s$ or lbm/s
P, W	Power	$F \cdot L/T$	$M \cdot L^2/T^3$	$F \cdot L/T$	$W = N \cdot m/s$	$ft \cdot lbf/s$
p	Pressure	F/L^2	$M/(L \cdot T^2)$	F/L^2	$Pa = N/m^2$	lbf/ft^2
Q	Volume flow rate	L^3/T	L^3/T	L^3/T	m^3/s	ft^3/s
t	Time	T	T	T	S	s
$V \cdot U$	Velocity	L/T	L/T	L/T	m/s	ft/s
$\mathcal{V}$	Volume	L^3	L^3	L^3	m^3	ft^3
W	Work	$F \cdot L$	$M \cdot L^2/T^2$	$F \cdot L$	$J = N \cdot m$	$lbf \cdot ft$
β	Coefficient of compressibility	L^2/F	$L \cdot T^2/M$	L^2/F	m^2/N	ft^2/lbf
θ	Angle (radians)	—	—	—	—	—
μ	Absolute viscosity	$F \cdot T/L^2$	$M(L \cdot T)$	$F \cdot T/L^2$	$N \cdot s/m^2$	$lbf \cdot s/ft^2$
ν	Kinematic viscosity	L^2/T	L^2/T	L^2/T	m^2/s	ft^2/s
ρ	Density	$F \cdot T^2/L^4$	M/L^3	M/L^3	kg/m^3	$slug/ft^3$ or lbm/ft^3
σ	Surface tension	F/L	M/T^2	F/L	N/m	lbf/ft
τ	Shear stress	F/L^2	$M/L \cdot T^2$	F/L^2	$Pa = N/m^2$	lbf/ft^2
ω	Angular velocity	$1/T$	$1/T$	$1/T$	$1/s$	$1/s$

Again each term of the equation has the same dimensions. The equation is thus dimensionally homogeneous. Table 4.1 provides dimensions of physical quantities that are commonly encountered in fluid mechanics.

4.1.1 RAYLEIGH METHOD

We now formulate the first technique of dimensional analysis—known as the **Rayleigh method**—by an example. Consider that we are trying to determine the force exerted on a flat plate by a jet of liquid. Without knowing what was derived in Chapter 3, we might speculate that this force is a function of liquid density (ρ), jet velocity (V), jet area (A), angle of attack between the jet and the plate (θ), and the distance between the nozzle and the plate (ℓ). Thus, force (F) is an as yet undetermined function of these variables.

$$F = F(\rho, V, A, \theta, \ell)$$

(4.1)

Next we assume that the functional dependence can be written as a product by separating the variables according to

$$F = C_1 \rho^{a_1} V^{a_2} A^{a_3} \theta^{a_4} \ell^{a_5}$$

(4.2)

where the a_i exponents are unknown, as is the constant C_1 . We now write Equation 4.2 with respective dimensions substituted for each term:

$$\frac{M \cdot L}{T^2} = C_1 \left(\frac{M}{L^3} \right)^{a_1} \left(\frac{L}{T} \right)^{a_2} (L^2)^{a_3} (0)^{a_4} (L)^{a_5}$$

where we have arbitrarily elected to use the M, L, T system. However, either system is acceptable. The dimension of θ is in radians. Taking the natural logarithm of each quantity yields

$$\begin{aligned} \ell n M + \ell n L - 2 \ell n T &= \ell n C_1 + (a_1 \ell n M - 3a_1 \ell n L) \\ &+ (a_2 \ell n L - a_2 \ell n T) + (2a_3 \ell n L) \\ &+ (a_4 \ell n 0) + (a_5 \ell n L) \end{aligned}$$

Since this equation must be dimensionally homogeneous, all coefficients of the time terms on both sides of the equation must be equal. Thus,

$$T: -2 = -a_2$$

For M and L , we have

$$M: 1 = a_1$$

$$L: 1 = -3a_1 + a_2 + 2a_3 + a_5$$

There are three equations and four unknowns. Solving simultaneously gives

$$a_2 = 2$$

$$a_1 = 1$$

$$a_3 = 1 - \frac{a_5}{2}$$

Substituting into Equation 4.2, we get

$$F = C_1 \rho V^2 \frac{A}{A^{a_5/2}} \theta^{a_4} \ell^{a_5}$$

Combining like terms yields

$$\frac{F}{\rho V^2 A} = C_1 \left(\frac{l}{A^{1/2}} \right)^{a_5} \theta^{a_4} \quad (4.3)$$

In functional form,

$$\frac{F}{\rho V^2 A} = F \left(\frac{\ell}{A^{1/2}}, \theta \right) \quad (4.4a)$$

As a check on this result, we see that each resulting term is dimensionless.

Note that in solving the algebraic equations simultaneously, a_5 was left as an unknown. If a_3 is left as unknown instead, the final form of the equation becomes

$$\frac{F}{\rho V^2 \ell^2} = F \left(\frac{A}{\ell^2}, \theta \right) \quad (4.4b)$$

Both forms, Equations 4.4a and 4.4b, are correct. In fact, multiplication of $F/\rho V^2 \ell^2$ by ℓ^2/A in Equation 4.4b gives $F/\rho V^2 A$ of Equation 4.4a. This result suggests that it is possible to manipulate

the final result algebraically to obtain other forms with no loss in accuracy or generality. In other words, once the dimensionless terms or groups are determined, the result can be modified to obtain other dimensionless groups without starting over and solving for different exponents. As an example, consider Equation 4.4a:

$$\frac{F}{\rho V^2 A} = F\left(\frac{\ell}{A^{1/2}}, \theta\right) \quad (4.4a)$$

We can use any combination of groups to yield other groups. Thus

$$\frac{F}{\rho V^2 A} \cdot \left(\frac{A^{1/2}}{\ell}\right)^2 = \frac{F}{\rho V^2 \ell^2}$$

The new term $F/\rho V^2 \ell^2$ can now be substituted in Equation 4.4a for either of the terms used to produce it to obtain a different relationship:

$$\frac{F}{\rho V^2 \ell^2} = F\left(\frac{\ell}{A^{1/2}}, \theta\right) \quad (4.4c)$$

or

$$\frac{F}{\rho V^2 A} = F\left(\frac{F}{\rho V^2 \ell^2}, \theta\right) \quad (4.4d)$$

Equations 4.4a through 4.4d are equally correct because in each equation we have a dimensionally homogeneous relationship. In addition, as was done here, we can use the reciprocal of any term or the square of any term (or more than two terms) as long as our result is a relationship that is dimensionally homogeneous. Thus, dimensional analysis provides a means for us to express a functional relationship in terms of the variables of the problem at hand.

Returning to our original objective of predicting the force exerted on a flat plate by a jet of liquid, we would at this point have to make actual measurements on a jet impinging on a flat plate to determine values for the exponents and constants that are still unknown (for example, C_1 , a_4 , and a_5 of Equation 4.3).

Thus, we began with a functional relationship in an equation (Equation 4.2) containing one unknown constant and five unknown exponents. By using dimensional analysis to reduce the number of unknowns to three, we are required to perform fewer experiments—and, moreover, the final form of the equation is known. At the outset, we speculated as to which variables were important. In performing experiments to evaluate exponents, we would learn whether the variables originally chosen were significant. If the final derived equation did not correlate the measurements satisfactorily, we would rederive an expression with dimensional analysis and include more quantities.

Example 4.1

Liquid in a tank is being drained through a pipe at tank bottom. The time it takes to drain the liquid is to be determined. Use dimensional analysis to obtain an expression for the time in terms of the pertinent variables.

SOLUTION

The problem does not state what variables we are to use in the analysis. We therefore rely on intuitive reasoning to determine which variables are significant. Thus, we hypothesize that the time t depends on

the liquid height h above the exit pipe, the liquid velocity V in the exit pipe, the exit pipe diameter D , and the fluid properties—density and viscosity, ρ and μ , respectively. We therefore write

$$t = t(h, V, D, \rho, \mu)$$

or

$$t = C_1 h^{a_1} V^{a_2} D^{a_3} \rho^{a_4} \mu^{a_5} \quad (i)$$

In terms of dimensions,

$$T = C_1 L^{a_1} \left(\frac{L}{T} \right)^{a_2} L^{a_3} \left(\frac{F \cdot T^2}{L^4} \right)^{a_4} \left(\frac{F \cdot T}{L^2} \right)^{a_5}$$

where in this case we have selected the F, L, T system. For each dimension, the exponents from this equation are written directly without the intermediate step of taking the logarithm of the equation:

$$F: 0 = a_4 + a_5$$

$$L: 0 = a_1 + a_2 + a_3 - 4a_4 - 2a_5$$

$$T: 1 = -a_2 + 2a_4 + a_5$$

Rewriting the force equation to solve for a_4 , we get

$$\underline{a_4 = -a_5}$$

Substituting into the time equation, we get

$$1 = -a_2 - 2a_5 + a_5$$

or

$$\underline{a_2 = -1 - a_5}$$

Substituting into the length equation yields

$$0 = a_1 - 1 - a_5 + a_3 + 4a_5 - 2a_5$$

which becomes

$$\underline{a_1 = 1 - a_3 - a_5}$$

Combining these underlined expressions with Equation i of this example, the following results:

$$t = C_1 h^{(1-a_3-a_5)} V^{(-1-a_5)} D^{a_3} \rho^{-a_5} \mu^{a_6}$$

or

$$t = C_1 \frac{h}{h^{a_3} h^{a_5}} \frac{1}{V^{a_5}} D^{a_3} \frac{1}{\rho^{a_5}} \mu^{a_5}$$

Grouping terms with like exponents gives

$$t = C_1 \frac{h}{V} \left(\frac{D}{h} \right)^{a_3} \left(\frac{\mu}{\rho V h} \right)^{a_5}$$

In functional form,

$$\frac{Vt}{h} = t \left(\frac{D}{h}, \frac{\mu}{\rho V h} \right)$$

The original assumption of the variables thought important now has to be proven by experiment. If a low or no correlation (statistically) between the preceding variables is found to exist, the analysis must be repeated with more or with different terms to find a new functional dependence.

It is prudent in problems of the type in the preceding example to have methods of checking the results. As can be discerned from the solution, the final equation should contain only dimensionless terms or groups. In addition, we can determine how many dimensionless terms or groups to expect. Consider for example, the relationship written in Equation 4.1 for the force exerted on a flat plate by a jet of liquid:

$$F = F(\rho, V, A, \theta, \ell) \quad (4.1)$$

There are six variables in this equation (F , ρ , V , A , θ , and ℓ). We used the M , L , T systems (three fundamental dimensions), which yielded three equations that related the a_i exponents. The number of dimensionless groups that result is

$$\left(\begin{array}{c} \text{number of} \\ \text{variables} \end{array} \right) - \left(\begin{array}{c} \text{number of} \\ \text{fundamental} \\ \text{dimensions} \end{array} \right) = \left(\begin{array}{c} \text{number of} \\ \text{dimensionless} \\ \text{groups} \end{array} \right)$$

For Equation 4.1, we would therefore expect to obtain

$$6 \text{ variables} - 3 \text{ dimensions} = 3 \text{ dimensionless groups}$$

Equations 4.4a through 4.4d show this to be the case.

Likewise for the draining tank in Example 4.1, we wrote

$$t = t(h, V, D, \rho, \mu)$$

We used the F , L , T system and each dimension yielded an equation. We would therefore expect

$$6 \text{ variables} - 3 \text{ dimensions} = 3 \text{ dimensionless groups}$$

4.1.2 BUCKINGHAM PI METHOD

Another approach to dimensional analysis is through the **Buckingham pi method**. In this method, the dimensionless ratios are called Π groups or Π parameters and could have been developed in a manner outlined by the following steps:

1. Select variables that are considered pertinent to the problem by using intuitive reasoning and write the relationship between the variables all on one side of the equation.
2. Choose repeating variables—that is, variables containing all m dimensions of the problem. It is convenient to select one variable that specifies scale (a length, for example), another that specifies kinematic conditions (velocity), and one that is a characteristic of the fluid (such as density). For a system with three fundamental dimensions, ρ , V , and D are suitable. For a system with four fundamental dimensions, ρ , V , D , and g_c are satisfactory. The repeating variables chosen should be independent of each other.
3. Write Π groups in terms of unknown exponents.
4. Write the equations relating the exponents for each group and solve them.
5. Obtain the appropriate dimensionless parameters by substitution into the Π groups.

Solving a problem by following these five steps is illustrated in the next example.

Example 4.2

Liquid flows horizontally through a circular tube filled with sand grains that are spherical and of the same diameter. As liquid flows through this sand bed, the liquid experiences a pressure drop. The pressure drop Δp is a function of average fluid velocity V , diameter D of the sand grains, spacing S between adjacent grains, liquid density ρ , and viscosity μ . Use dimensional analysis to determine an expression for the pressure drop in terms of these variables.

SOLUTION

We solve using the F, M, L, T system:

Step 1: $f(\Delta p, V, D, S, \rho, \mu, g_c) = 0$.

Step 2: Repeating variables $\rightarrow \rho, V, D, g_c$.

Step 3: We are expecting three dimensionless groups or Π parameters (7 variables – 4 dimensions = 3 groups):

$$\begin{aligned}\Pi_1 &= \rho^{a_1} V^{b_1} D^{c_1} g_c^{d_1} \Delta p^{e_1} = \left(\frac{M}{L^3}\right)^{a_1} \left(\frac{L}{T}\right)^{b_1} (L)^{c_1} \left(\frac{M \cdot L}{F \cdot T^2}\right)^{d_1} \left(\frac{F}{L^2}\right)^{e_1} \\ \Pi_2 &= \rho^{a_2} V^{b_2} D^{c_2} g_c^{d_2} S^{e_2} = \left(\frac{M}{L^3}\right)^{a_2} \left(\frac{L}{T}\right)^{b_2} (L)^{c_2} \left(\frac{M \cdot L}{F \cdot T^2}\right)^{d_2} (L)^{e_2} \\ \Pi_3 &= \rho^{a_3} V^{b_3} D^{c_3} g_c^{d_3} \mu^{e_3} = \left(\frac{M}{L^3}\right)^{a_3} \left(\frac{L}{T}\right)^{b_3} (L)^{c_3} \left(\frac{M \cdot L}{F \cdot T^2}\right)^{d_3} \left(\frac{F \cdot T}{L^2}\right)^{e_3}\end{aligned}$$

Step 4:

Π_1 group:

$$M: 0 = a_1 + d_1$$

$$L: 0 = -3a_1 + b_1 + c_1 + d_1 - 2e_1$$

$$T: 0 = -b_1 - 2d_1$$

$$F: 0 = d_1 + e_1$$

Solving, we get $a_1 = -d_1$, $b_1 = -2d_1$, $c_1 = 0$, $e_1 = d_1$.

Π_2 group:

$$M: 0 = a_2 + d_2$$

$$L: 0 = -3a_2 + b_2 + c_2 + d_2 - e_2$$

$$T: 0 = -b_2 - 2d_2$$

$$F: 0 = d_2$$

Solving, we get $a_2 = 0$, $b_2 = 0$, $c_2 = -e_2$, $d_2 = 0$.

Π_3 group:

$$M: 0 = a_3 + d_3$$

$$L: 0 = -3a_3 + b_3 + c_3 + d_3 - 2e_3$$

$$T: 0 = -b_3 - 2d_3 + e_3$$

$$F: 0 = -d_3 + e_3$$

Solving, we get $a_3 = -d_3$, $b_3 = -d_3$, $c_3 = -d_3$, $e_3 = d_3$.

Step 5:

$$\Pi_1 = \left(\frac{\Delta p g_c}{\rho V^2} \right)^{d_1}$$

$$\Pi_2 = \left(\frac{D}{S} \right)^{c_2}$$

$$\Pi_3 = \left(\frac{\mu g_c}{\rho V D} \right)^{d_3}$$

We can now write the solution as

$$\frac{\Delta p g_c}{\rho V^2} = f \left(\frac{D}{S}, \frac{\mu g_c}{\rho V D} \right)$$

4.2 DIMENSIONLESS RATIOS

There are several main classes of problems in fluid mechanics: those that involve closed-conduit flows (such as pipe flow), those that involve flows with one surface exposed (such as flow in a river), those that involve flow past an object (such as an airplane in flight), and those that involve no contact with any surfaces (such as a spray). In this section, we will derive dimensionless ratios that are significant for these categories to serve as an introduction to each.

4.2.1 FLOW IN A PIPE OR CONDUIT

Flow in a closed conduit results from a difference in pressure Δp from inlet to outlet. The pressure inside decreases linearly with length L and is affected by fluid properties and flow rate. If the velocity of flow is high with respect to the sonic velocity of the fluid medium, as with compressible flows, then sonic velocity too must be included. Thus, for a general pipe flow problem, we have

$$\Delta p = \Delta p(\rho, V, \mu, D, L, a) \quad (4.5a)$$

where a is introduced as the sonic velocity. Performing a dimensional analysis, we obtain

$$\frac{\Delta p}{\rho V^2} = \Delta p \left(\frac{\rho V D}{\mu}, \frac{V}{a}, \frac{L}{D} \right) \quad (4.5b)$$

The term on the left-hand side, when written $\Delta p / \frac{1}{2} \rho V^2$, is called the **pressure coefficient**; the $\frac{1}{2}$ is added as a matter of custom to make the denominator a kinetic energy term. Next, $\rho V D / \mu$ is called the **Reynolds number** of the flow.

Finally, V/a is known as the **Mach number**, which is important in gas flows. It is interesting to manipulate these dimensionless ratios to discover that each is a ratio of forces. Suppose we examine the Reynolds number. The dimensions of numerator and denominator are

$$\begin{aligned} \rho V D &= \frac{M}{L^3} \frac{L}{T} L = \frac{F \cdot T^2}{L^4} \frac{L}{T} L = \frac{F \cdot T}{L^2} \\ \mu &= \frac{F \cdot T}{L^2} \end{aligned}$$

The force in the numerator is an inertia force; the denominator is a viscous force. Thus the Reynolds number is a ratio of inertia to viscous forces in the flow. Similarly, the pressure coefficient is a ratio of pressure forces to inertia forces. The Mach number is a ratio of dynamic force at the flow velocity to the dynamic force at the sonic velocity. Flow of incompressible fluids in conduits is treated in more detail in Chapter 5, and flow of compressible fluids in conduits is treated in more detail in Chapter 8.

4.2.2 FLOW OVER IMMERSED BODIES

When an object flows through a fluid medium, forces are exerted on the object due to pressure variations in the flow field and due to skin friction or viscous effects along the surface. The force exerted in the direction of flow is called the **drag force** D_f . The flow acting perpendicular to the flow direction is the **lift force** L_f . Both act over an area. We therefore write

$$\Delta p = \Delta p(D_f, L_f, \rho, V, \mu, D) \quad (4.6a)$$

Solving, we obtain

$$\frac{\Delta p}{\rho V^2} = \Delta p \left(\frac{D_f}{\rho V^2 D^2}, \frac{L_f}{\rho V^2 D^2}, \frac{\rho V D}{\mu} \right) \quad (4.6b)$$

The term containing drag force when written as $D_f / \frac{1}{2} \rho V^2 D^2$ is called the **drag coefficient** and represents the ratio of drag to inertia forces. The term $L_f / \frac{1}{2} \rho V^2 D^2$ is called the **lift coefficient**. Flow over immersed bodies is treated in detail in Chapter 6.

The previous discussion has introduced some basic concepts and dimensionless ratios encountered in fluid mechanics. They are by no means complete, however, as there are many more dimensionless ratios not discussed here. A summary of the common ratios appears in Table 4.2. Note that in this table, a number of ratios have $\frac{1}{2} \rho V^2$ (= kinetic energy) in the denominator. Often such ratios are simply called *coefficients*. Thus drag force/kinetic energy may be called the drag coefficient.

4.2.3 OPEN-CHANNEL FLOW

Flow in an open channel such as a river or spillway is maintained by gravity forces analogous to pressure forces in pipe flow. Because pressure on the surface is atmospheric, pressure is not a significant parameter. Instead, differences in liquid depth at two points a distance L apart influence the flow. Therefore, we can write

$$\Delta z = \Delta z(V, g, L) \quad (4.7a)$$

TABLE 4.2
Some Common Dimensionless Ratios

Ratio	Name	Symbol	Force Ratio
$\rho VD/\mu$	Reynolds number	Re	Inertia/viscous
$\Delta p/\frac{1}{2}\rho V^2$	Pressure coefficient	C_p	Pressure/inertia
V^2/gL	Froude number	Fr	Inertia/gravity
$\rho V^2 L/\sigma$	Weber number	We	Inertia/surface tension
$D_f/\frac{1}{2}\rho V^2 D^2$	Drag coefficient	C_D	Drag/inertia
$L_f/\frac{1}{2}\rho V^2 D^2$	Lift coefficient	C_L	Lift/inertia
V/a	Mach number	M	Inertia at V/inertia at a
$F_T/\frac{1}{2}\rho V^2 D^2$	Thrust coefficient	C_T	Thrust/inertia

Solving, we obtain

$$\frac{\Delta z g}{V^2} = \Delta z \left(\frac{V^2}{gL} \right)$$

(4.7b)

The term on the left-hand side, when written $\Delta z g/\frac{1}{2} V^2$ is called a **head coefficient**; V^2/gL (or in some texts $V/\sqrt{gL}$) is called the **Froude number**, which represents the ratio of inertia to gravity forces. Open-channel flows are treated in more detail in Chapter 7.

4.2.4 UNBOUNDED FLOWS

Flows at gas–liquid or liquid–liquid interfaces where no solid surfaces are in contact are called unbounded flows. Examples include sprays and jets. In this case, pressure forces acting at an interface are balanced by surface tension forces that act over an area. Thus, we write

$$\Delta p = \Delta p(\rho, \sigma, L, V)$$

(4.8a)

Solving yields

$$\frac{\Delta p}{\rho V^2} = \Delta p \left(\frac{\rho V^2 L}{\sigma} \right)$$

(4.8b)

where $\rho V^2 L/\sigma$ is known as the **Weber number** and represents the ratio of inertia to surface tension forces.

4.3 DIMENSIONAL ANALYSIS BY INSPECTION

Table 4.2 contains dimensionless ratios that are commonly used in fluid mechanics. Therefore, when performing a dimensional analysis, we find it useful to express the result in terms of generally accepted ratios.

A table such as Table 4.2 can be used to advantage in performing a dimensional analysis. In Section 4.1, when an analysis was performed, the dimensions of each term were substituted into the equation, and exponents were equated. The equations were solved simultaneously to obtain values for the exponents. The values were then substituted back into the original equation, and like terms were collected to yield a functional relationship between dimensionless groups.

In this section, we will see that the technique of solving for exponents can be skipped with the aid of Table 4.2 if we remember that the objective is to find commonly recognized dimensionless groups. Suppose, for example, that we are analyzing a turbine that can be run with water or a liquid

refrigerant as the working fluid. It is believed that the shaft torque T_s is a function of velocity (V), fluid density (ρ), viscosity (μ), angular velocity of the blades (ω), efficiency (η), and some characteristic dimension of the turbine blade geometry (D). We write

$$T_s = T_s(V, \rho, \mu, \omega, \eta, D) \quad (4.9)$$

In the F, L, T system, the dimensions of each term are written as

$$F \cdot L = T_s(L/T, F \cdot T^2/L^4, F \cdot T/L^2, 1/T, 0, L)$$

We have seven variables and three dimensions, so we are seeking $7 - 3 = 4$ independent dimensionless groups. If we combine the geometry term D with rotational speed ω , we obtain dimensions of velocity V . Thus $D\omega/V$ (or $V/D\omega$) is a dimensionless group. Efficiency η is already dimensionless. Density ρ can be combined with velocity V and geometry term D to obtain the dimensions of shaft torque T_s as follows:

$$\begin{aligned} \rho \quad V^2 \quad D^3 &\rightarrow T_s \\ \frac{F \cdot T^2}{L^4} \cdot \frac{L^2}{T^2} \cdot L^3 &= F \cdot L \end{aligned}$$

Therefore, $T_s/\rho V^2 D^3$ (or $\rho V^2 D^3/T_s$) is our third dimensionless group. (Note that this term when divided by $\frac{1}{2}$ could be called a torque coefficient = torque/kinetic energy.) Viscosity μ , velocity V , and geometry term D can be combined to give dimensions of torque as

$$\begin{aligned} \mu \quad V \quad D^2 &\rightarrow T_s \\ \frac{F \cdot T}{L} \cdot \frac{L}{T} \cdot L^2 &= F \cdot L \end{aligned}$$

The ratio $T_s/\mu V D^2$ (or its reciprocal) is the fourth term. Note that the four ratios that we have written are all independent. That is, none of them can be obtained by manipulating the others together.

It is possible to put together another dimensionless group by using the variables of Equation 4.9. We see that the density ρ , velocity V , geometry term D , and viscosity μ can be combined to form a recognizable ratio: the Reynolds number $\rho V D/\mu$. This is a fifth group, but we are seeking only four *independent* groups. The Reynolds number can be obtained by multiplication of our third and fourth groups:

$$\frac{\rho V^2 D^3}{T_s} \frac{T_s}{\mu V D^2} = \frac{\rho V D}{\mu}$$

So even though we have five groups, they are not all independent. We can express our solution to this problem in terms of any of the four groups, but we want to give priority to the recognized groups without omitting terms that appear only once (efficiency η in this case).

The solution we select, then, is

$$\frac{T_s}{\frac{1}{2} \rho V^2 D^3} = T_s \left(\frac{V}{D\omega}, \eta, \frac{\rho V D}{\mu} \right) \quad (4.10)$$

Although $T_s/\mu V D^2$ can be used in place of $\rho V D/\mu$, the latter, being an easily recognizable quantity, is preferred.

Example 4.3*

When ships were built with wood-clad hulls, it was important to know how the finish on the wood surface affected the drag. The drag force directly influenced the power required to propel the ship through water. Measurements of drag force were made by pulling wooden boards, each with different surface finishes, while they were submerged. The force was thus measured directly.

Consider that the drag force D_f in such an experiment is a function of liquid properties—density ρ and viscosity μ , the length L of the board, the width w of the board, and the velocity V of the board as it is being pulled through the water. Develop a relationship between these variables.

SOLUTION

The drag force can be written in functional form as

$$D_f = D_f(\rho, \mu, L, w, V)$$

We have six variables and three dimensions, so we expect three dimensionless groups (6 variables – 3 dimensions). We can solve this problem by inspection with the aid of Table 4.2.

For our first group, examine the functional equation just given to determine if any obvious ratios stand out. Length L and width w both have the same dimension, so we identify L/w (or w/L) as one of our groups.

From Table 4.2, we examine the drag coefficient C_D . If our functional equation contains all the parameters that appear in the drag coefficient C_D , then the drag coefficient is one of the groups we seek. So the ratio

$$C_D = \frac{D_f}{\frac{1}{2}\rho V^2 L^2}$$

is selected as our second group.

We next compare our terms to the definition of the Reynolds number. Because density, velocity, length, and viscosity all appear in our functional equation,

$$\text{Re} = \frac{\rho V L}{\mu}$$

is identified as our third group. The final result is

$$\frac{D_f}{\frac{1}{2}\rho V^2 L^2} = D_f\left(\frac{L}{w}, \frac{\rho V L}{\mu}\right)$$

Note that width w could be used instead of length L in the drag coefficient and in the Reynolds number. The $\frac{1}{2}$ was added to the denominator of the left-hand side so that the denominator becomes a kinetic energy term. Our final result relates commonly recognized groups. Although other dimensionless groups might be derivable, the recognized groups are preferred.

4.4 SIMILITUDE

In fluid mechanics, physical modeling depends on similitude, or similarity. That is, a prototype can be scaled down (or up), and a model can be built that represents the prototype. Measurements made on the model can then be scaled up (or down) to predict what will occur with the prototype. In many cases, a model is much less costly to build and easier to take data from than a prototype. Before a

* Information for this example was provided by Professor C.R. Wimberly and Ms L.K. Morse.

scale model can be constructed, however, certain rules of similitude must be observed. Because the prototype and model must be geometrically and dynamically similar, we will discuss the rules of similarity first and then apply them to various problems.

4.4.1 GEOMETRIC SIMILARITY

Geometric similarity between two configurations is achieved when they are of different sizes but otherwise appear identical. Consider two cylinders of different diameter and length as shown in Figure 4.1. The prototype has diameter D and length L ; the model has diameter D_M and length L_M . The ratios of diameters and of lengths are

$$\frac{D_M}{D} = \lambda_1$$

$$\frac{L_M}{L} = \lambda_2$$

We require that for geometric similarity, $\lambda_1 = \lambda_2$; in other words, we require that every linear dimension on the two must be related by the same scale ratio.

As another example, consider two square tubes of different size (see Figure 4.2). For geometric similarity, we require that

$$\frac{L_M}{L} = \frac{S_M}{S} = \lambda \tag{4.11}$$

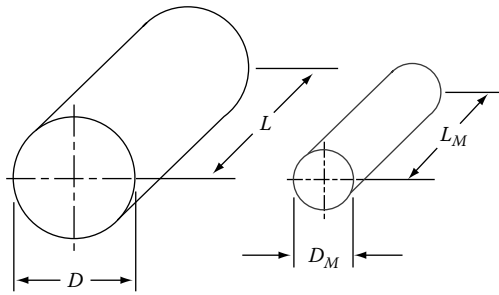


FIGURE 4.1 Similar cylinders.

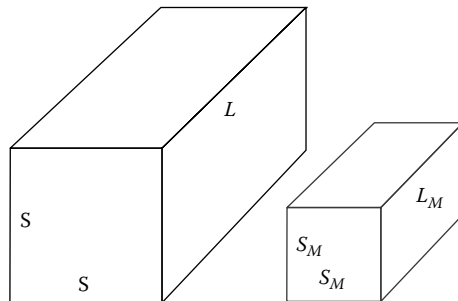


FIGURE 4.2 Similar square tubes.

4.4.2 DYNAMIC SIMILARITY

Dynamic similarity is the second condition that must be met before two flow situations can be considered similar. The dynamic parameters must be related in a certain manner. Just as Equation 4.11 gives a scale ratio for length, we must have corresponding expressions for force, mass, and time. These are

$$F_M = \eta F \quad (4.12a)$$

$$m_M = \zeta m \quad (4.12b)$$

$$t_M = \tau t \quad (4.12c)$$

respectively, where the subscript M refers to the model.

From these expressions, we can obtain scale ratios for any dynamic or kinematic parameter and for fluid properties. With the scale ratio $\ell_M = \lambda \ell$, we have

$$\text{Velocity: } V_M = \frac{\lambda}{\tau} V$$

$$\text{Acceleration: } a_M = \frac{\lambda}{\tau^2} a \quad (4.12d)$$

$$\text{Density: } \rho_M = \frac{\zeta}{\lambda^3} \rho$$

$$\text{Pressure: } p_M = \frac{\eta}{\lambda^2} p$$

Whether we are working with a model or a prototype, Newton's law applies:

$$F = ma \quad (4.13a)$$

and

$$F_M = m_M a_M \quad (4.13b)$$

By substitution from Equations 4.11 and 4.12, Equation 4.13b becomes

$$\eta F = \zeta m \frac{\lambda}{\tau^2} a$$

Dividing by Equation 4.13a gives

$$\eta = \frac{\zeta \lambda}{\tau^2}$$

or

$$1 = \frac{\zeta \lambda}{\tau^2 \eta}$$

The form of this equation will be adjusted slightly to obtain an expression that is more convenient to use in fluid mechanics. Multiplying numerator and denominator by λ^3 yields

$$1 = \frac{\zeta \lambda^4}{\tau^2 \lambda^3 \eta}$$

Separating these terms appropriately gives

$$1 = \frac{\zeta}{\lambda^3} \frac{\lambda^2}{\tau^2} \frac{\lambda^2}{\eta}$$

or

$$1 = \frac{(\rho_M/\rho)(V_M^2/V^2)(\ell_M^2/\ell^2)}{F_M/F}$$

This equation can be rewritten as

$$\left. \frac{F}{\rho V^2 \ell^2} \right|_M = \frac{F}{\rho V^2 \ell^2} \quad (4.14)$$

Equation 4.14 expresses the condition for dynamic similarity between model and prototype; the value of the dimensionless parameter $F/\rho V^2 \ell^2$ must be the same in model and in prototype at geometrically similar locations. The force F includes gravity forces, electric forces, pressure forces, magnetic forces, and surface tension forces.

Let us examine a case in which pressure forces are important. Force due to pressure is $F = \Delta p \ell^2$. Substitution into Equation 4.14 gives

$$\left. \frac{\Delta p \ell^2}{\rho V^2 \ell^2} \right|_M = \frac{\Delta p \ell^2}{\rho V^2 \ell^2}$$

or, after multiplication by 2,

$$\left. \frac{\Delta p}{\frac{1}{2} \rho V^2} \right|_M = \frac{\Delta p}{\frac{1}{2} \rho V^2} \quad (4.15)$$

Thus, for dynamic similarity in problems in which pressure forces are important, the pressure coefficient in model and prototype must be identical at geometrically similar locations.

Let us next examine viscous forces. For Newtonian fluids,

$$\tau = \mu \frac{dV}{dy}$$

and

$$F = \tau \ell^2 = \mu \frac{dV}{dy} \ell^2$$

We can write

$$F = \mu \frac{\Delta V}{\Delta \ell} \ell^2$$

or

$$F \propto \mu V \ell$$

Using Equation 4.14, we have

$$\left. \frac{\mu V \ell}{\rho V^2 \ell^2} \right|_M = \frac{\mu V \ell}{\rho V^2 \ell^2}$$

or, inverting, we get

$$\left. \frac{\rho V \ell}{\mu} \right|_M = \frac{\rho V \ell}{\mu} \quad (4.16)$$

Thus, when viscous or frictional effects are important, the Reynolds number between model and prototype must be the same.

Let us now examine a case in which gravity forces are important. The force due to gravity is $F = mg$, which is proportional to $\rho \ell^3 g$. Substituting into Equation 4.14 yields

$$\left. \frac{\rho \ell^3 g}{\rho V^2 \ell^2} \right|_M = \frac{\rho \ell^3 g}{\rho V^2 \ell^2}$$

or, inverting,

$$\left. \frac{V^2}{g \ell} \right|_M = \frac{V^2}{g \ell} = \text{Froude number} \quad (4.17)$$

Thus, the Froude number in both model and prototype must be identical at geometrically similar locations for dynamic similarity in problems in which gravity forces are important.

Finally, consider surface tension forces. The force due to surface tension is $F = \sigma \ell$. Combining with Equation 4.14, we obtain

$$\left. \frac{\sigma \ell}{\rho V^2 \ell^2} \right|_M = \frac{\sigma \ell}{\rho V^2 \ell^2}$$

or, inverting,

$$\left. \frac{\rho V^2 \ell}{\sigma} \right|_M = \frac{\rho V^2 \ell}{\sigma} \quad (4.18)$$

Thus, in problems in which surface tension forces are important, the Weber numbers must be identical in model and prototype. The importance of using the widely recognized ratios in fluid mechanics is now evident.

4.4.3 MODELING

We have seen that geometric and dynamic similarity must be ensured if a prototype is to be modeled properly. Furthermore, these criteria imply that various dimensionless ratios between model and prototype must be identical. Use of these dimensionless ratios in modeling problems is best illustrated by example.

Example 4.4

A capillary tube has an 8-mm inside diameter through which liquid fluorine refrigerant R-11 flows at a rate of $0.03 \text{ cm}^3/\text{s}$. The tube is to be used as a throttling device in an air conditioning unit. A model of this flow is constructed by using a pipe of 3 cm inside diameter and water as the fluid medium.

- a. What is the required velocity in the model for dynamic similarity?
- b. When dynamic similarity is reached, the pressure drop in the model is measured as 50 Pa. What is the corresponding pressure drop in the capillary tube?

SOLUTION

- a. In this case the model is much larger than the prototype. For dynamic similarity between the two, the Reynolds numbers must be identical. Thus,

$$\left. \frac{\rho V D}{\mu} \right|_M = \frac{\rho V D}{\mu}$$

or

$$V_M = V \left(\frac{D}{D_M} \right) \left(\frac{\mu_M}{\mu} \right) \left(\frac{\rho}{\rho_M} \right)$$

In the prototype,

$$A = \frac{\pi(0.008)^2}{4} = 5.03 \times 10^{-5} \text{ m}^2$$

so, from continuity,

$$V = \frac{Q}{A} = \frac{0.03 \times 10^{-4}}{5.03 \times 10^{-5}} = 0.0596 \text{ m/s}$$

From Table A.5,

$$\frac{\mu_M}{\mu} = \frac{0.89 \times 10^{-3}}{0.42 \times 10^{-3}}$$

and

$$\frac{\rho_M}{\rho} = \frac{1}{1.48}$$

By substitution,

$$V_M = 0.0596 \left(\frac{0.008}{0.03} \right) \left(\frac{0.89}{0.42} \right) (1.48)$$

$$V_M = 0.050 \text{ m/s}$$

- b. In this case, the pressure coefficient in model and prototype must be the same. Thus

$$\left. \frac{\Delta p}{\rho V^2} \right|_M = \frac{\Delta p}{\rho V^2}$$

or

$$\Delta p = \Delta p_M \left(\frac{\rho}{\rho_M} \right) \left(\frac{V^2}{V_M^2} \right)$$

By substitution, we get

$$\Delta p = (50 \text{ Pa}) \left(\frac{1.48}{1} \right) \left(\frac{0.0596}{0.05} \right)^2$$

$$\Delta p = 105 \text{ Pa}$$

Example 4.5

The characteristics of a ship 50 ft in length are to be studied with a 5-ft-long model. The ship velocity is 12 knots. What is the required velocity of the model for dynamic similarity? Measurements on the model indicate a drag force of 5 lbf. What is the expected drag on the prototype? Assume water to be the fluid in both cases and neglect viscous effects.

SOLUTION

The flow involves an open channel type of geometry, so dynamic similarity is achieved for equal Froude numbers. Thus,

$$\left. \frac{V^2}{g\ell} \right|_M = \frac{V^2}{g\ell}$$

or

$$V_M^2 = V^2 \frac{\ell_M}{\ell}$$

The scale ratio is given as

$$\lambda = \frac{\ell_M}{\ell} = \frac{5 \text{ ft}}{50 \text{ ft}} = \frac{1}{10}$$

With the ship velocity given as 12 knots, the corresponding model velocity for dynamic similarity is

$$V_M^2 = (12)^2 \frac{1}{10} = 14.4$$

or

$$V_M = 3.8 \text{ knots}$$

To relate drag measurements between model and prototype, we use the drag coefficient. We have, from Table 4.2,

$$\left. \frac{D_f}{\frac{1}{2} \rho V^2 D^2} \right|_M = \frac{D_f}{\frac{1}{2} \rho V^2 D^2}$$

Since the liquid is the same in both cases, we can solve for the drag force exerted on the prototype to get

$$D_f = D_{fM} \frac{V^2}{V_M^2} \frac{D^2}{D_M^2}$$

All parameters are known. Substituting gives

$$D_f = 5 \left(\frac{12}{3.8} \right)^2 \left(\frac{10}{1} \right)^2$$

$$D_f = 5000 \text{ lbf}$$

Thus, if dynamic similarity conditions are met, the drag force on the prototype will be 5000 lbf.

Example 4.6

Octane is used as a fuel for a certain engine and is sprayed into air at the engine intake. The spray nozzle orifice is 0.122 in. in diameter. The average velocity of the droplet–air mix is 100 ft/s, and the octane concentration is small enough that the density of the mix is about equal to that of air. The system is to be modeled with an orifice that is 0.25 in. in diameter spraying water in air. Determine the average velocity of the water–air mix for dynamic similarity between the two.

SOLUTION

In this case, the Weber numbers must be identical:

$$\frac{\rho V^2 \ell}{\sigma} \bigg|_M = \frac{\rho V^2 \ell}{\sigma}$$

Taking the densities in both cases as being equal gives

$$V_M^2 = V^2 \frac{\ell}{\ell_M} \frac{\sigma_M}{\sigma}$$

Surface tension values are given in Table A.5; by substitution, we get

$$V_M^2 = (100)^2 \left(\frac{0.122}{0.25} \right) \left(\frac{72}{21.14} \right) = 1.66 \times 10^4$$

Solving, we get

$$V_M = 129 \text{ ft/s}$$

Two devices that are commonly used in model studies are a wind tunnel and a tow tank. The top view of a wind tunnel is given schematically in Figure 4.3. As indicated, the motor and fan assembly circulates air through the system. The ductwork is designed so that losses due to friction are minimized by use of turning vanes and gradually diverging ducts. Flow at the test section must be as smooth and as uniform as possible. Models of automobiles, trucks, airplanes, groups of houses, buildings, and the like can be placed in the test section to determine the effects of speed or winds such as hurricanes. Data so obtained can then be scaled up to predict similar effects on the prototype.

A tow tank consists of a huge reservoir of water, usually rectangular in cross section, that is used extensively for testing ship hull designs. Once a design is made, a scale model is built and tested in the basin for drag and other forces. The appropriately instrumented model is usually pulled along the water surface to obtain data.

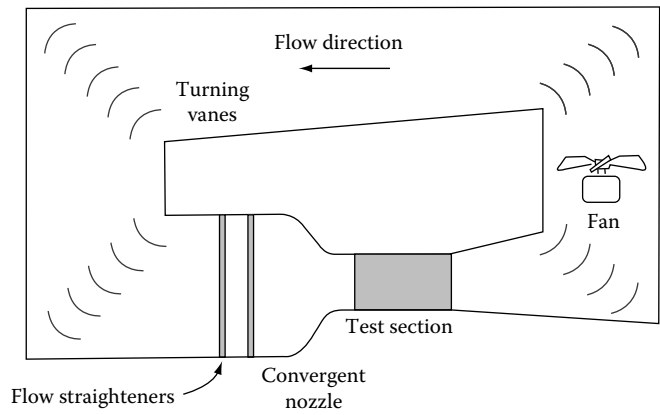


FIGURE 4.3 Schematic of a closed-loop wind tunnel.

It is not always possible to assure dynamic similarity between model and prototype, however. In the tow tank, for example, it is nearly impossible to satisfy both Froude and Reynolds number similarity. Despite this shortcoming, modeling remains a viable alternative to testing a full-scale prototype.

4.5 CORRELATION OF EXPERIMENTAL DATA

This section presents data from an actual experiment and then correlates them by using dimensional analysis. For many years, most design engineers have selected what is known as a globe valve for controlling the flow rate in a piping system. A globe valve uses a multiturn handwheel that operates a control element, which closes onto a seating surface.

One advantage of using this valve is the high level of precision obtained when throttling. One disadvantage, however, is the high pressure drop experienced by the fluid as it flows through the valve, because the globe valve has a restricted flow passage when open.

In order to eliminate the high pressure losses, it has been suggested that ball valves may be used in place of globe valves. Ball valves are very compact and operate on a 90° turn from fully closed to fully open. When fully open, pressure losses across these valves are small compared to those in globe valves. The main disadvantage of the ball valve is its failure to maintain the desired flow rate versus pressure drop characteristics that the globe valve offers. To achieve the desired performance, orifice plate inserts, usually made of brass, can be used with ball valves. The orifice plates are placed just upstream of the valve and are merely threaded, calibrated restrictions intended to maintain the desired flow rate and have a small pressure drop.

Figure 4.4 is a sketch of an orifice plate insert. As indicated in the figure, the insert is threaded so that it can be easily installed into the body of a threaded ball valve, upstream of the spherical control

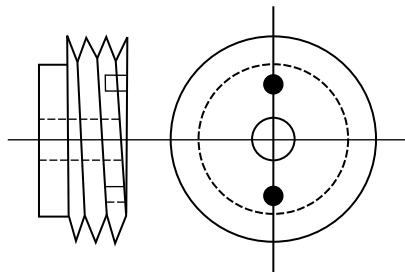


FIGURE 4.4 Profile and end views of the brass orifice insert.

element. An orifice hole is drilled through the body of the insert. The black “dots” in the end view represent cavities positioned to accept a special installation tool supplied with the insert.

The objective here is to measure the pressure loss through a ball valve that contains an orifice plate insert. Pressure loss is expressed in terms of the pressure coefficient, C_p :

$$C_p = \frac{2(p_1 - p_2)}{\rho V^2}$$

where $p_1 - p_2$ is the pressure drop across the valve, and the denominator is the kinetic energy of the flow. One ball valve can be used in combination with a variety of inserts, each having a different orifice hole diameter. The correct orifice size to use must be determined by the engineer who is sizing the piping system and its installation. It is customary to gather data, and report the pressure coefficient versus orifice diameter for a pressure drop of 1 psi. For example, the flow rate through a 1/2 in. ball valve with an insert having a 0.3 in hole diameter is 1.06 gpm when the pressure drop is 1 psi.

Actual data were obtained using 1/2 in., 3/4 in., and 1 in. ball valves, each containing a threaded brass orifice insert, and these data are presented in what follows. Different inserts were used with each valve in order to obtain loss coefficients. Dimensional analysis is then used to correlate the data using two parameters or groups. The results can be used by a design engineer to select the correct valve insert for a system.

Equation formulation—Consider the systems shown in Figure 4.5. Figure 4.5a shows a pipe with a ball valve/insert in place. To determine the pressure loss, it is necessary to measure the flow rate through the pipe that will correspond to a pressure drop from section 1 to section 2 (Δp_{12}) of 1 psi. It would seem simple enough to merely set up this system and obtain the necessary measurements. However, due to flow separation and other anomalies that exist in the pipeline, obtaining an accurate and repeatable measure of pressure at 1 and at 2 is difficult. Consequently, another method must be used to find Δp_{12} .

The accepted procedure for obtaining Δp_{12} in this case involves measuring the pressure drop from section 3 to section 4 (Δp_{34}), which will include the friction loss over the lengths denoted as L_{31} and L_{24} , as well as the minor loss across the valve. The pipe in Figure 4.5a is replaced with the pipe shown in Figure 4.5b, and we measure the pressure drop from section 3 to section 4.

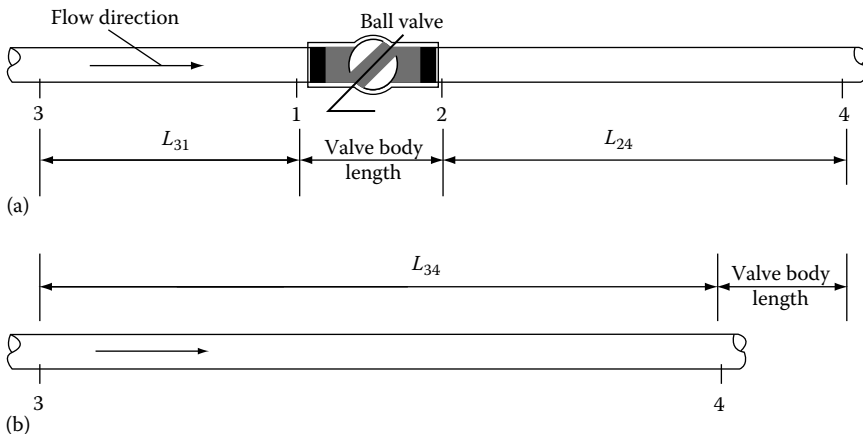


FIGURE 4.5 Sketch of pipe and valve systems.

The overall length in Figure 4.5b is shorter than the overall length in Figure 4.5a by the length of the valve body as indicated. In equation form:

$$\Delta p_{34} = \Delta p_{31} + \Delta p_{12} + \Delta p_{24}$$

The pressure drop obtained from the setup of Figure 4.5b (just the pipe) is subtracted from that obtained in Figure 4.5a, which will yield the sought after Δp_{12} . These pressure drops are obtained as functions of flow rate, and we are seeking the flow rate that corresponds to $\Delta p_{12} = 1$ psi.

Standard practice in making pressure drop measurements entails making the length L_{31} at least two pipe diameters, and L_{24} is at least six diameters.

The results of all measurements taken and calculations made are provided in Tables 4.3 through 4.5. These data are graphed in Figure 4.6, with orifice diameter d_o in inches on the horizontal axis, and volume flow rate in gallons per minute (gpm) on the vertical axis. Water is working fluid in all cases.

TABLE 4.3
Orifice Diameters and Valve
Coefficients for the 1/2 in. Ball
Valve (Pipe ID = 0.546 in.)

Orifice Diameter, d_o (in.)	Volume Flow Rate Q (gpm)
0.300	1.06
0.380	2.00
0.500	4.96
0.580	9.00

TABLE 4.4
Orifice Diameters and Valve
Coefficients for the 3/4 in. Ball
Valve (Pipe ID = 0.818 in.)

Orifice Diameter, d_o (in.)	Volume Flow Rate Q (gpm)
0.4805	4.89
0.5235	8.00
0.575	14.09

TABLE 4.5
Orifice Diameters and Valve
Coefficients for the 1 in. Ball Valve
(Pipe ID = 0.957 in.)

Orifice Diameter, d_o (in.)	Volume Flow Rate Q (gpm)
0.563	7.90
0.5959	11.89
0.6735	21.08

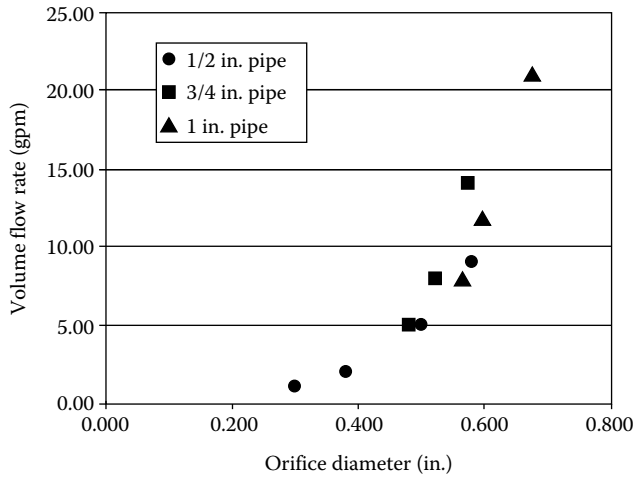


FIGURE 4.6 Results of volume flow rate versus orifice diameter for all three line sizes.

Dimensional analysis—We now use dimensional analysis to obtain a relationship among the variables in this problem. We assume the pressure drop is a function of liquid density, velocity through the orifice, viscosity, orifice diameter, and pipe diameter. We write:

$$\Delta p = \Delta p(\rho, V, \mu, d_o, D)$$

We are expecting three dimensionless groups, and by inspection, they are

$$\frac{2\Delta p}{\rho V^2} = \Delta p\left(\frac{\rho V D}{\mu}, \frac{d_o}{D}\right)$$

Our interest is in a correlation between the pressure coefficient (the left-hand side of the equation), and the orifice diameter. Because the inserts are actually orifices, reliance is made on previous work with orifice meters; one important dimensionless group in such studies is the Reynolds number at the throat of each orifice, based on actual flow rate. So based on experience, we try correlating the pressure coefficient with Reynolds number at the orifice; that is,

$$\frac{2\Delta p}{\rho V^2} = \Delta p\left(\frac{\rho V d_o}{\mu}\right) \tag{4.19}$$

If we had yet to obtain such experience, we would try several combinations of the dimensionless groups to try to obtain a useable result.

The velocity based on the orifice diameter is

$$V = \frac{Q}{A} = \frac{4Q}{\pi d_o^2} \tag{4.20}$$

The Reynolds number in terms of flow rate then becomes

$$\text{Re} = \frac{\rho V d_o}{\mu} = \frac{4\rho Q}{\pi d_o \mu} \tag{4.21}$$

The calculations that need to be made are summarized in Table 4.6. The second and third columns are of the raw data. The fourth and fifth columns are the converted numbers for orifice diameter and

TABLE 4.6
Summary of Calculations for the Orifice Inserts

Pipe Size	d_o (in.)	Q (gpm)	d_o (ft)	Q (ft ³ /s)	V (ft/s)	Re	C_p
1/2 in.	0.300	1.06	0.025	0.0024	4.8	1.23E + 04	3.1E – 04
	0.380	2.00	0.032	0.0045	5.7	1.83E + 04	2.2E – 04
	0.500	4.96	0.042	0.0111	8.1	3.45E + 04	1.1E – 04
	0.580	9.00	0.048	0.0201	10.9	5.39E + 04	6.0E – 05
3/4 in.	0.481	4.89	0.040	0.0109	8.7	3.54E + 04	9.6E – 05
	0.524	8.00	0.044	0.0178	11.9	5.31E + 04	5.0E – 05
	0.575	14.09	0.048	0.0314	17.4	8.52E + 04	2.4E – 05
1 in.	0.563	7.90	0.047	0.0176	10.2	4.88E + 04	6.9E – 05
	0.596	11.89	0.050	0.0265	13.7	6.94E + 04	3.8E – 05
	0.674	21.08	0.056	0.0470	19.0	1.09E + 05	2.0E – 05

Notes: $\rho = 1.94$ slug/ft³; $\mu = 1.9 \times 10^{-5}$ lbf · s/ft²; 1.06 gpm $\times 0.0022283 = 0.0024$ ft³/s.

volume flow rate. The sixth column is the water velocity through the orifice, as calculated with Equation 4.20. The Reynolds number is in the next column, and it was calculated with Equation 4.21. The pressure coefficient is in the final column.

A graph of pressure coefficient versus Reynolds number (Equation 4.21) is provided in Figure 4.7. The equation of that line is

$$C_p = 84.86 \operatorname{Re}^{-1.312}$$

with a correlation coefficient of $R^2 = 0.981$.

Note that experimental results “collapse” onto a single line, which represents all the data. If more data were gathered for other orifice insert, we would expect those results to fall on this same line. The advantages of dimensional analysis are now evident.

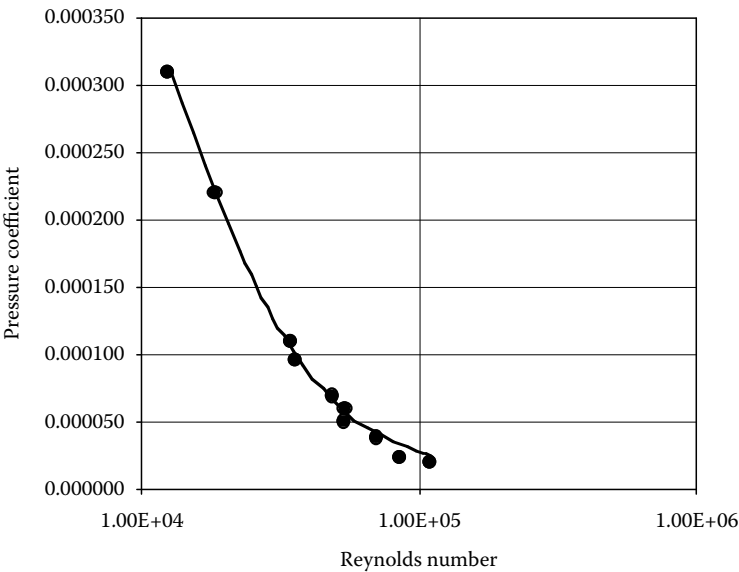


FIGURE 4.7 Pressure coefficient as a function of orifice Reynolds number for all pipe sizes.

4.6 SUMMARY

In this chapter, we used dimensional analysis to develop nondimensional ratios that are useful for correlating data. We also derived various dimensionless ratios such as Reynolds, Froude, and Weber numbers and examined the requirements of geometric and dynamic similarity. Similitude and modeling were discussed, as were dimensionless ratios that are important in various flow situations.

PROBLEMS

Dimensions of Terms and Equations

4.1 Another form of Bernoulli's equation is obtained by dividing by g , yielding

$$\frac{p}{\rho g} + \frac{V^2}{2g} + z = \text{a constant}$$

What is the dimension of each term?

4.2 The velocity profile for laminar flow in a circular tube is given by

$$V_z = \frac{\Delta p}{L} \frac{R^2}{4\mu} \left[1 - \left(\frac{r}{R} \right)^2 \right]$$

where: $\Delta p/L$ = pressure drop per unit length
 R = tube radius
 μ = absolute viscosity of the fluid

Show that the right-hand side of this equation has the correct dimensions.

4.3 The equation for volume flow rate for laminar flow of a Newtonian fluid in a circular duct is given by

$$Q = \frac{\pi R^4}{8\mu} \left(\frac{\Delta p}{L} \right)$$

where: Q = volume flow rate
 $\Delta p/L$ = pressure drop per unit length
 R = pipe radius
 μ = absolute viscosity of the fluid

Determine if this equation is dimensionally consistent.

4.4 The equation for velocity for laminar flow of a Newtonian fluid down an incline is given by

$$V_x = \frac{\rho g}{\mu} \frac{h^2}{2} \left(\frac{2z}{h} - \frac{z^2}{h^2} \right) \sin \theta$$

where: ρ = density of liquid
 μ = absolute viscosity of liquid
 g = acceleration due to gravity
 h = depth of liquid
 $\sin \theta$ = slope of incline (dimensionless)

Determine the dimensions of this equation.

4.5 The equation for volume flow rate for laminar flow of a Newtonian liquid down an incline is given by

$$Q = \frac{gh^3b}{3\nu} \sin \theta$$

where: Q = volume flow rate of liquid
 h = depth of liquid
 b = width of channel down which liquid flows
 ν = kinematic viscosity of liquid
 $\sin \theta$ = slope of the incline (dimensionless)
 g = acceleration due to gravity

Determine if this equation has the proper dimensions.

4.6 The steady-state-flow energy equation from Chapter 3 can be written as

$$\frac{d(Q - W)}{dt} = \dot{m} \left[\left(h_2 + \frac{V_2^2}{2} + gz_2 \right) - \left(h_1 + \frac{V_1^2}{2} + gz_1 \right) \right]$$

What are the dimensions of each term?

Dimensional Analysis—Four- and Five-Variable Problems

- 4.7** Sonic velocity in a gas is assumed to be a function of gas density ρ , pressure p , and dynamic viscosity μ . Determine a relationship using dimensional analysis.
- 4.8** A weir is an obstruction placed in the flow of a liquid in an open channel. The liquid height upstream of the weir can be used to determine the volume flow rate over the weir. Assuming that the volume flow Q is a function of upstream height h , gravity g , and channel width b , develop an expression for Q by using dimensional analysis.
- 4.9** For flow over a flat plate, the flow velocity V in the vicinity of the surface varies with the wall shear stress τ_w , distance from the wall y , and fluid properties ρ and μ . Use dimensional analysis to determine an expression relating these variables.
- 4.10** In a falling-sphere viscometer, spheres are dropped through a liquid, and their terminal velocity is measured. The liquid viscosity is then determined. Perform a dimensional analysis for the viscometer assuming that viscosity μ is a function of sphere diameter D and mass m , local acceleration due to gravity g , and liquid density ρ .
- 4.11** The height h a liquid attains inside a partly submerged capillary tube is a function of surface tension σ , tube radius R , gravity g , and liquid density ρ . Determine an expression for the height by using dimensional analysis.
- 4.12** The main bearing on an engine crankshaft is lubricated with engine oil. The torque due to friction T_0 depends on shaft diameter D , rotational speed ω , lubricant viscosity μ , and density ρ . Use dimensional analysis to derive an expression for torque.
- 4.13** The power $\dot{P}$ delivered by an internal combustion engine is a function of the mass flow rate of air consumed $\dot{m}$, the energy contained in the fuel E , the rotational speed of the engine ω , and the torque T_s developed. Determine an expression for power by using dimensional analysis.
- 4.14** A rocket expels high-velocity gases as it travels through the atmosphere. The thrust F_T exerted depends on exit pressure of the gases p_e , ambient pressure p_a , gas velocity at exit V , and exit area A . Use dimensional analysis to develop an expression for the thrust.

Dimensional Analysis—Six-Variable Problems

- 4.15** The friction factor f is a dimensionless quantity used in pipe flow problems as an aid in calculating pressure drop. The friction factor is a function of fluid properties density ρ and viscosity μ , of average velocity V , of pipe diameter D , and of the roughness of the pipe wall. The wall roughness is traditionally represented by a single term ε having the dimension of length. Determine a relationship between these variables to predict friction factor.

- 4.16** A surface explosion sends a sound wave through air. The wave travels at the sonic velocity. The pressure ratio across the wave p_2/p_1 is a function of the energy released by the explosive E , distance from blast location d , sonic velocity in the air a , time t since the explosion, and density ρ of the air. Use dimensional analysis to develop an expression for the pressure ratio.
- 4.17** An open-top tank is filled to a depth h with liquid of density ρ and viscosity μ . A hole of diameter D is drilled in the side of the tank, and a jet of liquid issues from it. Assuming that the efflux velocity V is a function of these parameters and also of gravity g , develop an expression for V using dimensional analysis.
- 4.18** A pneumatic spray nozzle is a two-fluid device that directs high-velocity air at a liquid jet to break the liquid into a spray. The average droplet diameter D of the spray depends on the mass flow rate of air $\dot{m}$, the volume flow of liquid Q the density of each fluid ρ_a and ρ_ℓ , and the difference in velocity of the two streams ΔV . Use dimensional analysis to derive a relationship for D .
- 4.19** In a spray drying operation, eggs in liquid form are sprayed into a heated drying chamber to produce powdered eggs. Moisture from the liquid droplets is released to the hotter environment through the surface area of the drops. The amount of moisture released in terms of mass of liquid per unit time is a function of volume flow rate through the nozzle Q , liquid density ρ , surface tension σ , average droplet diameter D , and residence time t that the droplets are suspended before they settle. Use dimensional analysis to derive an expression for the moisture released.
- 4.20** The efficiency of a pump is assumed to be a function of discharge flow rate Q , pressure increase Δp , pipe diameter D , and fluid properties density ρ and viscosity μ . Use dimensional analysis to find an expression for pump efficiency.
- 4.21** Power input to a pump depends on flow rate Q , pressure rise Δp , liquid density ρ , efficiency η , and impeller diameter D . Determine an expression for power by using dimensional analysis.
- 4.22** Vanes located on the periphery of a rotor are struck by a jet of liquid, causing the rotor to rotate. The torque measured at the rotor shaft T_0 depends on the rotational speed of the rotor ω the jet velocity V , the jet area A , the radial distance R from shaft center to point of impact of the jet, and the liquid density ρ . Use dimensional analysis to determine an expression for the torque.
- 4.23** A two-nozzle water sprinkler discharges water while the sprinkler head itself rotates. The angular velocity ω depends on water density ρ , volume flow of water Q exit velocity through the nozzles V , nozzle exit area A , and torque T_s to overcome bearing friction. Use dimensional analysis to develop an expression for the angular velocity.
- 4.24** The power required to drive a fan dW/dt is a function of fluid properties ρ and μ , fan blade diameter D , mass flow rate $\dot{m}$, and rotational speed ω . Use dimensional analysis to determine an expression for power.
- 4.25** A jet-propelled boat takes in water at its bow, passes it through pumps, and discharges it through ducts at the stern. The propulsive force F_p is a function of the velocity of the boat V , water velocity at the exit duct V_e , exit pressure p_e , pumping power $\dot{P}$, and liquid density ρ . Use dimensional analysis to develop an expression for the propulsive force.
- 4.26** The designers of an all-terrain vehicle decide not to use a propeller to move the vehicle through water. Instead, the rotation of the wheels is expected to provide the necessary thrust. The thrust or propulsive force F_T is determined to be a function of rotational speed of the wheels ω , diameter of the tires D , width of the tires w , and density and viscosity ρ and μ of the liquid medium (muddy water vs. fresh water). Determine an expression for the propulsive force by using dimensional analysis.
- 4.27** The amount of time t that clothes must stay in a washing machine for cleaning is a function of the height of the agitator h , the frequency of oscillation or its reciprocal ω , the mass of water in

the tank m , the mass of soap used m_s , and the tank volume V . Use dimensional analysis to determine an expression for the time.

- 4.28 A water turbine is located in a dam. The shaft torque T_s delivered to its blades is a function of water flow rate Q through the system, total water head H upstream of the dam, liquid density ρ , angular velocity of the blades ω , and efficiency η . Determine an expression for torque.

Dimensional Analysis—Seven- and Eight-Variable Problems

- 4.29 A thin sheet of liquid flows down a roof. The liquid sheet velocity is a function of density ρ , slope angle θ , viscosity μ , surface tension σ , roof length ℓ , and gravity g . Develop an expression for the velocity.
- 4.30 A viscous liquid is placed in the annulus between concentric cylinders. The outer cylinder is fixed, while the inner cylinder rotates. Determine an expression for torque T_0 required to rotate the inner cylinder if it depends on the constant rotational speed ω , the liquid properties ρ and μ , the cylinder diameters D_2 and D_1 , and the inner cylinder length L .
- 4.31 When a vertical flat surface is sprayed with paint, the paint will run if too thick a coat is applied. A thick coat, however, is desirable in many cases to make the surface coating glossy. An optimum thickness t is thought to exist which is a function of droplet diameter D of the spray, initial yield stress τ_0 , viscosity μ_0 , surface tension σ and density ρ of the paint, and flow rate Q . Use dimensional analysis to develop an expression for the thickness.
- 4.32 A jet engine takes in air at atmospheric pressure, compresses it, and uses it in a combustion process to generate high-temperature gases. These gases are then passed through a turbine to provide power for compressing the inlet air. After passing through the turbine, the gases are exhausted to the atmosphere to deliver thrust. The thrust F_T developed is a function of inlet air density ρ_a and pressure p_a , pressure after the compressor p_c , energy content in the fuel E , exhaust gas pressure p_e , and velocity V . Use dimensional analysis to develop an expression for the thrust.
- 4.33 The lift force on a wing L_f is a function of its chord length c , velocity V , maximum thickness t , angle of attack α , fluid density ρ , fluid viscosity μ , and sonic velocity a . Determine a dimensionless relationship among these variables.
- 4.34 Paint (a Bingham fluid) is applied with a spray gun by forcing it under high pressure through a small orifice. The average diameter of the droplets produced is known to be a function of

τ_0 = initial yield stress

μ_0 = Bingham liquid viscosity

ρ = liquid density

p = liquid pressure at the spray gun

σ = surface tension of liquid

Q = volume flow of liquid

d = orifice diameter

Use dimensional analysis to find an expression for average droplet diameter D .

Dimensional Analysis—Miscellaneous Problems

In Problems 4.35–4.42, only the dependent variable is given, and you are required to select the appropriate independent variables on the basis of your experience and intuition. Include enough independent variables in these problems that at least three dimensionless groups result.

- 4.35 Liquid lubricant is purchased in pressurized spray cans. When the button is depressed, a spray of lubricant is produced in a conical configuration. The average diameter of the droplets produced is a function of a number of variables. Use dimensional analysis to find an expression for average droplet diameter.
- 4.36 The drag force exerted by air friction on a moving automobile must be overcome by power produced by the engine. Use dimensional analysis to formulate an expression for power.

- 4.37** The wings of a flying airplane experience a lift force great enough to elevate the plane. Determine the dimensionless ratio (or ratios) that affect the lift force.
- 4.38** An upright funnel is plugged and then filled with liquid. When the plug is removed, liquid issues from the end and empties the funnel after time t has elapsed. Use dimensional analysis to develop an expression for t .
- 4.39** A pump is a device used to increase energy in a liquid by raising its pressure. A compressor is such a device made for gases. When gases are compressed, however, both temperature and pressure increase. Thus, many compressors have coolers that reduce the compressed air temperature to that of the ambient temperature. Given such an arrangement, develop an expression to predict the power required for compressing a gas. Neglect heat-transfer effects.
- 4.40** A fan is a device used to increase the energy of air by raising its pressure. The increase in pressure experienced by the air is a function of a number of variables. Use dimensional analysis to determine an expression for the pressure rise.
- 4.41** Liquid flows horizontally through a circular tube filled with sand grains that are spherical and of the same diameter. As liquid flows through this sand bed, the liquid experiences a pressure drop. Use dimensional analysis to determine an expression for the pressure drop in terms of the pertinent variables.
- 4.42** Fins are used by a swimmer to increase the swimmer's forward velocity. The propulsive force is increased because of the fins. Use dimensional analysis to develop a functional equation to relate the propulsive force to the pertinent variables.

Modeling Problems

- 4.43** Acetone flows through a tube at a volume flow rate of $18 \text{ ft}^3/\text{s}$. If glycerine is used in the tube instead of acetone, what volume flow rate is required for complete dynamic similarity?
- 4.44** Castor oil flows in a pipe with an inside diameter of 12 in. The average velocity of the oil is 9 ft/s . For dynamically similar flow, determine the average flow velocity for air at 170°F and 18 psig in a 5-in. pipe.
- 4.45** Various control systems use pneumatic devices to direct the desired operations. These devices require that air be piped to them. In one design, the pneumatic line diameter is $\frac{1}{2} \text{ in.}$, and the air flow rate is $0.03 \text{ in.}^3/\text{s}$. If such a line is to be modeled with water flowing through a 6-in.-ID line, determine the average water velocity required for dynamic similarity.
- 4.46** Gasoline (assume octane) flows at a rate of $6 \text{ in.}/\text{s}$ in a $\frac{3}{8}$ -in.-diameter fuel line of an automobile. The flow is modeled with water flowing in a 1-in.-ID pipe. What is the corresponding water velocity in the water pipe? Assuming that the pressure drop in the water pipe is 4 psi, determine the pressure drop in the fuel line.
- 4.47** Glycerine flows at a rate of $1 \text{ ft}^3/\text{s}$ in an 8-in.-diameter pipe. The pressure drop measured over a stretch of pipe is to be determined by making suitable measurements on a model. The model is a 1-in. pipe carrying benzene. Determine the volume flow rate of benzene required for dynamic similarity. If the pressure drop in the benzene line is 1 psi per 40 ft, predict the corresponding pressure drop in the glycerine line.
- 4.48** A fan is to be purchased to provide adequate ventilation for workers in an underground mine. The fan is to move $0.05 \text{ m}^3/\text{s}$ through a mine shaft 2.5 m high by 2 m wide. A model of the duct 25 cm by 20 cm has been constructed. If water is used as the fluid medium in the model, determine the required flow rate for dynamic similarity. For the characteristic length of each duct, use $D = 4 \times \text{area/perimeter}$.
- 4.49** An airplane wing of chord length 0.8 m travels through air at 5°C and 75 kPa. The wing velocity is 100 m/s . A one-tenth scale model of the wing is tested in a wind tunnel at 25°C and 101 kPa. For dynamic similarity between the two, determine the velocity required in the tunnel.
- 4.50** You are asked to determine the drag force exerted on an automobile at a speed of 60 mph and an air temperature of 62°F . A one-fifth scale model is to be tested in a water tunnel at 70°F .

Determine the required water velocity for dynamic similarity between the full-size car and the model. If the drag force on the model is measured to be 10 lbf, determine the expected drag force on the automobile.

- 4.51** The drag characteristics of a blimp traveling at 15 ft/s are to be studied by modeling. The prototype is 25 ft in diameter and 200 ft long. The model is one-twelfth scale and will be tested underwater. What velocity must the model have for dynamic similarity between the two? If the drag on the model is 3.5 lbf, what is the corresponding drag for the prototype? Neglect buoyant effects.
- 4.52** A ship 104 m in length is tested by a model that is only 14 m long. The ship velocity is 42 km/h. What model velocity is required for dynamic similarity if the liquid used for each is the same? If the drag on the model is 7.4 N, what drag is expected for the prototype? Neglect viscous effects.
- 4.53** Swim fins are tested by a diver in a water tunnel. The fins are 60 cm long and develop a thrust of 6 N when the water velocity is 1.25 m/s. The manufacturer has decided to market a geometrically similar fin for children that is 30 cm long. What is the expected thrust if test conditions are dynamically similar to those on the full-size fin?
- 4.54** A ship 300 ft long travels through water at 15 knots. A one-fiftieth scale model is to be tested in a towing basin containing a liquid mixture of water and a thinning agent. Determine the kinematic viscosity of the mixture if the Reynolds number and the Froude number are the same for both model and prototype. Also calculate the required velocity of the model.
- 4.55** Tests on drag force exerted on tractor-trailer trucks are to be made. For actual conditions, a truck travels at 55 mi/h and pulls a trailer that is about 40 ft long. It is desired to model this situation with a 5-ft-long model in a wind tunnel. What is the required flow velocity in the wind tunnel for dynamically similar conditions between the model and the prototype? Suppose that the 5-ft-long model could be submerged in water that is circulated in a water tunnel. What is the required water velocity for dynamically similar conditions between model and prototype?
- 4.56** A propeller of a ship is to be modeled. The model has a diameter of 10 cm and it exerts a propulsive force of 150 N when the flow velocity is 0.5 m/s. The prototype is 2 m in diameter. What is the velocity and the propulsive force for the prototype that correspond to what was obtained with the model? The fluid is water in both cases.
- 4.57** A yacht is 21 ft long and a model of it is only 1 ft long. The yacht can travel at 10 knots. What velocity of the model is required for dynamic similarity between the two if water is the fluid in both cases? What velocity is required if glycerine is used for tests on the model?
- 4.58** The finish on the hull of a ship has an influence on the power required to move the ship through water. Tests are made by coating an aluminum plate with the surface finish of interest and then dragging the plate through water. Consider a painted aluminum plate 2 m long that is dragged at 5 knots through water. The measured drag force is 10 N. It is proposed to use the same finish on a ship hull that is 8 m long. Determine the velocity of the prototype required for dynamic similarity between the ship and the plate. Estimate the drag force exerted on the ship using the drag force obtained on the plate. Water is the fluid in both cases.

Miscellaneous Problems

- 4.59** Pump performance data are sometimes correlated by using several dimensionless terms, two of which are:

$$\text{Volumetric flow coefficient} = \frac{Q}{\omega D^3}$$

$$\text{Energy transfer coefficient} = \frac{g\Delta H}{\omega^2 D^2}$$

where: Q = volume flow rate through the pump
 ω = rotational speed of pump
 D = characteristic length associated with the pump, usually the dimension of an internal component of the pump
 g = acceleration due to gravity
 ΔH = energy added to fluid in the form of an increase in head, expressed as a length dimension

Actual performance data on a centrifugal pump are as follows: rotational speed = 3500 rpm; total head/energy added = 80 ft of water; volume flow rate = 50 gpm; characteristic dimension = $5\frac{1}{8}$ in.; fluid = water. It is desired to operate this pump at 1750 rpm and to change the characteristic dimension to $4\frac{5}{8}$. Determine how the new configuration will affect the flow rate and the total head/energy added to the fluid.

- 4.60** Assume that the same fluid is used in model and prototype for any system. Determine, then, the ratio of velocities—model to prototype—if the criterion for similarity is (a) Froude number, (b) Reynolds number, and (c) Weber number.
- 4.61** Kerosene flows through a 2-in.-ID pipe at 4 ft/s. This flow is modeled using a $\frac{1}{2}$ -in.-ID pipe with water as the working fluid.
- What is the corresponding water velocity in the model for dynamic similarity between model and prototype?
 - Suppose that by mistake the Froude number is used rather than the correct dimensionless group. What is the corresponding water velocity in the model when the Froude number is the same in the model and the prototype?
- 4.62** Acetone is a solvent that is used as a degreaser. The acetone is sprayed through a nozzle onto a surface that needs cleaning. It is believed that the cleaning action is most effective with a nozzle with orifice diameter 0.25 cm and discharge velocity (at the nozzle exit) of 1 m/s. A similar cleaning system is to be tested using carbon tetrachloride and a nozzle whose orifice diameter is 0.30 cm.
- What is the required discharge velocity of the carbon tetrachloride if the Reynolds number is used to assure similarity?
 - Suppose that the Froude number is used instead. What would the corresponding discharge velocity be in this case?
 - What if the Weber number is used? What is the corresponding discharge velocity of the carbon tetrachloride in this case?
 - Which is the correct dimensionless group to use for this problem?

Correlation of Experimental Results

- 4.63** Consider a tube with an inside diameter D through which water flows. The tube is placed in a horizontal position, and pressure taps on it are located 5 ft, 3 ft, and 2 ft apart. The pressure taps are connected to a manometer that gives the pressure drop in terms of a head loss as water flows through the pipe. Head loss increases with flow rate. The test setup is shown in Figure P4.63. Data on pressure drop in a pipe are given in the following table. Determine an equation to fit the data and predict $\Delta h/L$ ($L = 5$ ft; $D = 0.785$ in.) in terms of Reynolds number.

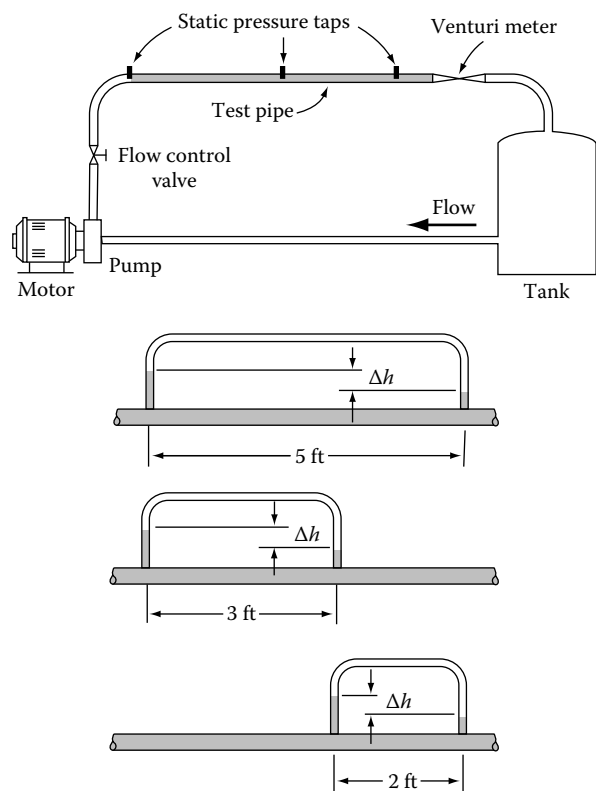


FIGURE P4.63

Test	Q (gpm)	Δh (in. Water)	V (fps)
1	1.50	0.50	0.995
2	1.85	0.50	1.23
3	2.00	0.75	1.33
4	2.45	0.93	1.62
5	2.80	1.00	1.86
6	3.30	1.75	2.19
7	3.50	1.81	2.32
8	3.90	2.31	2.59
9	4.10	2.63	2.72

4.64 Data on pressure drop in a pipe as described in Problem 4.63 are given in the following table. Determine an equation to predict $\Delta h/L$ ($L = 5$ ft; $D = 1.025$ in.).

Test	Q (gpm)	Δh (in. Water)	V (fps)
1	1.50	0.063	0.583
2	1.85	0.13	0.719
3	2.00	0.19	0.778
4	2.45	0.31	0.953
5	2.80	0.44	1.09
6	3.30	0.63	1.28
7	3.50	0.69	1.36
8	3.90	0.75	1.52
9	4.10	0.88	1.59

4.65 Figure P4.63 shows a system used to measure pressure drop versus flow rate for water flowing through a tube. As indicated, pressure taps are located 5 ft, 3 ft, and 2 ft apart. Data obtained with this apparatus are provided in the following table, columns 1, 2, 3, and 4. Group I data are for $L = 5$ ft; Group II data for $L = 3$ ft, and Group III data for $L = 2$ ft. The pipe diameter is 0.545 in.

Test	Q (gpm)	Δh (in.)	V (ft/s)
Group I			
1	1.50	2.50	2.06
2	1.85	3.69	2.54
3	2.00	4.38	2.75
4	2.45	6.25	3.37
5	2.80	8.88	3.85
6	3.30	11.75	4.54
7	3.50	13.13	4.81
8	3.90	16.13	5.36
9	4.10	17.81	5.64
Group II			
11	1.50	1.50	2.06
12	1.85	2.20	2.54
13	2.00	2.63	2.75
14	2.45	3.80	3.37
15	2.80	5.33	3.85
16	3.30	7.00	4.54
17	3.50	7.88	4.81
18	3.90	9.70	5.36
19	4.10	10.70	5.64
Group III			
21	1.50	1.00	2.06
22	1.85	1.48	2.54
23	2.00	1.75	2.75
24	2.45	2.50	3.37
25	2.80	3.56	3.85
26	3.30	4.70	4.54
27	3.50	5.25	4.81
28	3.90	6.45	5.36
29	4.10	7.13	5.64
<i>Note:</i> Group I data for 5 ft length; group II data for 3-ft length; group III data for 2-ft length. $T = 70^\circ\text{F}$; $\nu = 10.3 \times 10^{-6} \text{ ft}^2/\text{s}$; $D = 0.545 \text{ in.}$; $A = 0.00162 \text{ ft}^2$.			

- a. Graph Δh versus Q for each group of data on the same set of axes.

b. Calculate $\Delta h/L$ and Re for each group.

c. Graph $\Delta h/L$ versus Re for all data on one set of axes.
- 4.66** A hemisphere is placed in a wind tunnel and oriented as shown in Figure P4.66. The air ($T = 24.5^\circ\text{C}$) moves past the hemisphere at a uniform and controllable velocity. The air exerts a drag force on the hemisphere and its mounting stand equal to W . When the drag of the mounting stand is subtracted from the raw numbers, drag force on the hemisphere D_f versus

velocity V data are obtained. The experiment is performed with three different-sized hemispheres, and the results are as given in the following table.

$D = 1 \text{ in.}$		$D = 2 \text{ in.}$		$D = 3 \text{ in.}$	
$D_f \text{ (lbf)}$	$V \text{ (mph)}$	$D_f \text{ (lbf)}$	$V \text{ (mph)}$	$D_f \text{ (lbf)}$	$V \text{ (mph)}$
0.038	45.1	0.072	44.3	0.155	44.0
0.037	39.6	0.072	41.1	0.141	40.9
0.029	30.9	0.043	30.6	0.083	30.3
0.019	20.0	0.026	20.0	0.040	20.0
0.011	10.0	0.014	10.0	0.020	10.0

Data obtained by Mary Franck and Darryl Wilson.

For flow past immersed objects, it was determined in this chapter that drag coefficient and the Reynolds number are important parameters. So for the data given above:

- a. Graph the drag force versus velocity for each hemisphere.
- b. Also graph the drag coefficient versus the Reynolds number on semilog paper. (Note that the area term in the denominator of the drag coefficient is the projected frontal area or, in this case, the area of a circle.)

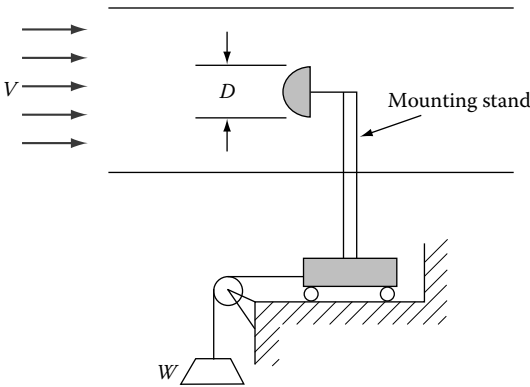


FIGURE P4.66

4.67 Data in the accompanying table are for a water pump operating at $\omega = 1750 \text{ rpm}$. (These are actual pump-performance data obtained from a catalog). The first column is of volume flow rate in gpm. The second column is of a change in head ΔH when the pump is operated with an 8-in.- (= characteristic length, D) diameter impeller. The parameter ΔH is defined as

$$\Delta H = \left\{ \left(\frac{p}{\rho g} + \frac{V^2}{2g} + z \right) \Big|_{\text{pump outlet}} - \left(\frac{p}{\rho g} + \frac{V^2}{2g} + z \right) \Big|_{\text{pump inlet}} \right\}$$

The third and fourth columns are also of ΔH but for different impeller sizes.

Fluid = Water		$\omega = 1750 \text{ rpm}$	$\Delta H \text{ in ft of Water}$
$Q \text{ (gpm)}$	$\Delta H \text{ (} D = 8 \text{ in.)}$	$\Delta H \text{ (} D = 7\frac{1}{2} \text{ in.)}$	$\Delta H \text{ (} D = 7 \text{ in.)}$
80	67	59	48
160	65	56	45
240	58	50	40
320	50	39	28
400	35	20	—

- a. Construct a graph of ΔH (vertical axis) versus Q for this pump.
- b. From a dimensional analysis performed for a pump, the following groups can be derived:

$\frac{g\Delta H}{\omega^2 D^2}$ = energy-transfer coefficient

$\frac{Q}{\omega D^3}$ = volume-flow coefficient

and

$\frac{dW/dt}{\rho \omega^3 D^5} = \frac{Qg\Delta H}{\omega^3 D^5}$ = power coefficient

Construct a graph of the energy-transfer coefficient (vertical axis) versus the volume-flow coefficient.

- c. Construct a graph of the power coefficient (vertical axis) versus the volume-flow coefficient.

Design Problems

4.68 An Experiment to Verify Bernoulli’s Equation and to Correlate Data

It is desired to construct an apparatus to illustrate the application of Bernoulli’s equation and to show how dimensional analysis can be used to correlate data from an experiment. Figure P4.68 is a sketch of the proposed apparatus made for these purposes. The sketch shows a tank of liquid with outlets and valves attached. Outlet 1 is located a distance h_1 from the floor and has an outlet diameter d_1 . When valve 1 is opened, a jet of liquid issues forth and impacts the floor at a distance L_1 from the exit of the pipe. Other outlets are located at h_2 and h_3 , with corresponding diameters d_2 and d_3 and impact lengths L_2 and L_3 .

- a. Perform a dimensional analysis to predict the point of impact L (for any outlet) in terms of the pertinent parameters.
- b. Determine how Bernoulli’s equation could be illustrated with this apparatus.
- c. Suppose that $d_1 = d_2 = d_3$. How well is dimensional analysis illustrated? How well is Bernoulli’s equation illustrated?
- d. Suppose that d_1 , d_2 , and d_3 are sized so that $L_1 = L_2 = L_3$. How well is dimensional analysis illustrated? How well is Bernoulli’s equation illustrated?
- e. Select a material to be used for the tank. Determine where h_1 , h_2 , and h_3 should be located. Specify d_1 , d_2 , and d_3 . Select a tank and specify its cross-sectional dimensions. Select a tank height. What liquid should be used?
- f. Explain all design decisions.

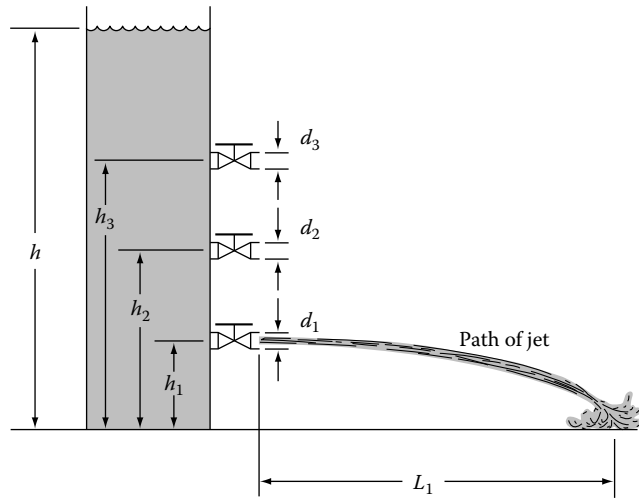


FIGURE P4.68

4.69 Dimensional Analysis Applied to Surface Tension Measurement

It is desired to verify the equation for surface tension measured with a capillary tube, as given in Chapter 1:

$$h = \frac{2\sigma}{\rho R g} \cos \theta$$

Essentially, the equation states that for a specific fluid,

$$\frac{\rho R g h}{\sigma} = \text{a constant}$$

or

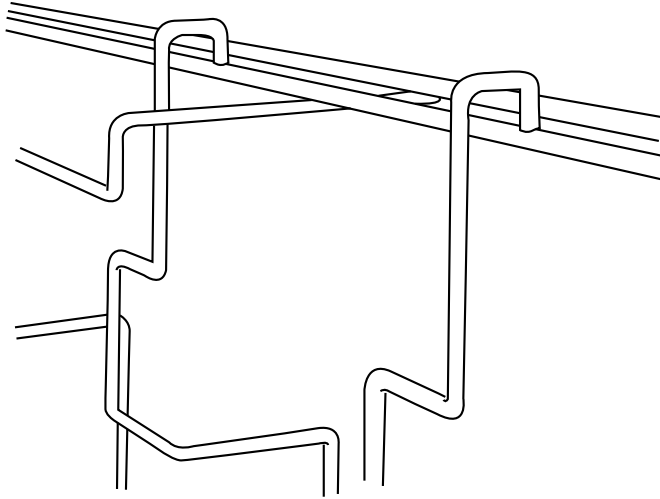
$$h R = \text{a constant}$$

where h equals the capillary rise of the fluid in the tube and R equals the tube radius.

- a. Derive the equation $h R = \text{a constant}$ using dimensional analysis.
- b. Devise an experimental method that can be used to obtain data to verify this equation.
- c. Specify tube size(s) and fluid(s) to be used. Make sure that the tube sizes specified are commercially available.
- d. Write step-by-step directions for performing the experiment(s).

This page intentionally left blank

5 Flow in Closed Conduits



Flow in closed conduits is a very important part of the study of fluid mechanics—primarily because examples are so commonplace. Water for domestic use is distributed to all parts of the household in pipes; sewers and drains carry wastewater away. Crude oil is pumped from well to refinery in pipes. Natural gas is brought to the user via pipes. Heated air is distributed to all parts of a house in circular and rectangular ducts. Many other examples of conduit flow can be found in everyday life. In this chapter, we will examine the variables that are important in mathematically describing such flows.

The purpose of this chapter is to describe laminar and turbulent flow phenomena, to determine the effect of viscosity, to present the equations of motion for conduit flow, and to analyze various piping systems. Because pumps are commonly used to convey liquid in pipes, a brief survey of pumps is also presented.

5.1 LAMINAR AND TURBULENT FLOW

Early experiments with flow in pipes demonstrated that two different flow regimes exist—*laminar* and *turbulent*. When laminar flow exists in a system, the fluid flows in smooth layers called *laminae*. A fluid particle in one layer stays in that layer. The layers of fluid slide by one another without apparent eddies or swirls. Turbulent flow, on the other hand, exists at much higher flow rates in the system. In this case, eddies and vortices mix the fluid by moving particles tortuously about the cross section.

The existence of two types of flow is easily visualized by examining results of experiments performed by Osborne Reynolds. His apparatus is shown schematically in Figure 5.1a. A transparent tube is attached to a constant-head tank with water as the liquid medium. The opposite end of the tube has a valve to control the flow rate. Dyed water is injected into the water at the tube inlet, and the

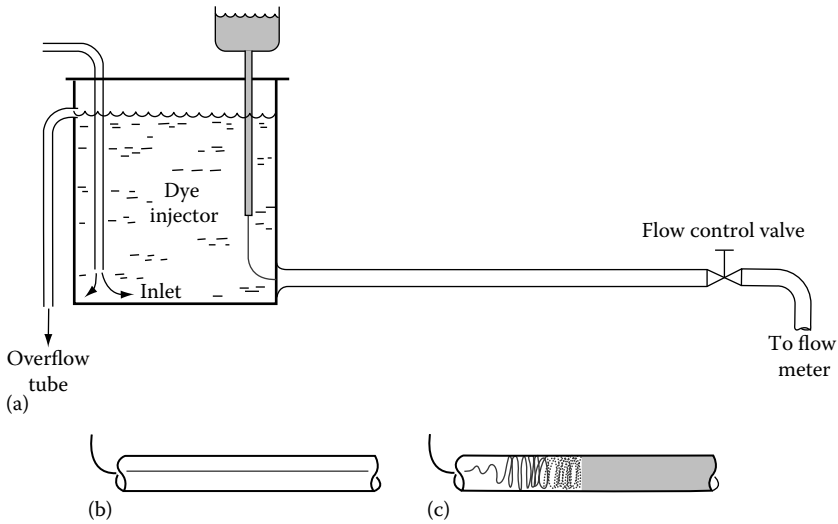


FIGURE 5.1 An experiment for visualizing laminar and turbulent flow.

resulting flow pattern is observed. For low rates of flow, something similar to Figure 5.1b results. The dye pattern is regular and forms a single line like a thread. There is no lateral mixing in any part of the tube, and the flow follows parallel streamlines. This type of flow is called **laminar**, or **viscous flow**.

As the flow rate of water is increased beyond a certain point, the dye is observed not to follow a straight threadlike line but to disperse. The dyed water mixes thoroughly with the pipe water as shown in Figure 5.1c as a result of erratic fluid behavior in the pipe. This type of flow is called **turbulent flow**. The Reynolds number at the point of transition between laminar and turbulent flow is called the **critical Reynolds number**.

This experiment can be repeated with several pipes of different diameter. A dimensional analysis, when performed and combined with the data, shows that the criterion for distinguishing between these flows is the Reynolds number:

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{V D}{\nu} \quad (5.1)$$

where: V = average velocity of the flow
 D = inside diameter of the tube

For straight circular pipes, the flow is always laminar for a Reynolds number less than about 2 100. The flow is usually turbulent for Reynolds numbers over 4 000. For the transition regime in between, the flow can be either laminar or turbulent, depending upon details of the apparatus that cannot always be predicted or controlled. For our work, we will sometimes need to have an exact value for the Reynolds number at transition. We will arbitrarily choose this value to be 2 100.

A distinction must be made between laminar and turbulent flows because the velocity distribution within a duct is different for each. Figure 5.2a shows a coordinate system for flow in a tube, for example, with corresponding velocities. As indicated, there can be three different *instantaneous* velocity components in a conduit—one for each of the three principal directions. Furthermore, each of these velocities can be dependent upon at most three space variables and one time variable. If the flow in the tube is laminar, we have only one nonzero instantaneous velocity: V_z . Moreover, V_z is

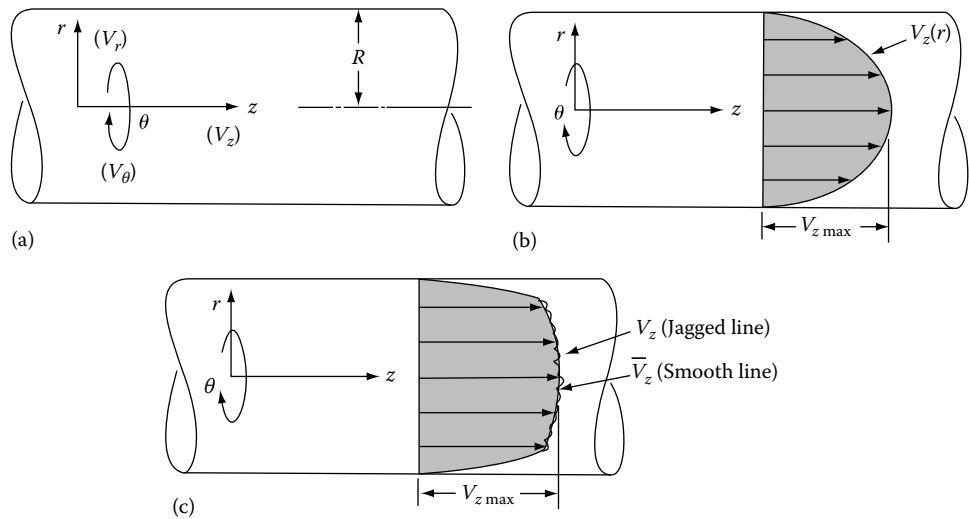


FIGURE 5.2 (a) Cylindrical coordinates and velocity directions in a tube. (b) Axial velocity distribution for laminar flow in a tube. (c) Axial velocity distribution for turbulent flow in a tube.

a function of only the radial coordinate r , and the velocity distribution is parabolic as shown in Figure 5.2b. An equation for this distribution can be derived from the equation of motion performed later in this chapter.

If the flow is turbulent, all three instantaneous velocities V_r , V_θ , and V_z are nonzero. Moreover, each of these velocities is a function of all three space variables and of time. An equation for velocity (V_r , V_θ , or V_z) is not derivable from the equation of motion. Therefore, to envision the axial velocity, for instance, we must rely on experimental data. Figure 5.2c shows the axial instantaneous velocity V_z for turbulent flow in a tube.

The instantaneous velocity V_z fluctuates randomly about the mean axial velocity $\bar{V}_z$. We would need a very sensitive measuring instrument to obtain V_z but a relatively insensitive instrument to obtain $\bar{V}_z$. If the velocity profile in the turbulent flow of Figure 5.2c were measured at another instant in time, a different instantaneous profile (V_z) would result. It would, however, fluctuate about the same mean axial velocity $\bar{V}_z$. Thus, the mean axial velocity would be obtained by removing the time dependence (by integration if the function were known) from the instantaneous velocity V_z . The time dependence can be further illustrated by looking at data in the axial or z -direction at a point (say the tube centerline) as a function of time (see Figure 5.3).

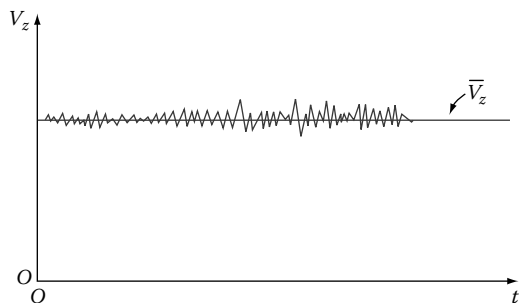




FIGURE 5.3 Variation of centerline axial velocity with respect to time (turbulent flow).

TABLE 5.1
Comparison of Laminar and Turbulent Flow

		
Laminar Flow	Parameter	Turbulent Flow
V_z only; $V_r = V_\theta = 0$	Velocity	V_r, V_θ, V_z all nonzero
$V_z = V_z(r)$ only	Functional dependence	$V_r = V_r(r, \theta, z, t)$ $V_\theta = V_\theta(r, \theta, z, t)$ $V_z = V_z(r, \theta, z, t)$
Parabolic (see above); solution from equation of motion	Velocity distribution	Determined from experimental data
$\frac{V_z}{V_{z \max}} = 1 - \left(\frac{r}{R}\right)^2$ $\frac{V}{V_{z \max}} = \frac{1}{2}$ for $\text{Re} \leq 2\,100$	Equation	$\frac{\bar{V}_z}{V_{z \max}} \approx \left(1 - \frac{r}{R}\right)^{1/7}$ $\frac{\bar{V}}{V_{z \max}} \approx \frac{4}{5}$ for $5 \times 10^5 \leq \text{Re} \leq 10^7$
<i>Note:</i> V = average velocity in principal flow direction.		

As indicated in the preceding discussion, the axial velocity V_z in turbulent flow fluctuates about some mean velocity. In general, the fluctuations are small in magnitude, but they cause slower-moving particles in one region of the pipe cross section to exchange position with faster-moving particles in another region. This is in contrast to what happens in laminar flow, in which a fluid particle in one layer stays in that layer. The fluctuations in turbulent flow are responsible for a mixing effect that manifests itself in a more evened-out velocity profile than that for laminar flow. Also, these fluctuations cause the mixing of the injected water with the tube water in the Reynolds experiment of Figure 5.1c. For both laminar and turbulent flow, maximum velocity in the axial direction, $V_{z \max}$, occurs at the centerline of the duct or conduit. These comments concerning laminar and turbulent flows are summarized in Table 5.1.

The Reynolds number (Equation 5.1) is used to distinguish between laminar and turbulent flows. The velocity in the Reynolds number expression is the average velocity V . In principle, the average velocity is obtained by integrating the equation for instantaneous velocity V_z over the cross-sectional area and dividing the result by the area. This procedure is correct for laminar, transition, or turbulent flow. If there is no equation available, then experimental means are necessary to find the average velocity. In the simplest case, we measure volume flow rate (for an incompressible fluid) and divide by cross-sectional area: $V = Q/A$.

5.2 EFFECT OF VISCOSITY

Table 5.1 shows the velocity distribution for laminar and turbulent flow. In both cases, the velocity at the wall is zero. This phenomenon, called the **nonslip condition**, is due to viscosity. In laminar flow, in which inertia or momentum of the fluid is small, the viscous effect is able to penetrate farther into the cross section from the wall than it can in turbulent flow. Stated another way, in turbulent flow, in which the viscous effects are small, the momentum or inertia of the flow is able to penetrate farther outward toward the wall from the centerline than it can in laminar flow. This penetration of momentum or inertia is called the **momentum transport phenomenon**. Consider the case of a fluid between two parallel plates, with the upper plate moving as shown in Figure 5.4. The upper plate

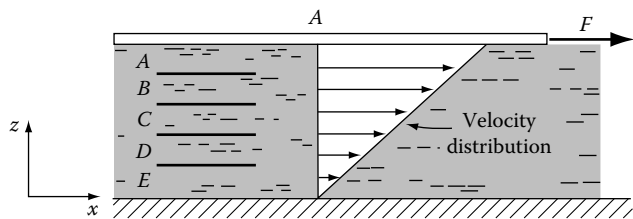


FIGURE 5.4 Layers of fluid flow between parallel plates.

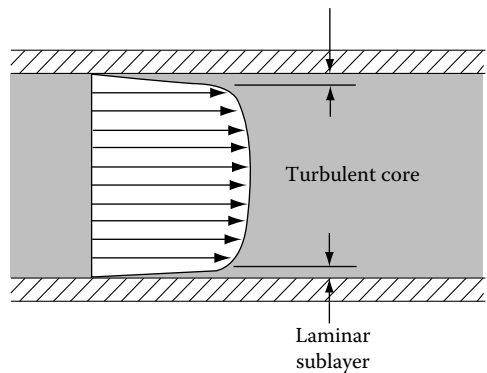


FIGURE 5.5 Laminar sublayer in turbulent pipe flow.

has fluid adhering to it owing to friction. The plate exerts a shear stress on the particles in layer *A*. This layer in turn exerts a shear stress on layer *B* and so on. It is the *x*-component of velocity in each layer that causes this shear stress to be propagated in the negative *z*-direction; that is, the *A* layer pulls the *B* layer along, and so forth. As this shear stress approaches the stationary wall, movement is retarded by the effect of zero velocity at the bottom propagating upward; that is, the *E* layer retards the *D* layer, and so on. The momentum (mass · velocity) of the plate in the *x*-direction is transported in the *z*-direction. The resultant effect on velocity is the distribution sketched in Figure 5.4.

As we saw earlier, in turbulent flow the velocity at a stationary wall is zero. Near the wall, then, there must be a region of flow that is laminar. This region is called the **laminar sublayer**, and the flow in the remainder of the cross section is called the **turbulent core**. Both regions are illustrated for flow in a pipe in Figure 5.5.

5.2.1 ENTRANCE EFFECTS

Another effect of viscosity is evident at the entrance to a pipe, as illustrated in Figure 5.6. Flow is uniform at the entrance; but as the fluid travels downstream, the effect of zero wall velocity propagates throughout the cross section. The flow is divided into a viscous region and a core region. Particles in the core do not sense that a wall is present. Eventually, the core disappears, and the velocity distribution becomes fully developed. A fully developed profile does not change with further increases in length. Mathematically, we write

$$\frac{d(V_z)}{dz} = 0 \quad \text{(fully developed laminar flow)}$$

$$\frac{d(\bar{V}_z)}{dz} = 0 \quad \text{(fully developed turbulent flow)}$$

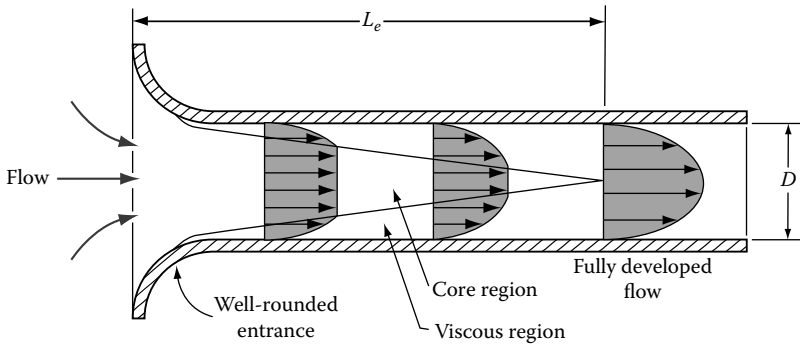


FIGURE 5.6 Laminar flow near a pipe inlet.

The distance L_e (Figure 5.6) is called the **entrance length**, and its magnitude is dependent upon the forces of inertia and viscosity. It has been determined from numerous experimental and analytical investigations that the entrance length can be estimated with

$$L_e = 0.06D(\text{Re}) \quad (\text{laminar flow}) \quad (5.2a)$$

$$L_e = 4.4D(\text{Re})^{1/6} \quad (\text{turbulent flow}) \quad (5.2b)$$

where $\text{Re} = \rho VD/\mu = VD/\nu$. For laminar flow, we see that the entrance length varies directly with the Reynolds number. For the largest Reynolds number encountered in laminar flow of 2 100, Equation 5.2a predicts

$$L_e = 0.06D(2\,100) = 126D$$

Thus, 126 diameters is the maximum length that would be required for fully developed conditions to exist in laminar flow.

For turbulent flow, the entrance length varies with the one-sixth power of the Reynolds number. Conceptually, there is no upper limit for the Reynolds number in turbulent flow, but in many engineering applications, $10^4 < \text{Re} < 10^6$. Over this range, we calculate, with Equation 5.2b:

$$20 < \frac{L_e}{D} < 44$$

So in turbulent flow, the entrance length values are considerably less than the 126 diameters required at a Reynolds number of 2 100. The reason that a shorter length is required in turbulent flow is the mixing action. For abrupt or sharp-edged entrances, additional turbulence is created at the inlet. The effect is to further decrease the inlet length required for fully developed flow to exist.

Example 5.1

Methyl alcohol flows through a well-rounded entrance to a pipe whose inside diameter is 1.05 in. The volume flow rate of methyl alcohol is $0.03 \text{ ft}^3/\text{s}$.

Calculate the entrance length required for the flow to become fully developed.

SOLUTION

From Table A.5, we read the following values:

$$\begin{aligned} \text{Methyl alcohol } \rho &= 0.789(1.94) \text{ slug/ft}^3 \\ \mu &= 1.17 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2 \end{aligned}$$

The flow area is calculated as follows:

$$A = \frac{\pi D^2}{4} = \frac{\pi(1.05/12)^2}{4} = 0.006 \text{ ft}^2$$

The average velocity in the pipe is then

$$V = \frac{Q}{A} = \frac{0.03}{0.006} = 5.0 \text{ ft/s}$$

The Reynolds number becomes

$$\begin{aligned} \text{Re} &= \frac{\rho V D}{\mu} = \frac{0.789(1.94)(5.0)(1.05/12)}{1.17 \times 10^{-5}} \\ &= 5.72 \times 10^4 \end{aligned}$$

Because this flow is turbulent, we use Equation 5.2*b* to determine the entrance length:

$$L_e = 4.4D(\text{Re})^{1/6} = 4.4\left(\frac{1.05}{12}\right)(5.72 \times 10^4)^{1/6}$$

Solving,

$$L_e = 2.39 \text{ ft}$$

Thus the velocity profile remains unchanged with increasing axial distance after a distance of 2.39 ft from the inlet.

5.3 PIPE DIMENSIONS AND SPECIFICATIONS

This section presents various standards regarding pipe specifications. Pipes are specified according to what is called a **nominal diameter**—for example, $\frac{1}{8}$ -nominal or $1\frac{1}{2}$ -nominal.* The nominal diameter does not necessarily indicate the exact inside or outside diameter of the pipe, however. Another specification is the **pipe schedule**. A schedule 40 pipe is considered standard in 6-nominal and lower pipe sizes. A schedule 80 pipe has a thicker wall than a schedule 40, so schedule 80 in the lower sizes is designated XS for extra strong. Table C.1 gives the dimensions of numerous pipe sizes from $\frac{1}{8}$ -nominal to 40-nominal for wrought steel and wrought iron pipe.

A proper specification for a pipe would thus include a nominal diameter and a schedule. For example, a 1-nominal, schedule 40 pipe would have an outside diameter of 3.34 cm (1.315 in.) and an inside diameter of 2.664 cm (0.0874 ft), where these dimensions are obtained from Table C.1. The nominal diameter specifies the outside diameter of the pipe, whereas the schedule specifies the wall thickness and hence the inside diameter. Thus, all 1-nominal pipe, regardless of schedule, has the same outside diameter.

During the early days of pipe manufacturing, the nominal diameter was equal to the inside diameter of the pipe. However, improvements in the strengths of materials have meant that pipe-wall thickness could be decreased with little or no decrease in the ability of the pipe to perform satisfactorily. The options were to increase the inside diameter or to decrease the outside diameter.

* It is standard industrial practice to specify nominal pipe sizes with an inch dimension (for example, $1\frac{1}{2}$ -in. nominal). The nominal dimension is considered to be a name for the size only. For convenience, the “inch” is dropped from the designation in this book because the reference may be to an English or to an SI measurement. For further discussion, refer to ASTM E 380.76, p. 6, sec. 3.4.3.1, and to ASME Guide SI-1, p. 9, para 8.



FIGURE 5.7 A threaded pipe end showing a taper.

A decision was made based on the need to use fittings (elbows, T-joints, valves, and so on) with pipes. Fittings attach to the outside wall, so it seemed prudent to keep the outside diameter the same, decreasing the wall thickness required by enlarging the inside diameter. Hence, for 12-nominal and smaller pipe sizes, the nominal and actual diameters are not equal. For 14-nominal and larger, the nominal diameter is equal to the outside diameter.

Pipes are attached together in various ways. Pipe ends can be threaded, for example, and the number of threads per length (usually per inch) is standardized. Standard pipe threads are tapered (Figure 5.7). Before attachment, pipe threads are wrapped with special tape or coated with a viscous compound to ensure a fluid-tight connection. Threaded connections are common with cast iron, wrought iron, and wrought steel pipe. Alternatively, if the metal is weldable, pipes can be welded together to form a fluid-tight connection. Welding is common in the larger pipe sizes.

Pipe ends may also have flanges attached. Flanges are made in various sizes. Before two flanges are bolted together to form a secure connection, a rubber or gasket-type material is placed between them to ensure a fluid-tight joint. A flanged pipe joint is shown in Figure 5.8.

Another type of pipe material is polyvinyl chloride (PVC) plastic pipe, which can be threaded or joined together with an adhesive. Plastic pipe can be specified in the same manner as wrought steel pipe.

Another conventional circular conduit for conveying fluid is called **tubing**. Copper tubing is used extensively in plumbing applications. Note that copper can also be a pipe material, in which case it would be specified with a nominal diameter and schedule. It is important to realize that there is a difference between pipe and tubing. The most obvious difference is that tubing has a much thinner wall than does pipe. Also, there is an entirely different way to specify tubing. For copper water tubing, there are three types—K, L, and M—and a number of standard sizes. Type K is used for underground service and general plumbing. Type L is used for interior plumbing. Type M is for soldered fittings only. Dimensions of copper tubing for $\frac{1}{4}$ -standard to 12-standard are provided in Table C.2.

A proper specification for tubing would include a standard size and type. For example, a 1-standard, type K copper tube has an outside diameter of 2.858 cm (1.125 in.) and an inside

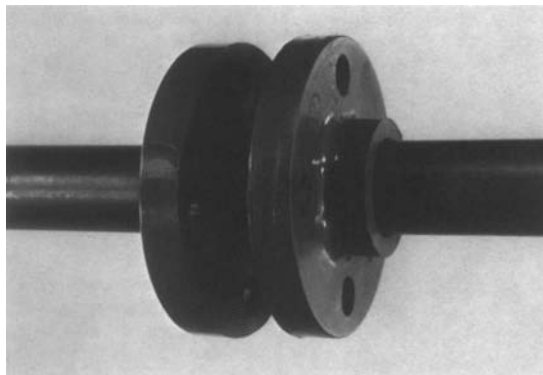


FIGURE 5.8 A flanged pipe connection.

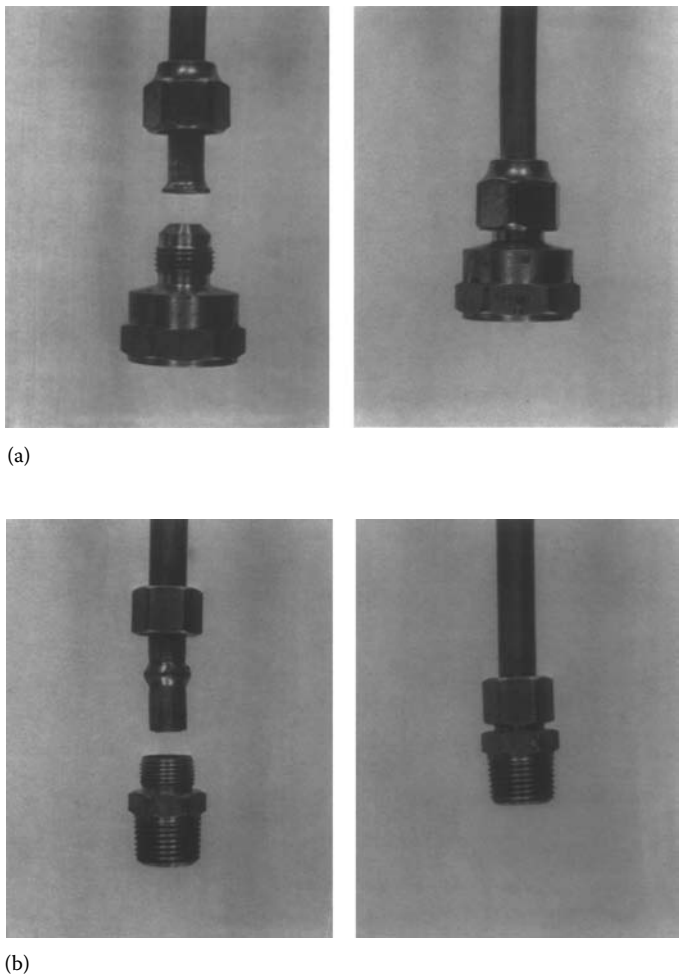


FIGURE 5.9 (a) Flared tube end and fitting. (b) A compression fitting.

diameter of 2.528 cm (0.08292 ft), from Table C.2. The standard dimension fixes the outside diameter, whereas the type specifies the wall thickness directly or the inside diameter indirectly.

Another type of tubing in common use is refrigeration tubing. It is specified in the same way as the copper tubing just discussed and is also usually made of copper. The difference is that refrigeration tubing is ductile (in fact, it is easily bent by hand), but copper water tubing is quite rigid.

Copper tubing ends can be flared with a tool to make them suitable for joining, as illustrated in Figure 5.9a. Another joining method is by use of a compression fitting (Figure 5.9b). The tube is inserted through a ring that is part of the fitting. As the fitting nut is tightened, the ring is compressed, causing the copper tube to expand tightly against the inside wall of the fitting. Still another joining method is soldering. The tube is inserted into a fitting and the two are soldered together—commonly called *sweating*.

5.3.1 EQUIVALENT DIAMETERS FOR NONCIRCULAR DUCTS

Noncircular conduits can be found in many fluid-conveying systems. For example, sheet metal is bent appropriately into a rectangular cross section for use in heating or air conditioning ducts, gutters, and downspouts. In double-pipe heat exchangers, one tube is placed within a larger tube,

and the fluid-flow section between the tubes is an annulus. Recall that the definition of Reynolds number ($VD/\nu = \rho VD/\mu$) contains a dimension or characteristic length D that is used to represent the flow area. The question then arises as to what dimension to select for rectangular, square, annular, or any other noncircular cross section. We examine three different choices that have been proposed for modeling flows in noncircular conduits.

The first characteristic dimension we discuss is called the **effective diameter**, D_{eff} . The effective diameter is the diameter of a circular duct that has the same area as the noncircular duct. So, for example, consider a rectangular duct of cross-sectional dimension h (height) $\times$ w (width). Its area is hw , and we are seeking the diameter of a circular duct that has the same area:

$$\frac{\pi D_{\text{eff}}^2}{4} = hw$$

Solving, we get

$$D_{\text{eff}} = 2\sqrt{\frac{hw}{\pi}} \quad (\text{rectangular duct})$$

A consequence of the definition of effective diameter is that the volume flow rate of fluid through the noncircular conduit equals that through the equivalent circular duct. Again for the rectangular duct,

$$Q = AV = hwV = \frac{\pi D_{\text{eff}}^2}{4} V$$

Thus, the effective diameter is one that satisfies the continuity equation.

The second characteristic dimension that we discuss is called the **hydraulic diameter**, D_h . The hydraulic diameter is defined as

$$D_h = \frac{4 \times \text{cross-sectional area of fluid flow}}{\text{perimeter of duct in contact with fluid}} \quad (5.3)$$

For a circular cross section flowing full, $A = \pi D^2/4$ and $P = \pi D$. Thus,

$$D_h = \frac{\pi D^2}{\pi D} = D = \text{diameter of pipe}$$

For a square duct flowing full, $A = s^2$ and $P = 4s$. Therefore,

$$D_h = \frac{4s^2}{4s} = s = \text{length of one side}$$

Hydraulic diameter can also be determined when the duct is only half full. For a circular duct flowing half full, $A = \pi D^2/8$ and $P = \pi D/2$. Then

$$D_h = \frac{\pi D^2/2}{\pi D/2} = D = \text{diameter of pipe}$$

Historically, the hydraulic diameter D_h is used far more widely than the effective diameter D_{eff} . The hydraulic diameter arises from applying the momentum equation to flow in a duct, which is illustrated in the next section.

A third characteristic dimension (used primarily in open-channel flow modeling) is called the **hydraulic radius** R_h , defined as

$$R_h = \frac{\text{cross-sectional area of fluid flow}}{\text{perimeter of duct in contact with fluid}}$$

For a circular cross section flowing full, the hydraulic radius is

$$R_h = \frac{\pi D^2/4}{\pi D} = \frac{D}{4}$$

For a circular duct, we would like to use the diameter D (not $D/4$) as the characteristic length, and so the hydraulic diameter D_h is preferred over the hydraulic radius in closed-conduit flows.

In this chapter, we will primarily adopt the traditional approach and use the hydraulic diameter for closed-conduit flow modeling. We will investigate to a lesser degree the use of the effective diameter in a few of the exercises. It is necessary to be able to use a hydraulic diameter because it is best to have only one characteristic dimension to represent the duct shape of an irregular cross section. Equation 5.3 is a general expression that applies to any cross section of flow.

5.4 EQUATION OF MOTION

Consider flow in a pipe of constant diameter where pressure is measured at two different points a distance L apart (see Figure 5.10). Assume one-dimensional, steady, uniform flow of an incompressible fluid; assume also that there is no heat transfer and no shaft work being done. If as a first approximation we further assume frictionless flow, the momentum and energy equations reduce to the same expression—the Bernoulli equation. Applying Bernoulli's equation, we obtain

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2$$

For a horizontal pipe, $z_1 = z_2$. From continuity, $A_1 V_1 = A_2 V_2$. Because $D_1 = D_2$, then $A_1 = A_2$; therefore, $V_1 = V_2$. The Bernoulli equation reduces to

$$p_1 = p_2$$

This result is not a proper description of the situation, however. For flow to be maintained in the direction indicated in Figure 5.10, p_1 must be greater than p_2 in an amount sufficient to overcome friction between the fluid and the pipe wall. To be able to apply Bernoulli's equation and obtain an accurate description, we must first modify the equation by adding a friction term to the right-hand side. We next derive an equation for the friction term for fully developed, steady, one-dimensional flow of an incompressible fluid.

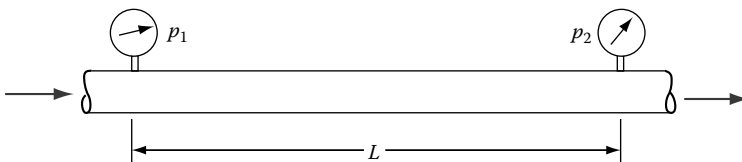


FIGURE 5.10 Flow in a constant-diameter pipe.

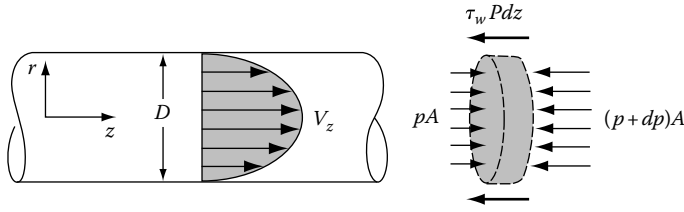


FIGURE 5.11 Control volume of a system: flow in a duct.

Consider flow in a pipe, as shown in Figure 5.11. A control volume that extends to the wall (where the friction force acts) is selected for analysis. Note that a circular cross section is illustrated, but the results are general until we substitute specific equations for the geometry of the cross section. The forces acting on the control volume are pressure normal to the surface and shear stress acting at the wall. The momentum equation is

$$\sum F_z = \iint V_z \rho V_n dA$$

Since the flow out of the control volume equals the flow in, the right-hand side of this equation is zero. The sum of the forces is

$$pA - \tau_w P dz - (p + dp)A = 0$$

where: A = cross-sectional area

$P dz$ = the surface area (perimeter times length) over which the wall shear τ_w acts

The equation reduces to

$$\tau_w P dz + A dp = 0$$

Rearranging and solving for pressure drop, we get

$$dp = -\tau_w \frac{P dz}{A}$$

Multiplying numerator and denominator by 4 gives

$$dp = -\tau_w \frac{4P dz}{4A}$$

Recalling the definition of hydraulic diameter $D_h (= 4A/P)$, the preceding equation becomes

$$\frac{dp}{dz} = -\frac{4\tau_w}{D_h} \quad (5.4)$$

We have thus expressed the pressure drop per unit length of conduit in terms of the wall shear and the hydraulic diameter. The equation was modified to obtain the hydraulic diameter, which is our preferred choice for the characteristic dimension. Equation 5.4 is a general expression for any cross section, because at this point we have yet to specify whether the conduit is circular, square, or

annular, for instance. We next introduce a friction factor f , which is customarily defined as the ratio of friction forces to inertia forces:*

$$f = \frac{4\tau_w}{\frac{1}{2}\rho V^2} \quad (5.5)$$

By substitution into Equation 5.4, we obtain

$$dp = -\frac{\rho V^2}{2} \frac{f dz}{D_h} \quad (5.6)$$

Integrating this expression from point 1 to point 2 a distance L apart in the conduit yields

$$\int_{p_1}^{p_2} dp = -\frac{\rho V^2}{2} \int_0^L \frac{f dz}{D_h}$$

Assuming that the friction factor f is constant gives

$$p_2 - p_1 = -\frac{\rho V^2}{2} \frac{fL}{D_h} \quad (5.7)$$

where the negative sign indicates that pressure decreases with increasing z in the flow direction due to friction. With this equation, the Bernoulli equation can be rewritten as

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g} \quad (5.8)$$

which now takes wall friction into account. The summation indicates that if several pipes of different diameter are connected in series, the total friction drop is due to the combined effect of them all. The frictional effect is manifested in either a heat loss from the fluid or a gain in internal energy of the fluid.

Example 5.2

A 2-nominal pipe is inclined at an angle of 30° with the horizontal and conveys $0.001 \text{ m}^3/\text{s}$ of water uphill. Determine the pressure drop in the pipe if it is 7 m long (see Figure 5.12). Take the friction factor f to be 0.03.

SOLUTION

From Table A.5, we read for water:

$$\rho = 1\,000 \text{ kg/m}^3$$

* The friction factor defined in Equation 5.5 is known as the Darcy–Weisbach friction factor. The Fanning friction factor, f' , is used in some texts and is defined as

$$f' = \frac{\tau_w}{\frac{1}{2}\rho V^2}$$

The Darcy–Weisbach equation is preferred here because the 4 in Equation 5.4 becomes included in f , which yields a simpler formulation for Equation 5.6 and other equations that follow.

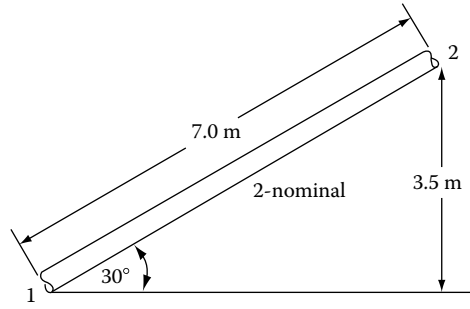


FIGURE 5.12 Sketch for Example 5.2.

From Table C.1, we find for 2-nominal, schedule 40 pipe (because a schedule was not specified, we assume the standard):

$$D = 5.252 \text{ cm} \quad A = 21.66 \text{ cm}^2$$

The continuity equation applied to the pipe is

$$Q = A_1 V_1 = A_2 V_2$$

and because diameter is constant, $A_1 = A_2$. Therefore, $V_1 = V_2$.

The Bernoulli equation with the friction term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

If z_1 is our reference point, then $z_1 = 0$ and $z_2 = 3.5 \text{ m}$. The average velocity is

$$V = \frac{Q}{A} = \frac{0.001}{21.66 \times 10^{-4}} = 0.462 \text{ m/s}$$

Rearranging the Bernoulli equation, we obtain, for a circular duct with $D_h = D$,

$$p_1 - p_2 = \frac{\rho}{2} (V_2^2 - V_1^2) + \rho g (z_2 - z_1) + \frac{fL}{D} \frac{\rho V^2}{2}$$

Substituting,

$$\begin{aligned} p_1 - p_2 &= 0 + 1\,000(9.81)(3.5 - 0) + \frac{0.03(7)}{0.05252} \frac{1\,000(0.462)^2}{2} \\ &= 34\,340 + 426.7 = 34\,760 \text{ Pa} \end{aligned}$$

or

$$p_1 - p_2 = 34.8 \text{ kPa}$$

5.5 THE FRICTION FACTOR AND PIPE ROUGHNESS

The preceding section introduced the concept of friction and a friction factor. In this section, we will discuss this concept further for two flow regimes—laminar and turbulent flow. Because the friction factor is influenced by the fluid velocity, we begin with a velocity distribution for circular pipe flow and later extend the results to other cross sections.

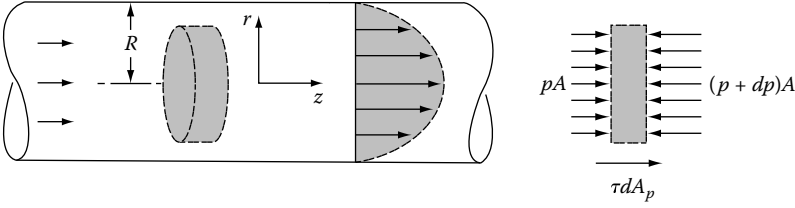


FIGURE 5.13 Laminar flow in a circular pipe.

Consider laminar flow in a circular pipe as shown in Figure 5.13. Cylindrical coordinates are chosen with z as the axial direction. A control volume that does not extend to the solid surface is selected as shown, and in applying the momentum equation, we obtain

$$\sum F_z = \iint_{CS} V_z \rho V_n dA$$

Because the pipe is of constant diameter, the right-hand side of this equation is zero. Summing forces acting on the control volume yields

$$pA + \tau dA_p - (p + dp)A = 0$$

Simplifying,

$$\tau dA_p - A dp = 0 \quad (5.9)$$

For a circular conduit, $A = \pi r^2$, and the area over which the shear stress acts is $dA_p = 2\pi r dz$. After substitution and simplification, Equation 5.9 becomes

$$\begin{aligned} \tau(2\pi r dz) - \pi r^2 dp &= 0 \\ \frac{dp}{dz} &= \frac{2\tau}{r} \end{aligned} \quad (5.10)$$

Equation 5.10 is valid for any circular cross section conveying any fluid. For a Newtonian fluid,

$$\tau = \mu \frac{dV_z}{dr}$$

and, by substitution,

$$\frac{dp}{dz} = \frac{2}{r} \mu \frac{dV_z}{dr} \quad (5.11)$$

Now dp/dz is a pressure drop per length of pipe; pressure does not vary across the cross section, and thus p is a function of neither r nor θ , only z . The right-hand side of the equation is a function of r alone. Because r and z are independent variables, the entire equation must equal a constant and must therefore be easily integrable to find the velocity V_z . Rearranging Equation 5.11 yields

$$\frac{dV_z}{dr} = \left(\frac{dp}{dz} \right) \frac{r}{2\mu}$$

Integrating gives

$$V_z = \left(\frac{dp}{dz} \right) \frac{r^2}{4\mu} + C_1 \quad (5.12)$$

where C_1 is a constant of integration. At the boundary $r=R$, the velocity $V_z=0$. Substituting, we obtain

$$0 = \left(\frac{dp}{dz} \right) \frac{R^2}{4\mu} + C_1$$

or

$$C_1 = - \left(\frac{dp}{dz} \right) \frac{R^2}{4\mu}$$

The velocity distribution now becomes

$$V_z = \left(\frac{dp}{dz} \right) \frac{1}{4\mu} (r^2 - R^2)$$

or

$$V_z = \left(- \frac{dp}{dz} \right) \frac{R^2}{4\mu} \left[1 - \left(\frac{r}{R} \right)^2 \right] \quad (5.13)$$

Note that dp/dz is negative because dp becomes smaller as dz becomes larger. That is, the pressure decreases with increasing length, and the term $(-dp/dz)$ is actually positive.

The average velocity is obtained from

$$V = \frac{\iint V_z dA}{A} = \frac{(-R^2/4\mu)(dp/dz) \int_0^{2\pi} \int_0^R (1 - r^2/R^2) r dr d\theta}{\pi R^2}$$

or

$$V = \frac{R^2}{8\mu} \left(- \frac{dp}{dz} \right) \quad (5.14)$$

In the preceding section, Equation 5.6 was developed to express the friction factor in terms of the average velocity as

$$dp = - \frac{\rho V^2}{2} \frac{f dz}{D_h}$$

which becomes, for a circular duct of radius R ,

$$\frac{dp}{dz} = - \frac{\rho V^2}{2} \frac{f}{2R} \quad (5.15)$$

Combining with Equation 5.14 gives

$$V = -\frac{R^2}{8\mu} \left(-\frac{\rho V^2}{2} \right) \frac{f}{2R}$$

Solving for the friction factor, we get

$$f = \frac{32\mu}{\rho VR} = \frac{64\mu}{\rho VD}$$

or

$$f = \frac{64}{\text{Re}} \quad (5.16)$$

for laminar flow in circular conduits.

For turbulent flow, a rigorous mathematical derivation of an accurate velocity distribution for pipes is not possible. Consequently, we must resort to intuitive reasoning, experimental data, and dimensional analysis to develop a means for finding friction factor f . We know that frictional effects are greatest at the wall, where a shear stress acts owing to viscosity. An examination of flow near a wall would show that a great number of protuberances exist; each protuberance may contribute to the frictional effect. Furthermore, some of these protuberances extend beyond the laminar sublayer into the turbulent core as shown in Figure 5.14. We conclude, then, that wall roughness influences the friction factor. Other parameters of significance are the fluid density and viscosity, average velocity of flow, and pipe diameter. Thus,

$$f = f(\rho, V, D, \mu, \varepsilon)$$

where ε is a characteristic dimension of the wall roughness or, more simply, an average height of the protuberances. Performing a dimensional analysis, we obtain

$$f = f\left(\frac{\rho VD}{\mu}, \frac{\varepsilon}{D}\right) \quad (5.17)$$

Many investigators have performed experiments to obtain data on pipe friction. In some experiments, pipe walls were coated with sand particles of constant height. Thus, a control for ε was established, and today commercially available pipe is assigned an equivalent sand roughness for calculation purposes. A plot of the data to predict f with the Reynolds number Re and the relative roughness ε/D as independent variables is called a **Moody diagram** (Figure 5.15). The Reynolds number ranges from 600 to 100 000 000; the friction factor ranges from 0.008 to 0.1.

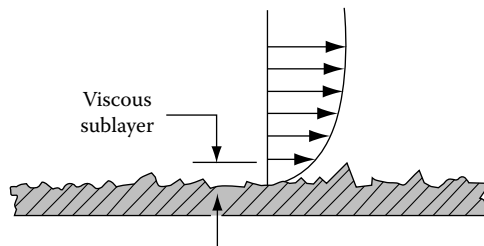


FIGURE 5.14 Turbulent flow in the vicinity of a wall.

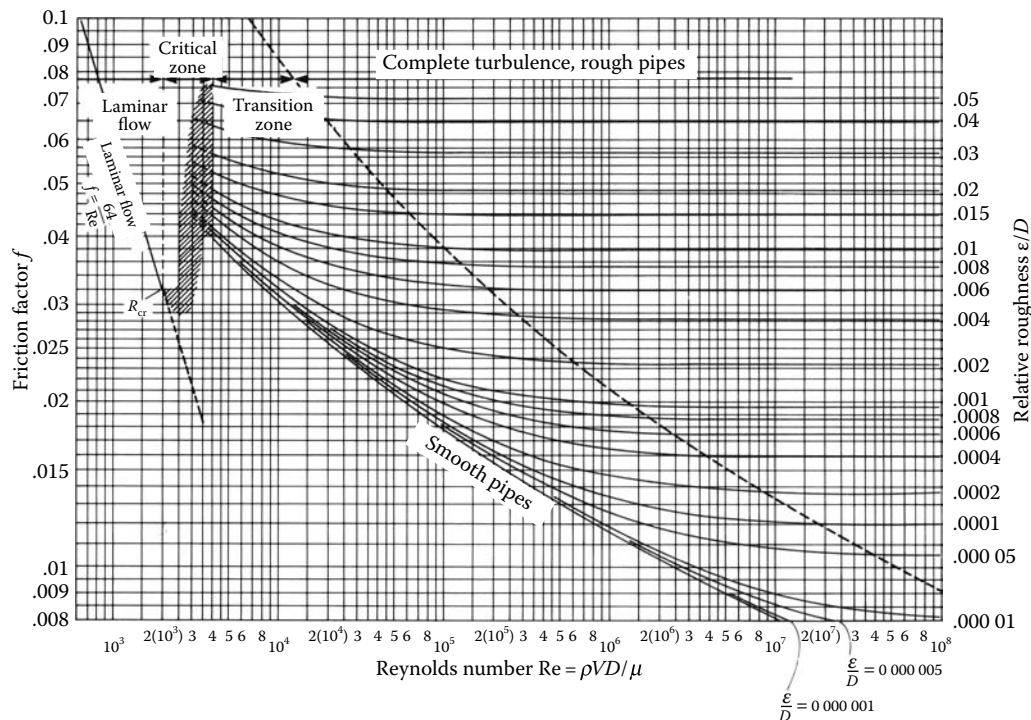


FIGURE 5.15 Friction factors for pipe flow (Moody diagram). (Adapted from Moody, L.F., *Trans. ASME*, 68, 672, 1944. With permission.)

In the laminar range, a plot of friction factor for circular pipes is given. For laminar flow, the friction factor depends only on Reynolds number and is not affected by wall roughness. Beyond this region, a critical zone exists wherein it is difficult to predict the friction factor because the flow can be either laminar or turbulent. Beyond the critical zone is a smooth-to-rough transition regime for rough pipes. In this region, the friction factor depends on both the relative roughness and the Reynolds number. Transition extends as far as the dashed line, beyond which a completely rough regime exists for rough pipes. In the turbulent region, the Reynolds number no longer influences the friction factor, as in the laminar and transition zones. For complete turbulence, the friction factor depends only on relative roughness.

It is necessary to have information on ϵ to find f . Typical values of ϵ for various types of material are given in Table 5.2. These data are for new, clean pipe. After years of service, minerals

TABLE 5.2
Values of ϵ for Various Materials

Pipe Material	ϵ (ft)	ϵ (cm)
Riveted steel	0.003–0.03	0.09–0.9
Concrete	0.001–0.01	0.03–0.3
Wood stave	0.0006–0.003	0.018–0.09
Cast iron	0.00085	0.025
Galvanized surface	0.0005	0.015
Asphalted cast iron	0.0004	0.012
Commercial steel or wrought iron	0.00015	0.0046
Drawn tubing	0.000005	0.00015

dissolved in the flowing fluid may deposit on the conduit wall, or the wall itself may corrode. Both processes affect ε and decrease the inside diameter. The net effect is to increase friction and reduce the volume-carrying capacity of the pipe. In water pipes for home use, for example, calcium deposits are common. In the petroleum industry, pipes carrying crude oil are cleaned frequently to remove deposits and prevent buildup. Buildup on the tube wall may have a substantial effect on ε .

5.5.1 FLOW THROUGH PIPES OF NONCIRCULAR CROSS SECTIONS

Flow through noncircular cross sections is somewhat different, and caution must be exercised when determining the friction factor f . Consider the case of fully developed laminar flow through a rectangular duct, as shown in Figure 5.16. The flow is assumed to be two-dimensional—that is, the width w is very large in comparison to the height h . Applying the momentum equation gives

$$\sum F_z = \iint_{CS} V_z \rho V_n dA$$

Because the cross section is constant, the right-hand side of this equation is zero. Summing forces acting on the control volume gives

$$\sum F_z = 0 = 2wyp + \tau w dz + \tau w dz - 2wy(p + dp)$$

or

$$\frac{dp}{dz} = \frac{\tau}{y} \quad (5.18)$$

For a Newtonian fluid,

$$\tau = \mu \frac{dV_z}{dy}$$

By substitution into Equation 5.18, we have

$$\frac{y}{\mu} \frac{dp}{dz} = \frac{dV_z}{dy}$$

Integrating gives an expression for V_z :

$$V_z = \frac{y^2}{2\mu} \frac{dp}{dz} + C_1$$

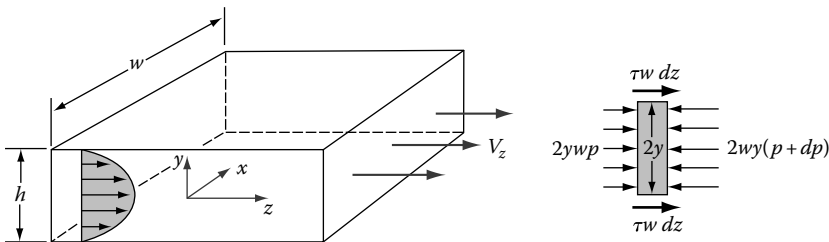


FIGURE 5.16 Laminar flow through a rectangular duct.

where C_1 is a constant. Now at $y = \pm h/2$, we find that $V_z = 0$. Therefore,

$$0 = \frac{h^2}{8\mu} \frac{dp}{dz} + C_1$$

$$C_1 = \left(-\frac{dp}{dz} \right) \frac{h^2}{8\mu}$$

The velocity becomes

$$V_z = \frac{h^2}{2\mu} \left(-\frac{dp}{dz} \right) \left(\frac{1}{4} - \frac{y^2}{h^2} \right) \quad (5.19)$$

The average velocity is found from

$$V = \frac{\int_{-h/2}^{h/2} V_z dy}{h}$$

$$V = \frac{h^2}{12\mu} \left(-\frac{dp}{dz} \right) \quad (5.20)$$

The friction factor defined previously is obtained from Equation 5.6 as

$$dp = -\frac{\rho V^2}{2} \frac{f dz}{D_h}$$

For this rectangular duct, the hydraulic diameter is

$$D_h = \frac{4A}{P} = \frac{4(hw)}{2h + 2w}$$

$$= \frac{4hw}{2w} = 2h \quad (5.21)$$

Because $w \gg h$. Combining these equations with Equation 5.20 gives

$$V = \frac{h^2}{12\mu} \left(\frac{\rho V^2}{2} \frac{f}{2h} \right)$$

Solving for f gives

$$f = \frac{48\mu}{\rho V h} = \frac{96\mu}{\rho V (2h)}$$

or

$$f = \frac{96}{\text{Re}} \quad (5.22)$$

for two-dimensional fully developed laminar flow through a rectangular duct with the Reynolds number based on the length $2h$. This result is for an infinitely wide rectangle; results are available for

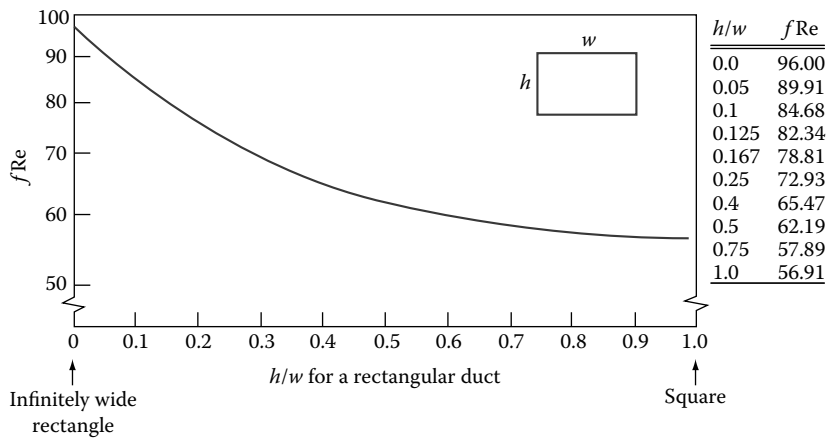


FIGURE 5.17 Friction factor for laminar flow in a rectangular duct.

other ratios of h/w , as shown in Figure 5.17. The product fRe ranges from 96 for a two-dimensional flow to 56.91 for a square. Thus, for laminar flow, the surface roughness does not affect f . For turbulent flow in a rectangular or square duct, the Moody diagram can be applied if the hydraulic diameter is used in expressions for relative roughness and Reynolds number.

5.5.2 FLOW THROUGH AN ANNULUS

The third type of flow that we will consider is flow in an annulus. Care must be exercised, however, in identifying the dimensions of the annulus. Figure 5.18 shows a cross-sectional view of a concentric annular duct. The annular flow area is bounded by the inside surface of the outer duct (radius R_1) and the outside surface of the inner duct (R_2). We define the ratio of these diameters as

$$\kappa = \frac{R_2}{R_1}$$

and we conclude that $0 < \kappa < 1$.

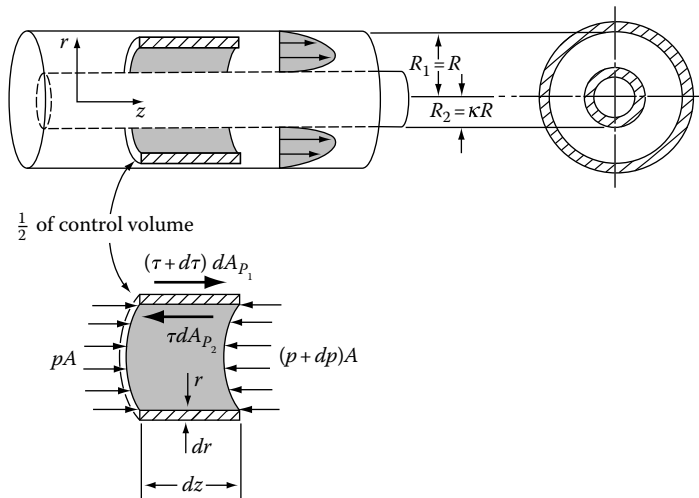


FIGURE 5.18 Laminar flow in an annulus.

For fully developed laminar flow in a concentric annular duct, the control volume is taken to be a cylindrical shell, as also shown in Figure 5.18. Applying the momentum equation yields

$$\sum F_z = \iint_{CS} V_z \rho V_n dA$$

Because the cross section is constant, the right-hand side of this equation is zero. Summing forces acting on the control volume gives

$$\sum F_z = 0 = pA + (\tau + d\tau)dA_{P_1} - \tau dA_{P_2} - (p + dp)A$$

The shell area A is $2\pi r dr$. The surface areas dA_{P_i} are

$$dA_{P_1} = 2\pi(r + dr)dz$$

$$dA_{P_2} = 2\pi r dz$$

By substitution the momentum equation becomes

$$(\tau + d\tau)(2\pi)(r + dr)dz - \tau(2\pi r)dz - 2\pi r dr dp = 0$$

Simplifying, we get

$$\tau dr + r d\tau + dr d\tau = r dr \frac{dp}{dz}$$

The term $dr d\tau$ is small in comparison to the others and can be omitted. The equation becomes

$$\frac{\tau}{r} + \frac{d\tau}{dr} = \frac{dp}{dz}$$

For a Newtonian fluid,

$$\tau = \mu \frac{dV_z}{dr}$$

By substitution, we obtain

$$\frac{\mu}{r} \frac{dV_z}{dr} + \frac{d}{dr} \left(\mu \frac{dV_z}{dr} \right) = \frac{dp}{dz}$$

or

$$\frac{1}{r} \frac{d}{dr} \left(r \frac{dV_z}{dr} \right) = \frac{1}{\mu} \frac{dp}{dz}$$

After multiplication by r and integration with respect to r , we have

$$r \frac{dV_z}{dr} = \frac{r^2}{2\mu} \frac{dp}{dz} + C_1$$

Division by r and integration once again with respect to r yields

$$V_z = \frac{r^2}{4\mu} \frac{dp}{dz} + C_1 \ln(r) + C_2 \quad (5.23)$$

We have two boundary conditions:

1. $r = R$; $V_z = 0$
2. $r = \kappa R$; $V_z = 0$ ($0 < \kappa < 1$)

Applying the first, we have

$$0 = \frac{R^2}{4\mu} \frac{dp}{dz} + C_1 \ln(R) + C_2$$

or

$$C_2 = -\frac{R^2}{4\mu} \frac{dp}{dz} - C_1 \ln(R) \quad (5.24a)$$

Applying the second boundary condition yields

$$0 = \frac{\kappa^2 R^2}{4\mu} \frac{dp}{dz} + C_1 \ln(\kappa R) + C_2$$

or

$$C_2 = -\frac{\kappa^2 R^2}{4\mu} \frac{dp}{dz} - C_1 \ln(\kappa R) \quad (5.24b)$$

Equating these expressions for C_2 gives

$$C_1 = \frac{1}{\ln(\kappa)} \frac{R^2}{4\mu} \frac{dp}{dz} (1 - \kappa^2)$$

$$C_2 = -\frac{R^2}{4\mu} \frac{dp}{dz} \left(1 + \frac{1 - \kappa^2}{\ln(\kappa)} \ln(R) \right)$$

Substituting into Equation 5.23 and simplifying, we get

$$V_z = \frac{R^2}{4\mu} \left(-\frac{dp}{dz} \right) \left[1 - \frac{r^2}{R^2} - \frac{1 - \kappa^2}{\ln(\kappa)} \ln\left(\frac{r}{R}\right) \right] \quad (5.25)$$

The average velocity is found by integration:

$$V = \frac{\int_{\kappa R}^R V_z 2\pi r dr}{\pi(R^2 - \kappa^2 R^2)}$$

Solving, we get

$$V = \frac{R^2}{8\mu} \left(-\frac{dp}{dz} \right) \left((1 + \kappa^2) + \frac{1 - \kappa^2}{\ln(\kappa)} \right) \quad (5.26)$$

The hydraulic diameter for an annular flow area is

$$D_h = \frac{4A}{P} = \frac{4\pi(R^2 - \kappa^2 R^2)}{2\pi R + 2\pi \kappa R} = 2(R - \kappa R)$$

or

$$D_h = 2R(1 - \kappa) \quad (5.27)$$

Equation 5.6 gives the friction factor in terms of the pressure drop as

$$\frac{dp}{dz} = -\frac{\rho V^2}{2} \frac{f}{D_h}$$

Combining with Equations 5.27 and 5.26 yields

$$\frac{1}{f} = \frac{\text{Re}}{64} \left(\frac{1 + \kappa^2}{(1 - \kappa)^2} + \frac{1 + \kappa}{(1 - \kappa)\ln(\kappa)} \right) \quad (5.28)$$

for fully developed laminar flow in a concentric annulus. For turbulent flow, the results for circular tubes are applicable when hydraulic diameter is used in expressions for relative roughness and Reynolds number and when κ is less than or equal to 0.75 (based on experimental results). The friction factor for concentric annular ducts is about 6%–8% greater than that for a smooth circular tube in the range of Reynolds numbers from 15 000 to 150 000.

Summarizing, we have considered flow in three types of cross sections—circular, rectangular, and annular. We have stated the friction factor for each of these shapes in both laminar and turbulent flow. The results are provided in Table 5.3.

5.5.3 MISCELLANEOUS GEOMETRIES

In heat-exchanger applications, it is not uncommon to find a tube that has been manufactured with internally spiraling fins. The added internal fins increase the surface area, and the heat-transfer rate is increased over that obtained from using an unfinned or plain tube. The friction factor for internally finned tubes is given in Problem 5.78 of the exercises.

In a number of industrial fluid-handling processes, coil-shaped tubes are used. The friction factor for such an arrangement is given in Problem 5.79.

5.6 SIMPLE PIPING SYSTEMS

Simple piping systems are those that contain no fittings, such as elbows or tee joints. The only head loss in such systems is due to friction at the wall. In this section, we consider examples that illustrate the use of the Moody chart.

In simple piping systems, six variables enter the problem:

L = pipe length

D = pipe diameter or hydraulic diameter of conduit

TABLE 5.3
Summary of Friction Factor Determinations for Three Common Cross Sections

	D_h	Re	V_z (Laminar)	V (Laminar)	f (Laminar)	f (Turbulent)
Circular	D	$\frac{\rho V D}{\mu}$	$V_z = \left(-\frac{dp}{dz}\right) \frac{R^2}{4\mu} \left[1 - \left(\frac{r}{R}\right)^2\right]$	$V = \frac{R^2}{8\mu} \left(-\frac{dp}{dz}\right)$	$\frac{64}{\text{Re}}$	Moody diagram (Figure 5.15)
Rectangular 2-D flow ($w \gg h$)	$2h$	$\frac{\rho V(2h)}{\mu}$	$V_z = \frac{h^2}{2\mu} \left(-\frac{dp}{dz}\right) \left(\frac{1}{4} - \frac{y^2}{h^2}\right)$	$V = \frac{h^2}{12\mu} \left(-\frac{dp}{dz}\right)$	$\frac{96}{\text{Re}}$	Moody diagram (Figure 5.15)
Rectangular general	$\frac{2hw}{h+w}$	$\frac{2\rho V}{\mu} \left(\frac{hw}{h+w}\right)$	—	—	Figure 5.17	Moody diagram (Figure 5.15)
Concentric annular duct	$2R(1-\kappa)$	$\frac{\rho V(2R)}{\mu} (1-\kappa)$	$V_z = \frac{R^2}{4\mu} \left(-\frac{dp}{dz}\right) \times \left[1 - \frac{r^2}{R^2} - \frac{1-\kappa^2}{\ln(\kappa)} \ln\left(\frac{r}{R}\right)\right]$	$V = \frac{R^2}{8\mu} \left(-\frac{dp}{dz}\right) \left((1+\kappa^2) + \frac{1-\kappa^2}{\ln(\kappa)}\right)$	$\frac{1}{f} = \frac{\text{Re}}{64} \left(\frac{1+\kappa^2}{(1-\kappa)^2} + \frac{1+\kappa}{(1-\kappa)\ln(\kappa)}\right)$	Moody diagram (Figure 5.15) only if $\kappa \leq 0.75$ (with small error)
where $\kappa = \frac{\text{outer diameter of inner conduit}}{\text{inner diameter of outer conduit}}$						

$\nu = \frac{\mu}{\rho}$ = kinematic viscosity of fluid

ε = wall roughness

Q = volume flow rate

$h_f = \frac{V^2}{2g} \frac{fL}{D}$ = head loss due to friction

Of these variables, L , ν , and ε are generally known. Thus, three types of problems are commonly encountered:

1. Given L , ν , ε , Q , and D , find h_f .
2. Given L , ν , ε , D , and h_f , find Q .
3. Given L , ν , ε , h_f , and Q , find D .

The solution technique for each of these problem types is illustrated by the following examples.

Example 5.3

Castor oil flows through 100 m of 4-nominal, schedule 40 cast-iron pipe. Determine the pressure drop experienced by the liquid if the volume flow rate is $0.01 \text{ m}^3/\text{s}$.

SOLUTION

We know the volume flow rate, $Q = 0.01 \text{ m}^3/\text{s}$, and the pipe length, $L = 100 \text{ m}$. From the appendix tables,

castor oil	$\rho = 0.960(1\ 000) \text{ kg/m}^3$	
	$\mu = 650 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$	[Table A.5]

4-nom, sch 40	$D = 10.23 \text{ cm}$	
	$A = 82.19 \times 10^{-4} \text{ m}^2$	[Table C.1]

From Table 5.2, we find, for cast iron,

$$\varepsilon = 0.025 \text{ cm}$$

The continuity equation for this problem is

$$Q = A_1 V_1 = A_2 V_2$$

where the subscript 1 refers to inlet conditions, and the subscript 2 refers to conditions at the end of the pipe. Because diameter is constant, $A_1 = A_2$ and so $V_1 = V_2$. The Bernoulli equation with the friction factor term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

Evaluating known terms, we have

$$V_1 = V_2 \text{ (from continuity)}$$

$$z_1 = z_2 \text{ (for a horizontal pipe)}$$

The Bernoulli equation reduces to

$$p_1 - p_2 = \frac{fL}{D} \frac{\rho V^2}{2}$$

By definition, and after substitution,

$$V = \frac{Q}{A} = \frac{0.01}{82.19 \times 10^{-4}} = 1.22 \text{ m/s}$$

So,

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{960(1.22)(0.1023)}{650 \times 10^{-3}} = 184$$

We thus have laminar flow because the Reynolds number is less than 2 100. The friction factor for laminar flow of a Newtonian fluid in a circular duct is (from Table 5.3):

$$f = \frac{64}{\text{Re}} = \frac{64}{184}$$

or

$$f = 0.347$$

Substituting into the Bernoulli equation, we get

$$p_1 - p_2 = \frac{0.347(100)}{0.1023} \frac{960(1.22)^2}{2}$$

$$\text{or } p_1 - p_2 = 2.42 \times 10^5 \text{ N/m}^2 = 242 \text{ kPa}$$

Another way to express this result is in terms of a head loss, defined as

$$\Delta h = \frac{p_1 - p_2}{\rho g} = \frac{2.42 \times 10^5}{960(9.81)}$$

$$\Delta h = 25.7 \text{ m of castor oil}$$

Note that for laminar flow, the value of the roughness ε does not enter into the problem.

Example 5.4

Decane flows through a 6-nominal, schedule 80 pipe that is 300 ft long at a flow rate of 250 gpm. Calculate the corresponding pressure drop if the pipe is made of commercial steel.

SOLUTION

We are given a length $L = 300$ ft. The flow rate is given in gallons per minute, which we can change to cubic feet per second by using the conversion factor tables of Table A.2. We convert to SI units by multiplication and convert back by division:

$$\frac{\text{gallons}}{\text{minute}} \cdot \frac{3.785 \times 10^{-3} \text{ m}^3/\text{gal}}{2.831 \times 10^{-2} \text{ m}^3/\text{ft}^3} \cdot \frac{1 \text{ min}}{60 \text{ s}} = \frac{2.228 \times 10^{-3} \text{ ft}^3/\text{s}}{\text{gpm}}$$

So the flow rate in fundamental units is

$$Q = 250 \text{ gpm} \times \frac{2.228 \times 10^{-3} \text{ ft}^3/\text{s}}{\text{gpm}} = 0.557 \text{ ft}^3/\text{s}$$

From the appendix tables and from Table 5.2, we read

$$\begin{array}{ll} \text{Decane} & \rho = 0.728(1.94) \text{ slug/ft}^3 \\ & \mu = 1.79 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2 \end{array} \quad [\text{Table A.5}]$$

$$\begin{array}{ll} \text{6-nom, sch 80} & D = 0.4801 \text{ ft} \\ & A = 0.1810 \text{ ft}^2 \end{array} \quad [\text{Table C.1}]$$

$$\text{Commercial steel} \quad \varepsilon = 0.00015 \text{ ft} \quad [\text{Table 5.2}]$$

The continuity equation for this problem is

$$Q = A_1 V_1 = A_2 V_2$$

Because diameter is constant, $A_1 = A_2$ and so $V_1 = V_2$. The Bernoulli equation with the friction factor term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

Evaluating known terms, we write

$$V_1 = V_2 \quad (\text{from continuity})$$

$$z_1 = z_2 \quad (\text{for a horizontal pipe})$$

The Bernoulli equation reduces to

$$p_1 - p_2 = \frac{fL}{D} \frac{\rho V^2}{2}$$

The average velocity is

$$V = \frac{Q}{A} = \frac{0.557}{0.1810} = 3.08 \text{ ft/s}$$

Therefore,

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{0.728(1.94)(3.08)(0.4801)}{1.79 \times 10^{-5}} = 1.17 \times 10^5$$

The flow is thus turbulent. The friction factor is found from Figure 5.14:

$$\left. \begin{array}{l} \text{Re} = 1.17 \times 10^5 \\ \frac{\varepsilon}{D} = \frac{0.00015}{0.4801} = 0.00031 \end{array} \right\} f = 0.0195$$

Substituting into the Bernoulli equation gives

$$p_1 - p_2 = \frac{0.0195(300)}{0.4801} \frac{0.728(1.94)(3.08)^2}{2}$$

Solving,

$$p_1 - p_2 = 81.6 \text{ psf} = 0.57 \text{ psi}$$

Example 5.5

Benzene flows through a 12-nominal, schedule 80 wrought iron pipe. The pressure drop measured at points 350 m apart is 34 kPa. Determine the flow rate through the pipe.

SOLUTION

The method and calculations in the preceding example, where pressure drop is unknown, are quite straightforward. In this example, volume flow rate Q is the unknown; therefore, velocity V and friction factor f are also unknown. A trial-and-error solution method will be required to solve this problem, but the technique is simple. From property and data tables, we determine the following:

Benzene	$\rho = 0.876(1\ 000) \text{ kg/m}^3$ $\mu = 0.601 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$	[Table A.5]
12-nom, sch 80	$D = 28.89 \text{ cm}$ $A = 655.50 \text{ cm}^2$	[Table C.1]
Wrought iron	$\varepsilon = 0.004 \text{ 6 cm}$	[Table 5.2]

The continuity equation is

$$Q = A_1 V_1 = A_2 V_2$$

Because diameter is constant, $A_1 = A_2$ and so $V_1 = V_2$. The Bernoulli equation with the friction factor term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

Evaluating properties,

$$V_1 = V_2 \quad (\text{from continuity})$$

$$z_1 = z_2 \quad (\text{for a horizontal pipe})$$

$$L = 350 \text{ m} \quad (\text{given})$$

$$p_1 - p_2 = 34 \text{ kPa} \quad (\text{given})$$

The Bernoulli equation becomes

$$p_1 - p_2 = \frac{fL}{D} \frac{\rho V^2}{2}$$

In problems of this type, where volume flow rate Q is the unknown, it is convenient to solve the Bernoulli equation for velocity:

$$V = \sqrt{\frac{2D(p_1 - p_2)}{\rho f L}}$$

Trial and error is necessary because velocity is unknown, but it is needed to calculate the Reynolds number, which in turn is needed to determine the friction factor. Substituting yields

$$V = \sqrt{\frac{2(0.288 \text{ 9})(34 \text{ 000})}{876f(350)}}$$

or

$$V = \frac{0.253}{\sqrt{f}} \quad (\text{i})$$

The Reynolds number is

$$\begin{aligned} \text{Re} &= \frac{\rho V D}{\mu} = \frac{876 V (0.288 \text{ 9})}{0.601 \times 10^{-3}} \\ &= 4.21 \times 10^5 V \end{aligned} \quad (\text{ii})$$

In addition, we have

$$\frac{\varepsilon}{D} = \frac{0.004 \text{ 6 cm}}{28.89 \text{ cm}} = 0.000 \text{ 16}$$

With reference to the Moody diagram, Figure 5.14, we know that our operating point is somewhere along the $\varepsilon/D = 0.000 \text{ 16}$ line. As our first estimate, we assume a value for the friction factor that corresponds to the fully turbulent value for this line. Thus we have the following first trial:

$$f = 0.013 \quad (\text{fully turbulent value for } \varepsilon/D = 0.000 \text{ 16})$$

Then

$$V = \frac{0.253}{\sqrt{f}} = \frac{0.253}{\sqrt{0.013}} = 2.22 \text{ m/s} \quad (\text{from Equation i})$$

$$\text{Re} = 4.21 \times 10^5 (2.22) \quad (\text{from Equation ii})$$

Thus

$$\left. \begin{aligned} \text{Re} &= 9.35 \times 10^5 \\ \frac{\varepsilon}{D} &= 0.000 \text{ 16} \end{aligned} \right\} f = 0.014 \text{ 5} \quad (\text{from Figure 5.14})$$

For the second trial,

$$f = 0.014 \text{ 5} \quad V = \frac{0.253}{\sqrt{0.014 \text{ 5}}} = 2.10 \text{ m/s}$$

$$\left. \begin{array}{l} \text{Re} = 4.21 \times 10^5 (2.10) = 8.85 \times 10^5 \\ \frac{\varepsilon}{D} = 0.00016 \end{array} \right\} \begin{array}{l} f \approx 0.0145 \\ \text{(from Figure 5.14)} \end{array}$$

which agrees with our assumed value. So

$$V = 2.10 \text{ m/s}$$

$$Q = AV = 655.50 \times 10^{-4} (2.10)$$

$$\text{or } Q = 0.138 \text{ m}^3/\text{s}$$

The method converges very rapidly. Seldom are more than two trials necessary.

Example 5.6

Glycerine flows through a 2-standard, type K copper tube that is 20 ft long. The head loss Δh over this length is 1 ft of glycerine. Calculate the flow rate through the pipe.

SOLUTION

Length and head loss are given in this problem and volume flow rate is unknown. We proceed as in the last example. From property and data tables, we obtain the following values:

$$\begin{array}{ll} \text{Glycerine} & \rho = 1.263(1.94) \text{ slug/ft}^3 \\ & \mu = 1983 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2 \end{array} \quad [\text{Table A.5}]$$

$$\begin{array}{ll} \text{2-std, type K} & D = 0.1633 \text{ ft} \\ & A = 0.02093 \text{ ft}^2 \end{array} \quad [\text{Table C.2}]$$

$$\text{Drawn tubing } \varepsilon = 0.000005 \text{ ft} \quad [\text{Table 5.2}]$$

The continuity equation is

$$Q = A_1 V_1 = A_2 V_2$$

Because diameter is constant, $A_1 = A_2$ and so $V_1 = V_2$. The Bernoulli equation with the friction factor term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

Evaluating properties,

$$V_1 = V_2 \quad (\text{from continuity})$$

$$z_1 = z_2 \quad (\text{for a horizontal pipe})$$

$$L = 20 \text{ ft} \quad (\text{given})$$

$$\Delta h = \frac{(p_1 - p_2)}{\rho g} = 1 \text{ ft} \quad (\text{given})$$

The Bernoulli equation becomes

$$\frac{p_1 - p_2}{\rho g} = \Delta h = \frac{fL}{D} \frac{V^2}{2g}$$

Solving for velocity V in terms of head loss Δh gives

$$V = \sqrt{\frac{2gD\Delta h}{fL}} = \sqrt{\frac{2(32.2)(0.1633)(I)}{20f}}$$

or

$$V = \frac{0.725}{\sqrt{f}} \quad (i)$$

The Reynolds number is

$$\begin{aligned} \text{Re} &= \frac{\rho VD}{\mu} = \frac{1.263(1.94)V(0.1633)}{1983 \times 10^{-5}} \\ &= 20.18V \end{aligned} \quad (ii)$$

Also,

$$\frac{\varepsilon}{D} = \frac{0.000005}{0.1633} = 0.00003$$

At this point, we see that the coefficient of velocity V in the Reynolds number equation is quite small. We conclude that the flow is probably laminar. So as our first trial, we substitute for the friction factor:

$$f = \frac{64}{\text{Re}} = \frac{64\mu}{\rho VD}$$

which is valid for laminar flow of a Newtonian fluid in a circular duct. Squaring Equation i and substituting for the friction factor gives

$$V^2 = \frac{0.526}{f} = \frac{0.526}{64} \frac{\rho VD}{\mu}$$

Simplifying and substituting,

$$\begin{aligned} V &= 0.0082 \frac{\rho D}{\mu} = \frac{0.0082(1.263)(1.94)(0.1633)}{1983 \times 10^{-5}} \\ &= 0.166 \text{ ft/s} \end{aligned}$$

As a check on the laminar flow assumption,

$$\text{Re} = 20.18 V = 20.18(0.166) = 3.34 < 2100$$

So the flow is laminar. The volume flow rate is

$$Q = AV = 0.02093(0.166)$$

$$Q = 0.0035 \text{ ft}^3/\text{s} = 1.6 \text{ gpm}$$

Example 5.7

A riveted steel pipeline is used to convey $2 \text{ ft}^3/\text{s}$ of gasoline a distance of 800 ft. The available pump can overcome a pressure drop of 40 psi. Select a suitable pipe size for the installation. Assume that gasoline properties are the same as those for octane.

SOLUTION

In this example, the diameter D is unknown. Therefore, friction factor f and velocity V are also unknown, and again a trial-and-error solution method is required. From property and data tables, we determine the following:

$$\begin{aligned} \text{Octane} \quad \rho &= 0.701(1.94) \text{ slug/ft}^3 \\ \mu &= 1.07 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2 \end{aligned} \quad [\text{Table A.5}]$$

$$\text{Riveted steel} \quad \varepsilon = \frac{0.003 + 0.03}{2} = 0.0165 \text{ ft} \quad [\text{Table C.1}]$$

(Table 5.2 shows that the roughness ε for riveted steel varies from 0.003 to 0.03 ft. For our purposes, the average value of 0.0165 ft is satisfactory.) The continuity equation is

$$Q = A_1 V_1 = A_2 V_2$$

Because diameter is constant, $A_1 = A_2$ and so $V_1 = V_2$. The Bernoulli equation with the friction factor term applies:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g}$$

Evaluating properties,

$$V_1 = V_2 \quad (\text{from continuity})$$

$$z_1 = z_2 \quad (\text{for a horizontal pipe})$$

$$L = 800 \text{ ft} \quad (\text{given})$$

$$\begin{aligned} p_1 - p_2 &= (40 \text{ lbf/in.}^2)(144 \text{ in.}^2/\text{ft}^2) \quad (\text{given}) \\ &= 5760 \text{ lbf/ft}^2 \end{aligned}$$

The Bernoulli equation becomes

$$p_1 - p_2 = \frac{fL}{D} \frac{V^2}{2}$$

The right-hand side of this equation contains a velocity term. We were given volume flow rate, and so it is convenient at this point to substitute for the velocity:

$$V = \frac{Q}{A} = \frac{4Q}{\pi D^2}$$

The Bernoulli equation now becomes

$$p_1 - p_2 = \frac{fL}{D} \frac{\rho}{2} \frac{16Q^2}{\pi^2 D^4}$$

Rearranging and solving for diameter gives

$$D = \sqrt[5]{\frac{8\rho f L Q^2}{\pi^2(p_1 - p_2)}}$$

Substituting all known quantities and simplifying, we get

$$\begin{aligned} D &= \sqrt[5]{\frac{8(0.701)(1.94)f(800)(2)^2}{\pi^2(5760)}} \\ &= 0.907f^{1/5} \end{aligned} \quad (i)$$

Likewise, the Reynolds number can be expressed in terms of volume flow rate:

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{\rho D}{\mu} \frac{4Q}{\pi D^2} = \frac{4\rho Q}{\pi D \mu}$$

Substituting,

$$\begin{aligned} \text{Re} &= \frac{4(0.701)(1.94)(2)}{\pi D(1.07 \times 10^{-5})} \\ &= \frac{3.24 \times 10^5}{D} \end{aligned} \quad (ii)$$

As a first trial, assume $f = 0.02$ (a completely random selection); then

$$D = 0.907f^{1/5} = 0.907(0.02)^{1/5} = 0.415 \text{ ft}$$

Also,

$$\left. \begin{aligned} \text{Re} &= 7.8 \times 10^5 \text{ (Equation ii)} \\ \frac{\varepsilon}{D} &= \frac{0.0165}{0.415} = 0.0398 \end{aligned} \right\} f = 0.065 \quad (\text{from Figure 5.14})$$

For the second trial:

$$\begin{aligned} f &= 0.065 \quad D = 0.525 \text{ ft} \\ \left. \begin{aligned} \text{Re} &= 6.2 \times 10^5 \\ \frac{\varepsilon}{D} &= \frac{0.0165}{0.525} = 0.0314 \end{aligned} \right\} f = 0.057 \quad (\text{from Figure 5.14}) \end{aligned}$$

For the third trial:

$$\begin{aligned} f &= 0.057 \quad D = 0.511 \text{ ft} \\ \left. \begin{aligned} \text{Re} &= 6.3 \times 10^5 \\ \frac{\varepsilon}{D} &= \frac{0.0165}{0.511} = 0.032 \end{aligned} \right\} f \approx 0.057 \quad (\text{from Figure 5.14}) \end{aligned}$$

The calculations indicate that diameter $D = 0.511$ ft. This value does not appear explicitly in Table C.1, however, because pipe and tubing are sized in discrete values. So we choose the next larger size. Furthermore, nothing special was specified in the problem statement, so in addition we choose the standard schedule within the size we select. We see that 6-nominal schedule 40 is too small. The next larger size is the one we select for our solution:

$$\begin{aligned} &8\text{-nominal schedule 40} \\ &D = 0.6651 \text{ ft} \end{aligned}$$

5.7 MINOR LOSSES

The losses due to flow through valves or fittings in a pipeline are known as **minor losses**. As fluid flows through a fitting, it may encounter an abrupt change in area or flow direction. Such abrupt changes cause pressure drops in the fluid flow. The flow pattern existing at a pipe inlet, for example, is not fully developed, and a pressure loss results that takes energy away from the flow. In a **globe valve**, the fluid is forced through a very small opening as it travels through, which results in a pressure loss. This loss is customarily expressed in terms of a loss coefficient K :

$$\Delta p = -K \frac{\rho V^2}{2} \quad (5.29)$$

For any piping system, the overall loss in pressure due to the combined effect of all fittings is found by summing the loss coefficients.

It is interesting to compare the preceding equation for minor loss to that for the friction loss. Both have the same form; for pipe friction, we have

$$\Delta p = -\frac{fL}{D} \frac{\rho V^2}{2} = \left(\begin{array}{c} \text{friction} \\ \text{loss term} \end{array} \right) \cdot \left(\begin{array}{c} \text{kinetic energy} \\ \text{of the flow} \end{array} \right)$$

Similarly, for the minor losses,

$$\Delta p = -\sum K \frac{\rho V^2}{2} = \left(\begin{array}{c} \text{sum of loss} \\ \text{coefficients} \end{array} \right) \cdot \left(\begin{array}{c} \text{kinetic energy} \\ \text{of the flow} \end{array} \right)$$

For many fittings, the loss coefficient K must be measured; in a few cases, however, it can be determined analytically.

An alternative method of accounting for minor losses involves the use of what is called an **equivalent length**. Conceptually, the loss due to a fitting is equal to the loss due to a certain length of pipe in the same pipeline. So a fitting could be removed and replaced with additional pipe. We write

$$K = \frac{fL_{eq}}{D}$$

where L_{eq} is the length of pipe required. For further discussion, see Problem 5.56.

In the design of pipelines, energy loss due to friction is dominant for pipe lengths of 100 ft (30.5 m) or greater. For shorter lengths, losses at elbows, valves, tee joints, and the like may be equal to or greater than the frictional losses. These losses, calculated in the form of Equation 5.29, can be incorporated into Bernoulli's equation with friction. The result is

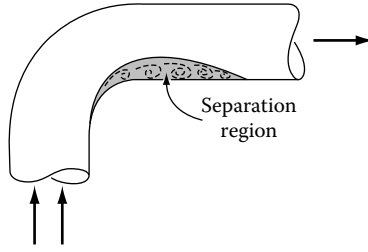


FIGURE 5.19 Flow through an elbow.

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g} + \sum K \frac{V^2}{2g} \quad (5.30)$$

which is called the **modified Bernoulli equation**. Minor losses due to fittings are merely added together. Thus, it is important to have information on K , the loss coefficient for various fittings, as will be discussed in the following paragraphs.

Consider flow through an elbow as shown in Figure 5.19. As the fluid is turned, the fluid tends to separate from the inner wall. The separation region consists mostly of swirls and eddies; thus, a portion of the cross section is not being used to convey fluid in the primary flow direction. The result is a pressure drop in the fitting. Table 5.4 gives the loss coefficient for various elbows, both flanged and threaded. Since similar losses occur in tee joints, loss coefficients for these fittings too are given in Table 5.4.

Next consider flow through a contraction, as illustrated in Figure 5.20. At section 1, the flow begins to separate so that the main stream can negotiate the corner. At section 2, the flow area has reduced to a minimum, called the *vena contracta*. At section 3, the flow again fills the pipe. The separation between sections 1 and 3 causes a pressure drop. Empirical results for the loss coefficient in a reducing bushing are given in Table 5.4.

Flow through a sudden enlargement is shown in Figure 5.21 (see page 232). At section 1, the flow encounters the enlargement and separates. At section 2, the flow again fills the cross section. By applying the momentum equation to sections 1 and 2, we obtain

$$\sum F_z = \iint_{CS} V_z \rho V_n dA$$

or

$$p_1 A_2 - p_2 A_2 = \rho A_2 V_2 (V_2 - V_1)$$












From continuity, $A_1 V_1 = A_2 V_2$. By substitution and after simplification, we have

$$\frac{p_1 - p_2}{\rho g} = \frac{V_2^2}{g} \left(1 - \frac{A_2}{A_1} \right) \quad (5.31)$$

By applying the modified Bernoulli equation to sections 1 and 2, we get

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D} \frac{V^2}{2g} + \sum K \frac{V^2}{2g}$$

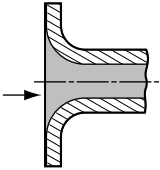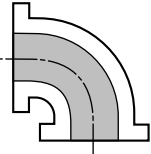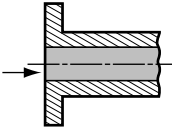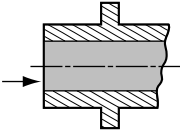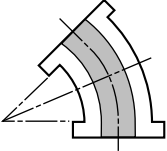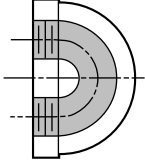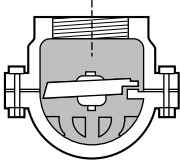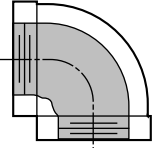TABLE 5.4
Loss Coefficients for Various Fittings

 Well-rounded entrance or bell-mouth inlet $K = 0.05$	 Flanged 90° elbow $K = 0.31$ (regular) $K = 0.22$ (long radius)
 Square-edged inlet $K = 0.5$	 Threaded 45° elbow $K = 0.35$ (regular)
 Reentrant inlet or inward-projecting pipe $K = 1.0$	 Flanged 45° elbow $K = 0.17$ (long radius)
 Basket strainer $K = 1.3$	 Threaded return bend $K = 1.5$ (regular)
 Foot valve $K = 0.8$	 Flanged return bend $K = 0.30$ (regular) $K = 0.20$ (long radius)
 Threaded 90° elbow $K = 1.4$ (regular) $K = 0.75$ (long radius)	

(continued)

TABLE 5.4 (continued)
Loss Coefficients for Various Fittings

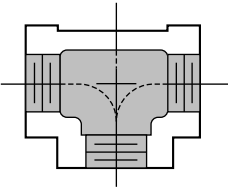
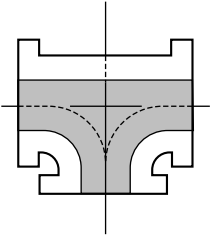
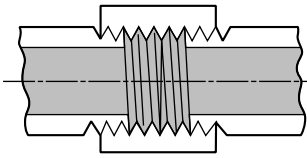
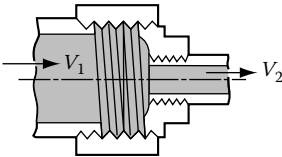
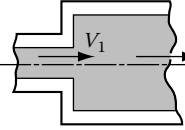
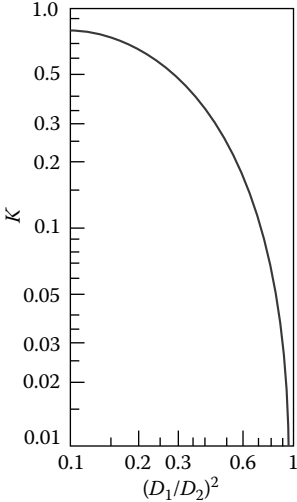
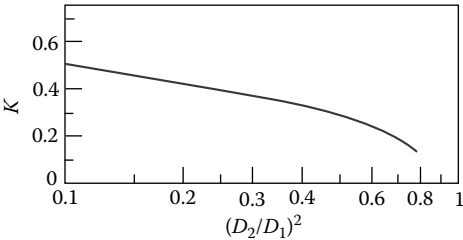
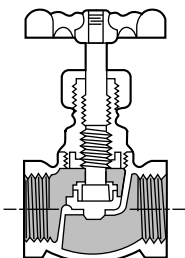
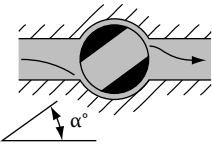
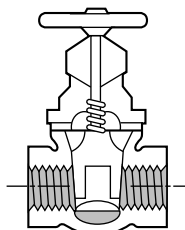
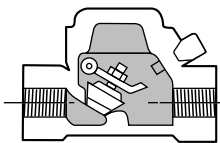
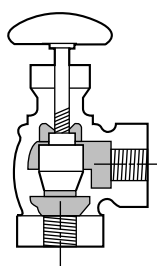

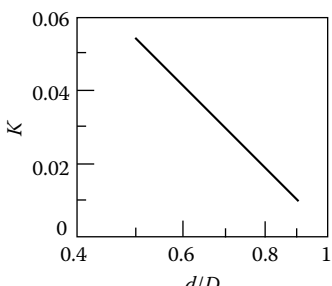
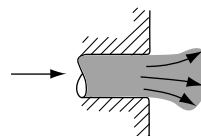
	Threaded tee joint $K = 0.9$ (line flow) $K = 1.9$ (branch flow)
	Flanged tee joint $K = 0.14$ (line flow) $K = 0.69$ (branch flow)
	Couplings and unions $K = 0.08$
	Reducing bushing and coupling (sudden contraction) $h_m = K \frac{V_2^2}{2g}$
 Sudden expansion  $h_m = \left(1 - \frac{D_2^2}{D_1^2}\right)^2 \frac{V_1^2}{2g} = \left(\frac{D_2^2}{D_1^2} - 1\right)^2 \frac{V_2^2}{2g}$	
	

TABLE 5.4 (continued)
Loss Coefficients for Various Fittings

 Globe valve fully open $K = 10$	 Ball valve <table><tr><td>$\alpha^\circ =$</td><td>0</td><td>10</td><td>20</td></tr><tr><td>$K =$</td><td>0.05</td><td>0.29</td><td>1.56</td></tr><tr><td>$\alpha^\circ =$</td><td>30</td><td>40</td><td>50</td><td>60</td><td>70</td><td>80</td></tr><tr><td>$K =$</td><td>5.47</td><td>17.3</td><td>25.6</td><td>206</td><td>485</td><td>∞</td></tr></table>	$\alpha^\circ =$	0	10	20	$K =$	0.05	0.29	1.56	$\alpha^\circ =$	30	40	50	60	70	80	$K =$	5.47	17.3	25.6	206	485	∞
$\alpha^\circ =$	0	10	20																				
$K =$	0.05	0.29	1.56																				
$\alpha^\circ =$	30	40	50	60	70	80																	
$K =$	5.47	17.3	25.6	206	485	∞																	
 Gate valve <table><tr><td>Fraction closed =</td><td>0</td><td>$\frac{1}{4}$</td><td>$\frac{3}{8}$</td><td>$\frac{1}{2}$</td></tr><tr><td>$K =$</td><td>0.15</td><td>0.26</td><td>0.81</td><td>2.06</td></tr></table> <table><tr><td>Fraction closed =</td><td>$\frac{5}{8}$</td><td>$\frac{3}{4}$</td><td>$\frac{7}{8}$</td></tr><tr><td>$K =$</td><td>5.52</td><td>17.0</td><td>97.8</td></tr></table>	Fraction closed =	0	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$	$K =$	0.15	0.26	0.81	2.06	Fraction closed =	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	$K =$	5.52	17.0	97.8	 Swing-type check valve Check valves: $K = 2.5$ (swing type) $K = 70.0$ (ball type) $K = 12.0$ (lift type)				
Fraction closed =	0	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$																			
$K =$	0.15	0.26	0.81	2.06																			
Fraction closed =	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$																				
$K =$	5.52	17.0	97.8																				
 Angle valve $K = 2$	 Convergent outlet  <table><tr><td>d/D</td><td>0.4</td><td>0.5</td><td>0.6</td><td>0.7</td><td>0.8</td><td>0.9</td></tr><tr><td>K</td><td>0.055</td><td>0.035</td><td>0.025</td><td>0.018</td><td>0.012</td><td>0.01</td></tr></table>	d/D	0.4	0.5	0.6	0.7	0.8	0.9	K	0.055	0.035	0.025	0.018	0.012	0.01								
d/D	0.4	0.5	0.6	0.7	0.8	0.9																	
K	0.055	0.035	0.025	0.018	0.012	0.01																	
	 Pipe exit $K = 1.0$																						

Source: Provided courtesy of Hydraulic Institute, Parsippany, NJ. www.Pumps.org.

Note: Many fittings have losses that vary with nominal diameter D_n ; K for threaded fittings is taken at $D_n = 1$ in.; K for flanged fittings is taken at $D_n = 4$ in. With plastic pipe, fittings can be sleeved and cemented. With copper tubing, fittings can be soldered together. Both can be taken as equivalent to threaded fittings.

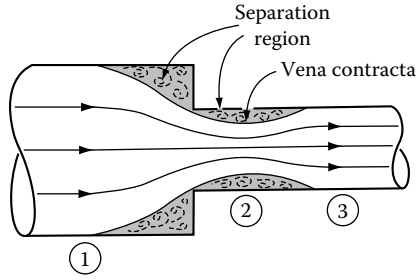


FIGURE 5.20 Flow through a contraction (such as a reducing bushing).

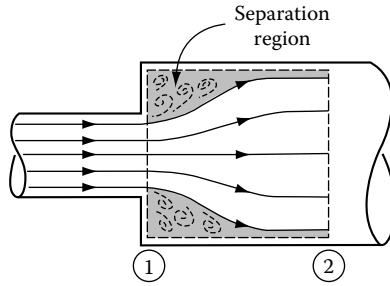


FIGURE 5.21 Flow through a sudden enlargement.

or

$$\frac{p_1 - p_2}{\rho g} = \frac{V_2^2 - V_1^2}{2g} + K \frac{V_1^2}{2g} \quad (5.32)$$

Combining Equations 5.31 and 5.32 yields

$$\begin{aligned} \frac{V_2^2}{g} \left(1 - \frac{A_2}{A_1} \right) &= \frac{V_2^2}{2g} \left(1 - \frac{V_1^2}{V_2^2} \right) + K \frac{V_1^2}{2g} \\ &= \frac{V_2^2}{2g} \left(1 - \frac{A_2^2}{A_1^2} \right) + K \frac{A_2^2}{A_1^2} \frac{V_2^2}{2g} \end{aligned}$$

Rearranging and simplifying, we get

$$K = 1 - \frac{2A_1}{A_2} + \frac{A_1^2}{A_2^2}$$

or

$$K = \left(1 - \frac{A_1}{A_2} \right)^2 \quad (5.33)$$

The corresponding minor loss is

$$h_m = \frac{V_1^2}{2g} \left(1 - \frac{A_1}{A_2} \right)^2 = \left(\frac{A_2}{A_1} - 1 \right)^2 \frac{V_2^2}{2g} \quad (5.34)$$

where the continuity equation has been used. Table 5.4 plots K versus A_1/A_2 for use with Equation 5.34. Note that as A_2 approaches infinity, $K \rightarrow 1$, which is for an exit from a pipe into a reservoir (also given in Table 5.4).

Loss coefficients for valves are usually measured. Table 5.4 gives K for a globe valve, a gate valve, an angle valve, a ball valve, and check valves.

The values of the loss coefficient for most fittings are sensitive to nominal diameter D_n . In fact, values of K for many of the fittings in Table 5.4 are available for diameters ranging from 0.3 to 4 in. for threaded fittings and from 1 to 20 in. for flanged fittings. The values of K given in Table 5.4 correspond to $D_n = 1$ for threaded fittings and $D_n = 4$ for flanged fittings. These values are satisfactory for design.

Difficulties may arise in trying to evaluate minor losses for a given piping system. Before solving a number of piping problems, let us review the control volume concept and how to apply it using the modified Bernoulli equation (Equation 5.30). First we decide where the control volume is to be located, and we then identify those places where mass crosses the control surface. The modified Bernoulli equation contains pressure p , velocity V , and height z terms, which apply *only* at locations where mass crosses the boundary—nothing inside or outside of the control volume can be described or accounted for by these terms. The friction factor term fL/D and the minor loss coefficient term $\sum K$ account for what happens inside (and not outside) of the control volume. To illustrate these concepts, consider Figure 5.22. Five drawings of the same piping system are shown, a different control volume having been selected for each case. As is indicated in Figure 5.22a, the control volume extends from the free surface labeled “1” to the free surface labeled “2” and includes all the liquid in between. The modified Bernoulli equation is written, and the terms are evaluated. The pressures p_1 and p_2 are equal to atmospheric pressure. The velocities at the free surfaces are negligible. The heights z_1 and z_2 are measured from the same reference line, which could be at any location, although here we arbitrarily select the bottom of the lower tank. The friction factor f applies only to the pipe itself, as does the length L and the inside diameter D . The minor losses include all fittings encountered by a fluid particle in going from 1 to 2. In this case, we include an entrance, a valve, two elbows, and an exit loss. The coefficient of the friction and minor loss terms is $V^2/2g$, where V is the velocity associated with these terms—that is, the velocity in the pipe itself.

In Figure 5.22b, the control volume extends from the free surface at 1 to a section downstream of the pipe exit where the exit kinetic energy of the flow has dissipated so that the velocity V_2 is zero. The pressures p_1 and p_2 are equal to atmospheric pressure. The velocity V_1 is negligible, and the heights are measured from a reference plane. The friction factor term fL/D applies to the pipe. The minor loss term includes an entrance, a valve, two elbows, and an exit loss. The kinetic energy of the fluid within the pipe is $V^2/2g$. The resultant equation is the same as in Figure 5.22a. Thus, if we say that the outlet pressure p_2 equals atmospheric pressure in the open-ended pipe of Figure 5.22b, then the corresponding velocity V_2 is zero, and we would include an exit loss in our minor losses.

In Figure 5.22c, the control volume extends from the free surface at point 1 to some point 2 downstream. The pressure p_1 is equal to atmospheric pressure. The pressure p_2 is unknown. The velocity V_2 is the velocity in the pipe, and V_1 is negligible in comparison to V_2 . The heights z_1 and z_2 are again measured from the same plane. The friction term fL/D applies to only the pipe. The minor losses that we include here are an entrance, a valve, and two elbows. We do not include an exit loss in this case because the actual loss itself would not be realized until after the exit is encountered, which is outside the control volume where none of the terms in the modified Bernoulli equation apply. The kinetic energy within the pipe is based on velocity $V (= V_2)$.

In Figure 5.22d, the control volume extends from some location labeled 1 to the free surface of the liquid in a tank. The pressure p_1 is unknown, but p_2 equals atmospheric pressure. The velocity V_1 is the velocity in the pipe, and V_2 is negligible. The heights z_1 and z_2 are measured from the same datum. The friction term fL/D applies only to the pipe. The minor losses include a valve,

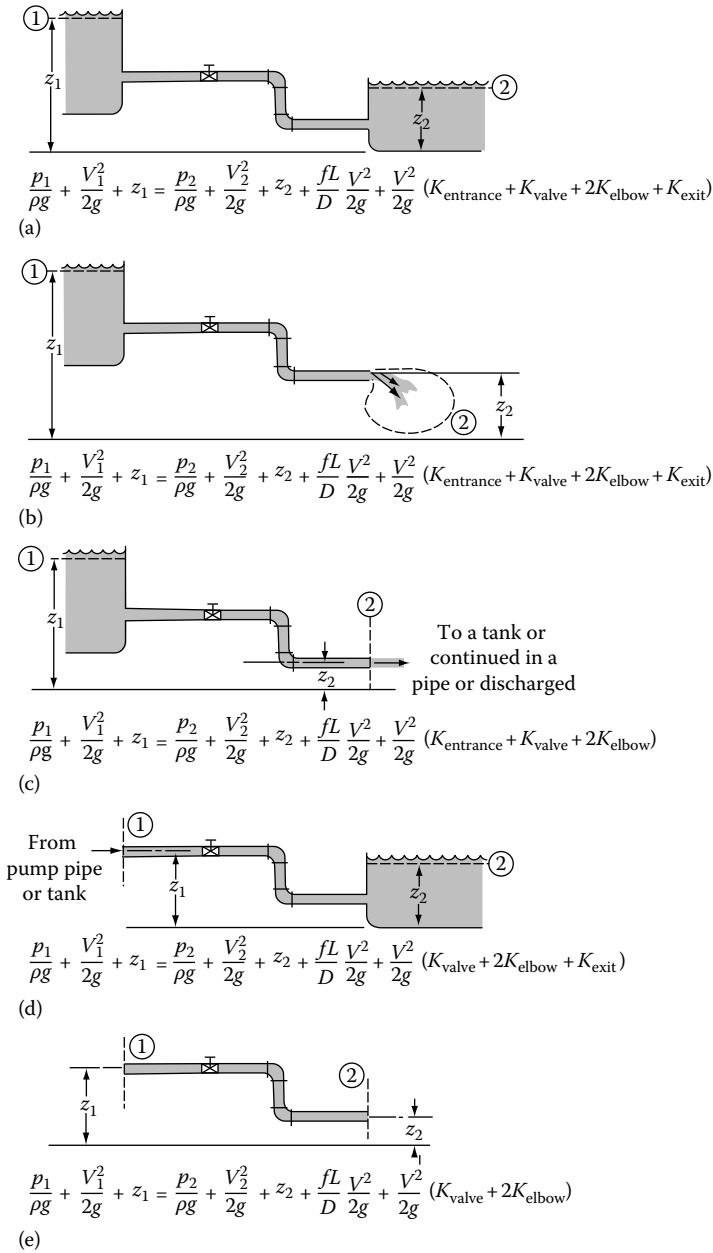


FIGURE 5.22 The modified Bernoulli equation applied to five different control volumes drawn about the same piping system. (Suggested by Professor Ernest Blattner.)

two elbows, and an exit loss. An entrance loss is not included in this case. The kinetic energy of the flow within the pipe is based on the velocity $V (= V_1)$.

In Figure 5.22e, the control volume includes the liquid contained in the pipe between points 1 and 2. The pressures p_1 and p_2 are not known. The velocities V_1 and V_2 are nonzero but equal, so the kinetic energy terms containing them in the modified Bernoulli equation cancel each other. The heights z_1 and z_2 are measured from the same plane. The friction term fL/D applies to the pipe.

The minor losses that we consider include a valve and two elbows. The kinetic energy of the flow is based on velocity V , which equals V_1 and V_2 .

We are now able to solve piping problems that are more complex than those in Section 5.6. The types of problems, however, are the same—where h_f is unknown, where Q is unknown, or where D is unknown.

Example 5.8

In a processing plant, turpentine is piped from tanks to cans that are to be sealed and sold to retail outlets. A portion of the pipeline is sketched in Figure 5.23. There are 60 m of 12-nominal pipe and 22 m of 8-nominal pipe. All elbows are standard and flanged, and the line is made of schedule 80 wrought iron pipe. Determine the pressure drop $p_1 - p_2$ if the volume rate of flow is $0.05 \text{ m}^3/\text{s}$.

SOLUTION

The control volume we select includes all the liquid in the piping system from gauge to gauge. We use the property and data tables:

Turpentine	$\rho = 870 \text{ kg/m}^3$ $\mu = 1.375 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$	[Table A.5]
12-nom, sch 80	$D_{12} = 28.89 \text{ cm}$ $A_{12} = 655.50 \text{ cm}^2$	[Table C.1]
8-nom, sch 80	$D_8 = 19.37 \text{ cm}$ $A_8 = 294.70 \text{ cm}^2$	[Table C.1]
Wrought iron	$\varepsilon = 0.0046 \text{ cm}$	[Table 5.2]

Next, we write the modified Bernoulli equation from sections 1 to 2:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \left(\frac{fL}{D} + \sum K \right) \frac{V^2}{2g} \Big|_{12\text{-pipe}} + \left(\frac{fL}{D} + \sum K \right) \frac{V^2}{2g} \Big|_{8\text{-pipe}}$$

The flow velocities are

$$V_{12} = \frac{Q}{A_{12}} = \frac{0.05}{0.065550} = 0.763 \text{ m/s}$$
$$V_8 = \frac{Q}{A_8} = \frac{0.05}{0.029470} = 1.70 \text{ m/s}$$

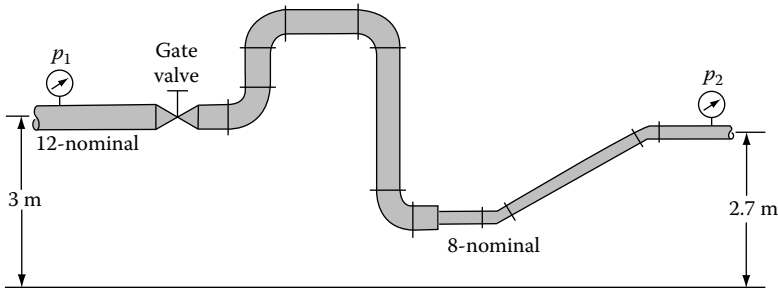


FIGURE 5.23 A pipeline for Example 5.8.

Thus

$$\text{Re}_{12} = \frac{\rho V D}{\mu} = \frac{870(0.763)(0.289)}{1.375 \times 10^{-3}} = 1.39 \times 10^5$$

$$\text{Re}_8 = \frac{870(1.70)(0.194)}{1.375 \times 10^{-3}} = 2.08 \times 10^5$$

Also,

$$\frac{\varepsilon}{D_{12}} = \frac{0.0046}{28.89} = 0.00016$$

$$\frac{\varepsilon}{D_8} = \frac{0.0046}{19.37} = 0.00024$$

From the Moody diagram,

$$f_{12} = 0.018$$

$$f_8 = 0.0175$$

The minor losses in the 12-pipe are from one gate valve and four standard elbows:

$$\sum K|_{12} = 0.15 + 4(0.31) = 1.39$$

The minor losses in the 8-pipe area are from the contraction ($D_8^2/D_{12}^2 = 0.45$) and two 45° elbows:

$$\sum K|_8 = 0.29 + 2(0.17) = 0.63$$

After rearranging the Bernoulli equation and substituting, we obtain

$$\begin{aligned} \frac{p_1 - p_2}{\rho g} &= \frac{(1.70)^2}{2(9.81)} - \frac{(0.763)^2}{2(9.81)} + (2.7 - 3) + \left(\frac{0.018(60)}{0.289} + 1.39 \right) \\ &\quad \times \frac{(0.763)^2}{2(9.81)} + \left(\frac{0.0175(22)}{0.194} + 0.63 \right) \frac{(1.70)^2}{2(9.81)} \\ &= 0.147 - 0.0296 + (-0.3) + 0.152 + 0.384 \\ &= 0.353 \text{ m of turpentine} \end{aligned}$$

or

$$p_1 - p_2 = 0.353(870)(9.81) = 3010 \text{ N/m}^2$$

$$p_1 - p_2 = 3.01 \text{ kPa}$$

Example 5.9

A water tank is fitted with a drain and outlet pipe as sketched in Figure 5.24. The system has 82 ft of cast iron pipe of 1½-nominal diameter. Determine the flow rate through the pipe. All fittings are threaded and regular.

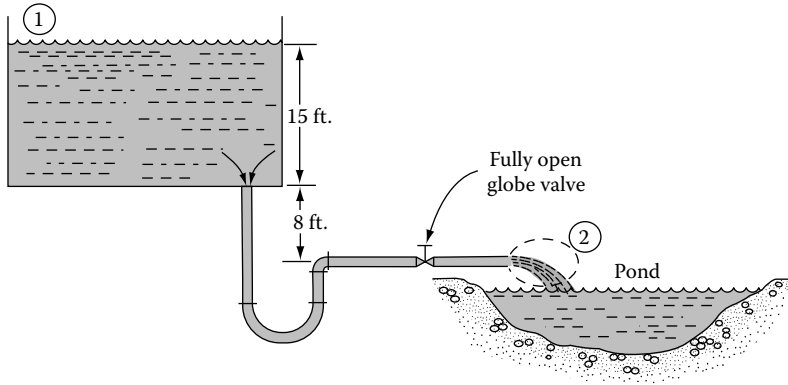


FIGURE 5.24 Piping system for Example 5.9.

SOLUTION

We select as our control volume all the fluid in the tank and in the piping system. Section 1 is the free surface of the tank liquid and section 2 is as indicated in the figure. We use the data and property tables:

$$\begin{array}{ll} \text{Water} & \rho = 1.94 \text{ slug/ft}^3 \\ & \mu = 1.9 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2 \end{array} \quad [\text{Table A.5}]$$

$$\begin{array}{ll} 1\frac{1}{2}\text{-nom, sch 40} & D = 0.1342 \text{ ft} \\ & A = 0.01414 \text{ ft}^2 \end{array} \quad [\text{Table C.1}]$$

$$\text{Cast iron} \quad \varepsilon = 0.00085 \text{ ft} \quad [\text{Table 5.2}]$$

$$\begin{array}{ll} \text{Minor losses} & \sum K = K_{\text{entrance}} + K_{\text{return bend}} + K_{\text{elbow}} + K_{\text{globe valve}} + K_{\text{exit}} \\ & \sum K = 0.5 + 1.5 + 1.4 + 10 + 1.0 = 14.4 \end{array} \quad [\text{Table 5.4}]$$

Write the Bernoulli equation from section 1 (the free surface of the liquid in the tank) to section 2:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D_h} \frac{V^2}{2g} + \sum K \frac{V^2}{2g}$$

The figure shows that $p_1 = p_2 = p_{\text{atm}}$ and that if $z_2 = 0$, then $z_1 = 23 \text{ ft}$. The reservoir surface velocity V_1 and the velocity of the jet after the exit V_2 are both negligible in comparison to the velocity in the pipe. Because all the piping is of the same diameter, the equation becomes

$$z_1 = \frac{V^2}{2g} \left(\frac{fL}{D} + \sum K \right)$$

By substitution,

$$23(2)(32.2) = V^2 \left(\frac{f(82)}{0.1342} + 14.4 \right)$$

or

$$V = \left(\frac{1480}{14.4 + 611f} \right)^{1/2}$$

Because V and f are unknown, a trial-and-error solution is required. As a first trial, assume $f=0.03$; then

$$V = 6.72 \text{ ft/s}$$
$$\text{Re} = \frac{\rho V D}{\mu} = \frac{1.94(6.72)(0.1342)}{1.9 \times 10^{-5}} = 9.21 \times 10^4$$
$$\frac{\varepsilon}{D} = \frac{0.00085}{0.1342} = 0.0063$$

$$\left. \begin{array}{l} \\ \\ \end{array} \right\} \begin{array}{l} \text{Moody diagram:} \\ f = 0.0335 \end{array}$$

As a second trial assume $f=0.0335$; then

$$V = 6.52 \text{ ft/s}$$
$$\text{Re} = 9.0 \times 10^4$$
$$\frac{\varepsilon}{D} = 0.0063$$

$$\left. \begin{array}{l} \\ \\ \end{array} \right\} \text{Moody diagram: } f = 0.034 \text{ (close enough)}$$

Using $f=0.034$, $V=6.5$ ft/s, and the continuity equation, we find

$$Q = AV = 0.01414(6.5)$$

$$Q = 0.092 \text{ ft}^3/\text{s} = 5.5 \text{ ft}^3/\text{min}$$

Example 5.10

Methyl alcohol is used in a processing plant where a flow rate of $0.4 \text{ m}^3/\text{min}$ of the liquid must be supplied. The available liquid pump can supply this flow rate only if the pressure drop in the supply line is less than 15 m head of water. The pipeline is made up of 50 m of soldered drawn copper tubing and follows the path shown in Figure 5.25. Determine the minimum size of tubing required.

SOLUTION

The control volume we select extends from the inlet at section 1 to the outlet at section 2. The area at 2 is large enough so that the liquid pressure after the exit is atmospheric. We use the property and data tables to find

Water

$\rho = 1\,000 \text{ kg/m}^3$

[Table A.5]

Methyl alcohol

$\rho = 789 \text{ kg/m}^3$
 $\mu = 0.56 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$

[Table A.5]

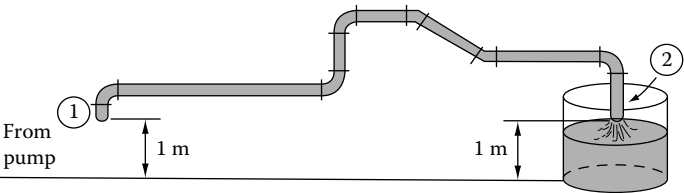


FIGURE 5.25 Sketch for Example 5.10.

Drawn tubing $\varepsilon = 0.000\ 15\text{ cm}$

[Table 5.2]

Minor losses soldered fittings, as stated in a footnote of Table 5.4, may be assumed to have the same loss as threaded fittings:

$$\begin{aligned}\sum K &= 4K_{90^\circ \text{ elbow}} + 2K_{45^\circ \text{ elbow}} + K_{\text{exit}} \\ &= 4(1.4) + 2(0.35) + 1 = 7.3\end{aligned}$$

[Table 5.4]

Write the Bernoulli equation from 1 to 2 as

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \sum \frac{fL}{D} \frac{V^2}{2g} + \sum K \frac{V^2}{2g}$$

The pressure drop is given in terms of meters of water:

$$\frac{p_1 - p_2}{\rho g} = 15\text{ m of water}$$

where ρ is for water. To convert the pressure drop to meters of alcohol, multiply by the ratio of densities:

$$\frac{p_1 - p_2}{\rho g} = \frac{15(1\ 000)}{789} = 19.0\text{ m of methyl alcohol}$$

The velocity at point 1 is the same as that at point 2 because the area at these points is the same. Moreover, $z_1 = z_2$. Thus, the Bernoulli equation becomes

$$\frac{p_1 - p_2}{\rho g} = \frac{V^2}{2g} \left(\frac{fL}{D} + \sum K \right)$$

From continuity, we have $V = 4Q/\pi D^2$. By substitution into the Bernoulli equation, we get

$$19.0 = \frac{16Q^2}{2g\pi^2 D^4} \left(\frac{f(50)}{D} + 7.3 \right)$$

With $Q = 0.4\text{ m}^3/\text{min} = 0.006\ 7\text{ m}^3/\text{s}$, the equation becomes

$$\frac{19.0(2)(9.81)\pi^2}{16(0.006\ 7)^2} = \frac{f(50)}{D^5} + \frac{7.3}{D^4}$$

or

$$f = 1.025 \times 10^5 D^5 - 0.146D \quad (\text{i})$$

A trial-and-error approach is required. In this case, because of the form of the equation, it is easier to assume a diameter. As a first trial, assume

$$D = 0.05\text{ m} \quad f = 1.025 \times 10^5 (0.05)^5 - 0.146(0.05) = 0.025$$

$$A = \frac{\pi D^2}{4} = \frac{\pi(0.05)^2}{4} = 0.001\ 96\text{ m}^2$$

$$V = \frac{Q}{A} = \frac{0.006\ 7}{0.001\ 96} = 3.41\text{ m/s}$$

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{789(3.41)(0.05)}{0.56 \times 10^{-3}}$$
$$\text{Re} = 2.4 \times 10^5$$
$$\frac{\varepsilon}{D} = \frac{0.00015 \text{ cm}}{5 \text{ cm}} = 0.00003$$

}

$f = 0.015 \text{ (from Figure 5.14)}$

The diameter for this value of the friction factor is our second assumed value. Successive trials with Equation i give the following values:

<i>D</i>	<i>f</i>
0.05	0.025
0.04	0.0054
0.045	0.013
0.046	0.0153

Continuing, we have the following as the next trial:

$D = 0.046 \quad f = 0.015 \quad A = \frac{\pi(0.046)^2}{4} = 0.00166 \text{ m}^2$ $V = \frac{0.0067}{0.00166} = 4.03 \text{ m/s}; \quad \text{Re} = \frac{789(4.03)(0.046)}{0.56 \times 10^{-3}}$ $\text{Re} = 2.6 \times 10^5$ $\frac{\varepsilon}{D} = \frac{0.00015 \text{ cm}}{4.6 \text{ cm}} = 0.000033$

}

$f \approx 0.015 \text{ (close enough; from Figure 5.14)}$

The solution suggests that $D = 4.6 \text{ cm}$. Referring to Table C.2 for type M copper tubing, we seek a diameter equal to or greater than 4.6 cm. Anything smaller will reduce the volume flow rate; anything larger will work, but in order to not incur an unnecessary expense, we select the next larger diameter. Thus we specify

2-standard type *M*
 $D = 5.102 \text{ cm}$

5.8 FORCES EXERTED ON FITTINGS BY MOVING FLUIDS

Chapter 3 introduced the continuity, momentum, and energy equations. We used the momentum equation in particular to relate the forces exerted by moving fluids to the rate of change of momentum experienced by the fluid. In this chapter, we used the momentum equation to derive a relationship between pressure drop in a duct to frictional effects at the wall. In this section, we use the momentum equation to determine the forces exerted on pipe fittings. The calculation method is illustrated by the following example.

Example 5.11

A 45° reducing elbow can be found in domestic water piping systems. As illustrated in Figure 5.26, water flows into the elbow in the positive x -direction and is deflected through an angle of 45°. The inlet

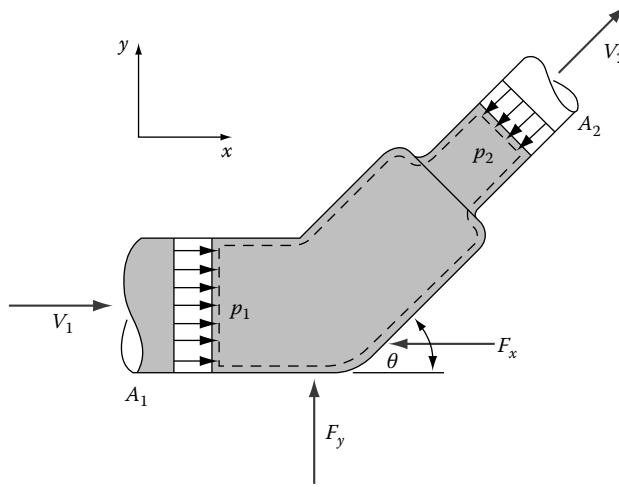


FIGURE 5.26 The reducing elbow of Example 5.11.

diameter is 2.5 cm, and the outlet diameter is 1.2 cm. The volume flow rate of water is $0.0004 \text{ m}^3/\text{s}$. The inlet gauge pressure is 160 kPa. If the elbow is located in a horizontal plane, determine the forces exerted on it by the moving water. The fitting is made of copper tubing.

SOLUTION

Select the control volume shown bounded by the dashed line in Figure 5.26. Again, the flow and liquid properties are known or can be determined at the locations where flow crosses the control surface. Applying the one-dimensional, steady-flow continuity equation, we get

$$\rho_1 A_1 V_1 = \rho_2 A_2 V_2 = \dot{m}$$

For constant density

$$A_1 V_1 = A_2 V_2 = Q$$

Now

$$A_1 = \frac{\pi D_1^2}{4} = \frac{\pi (0.025)^2}{4} = 0.00049 \text{ m}^2$$

Similarly,

$$A_2 = 0.00011 \text{ m}^2$$

From the continuity equation, we have

$$V_1 = \frac{Q}{A_1} = \frac{0.0004}{0.00049} = 0.82 \text{ m/s}$$

$$V_2 = \frac{Q}{A_2} = \frac{0.0004}{0.00011} = 3.6 \text{ m/s}$$

The external forces acting to keep the elbow stationary are the reaction forces F_x and F_y (which equal the forces exerted by the water) and the pressure forces. The pressure distributions are always directed inward, regardless of the flow directions.

At this point, we know the pressure at section 1 but not at section 2. We can calculate the pressure there by using the minor loss coefficients provided in this chapter. We will calculate the loss due to the 45° elbow, and the loss due to the sudden contraction. For a typical copper fitting that is probably soldered in place, the loss may be assumed to be the same as that for a long radius flanged fitting. From Table 5.4, $K_{45^\circ \text{ elbow}} = 0.17$. With the density of water equal to 1 000 kg/m³, the loss due to the elbow is

$$\Delta p = 0.17 \frac{\rho V_1^2}{2} = 0.17(1\,000) \frac{(0.820)^2}{2} = 57.2 \text{ N/m}^2$$

For the sudden contraction, we first determine

$$\frac{A_2}{A_1} = \frac{0.000\,11}{0.000\,49} = 0.22$$

Then from Table 5.4 at this ratio, we read $K_{\text{bushing}} = 0.4$. The pressure drop for a reducing bushing is based on the downstream kinetic energy:

$$\Delta p = 0.4 \frac{\rho V_2^2}{2} = 0.4(1\,000) \frac{(3.6)^2}{2} = 2\,592 \text{ N/m}^2$$

The pressure drop from 1 to 2 then is

$$\Delta p = p_1 - p_2 = 57.2 + 2\,592 = 2\,649.2 \text{ N/m}^2$$

The pressure at section 2 is found as

$$p_2 = 160\,000 - 2\,649.2 = 157.3 \text{ kPa}$$

Applying the momentum equation in the x -direction yields

$$\begin{aligned} \sum F_x &= \dot{m}(V_{\text{out}} - V_{\text{in}})_x \\ -F_x + p_1 A_1 - p_2 A_2 \cos \theta &= \rho Q(V_2 \cos \theta - V_1) \end{aligned}$$

After rearranging and substituting, we obtain

$$\begin{aligned} -F_x &= p_2 A_2 \cos \theta - p_1 A_1 + \rho Q(V_2 \cos \theta - V_1) \\ &= (157\,300 \text{ N/m}^2)(0.000\,11 \text{ m}^2) \cos 45^\circ \\ &\quad - (160\,000 \text{ N/m}^2)(0.000\,49 \text{ m}^2) \\ &\quad + (1\,000 \text{ kg/m}^3)(0.000\,4 \text{ m}^3/\text{s})(3.6 \cos 45^\circ - 0.82) \text{ m/s} \end{aligned}$$

$$F_x = 65.5 \text{ N}$$

The momentum equation written for the y -direction is

$$F_y - p_2 A_2 \sin \theta = \dot{m}(V_{\text{out}} - V_{\text{in}})_y = \rho Q(V_2 \sin \theta)$$

After substitution, we find

$$F_y = (157\,300)(0.000\,11) \sin 45^\circ + 1\,000(0.000\,4)(3.6) \sin 45^\circ$$

or

$$F_y = 13.3 \text{ N}$$

5.9 PIPES IN PARALLEL

Complex pipe friction problems sometimes involve fluid flow in a parallel piping system. In pipeline design, a common method of increasing the capacity of a line is by looping or laying a pipeline parallel to the main line, as shown in Figure 5.27. The pressure drop from A to B along either path (A_2 or A_3) is the same. Usually, the diameters of all the pipes are known; the problem involves finding Q_2 and Q_3 . The solution technique requires use of the Moody diagram and trial and error. The technique is best illustrated by an example.

Example 5.12

For the piping system of Figure 5.27, the distance from A to B is 4500 ft, and the main line is made of 10-nominal, schedule 40 wrought iron pipe. The attached loop is 8-nominal, schedule 40 wrought iron pipe. The flow Q_1 is 0.3 ft³/s of water. Determine the flow rate in both branches.

SOLUTION

Minor losses are usually neglected in this type of problem. We use the property and data tables to find

Water	$\rho = 1.94 \text{ slug/ft}^3$ $\mu = 1.9 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2$	[Table A.5]
10-nom, sch 40	$D_2 = 0.8350 \text{ ft}$ $A_2 = 0.5476 \text{ ft}^2$	[Table C.1]
8-nom, sch 40	$D_3 = 0.6651 \text{ ft}$ $A_3 = 0.3474 \text{ ft}^2$	[Table C.1]
Wrought iron	$\varepsilon = 0.00015 \text{ ft}$	[Table 5.2]

(The subscripts 2 and 3 refer to the labels in Figure 5.27.) From the continuity equation,

$$Q_1 = Q_2 + Q_3 = 0.3 \text{ ft}^3/\text{s}$$

Also $p_A - p_B$ along Q_2 must be equal to $p_A - p_B$ along Q_3 . Thus,

$$(p_A - p_B)|_2 = (p_A - p_B)|_3$$

or

$$\frac{f_2 L_2}{D_2} \frac{V_2^2}{2g} = \frac{f_3 L_3}{D_3} \frac{V_3^2}{2g}$$

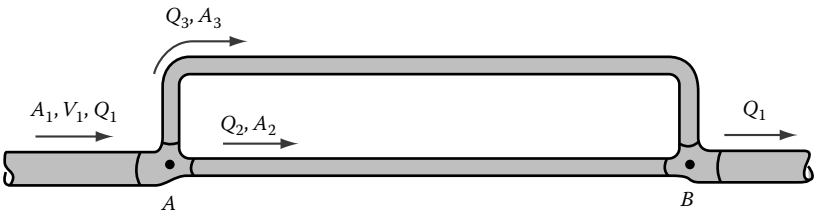


FIGURE 5.27 Pipes in parallel.

With $L_2 = L_3$, the equation reduces to

$$\frac{f_2 V_2^2}{D_2} = \frac{f_3 V_3^2}{D_3}$$

In terms of volume flow rate,

$$\frac{f_2}{D_2} \frac{16Q_2^2}{\pi^2 D_2^4} = \frac{f_3}{D_3} \frac{16Q_3^2}{\pi^2 D_3^4}$$

or

$$\frac{f_2 Q_2^2}{D_2^5} = \frac{f_3 Q_3^2}{D_3^5}$$

From Table C.1,

$$\begin{aligned} D_2 &= 0.8350 \text{ ft} \quad \text{and} \quad A_2 = 0.5476 \text{ ft}^2 \\ D_3 &= 0.6651 \text{ ft} \quad \text{and} \quad A_3 = 0.3474 \text{ ft}^2 \end{aligned}$$

By substitution, the equation now becomes

$$2.46 f_2 Q_2^2 = 7.68 f_3 Q_3^2$$

or

$$Q_2 = Q_3 \sqrt{\frac{3.119 f_3}{f_2}}$$

From Table 5.2, $\varepsilon = 0.00015$; hence,

$$\frac{\varepsilon}{D_2} = 0.000180$$

$$\frac{\varepsilon}{D_3} = 0.000226$$

From Table A.5, $\rho = 1.94 \text{ slug/ft}^3$ and $\mu = 1.9 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2$. The Reynolds number is

$$\text{Re} = \frac{\rho V D}{\mu} = \frac{\rho D}{\mu} \frac{4Q}{\pi D^2} = \frac{4\rho Q}{\pi D \mu}$$

For each line,

$$\text{Re}_2 = \frac{4(1.94)Q_2}{\pi(0.8350)(1.9 \times 10^{-5})} = 1.58 \times 10^5 Q_2$$

$$\text{Re}_3 = 1.99 \times 10^5 Q_3$$

From these calculations, our working equations are

$$Q_2 + Q_3 = Q = 0.3 \text{ ft}^3/\text{s}$$

$$\text{Re}_2 = 1.58 \times 10^5 Q_2 \quad \frac{\varepsilon}{D_2} = 0.000180$$

$$\text{Re}_3 = 1.99 \times 10^5 Q_3 \quad \frac{\varepsilon}{D_3} = 0.000226$$

$$Q_2 = Q_3 \sqrt{\frac{3.119 f_3}{f_2}}$$

Because $D_2 > D_3$ we expect that $Q_2 > Q_3$.

As a first trial assume that $Q_2 = \frac{1}{2} Q = 0.15 \text{ ft}^3/\text{s}$; then

$$Q_3 = 0.30 - 0.15 = 0.15$$

$$\text{Re}_2 = 2.37 \times 10^4$$

$$\text{Re}_3 = 2.99 \times 10^4$$

From the Moody diagram

$$f_2 = 0.0255$$

$$f_3 = 0.0241$$

and by substitution into the working equation, we get

$$Q_2 = 0.258 \text{ ft}^3/\text{s}$$

If this value is used for the second trial, the next iteration gives $Q_2 = 0.0898$. The third iteration gives $Q_2 = 0.33$, which shows that successive trials lead to divergence. A more successful method involves taking as a second assumed value the average of the initially assumed Q_2 and the calculated Q_2 . For the second iteration, therefore, assume that

$$Q_2 = \frac{0.15 + 0.26}{2} = 0.20$$

Then

$$Q_3 = 0.1$$

$$\text{Re}_2 = 3.17 \times 10^4$$

$$\text{Re}_3 = 1.99 \times 10^4$$

$$f_2 = 0.024$$

$$f_3 = 0.0265$$

and, by equation,

$$Q_2 = 0.18$$

For the next trial, assume that

$$Q_2 = \frac{0.18 + 0.20}{2} = 0.19$$

Then

$$Q_3 = 0.11$$

$$\text{Re}_2 = 3.01 \times 10^4$$

$$\text{Re}_3 = 2.19 \times 10^4$$

$$f_2 = 0.024$$

$$f_3 = 0.026$$

and, by equation,

$$Q_2 = 0.20$$

which is close enough to the assumed value. Thus, the solution is

$$Q_2 = 0.19 \text{ ft}^3/\text{s} \quad \text{and} \quad Q_3 = 0.11 \text{ ft}^3/\text{s}$$

An alternative iteration scheme involves assuming choices for the friction factors where fully developed turbulent flow values are taken as first estimates.

All pipe friction problems in this chapter have been solved by using the Moody diagram. Although reference to a figure is highly impractical if one is using a computer for the calculations, the computer is well suited for these problems, especially the trial-and-error type. Thus, an equation fit of the Moody diagram is helpful.

Many equations have been written, and a sampling is provided here. These equations are easily entered on a programmable calculator or in a computer program. They apply for turbulent flow conditions.

Chen equation:

$$\frac{1}{\sqrt{f}} = -2.0 \log \left\{ \frac{\varepsilon}{3.706 \, 5D} - \frac{5.045 \, 2}{\text{Re}} \times \log \left[\frac{1}{2.825 \, 7} \left(\frac{\varepsilon}{D} \right)^{1.109 \, 8} + \frac{5.850 \, 6}{\text{Re}^{0.898 \, 1}} \right] \right\} \quad (5.35)$$

Churchill equation:

$$f = 8 \left[\left(\frac{8}{\text{Re}} \right)^{12} + \frac{1}{(B + C)^{1.5}} \right]^{1/12} \quad (5.36)$$

where:

$$B = \left(2.457 \, \ln \frac{1}{(7/\text{Re})^{0.9} + (0.27\varepsilon/D)} \right)^{16}$$

$$C = \left(\frac{37 \, 530}{\text{Re}} \right)^{16}$$

The Haaland equation

$$f = \left\{ -0.782 \, \ln \left[\frac{6.9}{\text{Re}} + \left(\frac{\varepsilon}{3.7D} \right)^{1.11} \right] \right\}^{-2} \quad (5.37)$$

The Swamee–Jain equation

$$f = \frac{0.250}{\left\{ \log \left[\frac{\varepsilon}{3.7D} + \frac{5.74}{\text{Re}^{0.9}} \right] \right\}^2} \quad (5.38)$$

If ε/D and Re are known, then f can be determined, just as with the Moody diagram.

5.10 PUMPS AND PIPING SYSTEMS

To make fluid flow from one point to another in a closed conduit a driving force is required. Where elevation differences exist, this force may be gravity, but the driving force is usually supplied by pumps (for liquids) or blowers (for gases). These devices add to the mechanical energy of the fluid in the form of velocity, pressure, and/or elevation increases. Common methods of effecting the increase are by positive displacement or centrifugal action. In this section, we discuss pumps in general and learn how to calculate pumping power requirements. Techniques for determining fan power requirements are similar to those for pumps.

With **positive-displacement pumps**, a finite volume of liquid is drawn into a chamber and then forced out under high pressure. In a **reciprocating positive-displacement pump**, the chamber is formed by a cylinder-piston arrangement. As the piston is withdrawn from the cylinder, liquid is drawn in through the inlet. On the return stroke, the liquid is forced out the outlet tube. One-way valves are placed in the liquid lines to control flow direction. In a **rotary positive-displacement pump**, the chamber moves from inlet to discharge and back. In a **rotary gear pump**, the space between intermeshing, rotating gears carries liquid from inlet to discharge (see Figure 5.28). Positive-displacement pumps can be used to deliver very high pressures, but pulsations in the flow are also present. At constant speed, the flow capacity of these pumps is a constant. In general, the discharge rate is directly dependent on the speed and independent of the type of liquid. For gases, rotary blowers and compressors are available that work on the same principles.

Centrifugal pumps are more commonly used than positive-displacement pumps in process conditions. **Centrifugal pumps** add energy to the fluid by means of a rotating impeller within a

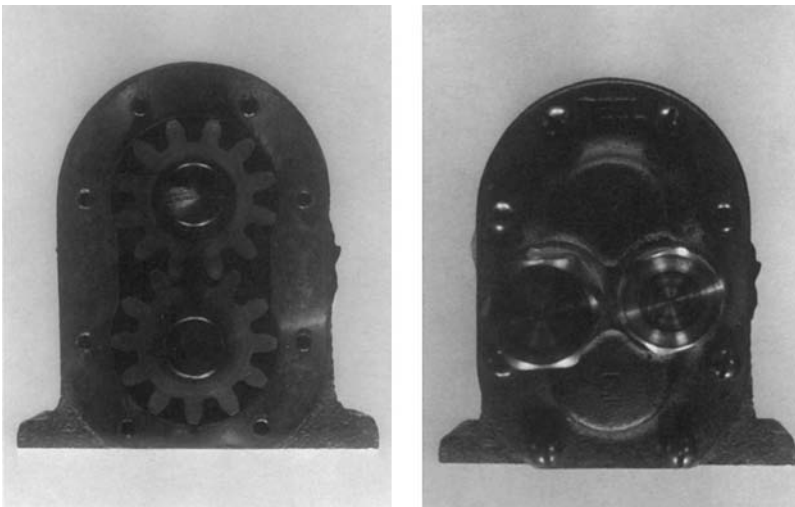


FIGURE 5.28 A positive-displacement pump. Liquid enters on one side of housing, moves along the housing periphery between gear teeth, and exits on the other side of the housing.

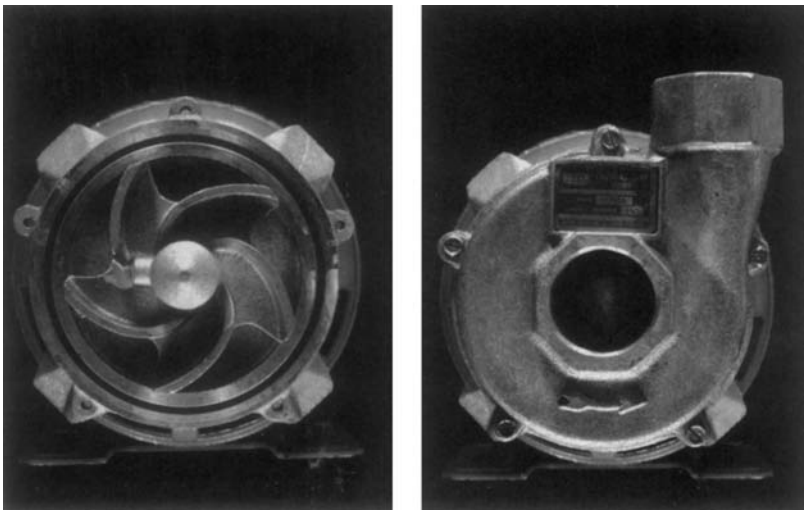


FIGURE 5.29 Centrifugal pump impeller and casing.

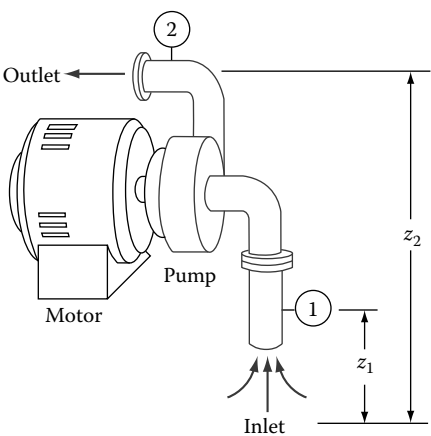


FIGURE 5.30 Schematic of a centrifugal pump.

casing. Figure 5.29 shows a frontal view of an impeller and the casing cover. A centrifugal pump is shown schematically in Figure 5.30. The liquid enters the pump in the axial direction (with respect to the motion of the impeller). It enters the rotating eye of the impeller and moves radially through the channels between the vanes. At the periphery, the liquid exits through the discharge pipe. The rotating impeller imparts a high-velocity head to the liquid, a portion of which is converted to pressure head after the liquid leaves the impeller. Pumping power requirements are determined with the energy equation, as illustrated by the following example.

Example 5.13

A house is located near a freshwater lake. The homeowner decides to install a pump near the lake to deliver 25 gpm of water to a tank adjacent to the house. The water can then be used for lavatory facilities or sprinkling the lawn. For the system sketched in Figure 5.31, determine the pump power required.

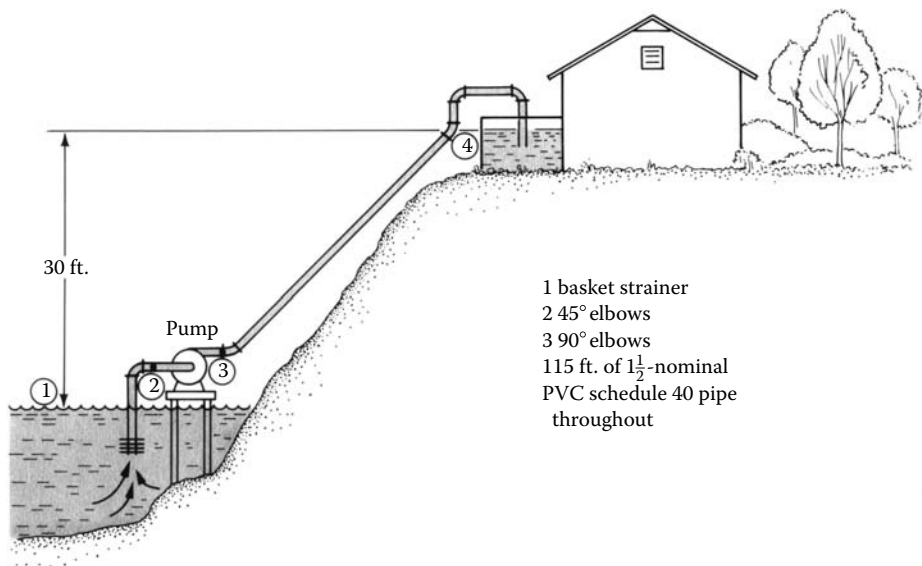


FIGURE 5.31 Pumping system for Example 5.13.

SOLUTION

The control volume we select includes all liquid in the piping system and in the pump. The control volume extends from the free surface of the lake (section 1) to the free surface of the receiver tank (section 4). Further, for purposes of illustration, we identify sections 2 and 3 located about the pump. From the property and data tables, we determine the following:

Water	$\rho = 1.94 \text{ slug/ft}^3$ $\mu = 1.9 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2$	[Table A.5]
1½-nom, sch 40	$D = 0.125 \text{ ft}$ $A = 0.01227 \text{ ft}^2$	[Table C.1]
Smooth pipe	$\varepsilon \approx 0$	
Minor losses	$\sum K = K_{\text{basket strainer}} + 2K_{45^\circ \text{ elbow}}$ $+ 3K_{90^\circ \text{ elbow}} K_{\text{exit}} = 1.3$ $+ 2(0.35) + 3(1.4) + 1.0 = 7.2$	[Table 5.4]

The following equations can be written for the system:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \frac{V^2}{2g} \left(\frac{fL}{D} + \sum K \right)$$
$$\frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 = \frac{p_3}{\rho g} + \frac{V_3^2}{2g} + z_3 + \frac{1}{\dot{m}} \frac{dW}{dt} \frac{1}{g}$$
$$\frac{p_3}{\rho g} + \frac{V_3^2}{2g} + z_3 = \frac{p_4}{\rho g} + \frac{V_4^2}{2g} + z_4 + \frac{V^2}{2g} \left(\frac{fL}{D} + \sum K \right)$$

These equations can be added to obtain a single equation for the entire system:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_4}{\rho g} + \frac{V_4^2}{2g} + z_4 + \sum \frac{fL}{D} \frac{V^2}{2g} + \sum K \frac{V^2}{2g} + \frac{1}{\dot{m}} \frac{dW}{dt} \frac{1}{g}$$

Thus, only inlet and outlet conditions must be known. At sections 1 and 4 (both are reservoir surfaces), velocity is negligible. With section 1 as the reference,

$$-\frac{1}{\dot{m}} \frac{dW}{dt} = z_4 g + \frac{V^2}{2} \left(\frac{fL}{D} + \sum K \right)$$

The volume and flow mass required are

$$Q = 25 \text{ gpm} \times 0.002228 = 0.0557 \text{ ft}^3/\text{s}$$

$$\dot{m} = \rho Q = 0.108 \text{ slug/s}$$

The velocity is

$$V = \frac{Q}{A} = \frac{0.0557}{0.01227} = 4.54 \text{ ft/s}$$

with which we obtain

$$\text{Re} = \frac{1.94(4.54)(0.125)}{1.9 \times 10^{-5}} = 5.8 \times 10^4$$

It is permissible to use the “smooth pipe” curve on the Moody diagram for PVC pipe. At $\text{Re} = 5.8 \times 10^4$, we read $f = 0.0205$.

By substitution into the equation, we have

$$-\frac{dW}{dt} = 0.108 \left[30(32.2) + \frac{(4.54)^2}{2} \left(\frac{0.0205(115)}{0.125} + 7.2 \right) \right]$$

$$-\frac{dW}{dt} = 0.108(966 + 268) = 133 \text{ ft} \cdot \text{lbf/s}$$

By definition, 1 hp = 550 ft · lbf/s; therefore,

$$\frac{dW}{dt} = -0.242 \text{ hp}$$

The negative sign indicates power transferred to the fluid. This value represents the power that must be added to the fluid. The power input to the pump shaft must be greater, however, to overcome losses. It is considered good design practice to place a strainer on the submerged pipe inlet of Figure 5.31. Also, to prevent backflow through the system due to a siphoning effect, it is necessary to install a one-way valve in the flow line.

5.11 SUMMARY

This chapter presented the basic design procedures for piping systems. Laminar and turbulent flow regimes were defined. The friction factor and the relative roughness were both discussed, and their importance in pipe friction calculations was illustrated. Losses due to fittings were also discussed. Finally, pumping requirements for existing systems were calculated by application of the energy equation.

It should be pointed out that all the example problems in this chapter dealt with circular pipe, although other cross sections were discussed. The methods of this chapter can easily be extended to

noncircular cross sections by using the concept of hydraulic diameter. Such problems are included in the exercises that follow.

PROBLEMS

Laminar versus Turbulent Flow

- 5.1 Castor oil is flowing at 20 ft/s in a pipe with an inside diameter of 4 in. Is the flow laminar or turbulent?
- 5.2 Air at atmospheric pressure and 25°C flows in a pipe having an inside diameter of 18 cm. What is the maximum average velocity permissible for the flow to be considered laminar?
- 5.3 Methyl alcohol flows in a tube with an inside diameter of 6 in. at a rate of 1 in.³/s. Is the flow laminar or turbulent?
- 5.4 Water flows in a pipe at an average velocity of 1 in./s. What is the maximum pipe diameter required for the flow to be considered laminar?
- 5.5 Acetone flows in a pipe that is 4 in. in diameter. The average velocity of the acetone is 0.2 in./s. Determine whether laminar or turbulent flow exists. What is the average velocity of the acetone at transition?
- 5.6 Oxygen at 25°C and atmospheric pressure is conveyed at 350 ft³/min through a 30 × 10 cm rectangular duct. Is the flow laminar or turbulent?
- 5.7 A rectangular duct has inside dimensions of 12 × 18 in. What is the hydraulic diameter of the duct? If 3 ft³/min of air at 71°F flows through the duct, determine the Reynolds number.

Characteristic Length

- 5.8 A rectangular duct has internal dimensions of 4 × 1½ in. Calculate (a) effective diameter, (b) hydraulic diameter, and (c) hydraulic radius.
- 5.9 A rectangular duct is 1 in. tall and is to be constructed so that its effective diameter equals its hydraulic diameter. What is the required width of the duct (or can't this be done)?
- 5.10 A circular annulus is made up of two concentric tubes. The inner tube has an outside diameter of 15 cm, whereas the outer tube has an inside diameter of 40 cm. The annulus will convey carbon tetrachloride under laminar flow conditions. Calculate the maximum permissible average velocity in the conduit.
- 5.11 A concentric circular annulus conveys benzene at 0.2 m³/s. The annulus is made up of two tubes. The inside diameter of the outer tube is 20 cm and the outside diameter of the inner tube is 10 cm. Determine the hydraulic diameter and the Reynolds number.
- 5.12 An annular duct is formed by an outer tube with an inside diameter of 10 cm and an inner tube with an outside diameter of 5 cm. Calculate (a) effective diameter, (b) hydraulic diameter, and (c) hydraulic radius.
- 5.13 A conduit that conveys air is rectangular, having dimensions of 6 × 6 in. Due to space limitations, a circular tube having an outside diameter of 3 in. has to be mounted within this duct, and it has been decided to mount the tube directly in the center. (See Figure P5.13.) Determine the (a) hydraulic diameter, (b) the effective diameter, and (c) the hydraulic radius of the duct flow area.

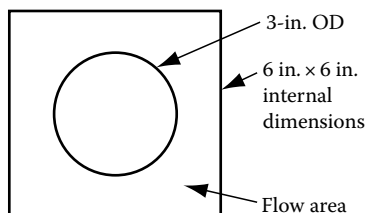


FIGURE P5.13

Entrance Length

- 5.14 Ethyl alcohol flows into a piping system through a well-rounded entrance. After 22 cm of pipe length, measurements taken in the pipe show that the flow is fully developed. Determine the volume flow in the pipe, assuming laminar flow exists.
- 5.15 Helium at 25°C and 110 kPa (absolute) flows into a copper tube ($1\frac{1}{4}$ -standard, type M) that is 12 m long. Is the flow fully developed at tube end if the helium mass flow rate is 0.01 kg/s?
- 5.16 Propylene glycol flows from a tank into a 2-nominal, schedule 80 pipe. Measurements indicate that the flow becomes fully developed 25 diameters downstream. Determine the volume flow rate through the pipe in cubic meters per second (a) if laminar conditions exist and (b) if turbulent conditions exist.
- 5.17 Turpentine flows at 0.03 ft³/s from a tank into a 1-nominal, schedule 40 pipe. Determine the length required for the flow to become fully developed.
- 5.18 Do Equations 5.2a and 5.2b predict the same entrance length when the Reynolds number is 2 100? Should they? Why or why not?
- 5.19 Which fluid requires the shortest length of pipe before fully developed conditions are reached: water at 20°C or water at 80°C, given equal velocities and duct sizes?
- 5.20 Water at room temperature flows through a well-rounded entrance to a 10-cm-ID pipe.
 - a. Determine the velocity in the pipe at transition.
 - b. Calculate the entrance length required for the flow to become fully developed, also at transition.

Piping Systems—Pressure Drop Unknown

- 5.21 A 4-nominal riveted steel pipe 35 m long is laid horizontally and is to convey castor oil at a rate of 0.1 m³/s. Determine the pressure drop in the pipe.
- 5.22 A 3-nominal, schedule 40 cast-iron pipe conveys water at an average velocity of 5 ft/s. The pipe is 65 ft long. Determine the pressure drop experienced by the water.
- 5.23 An 8-nominal, schedule 80 wrought iron pipe that is 100 m long conveys octane at a flow rate of 0.06 m³/s. What is the pressure drop under these conditions?
- 5.24 A 12-standard, type K copper tube conveys water at a rate of 1 800 gpm. If the tube is 15 ft long, determine the pressure drop.
- 5.25 A rectangular galvanized duct 4 in. × 2 ft conveys heated air ($T = 98^\circ\text{F}$) to a locker room. The duct is 30 ft long, and the mass flow rate is 0.04 slug/s. Assuming ideal gas conditions and relatively constant density in the system, determine the pressure drop in the duct.
- 5.26 A main duct of an air-conditioning system is a rectangular conduit of dimension 1 × 0.5 m. It conveys air at a flow rate of 1.1 kg/s. The conduit wall is galvanized sheet metal. Calculate the pressure drop over the 6-m length of conduit.
- 5.27 A 15-ft-long annulus made of 4-nominal, schedule 40 pipe and 2-nominal, schedule 40 pipe conveys carbon disulfide at a volume flow rate of 0.3 ft³/s. Determine the pressure drop over the 15-ft length. Both pipes are made of cast iron.
- 5.28 Solve Problem 5.27 using effective diameter instead of hydraulic diameter and compare the results of the two methods.
- 5.29 An underground salt dome can be used as a storage volume for gasoline. Access to the salt dome is established with several circular annuli. Consider one annulus and take the salt dome to be filled with gasoline, as sketched in Figure P5.29. The outer pipe is schedule 160, 24-nominal; the inner pipe is schedule 80, 12-nominal. Both pipes are made of cast iron. When salt water is pumped into the pipe, gasoline is forced upward through the annulus. For a saltwater flow rate of 10 ft³/s, determine the pressure drop of the gasoline in the annulus. Take the depth to be 1,500 ft and neglect entrance and exit losses. Take the viscosity of salt water to be equal to that of plain water and the properties of gasoline to be the same as those of octane.

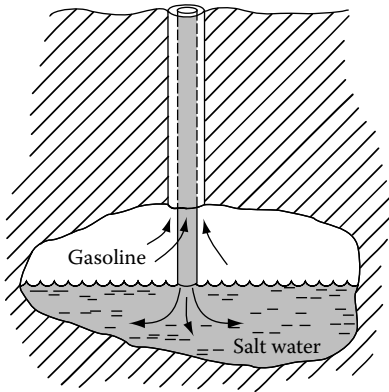


FIGURE P5.29

- 5.30** Water at $0.02 \text{ m}^3/\text{s}$ flows through 350 m of 8-nominal cast-iron pipe. Determine the head loss if the water temperature is 22°C .
- 5.31*** The fuel line in an automobile is made of drawn copper tubing, $\frac{3}{8}$ -standard, type M. A schematic of a fuel line from tank to fuel pump is shown in Figure P5.31. For a fuel flow of $10 \text{ cm}^3/\text{s}$, determine the pressure drop in this portion of the line (1 to 2). The system includes 2 m of tubing. Take the fuel to have the same properties as those of octane.

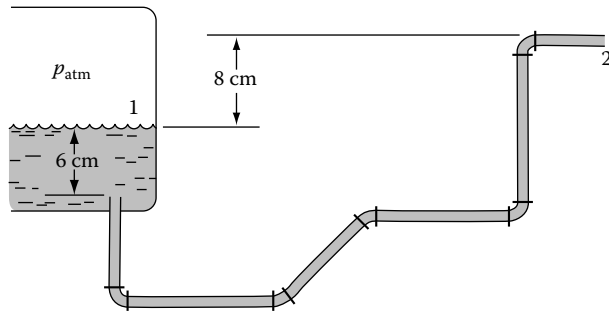


FIGURE P5.31

- 5.32*** A vacuum pump is used to lower the existing pressure above a tank of water. As air is removed, water from a sump tank fills the main tank, as shown schematically in Figure P5.32. The inlet flow of water is $600 \text{ ft}^3/\text{h}$. If the air pipe is schedule 40, 2-nominal wrought iron, determine the pressure drop in the piping system (1 to 2). All fittings are regular and threaded, and the total pipe length is 60 ft. Neglect compressibility effects.

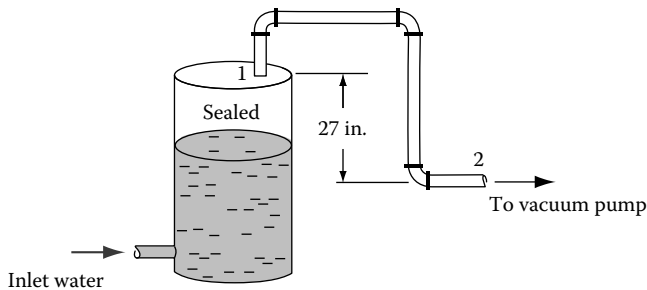


FIGURE P5.32

* Minor losses are included.

Piping Systems—Volume Flow Rate Unknown

- 5.33** A 12-nominal, schedule 80 wrought iron pipe is inclined at an angle of 10° with the horizontal and conveys chloroform downhill. If the allowable pressure drop in the pipe is 2 psi and the pipe length is 100 ft, determine the volume carrying capacity in the pipe.
- 5.34** Ether flows through a horizontally laid, 4-nominal schedule 40 wrought iron pipe. The pressure drop measured at points 280 m apart is 100 kPa. Determine the volume flow rate through the pipe.
- 5.35** Syrup flows through a schedule 80, 4-nominal stainless steel pipe to a bottling machine in a production plant. The pipe is 250 ft long, and the pressure drop is 12 psia. Determine the volume flow rate. Take the properties of syrup to be the same as those of glycerine and the pipe wall to be smooth. The syrup is at room temperature.
- 5.36** A refinery plant separates crude oil into various components. One constituent produced is heptane, which is conveyed through a schedule 30, 14-nominal cast-iron pipe that is 150 ft long. The pressure drop in the pipe is 0.75 psi. Determine the volume flow rate of heptane in the pipe.
- 5.37** A rectangular conduit of dimension 5×7 in. conveys hydrogen. The conduit wall is asphalt coated and is 25 ft long. The hydrogen compressor provides enough power to overcome a pressure drop of 0.01 in. of water. Determine the mass flow of hydrogen.
- 5.38** Solve Problem 5.37 using effective diameter instead of hydraulic diameter and compare the results of the two methods.
- 5.39** An annular flow passage is formed by placing a 1-standard, type M copper tube within a 3-standard, type M copper tube. The annulus is 2 m long and conveys glycerine. The pressure drop over the 2-m length is 19 kPa. Determine the volume flow rate of glycerine.
- 5.40** Benzene flows through a 12-nominal, schedule 80 wrought iron pipe. The pressure drop measured at points 1200 ft apart is 5 psi. Determine the volume flow rate through the pipe.
- 5.41*** The evaporator of a household air conditioner is located in the attic. Water at 40°F condenses from the air when the air is cooled by moving past the coil. The condensed water falls downward into a catch pan. A pipe of $\frac{1}{2}$ -nominal, schedule 40 PVC is attached to the pan and conveys the water to a roof vent located in the soffit. A schematic of the piping system is shown in Figure P5.41. There are 8 ft of pipe and three standard elbows. The water-discharge system is completely gravity fed. Determine the volume flow rate through the pipe for the case shown.

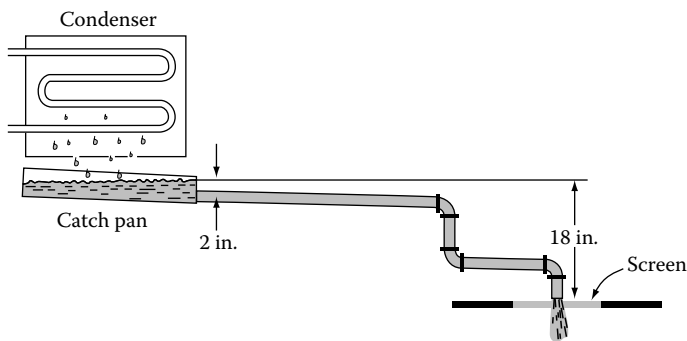


FIGURE P5.41

- 5.42*** Gutters and downspouts are attached to roofs to drain rainwater. Both circular and rectangular downspouts are conventionally used. Figure P5.42 is a schematic of a downspout containing 2.2 m of galvanized ductwork and one 45° elbow. Determine the volume-carrying capacity if the duct cross section is round with an inside diameter of 13.1 cm.

* Minor losses are included.

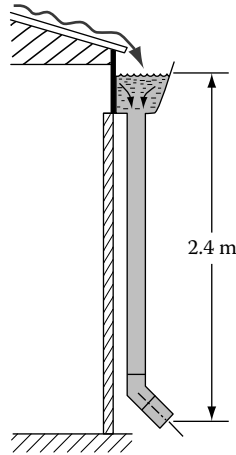


FIGURE P5.42

5.43* Repeat Problem 5.42 but take the duct cross section to be a 7×10 cm rectangle.

Piping Systems—Diameter Unknown

- 5.44** A nozzle is used to provide a water spray for keeping dust from escaping from a dirt pile into the atmosphere. Just before entering the nozzle, the fluid must have a pressure of 60 psi at a flow rate of $12 \text{ ft}^3/\text{min}$. The water source is a city water main in which the pressure is maintained at 70 psi. The distance from the main to the proposed nozzle location is 65 ft. Select a suitable pipe size for the installation if galvanized iron pipe is all that is available.
- 5.45** A diesel engine is used as a power source for a generator as part of an electrical backup system for a remotely located manufacturing plant. The diesel requires $0.01 \text{ m}^3/\text{s}$ of kerosene. A kerosene tank is located 10 m from the engine. The tank pressure is maintained at a constant 200 kPa, and the engine fuel injectors require that the kerosene be delivered at 115 kPa or less. Drawn copper tubing will be used for the fuel line; select an appropriate diameter.
- 5.46** Linseed oil is often used as a wood finish and can be purchased in half-gallon containers. On the assembly line, one machine can fill and cap 20 containers per minute. The linseed oil tank is located 36 ft from a machine. The oil is pumped from the tank to the machine; the pump outlet pressure is 35 psig, and the machine requires 15 psig pressure for optimum operation. Select a suitable diameter for a pipeline if drawn copper tubing is to be used.
- 5.47** An annulus is to be made of two type M copper tubes that are 2.5 m long. The outer tube size is limited by space and is 2-standard, whereas the size of the inner tube must be selected. The fluid is turpentine, and the available pump can overcome a pressure loss of 30 kPa while delivering $0.01 \text{ m}^3/\text{s}$ of liquid. Select a suitable inner-tube size.
- 5.48** A riveted steel pipeline is used to convey $0.5 \text{ m}^3/\text{s}$ of gasoline (assume properties the same as octane) a distance of 40 km. The available pump can overcome a friction loss of 300 kPa. Select a suitable pipe size for the installation.
- 5.49*** Ethylene glycol is used in a heat-recovery system where exhausted warm air passes over soldered copper tubing with fins attached. A schematic of the piping system is shown in Figure P5.49. The system must be able to convey $0.002 \text{ m}^3/\text{s}$ of ethylene glycol at an allowable pressure drop (1 to 2) of 50 kPa. Select a suitable tubing diameter. The total length of tubing is 12 m.

* Minor losses are included.

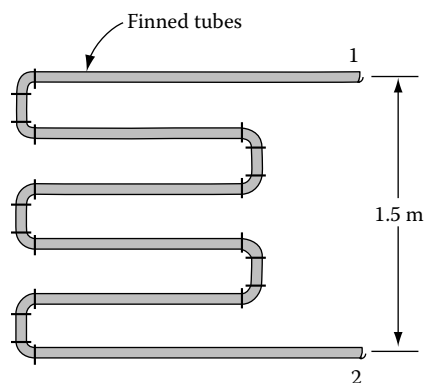


FIGURE P5.49

5.50* Overhead sprinklers are commonly used in buildings for fire protection. If a fire starts, sufficient heat is produced to melt a metal tab, which opens the sprinkler head. One such installation is shown schematically in Figure P5.50. Water is supplied at the main at a pressure of 75 psig. The nozzle requires a pressure of 60 psig at a flow rate of 15 gpm for effective coverage. Assuming that 39 ft of wrought iron pipe with threaded fittings is to be used in the installation, select a suitable pipe diameter.

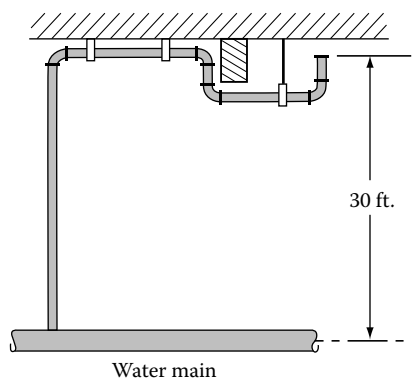


FIGURE P5.50

Surface Roughness and Equivalent Length

5.51* The owners of an above-ground pool wish to empty it by using a 7-cm-diameter plastic hose as a siphon (Figure P5.51). The 12-m-long flexible hose is placed over the pool wall, and the siphon is started. The volume flow rate of water through the hose is $0.0077 \text{ m}^3/\text{s}$. Determine the friction factor f and an equivalent roughness ϵ . The tube configuration shows a return bend and an elbow (assume same minor losses as flanged fittings).

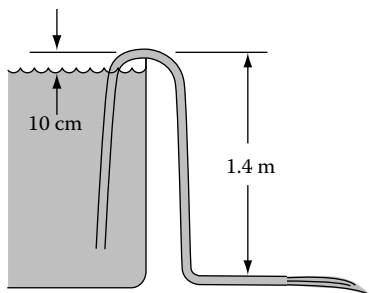


FIGURE P5.51

* Minor losses are included.

- 5.52** Ethylene glycol is used in an experiment to determine the roughness of a pipe material. The liquid is pumped through the pipe at a flow rate of $0.01 \text{ m}^3/\text{s}$. The measured pressure drop is 3.8 kPa over a 3-m length. The pipe itself is 3-nominal, schedule 40. Determine the roughness ε .
- 5.53** Water is used to determine the roughness ε of a new pipe material. The pipe is 2-nominal, schedule 40 and it is 21 ft long. The water is pumped through at a rate of 50 gpm, and the measured pressure loss over 18 ft is 1.0 psi. Determine the roughness ε .
- 5.54** Table 5.2 gives values of surface roughness for new, clean conduit surfaces. Conduit walls become rougher with time, however, owing to corrosion, incrustations, and deposition of materials (usually minerals) on the pipe wall. The time it takes for the wall surface to roughen depends greatly on the fluid conveyed. It has been found that the absolute roughness ε increases linearly with time according to

$$\varepsilon_t = \varepsilon + kt$$

where: ε = absolute roughness of a new surface
 k = a constant to be determined from tests
 t = time in years*

A 4-nominal cast-iron pipe conveys water at a rate of $0.015 \text{ m}^3/\text{s}$. Determine the pressure drop per kilometer of new pipe. Next, estimate the pressure drop per kilometer of the pipe after 35 y if the flow velocity remains unchanged. Every 9 y the absolute roughness of the wall doubles.

- 5.55** A 16-nominal cast-iron pipe conveys carbon disulfide at a rate of $9 \text{ ft}^3/\text{s}$. The pipe itself is 1,100 ft long. Determine the pressure drop in the pipe when new if it is laid horizontally.

Previous experiments with this fluid-pipe combination have shown that $k = 0.00007 \text{ ft/y}$. Assuming the pressure drop in the pipe is the same as when it was new, determine the volume flow rate of liquid through the pipe after 10 y has elapsed. (See Problem 5.54.)

- 5.56** As seen by working the more complex pipe friction problems, minor losses can consume significant amounts of energy in the form of a pressure loss. Also, the inclusion of minor losses in the modified Bernoulli equation can make the trial- and-error-type problems tedious. Efforts have therefore been made to represent minor losses using what is known as **equivalent length**. Recall from the modified Bernoulli equation the friction and minor loss terms:

$$\frac{fL}{D_h} \frac{V^2}{2g} + \sum K \frac{V^2}{2g} = \left(\frac{fL}{D_h} + \sum K \right) \frac{V^2}{2g}$$

The concept of equivalent length allows us to replace the minor loss coefficient term as

$$\sum K = \frac{fL_{\text{eq}}}{D_h}$$

where f is the friction factor that applies to the pipe, D_h is the characteristic length, and L_{eq} is the equivalent length. Physically what we are doing is calculating the length of pipe (of the

* C. F. Colebrook and C. M. White, The reduction of carrying capacity of pipes with age. *Journal of the Institute of Civil Engineers* (London, 1937).

same material, size, and schedule) with which we can “replace” the fittings to obtain the same pressure drop. Calculate the equivalent length of the fittings for the piping system described in Example 5.9.

5.57 Repeat Problem 5.56 for the piping system of Example 5.13.

Forces Exerted by Moving Fluids

5.58 An elbow and an enlargement are located in a horizontal section of pipeline as indicated in Figure P5.58. The gauge pressure at section 1 is 210 kPa and the volume flow rate through the system is $0.001 \text{ m}^3/\text{s}$. The inlet pipe has an inside diameter of 2.664 cm; at the outlet, the inside diameter is 4.09 cm. Determine the forces exerted on this section of pipeline by the fluid if it is decane.

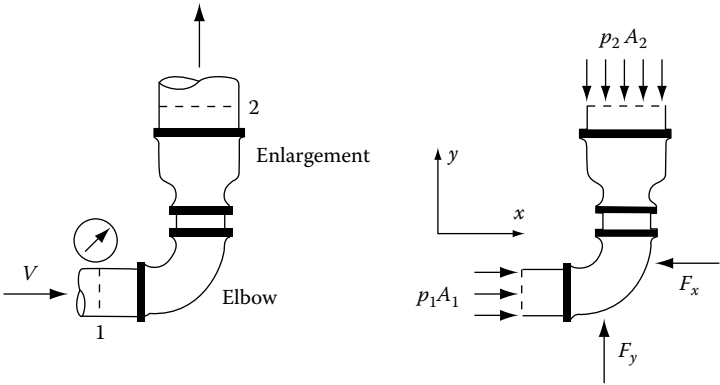


FIGURE P5.58

5.59 A reducing elbow is used in a horizontal section of pipeline, as shown in Figure P5.59. The inlet gauge pressure at 1 is 305 kPa, and flow through the pipe is $0.04 \text{ m}^3/\text{s}$. Assuming that the elbow reduces from a 20-cm to a 16-cm diameter, determine the forces required to hold the elbow in place if the fluid flowing is chloroform.

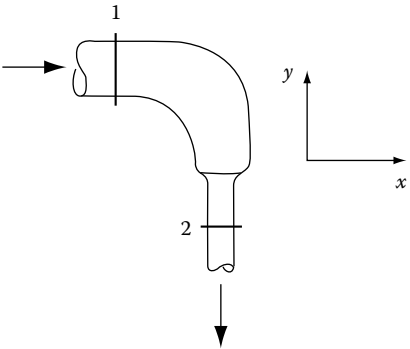


FIGURE P5.59

5.60 Figure P5.60 shows a return piping system located in a horizontal plane. This system contains two reducer elbows. Calculate the force required to hold the return in place if the liquid flowing is ethyl alcohol. Neglect friction.

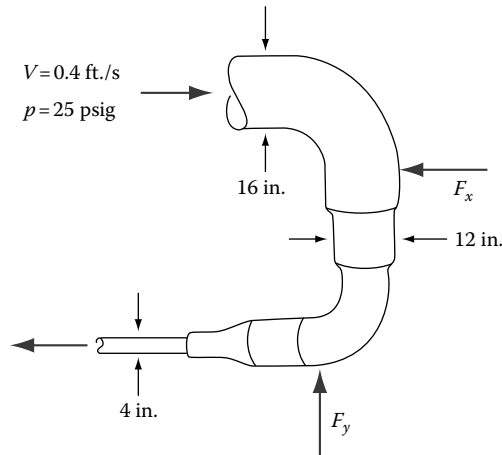


FIGURE P5.60

Pipes in Parallel

- 5.61** Rework Example 5.12, assuming as first guesses the fully turbulent flow values for friction factor rather than volume flow rates. Is convergence achieved more quickly?
- 5.62** Consider the piping system of Figure 5.27. The distance from A to B is 6 km. The main line is 24-nominal, schedule 20 and the looped line is 12-nominal; both are cast iron. For $Q = 0.25 \text{ m}^3/\text{s}$ of acetone, determine the volume flow rate in each line.
- 5.63** An automatic sprinkler for a narrow plot of lawn is sketched in Figure P5.63. Water is supplied by the main such that $p_1 = 400 \text{ kPa}$ (gauge) and Q_1 is variable. The sprinkler pipeline is made of schedule-40 PVC pipe. For a wide-open ball valve, determine the flow delivered to each sprinkler head. Do not neglect minor losses. Fluid paths and notes:

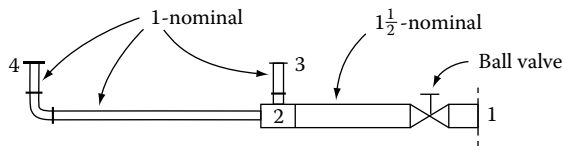


FIGURE P5.63

from 1 to the T-joint at 2: $1\frac{1}{2}$ -nominal; pipe length is 6.5 m
from 2 to the sprinkler head at 3: $1\frac{1}{2}$ -nominal; pipe length is 0.3 m
from 2 to the sprinkler head at 4: 1-nominal; pipe length is 8.3 m
fittings: K for each sprinkler head is 50, which includes the exit loss; T-joint at 2; reducing bushing and elbow between 2 and 4; ball valve.

- 5.64** A home air-conditioning system contains a fan that forces air over cooling coils (condenser). The cooled air ($T = 7^\circ\text{C}$) goes to a plenum chamber to which three circular ducts are attached, as shown in Figure P5.64. The chamber pressure is 108 kPa, and the ducts are of length 2, 2.6, and 3.8 m. Ducts all have a 30-cm inside diameter and are made of galvanized sheet metal. Neglect minor losses and determine the volume flow in each if the air flow into the plenum chamber is $20 \text{ m}^3/\text{min}$ and each duct exhausts into rooms at 101.3 kPa pressure. Assume constant temperature.

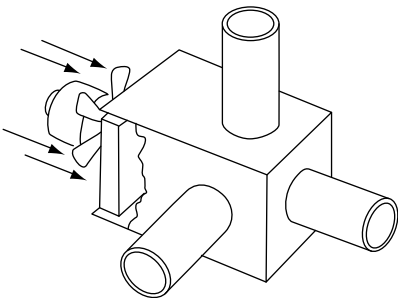


FIGURE P5.64

Pumps and Piping Systems

- 5.65** The homeowners of Example 5.13 have decided that they would rather install a smaller pump that will deliver 10 gpm rather than 25 gpm. Determine the pump power required for the smaller pump.
- 5.66** Octane is to be pumped overland in a piping system. The octane is routed from storage tanks to the main pump by smaller pumps. One such arrangement is sketched in Figure P5.66. This pump must supply $0.4 \text{ m}^3/\text{s}$ of octane to the main pump. All fittings are flanged; the pipe is cast iron, schedule 160, 24-nominal, with $L = 65 \text{ m}$. The absolute pressure at section 2 is 282.5 kPa . Determine the power required to be transferred to the liquid. Assuming an overall pump-motor efficiency of 75%, determine the input power required by the motor.

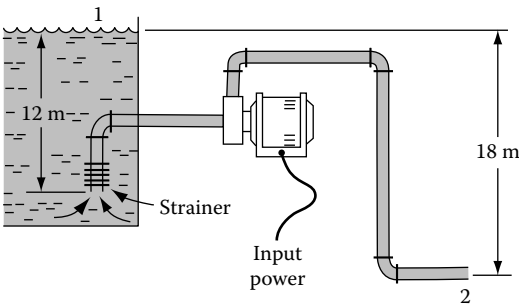


FIGURE P5.66

- 5.67** In a dairy products processing plant, milk ($\rho = 1\,030 \text{ kg/m}^3$, $\mu = 2.12 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$) is pumped through a piping system from a tank to a container packaging machine.* The pump and piping are all stainless steel (smooth walled), arranged as shown in Figure P5.67. The pump inlet line (4-nominal, schedule 40 pipe) is 2 m long. The pump outlet line ($3\frac{1}{2}$ -nominal, schedule 40 pipe) is 15 m long. All fittings are flanged, and the flow rate through the system is $0.015 \text{ m}^3/\text{s}$. Determine the electrical power input to the pump if the pump-motor efficiency is 88%.

* Christie G. Geonkopolis, *Transport Processes and Unit Operations* (Boston: Aliyn & Bacon, 1978), p. 629, Table A.4-2.

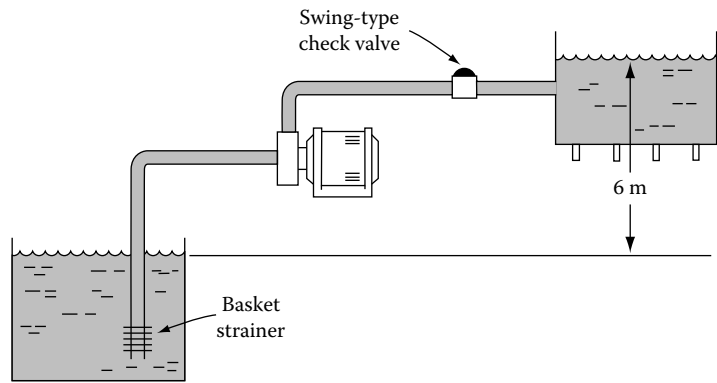


FIGURE P5.67

- 5.68** Since the early 1900s, the Grand Canyon has become a popular place for tourists to visit. The lack of potable water became a major hindrance to visitors, however, as permanent natural sources of water are rare or nonexistent on the rims. In 1928, the Utah Parks Company constructed a 12,500-ft pipeline of $3\frac{1}{2}$ -nominal pipe. Water is piped up to the North Rim from Roaring Springs, in Roaring Springs Canyon, a vertical distance of almost 3,900 ft (1 200 m). Water flows through the pipe at 95 gpm into one of two 2,000,000-gal storage tanks. Water can then be taken from the tanks and used for showers, consumption, irrigation, and so on. Given this information, calculate the pump power required for this installation. Assume that inlet and outlet pressures are equal, that minor losses can be neglected, and that the pipe is made of wrought iron. (Much of the data for this problem were obtained from a National Park Service tourist publication.)
- 5.69** Decorative water fountains consist of a water reservoir and underground piping to and from a pump. One such system is shown schematically in Figure P5.69. The inlet line to the pump is 20 m of 16-nominal PVC pipe. The outlet line from the pump is 18 m of 12-nominal PVC pipe. The outlet line leads to the bottom of an annular flow line. The expansion there has a loss value of $K=2$ based on the kinetic energy in the 12-nominal line. The annular flow passage has a length $L=180$ cm and is bounded by $D_o=30$ cm and $D_i=20$ cm. It, too, is made of PVC material. There is a negligible loss at the exit of the annulus; the pressure at that location is atmospheric. What is the pump power required for the flow configuration shown? If the pump-motor combination has an efficiency 92%, determine the electrical power requirements. If electricity costs $\$0.05/\text{kW} \cdot \text{h}$, determine the cost of running the fountain for 8 h.

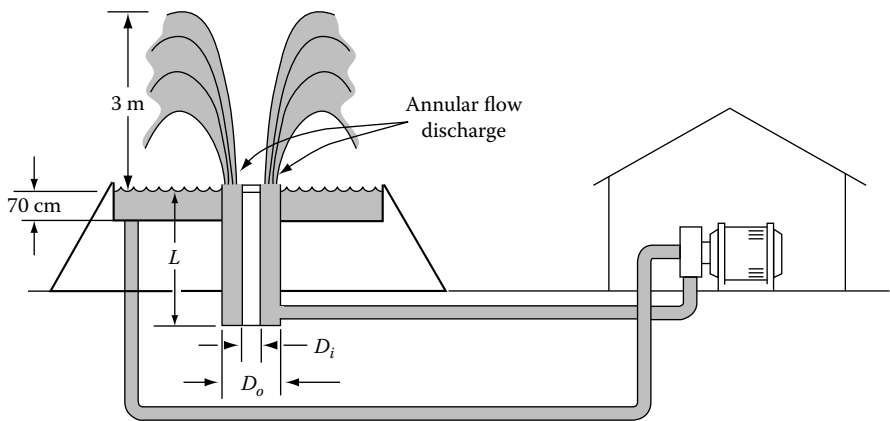


FIGURE P5.69

Miscellaneous Problems

- 5.70** A 16-nominal, schedule 30 pipe made of cast iron is inclined at a controllable angle with the horizontal. The 100-m-long pipe is to convey $0.2 \text{ m}^3/\text{s}$ of decane downhill. At what angle of inclination will the pressure drop due to friction overcome the change in potential energy of the liquid?
- 5.71** Derive Equation 5.25 in detail, starting with Equation 5.23.
- 5.72** Derive Equation 5.28 in detail, starting with Equation 5.25.
- 5.73** Show that Equation 5.28 reduces to Equation 5.16 when $\kappa = 0$.
- 5.74** Select five Reynolds numbers and ε/D values at random from the Moody diagram and obtain the corresponding friction factors. Substitute the Reynolds numbers and the ε/D values into the Chen or the Haaland equation and calculate f . Compare your results to the values read from the Moody diagram.
- 5.75** Select five Reynolds numbers and ε/D values at random from the Moody diagram and obtain the corresponding friction factors. Substitute the Reynolds numbers and the ε/D values into the Churchill or Swamee–Jain equation and calculate f . Compare your results to the values read from the Moody diagram.
- 5.76** A positive displacement pump delivers lubricating oil ($\rho = 1.6 \text{ slug/ft}^3$; $\mu = 0.003 \text{ lbf} \cdot \text{s/ft}^2$) to a journal bearing. Lubricating the bearing properly requires a volume flow rate of oil of $250 \text{ in.}^3/\text{min}$. The flow line is made of $\frac{1}{8}$ -nominal, schedule 40 cast-iron pipe 35 ft long. The line contains six regular elbows and one ball valve, all threaded fittings. The pump transfers $100 \text{ ft} \cdot \text{lbf/s}$ to the fluid. Determine the correct setting for α on the ball valve if the line pressure at inlet equals that at outlet and the line is horizontal.
- 5.77** Although not discussed in this chapter, fluid temperature influences pipe flow calculations. Consider, for example, the system sketched in Figure P5.77, which shows a tank of water with a piping system attached. Water exits through a 3-nominal, schedule 40 wrought iron pipe that is 25 m long and is discharged to a nearby reservoir. The system contains a basket strainer, three 90° elbows, two 45° elbows, and a half-closed gate valve. All fittings are of long radius and are flanged. Determine the volume flow rate through the system for water temperatures of 10°C , 50°C , and 90°C . What parameters are affected by temperature?

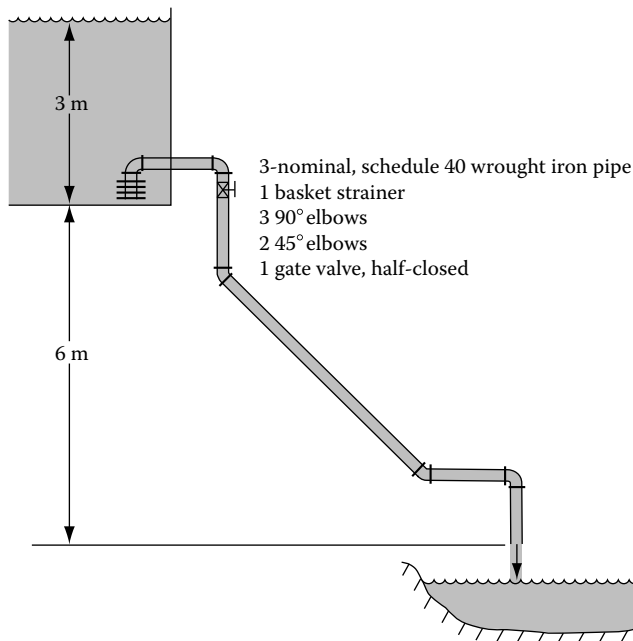


FIGURE P5.77

5.78 Figure P5.78 shows an end view of an internally finned tube. The spiraled fins are an integral part of the tube wall. The friction factor for such a configuration is given by

$$f = \frac{0.046}{\text{Re}^{0.2}} \frac{D_e}{D_i} \sec^{3/4} \theta$$

where: θ = helix angle measured from tube axis

D_i = diameter to base of fins

D_e = effective diameter based on actual cross-sectional area (tube area minus fin area)

$\text{Re} = VD_h/\nu > 2\,100$ (turbulent flow)

D_h = hydraulic diameter

$= 4 \times \text{cross-sectional area/perimeter}$

A finned tube has the same basic dimensions of 1-standard, type K drawn tubing with internal fins attached. The fins are rectangular in cross section (from an end view perpendicular to the axis of the tube). They are equal to the wall thickness in height, and they are double the wall thickness in width. The tube contains equally spaced fins, and the helix angle is 30° from the tube axis. The tube conveys water at a flow rate of $0.002 \text{ m}^3/\text{s}$.

- Determine the friction factor and the pressure drop per unit length.
- Determine the friction factor and pressure drop per unit length if no fins are attached to the drawn tubing wall and the flow rate is the same.

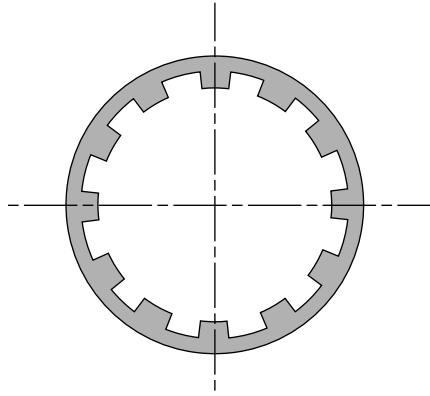


FIGURE P5.78

5.79 The friction factor for flow in a coiled tube is somewhat different from that for a straight tube. Correlations based on experimental work have been derived for laminar and turbulent flow in a coiled tube. These are as follows:

Laminar flow:

$$\frac{f_{\text{coiled}}}{f_{\text{straight}}} = \left\{ 1 - \left[1 - \left(\frac{5.8}{\text{De}} \right)^{0.45} \right]^{2.22} \right\}^{-1}$$

valid for $5.8 < \text{De} < 1000$

Turbulent flow:

$$\frac{f_{\text{coiled}}}{f_{\text{straight}}} = \left[\text{Re} \left(\frac{D}{D_c} \right)^2 \right]^{0.05}$$

$$\text{valid if } \left[\text{Re} \left(\frac{D}{D_c} \right)^2 \right] > 6$$

where: f_{coiled} = friction for the coiled tube

f_{straight} = friction factor if the coiled tube were straight

$\text{De} = \text{Dean number} = \frac{\text{Re}}{2} \left(\frac{D}{D_c} \right)^{1/2}$

D = pipe inside diameter

D_c = diameter of coil measured to centerline

$\text{Re} = \frac{VD}{\nu}$

Also, for flow in a curved tube, the critical Reynolds number above, for which fully turbulent flow exists in the duct, is given by

$$\text{Re}_{\text{cr}} = 2 \times 10^4 \left(\frac{D}{D_c} \right)^{0.32}$$

The flow is thus turbulent if $\text{Re} > \text{Re}_{\text{cr}}$.

Two enterprising chemical engineering students have decided to produce homemade beer for their own consumption. In the final phase of the production process, beer is siphoned from a 5-gal container through a plastic hose that leads to a coiled copper tube, as shown in Figure P5.79. The copper tube is located within a water tank that is used to cool the beer. The tube has a straight length that extends to the bottom of the water tank and then coils upward, making loops until it reaches the top of the water tank. The beer properties change somewhat during the time that it passes through the water tank, but for our purposes, we can assume them to be essentially constant: specific gravity = 1.0042 and $\mu = 1.4 \times 10^{-5} \text{ lbf} \cdot \text{s}/\text{ft}^2$. For the following data, determine the volume flow rate of beer through the tubing:

$L = 22 \text{ ft}$ (total for the copper tubing)

$D_c = 8 \text{ in.}$

$D = \frac{1}{4} \text{ in.}$ -ID drawn copper tubing

number of coils = $6\frac{1}{2}$

The length of $\frac{1}{4}$ -in.-ID plastic tubing (which has the same roughness factor as drawn copper tubing) is 10 ft. Neglect minor losses. Does coiling the tube have a significant effect?

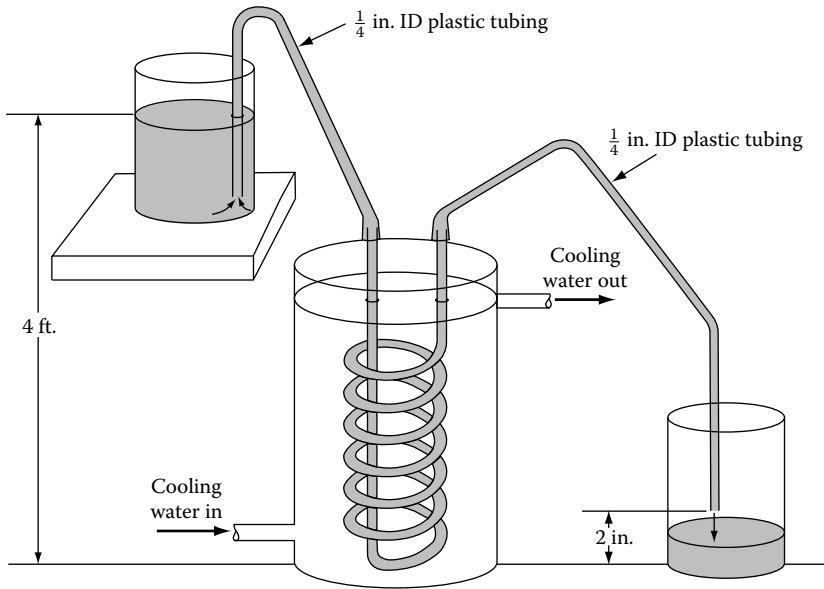


FIGURE P5.79

Computer Problems

5.80 Consider the graph and table of $f Re$ versus h/w for a rectangular duct (Figure 5.17). Using the tabulated values, show that the equation of the line is

$$f Re = 96 - 95 \left(\frac{h}{w} \right) + 56 \left(\frac{h}{w} \right)^2$$

- 5.81** a. Consider the graph and table of $f Re$ versus h/w for a rectangular duct (Figure 5.17). Using the tabulated values, construct a graph of hydraulic diameter D_h versus h/w .
 b. Using the tabulated values, construct a graph of effective diameter D_{eff} versus h/w .
 c. Plot D_h and D_{eff} versus h/w (horizontal axis) on the same set of axes.

5.82 A **system curve** for a piping system is defined as a graph of any flow variable as a function of volume flow rate Q (horizontal axis). A system curve can be drawn for any piping system.

Water flows through 1,000 ft of 2-nominal, schedule 40 galvanized pipe. Construct a system curve of pressure drop versus flow rate over a velocity range of 4–10 ft/s.

5.83 Figure P5.67 shows a pump moving milk from one tank to another. For the description of the system given in Problem 5.67, it is possible to draw what is known as a *system curve*. A system curve is a graph of any flow variable as a function of volume flow rate Q (horizontal axis). For the configuration of Figure P5.67, allow the power delivered to the fluid (not including the effect of efficiency) to vary from 0.5 to 2 kW, and graph a system curve of power versus volume flow rate.

5.84 Problem 5.76 describes a piping system that contains elbows and a ball valve. The ball valve is used to control the volume flow rate in the piping system. In this type of problem, a *system curve* is most beneficial. A system curve is a graph of any flow variable as a function of

volume flow rate Q (horizontal axis). For the piping configuration of Problem 5.76, construct a system curve of valve angle setting α versus volume flow rate Q . Take inlet and outlet pressures to be equal.

Design Problems

Pump Sizing and Selection

Example 5.13 provides a method for sizing a pump that is to be installed in a piping system. Before purchasing a pump for this service, it is necessary to consult a pump manufacturer's catalog to find one that will work. Pump manufacturers display flow properties of their pumps in such a way that the most efficient pump they produce will be selected. Figure P5.85 shows a **pump composite graph** of the type typically provided by a manufacturer. The horizontal axis is of the volume flow rate, and the vertical axis is of total head (or energy) that the pump must impart to the liquid. The graph shows small areas that represent various pumps by catalog number. Each small area corresponds to the operating region where the pump operates at its maximum efficiency.

To illustrate the use of this graph, consider the results of Example 5.13:

$$\begin{aligned}\dot{m} &= \rho Q = 0.108 \text{ slug/s} \\ Q &= 25 \text{ gpm} = 0.0557 \text{ ft}^3/\text{s} \\ \frac{dW}{dt} &= -133 \text{ ft} \cdot \text{lbf/s} = -0.242 \text{ hp}\end{aligned}$$

The total head or energy is

$$\begin{aligned}\text{Total head} = \Delta H &= \frac{1}{\dot{m}g} \left(-\frac{dW}{dt} \right) = \frac{1}{0.108(32.2)}(133) \\ &= \Delta H = 38.2 \text{ ft} \quad (\text{of water, the flowing liquid})\end{aligned}$$

Entering the chart at $Q = 25$ gpm and $\Delta H = 38.2$ ft, we select the pump labeled 07 for this job.

There are established standards for drawing piping systems. Such systems can be drawn using double lines or single lines. Symbols are used for certain types of joints and fittings. Such standards are found in a publication by the American National Standards Institute (ANSI Z32.2.3) and in most engineering graphics textbooks. Locate these standards and become familiar with them. For the pump and piping system selected by your instructor from the list that follows:

- Construct a single line drawing of the piping system, showing all joints and fittings.
- Size the pump required in the installation.
- Locate a catalog from a pump manufacturer and select a commercially available pump for the installation. (Do not use Figure P5.85.)

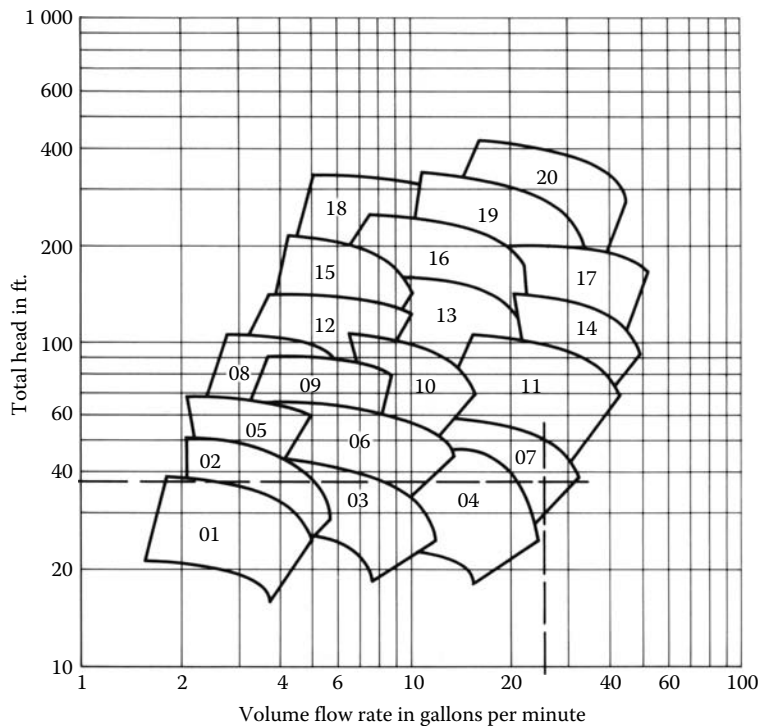


FIGURE P5.85

Pump Sizing Problems

(See instructions on the previous page.)

- 5.85** Complete pump sizing and selection for the piping system in Problem 5.65.
- 5.86** Complete pump sizing and selection for the piping system in Problem 5.66.
- 5.87** Complete pump sizing and selection for the piping system in Problem 5.67.
- 5.88** Complete pump sizing and selection for the piping system in Example 5.13.

Problems Involving Hydraulic and Energy Grade Lines

Hydraulic and energy grade lines give a graphic presentation of the flow quantities in a particular configuration. The **hydraulic grade line** is a plot of pressure versus distance; the **energy grade line** is a plot of the sum of pressure and kinetic energy as a function of distance. These concepts are best illustrated by example.

Consider two large reservoirs connected with a pipe, as shown in Figure P5.89. Because one liquid reservoir surface is elevated above the other, a flow exists in the pipe. The total mechanical energy in the system at section 1 is

$$E_1 = \frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1$$

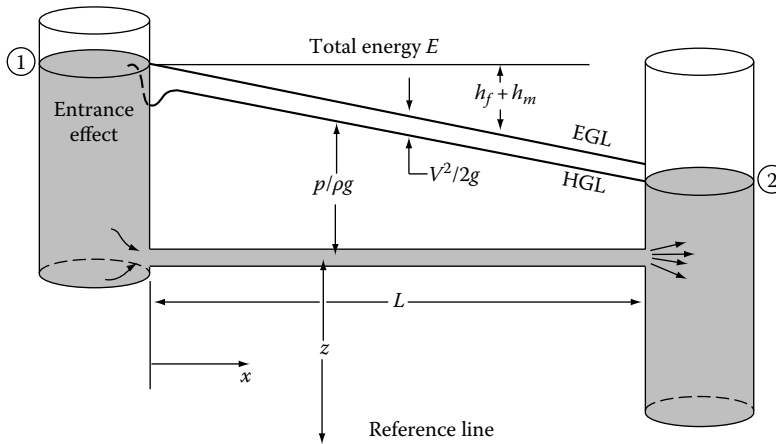


FIGURE P5.89

The total mechanical energy at section 2 is

$$E_2 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2$$

These are related by

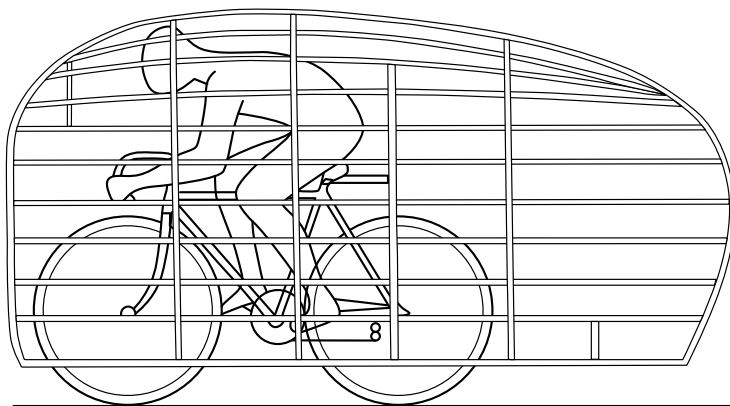
$$E_1 = E_2 + \Delta h_f + \Delta h_m$$

where Δh_f is the loss due to friction between the fluid and the conduit wall [identified with the friction factor term $(fL/D)(V^2/2g)$], and Δh_m is the minor losses [identified with the sum of the loss coefficient term $\sum K(V^2/2g)$].

The total energy, including friction and minor losses, must be constant, so the plot of the total energy versus distance along the pipe is a horizontal line (Figure P5.89). The plot of $p/\rho g$ (as measured from the pipe) versus L is the *hydraulic grade line* (HGL). The curve of $V^2/2g$ (as measured from the hydraulic line) versus L is the *energy grade line* (EGL). The difference between the energy grade line and the total energy line represents frictional losses. The advantage of plotting these lines is that the conversion of pressure energy to friction is visually displayed and the pattern of energy transfer can be seen at a glance. For complex systems, however, these lines tend to be confusing. They are most useful for simple piping systems.

- 5.89 Sketch hydraulic and energy grade lines for the system in Example 5.1.
- 5.90 Sketch hydraulic and energy grade lines for the system in Example 5.2.
- 5.91 Sketch hydraulic and energy grade lines for the system in Example 5.3.
- 5.92 Sketch hydraulic and energy grade lines for the system in Example 5.4.
- 5.93 Sketch hydraulic and energy grade lines for the system in Problem 5.21.
- 5.94 Sketch hydraulic and energy grade lines for the system in Problem 5.25.
- 5.95 Sketch hydraulic and energy grade lines for the system in Problem 5.33.

6 Flow over Immersed Bodies



In this chapter, we examine the forces that are exerted on a body moving through a fluid. Consider, for example, a wing or airfoil moving at a velocity V through air. For convenience, and in keeping with the control volume approach, we impose a velocity on the system equal to $-V$, thus rendering the airfoil stationary while air moves past the wing. The air velocity is given the symbol U , or U_∞ , to denote this transformation. The forces of interest are the drag force and the lift force. These forces act parallel and perpendicular to the principal airspeed direction, respectively. These concepts are illustrated in Figure 6.1.

The purpose of this chapter is to describe the effects that cause lift and drag forces to be exerted on immersed bodies—namely, boundary-layer growth and separation. Data on drag of variously shaped bodies are presented, and, finally, the combined effects of lift and drag on different airfoils are discussed.

6.1 BOUNDARY-LAYER GROWTH AND SEPARATION

The **boundary layer** is the portion of flow in the vicinity of a solid boundary. In this section, we examine the boundary layer and its growth along a surface. In addition, we discuss the phenomenon of separation. When a region in the flow field has velocity components that are not within the main flow direction, the flow is said to separate from a solid boundary. Later, we see how the effects of boundary-layer growth and separation combine to yield the forces of interest that act on a body immersed in a flowing fluid.

6.1.1 BOUNDARY-LAYER GROWTH

Consider uniform flow passing over a flat plate that is aligned parallel to the flow direction. In the region upstream of the plate, the flow has velocity U_∞ . Along the plate surface, however, the velocity is zero. In the region very near the plate along its surface, the velocity is not constant but increases from zero at the wall to the free-stream value or nearly so at a certain vertical distance from the plate. This vertical distance, called the **boundary-layer thickness**, is shown schematically in Figure 6.2.

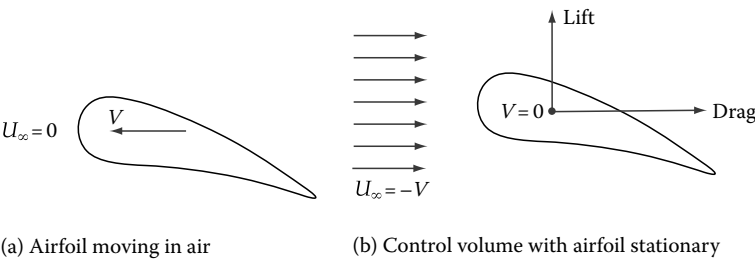


FIGURE 6.1 Forces acting on an airfoil.

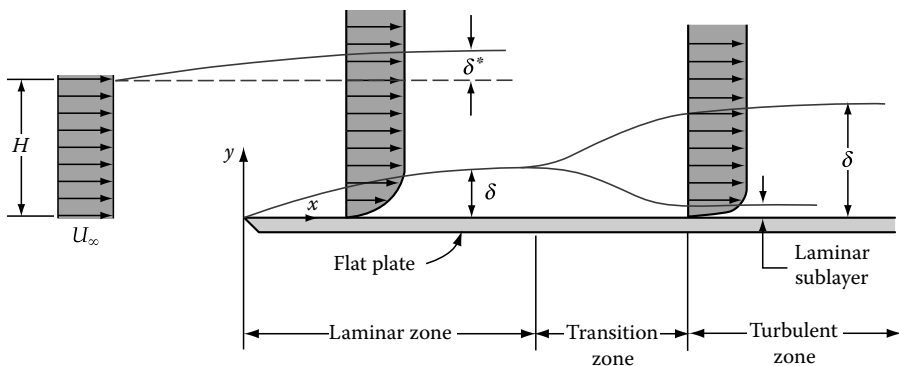


FIGURE 6.2 Growth of the boundary layer along a flat plate. The vertical scale is greatly exaggerated.

As seen in Figure 6.2, the boundary-layer thickness δ increases with distance along the plate. Moreover, there are three definite zones: the laminar zone near the leading edge, the transition zone, and the turbulent zone downstream. Note that a laminar sublayer exists in the turbulent zone because the velocity along the wall must be zero. Also shown in the figure is a **displacement thickness** δ^* , which refers to the displacement of the external flow due to the presence of the plate, which in turn has caused a boundary layer to form. In other words, the flow must be displaced an amount δ^* to satisfy the continuity equation. Upstream the velocity is U_∞ , and the flow area for an undisturbed height is the product of H and a unit width into the page. The continuity equation applied to the flow is

$$\text{Area} \times \text{Velocity upstream} = \text{Area} \times \text{Velocity anywhere along the plate}$$

or

$$U_\infty H = U_\infty \delta^* + U_\infty (H - \delta) + \int_0^\delta V_x dy \tag{6.1}$$

in free
stream

displacement
thickness

between H and
boundary
layer

within
boundary
layer

There is a drag force acting on the plate that is due to skin friction between the fluid and the plate. In the laminar zone, the wall shear stress decreases with distance. In the turbulent zone, the wall shear stress is greater than that in the laminar zone and likewise decreases with distance, but much more

slowly than that in the laminar zone. Both contribute to the force that tends to move the plate in the direction of flow.

Details of the flow in the boundary layer are derived in Chapter 13. For purposes of illustration, the results of the analysis are given here. It can be shown that for the laminar boundary layer, the boundary-layer thickness for flow over a flat plate is

$$\delta = \frac{5.0x}{\sqrt{\text{Re}_x}} \quad (6.2)$$

where: $\text{Re}_x = \rho U_\infty x / \mu$
 x is the distance along the plate

In addition, the displacement thickness is

$$\delta^* = \frac{1.73x}{\sqrt{\text{Re}_x}} \quad (6.3)$$

and the drag force exerted on the plate in the direction of flow is given by

$$D_f = \frac{0.664b\rho U_\infty^2 x}{\sqrt{\text{Re}_x}} \text{ (laminar flow)} \quad (6.4)$$

where b is the width of the flat plate.

Experiments have shown that transition between the laminar and turbulent boundary layers occurs at a Reynolds number of approximately 5×10^5 . Furthermore, if the boundary layer is turbulent, it can be shown that the boundary-layer thickness is

$$\delta = \frac{0.37x}{(\text{Re}_x)^{1/5}} \quad (6.5)$$

The displacement thickness is

$$\delta^* = \frac{0.046x}{(\text{Re}_x)^{1/5}} \quad (6.6)$$

and the drag force is

$$D_f = \frac{0.036\rho U_\infty^2 bx}{(\text{Re}_x)^{1/5}} \text{ (turbulent flow)} \quad (6.7)$$

These equations are valid if it is assumed that the turbulent boundary layer begins at the leading edge of the plate. Although this is not actually the case, desired results can be obtained by appropriate manipulation of the equations as illustrated in Example 6.1.

It is customary to express data on drag as drag coefficient versus Reynolds number, where both are defined as

$$C_D = \frac{D_f}{\frac{1}{2}\rho U_\infty^2 A} \quad (6.8)$$

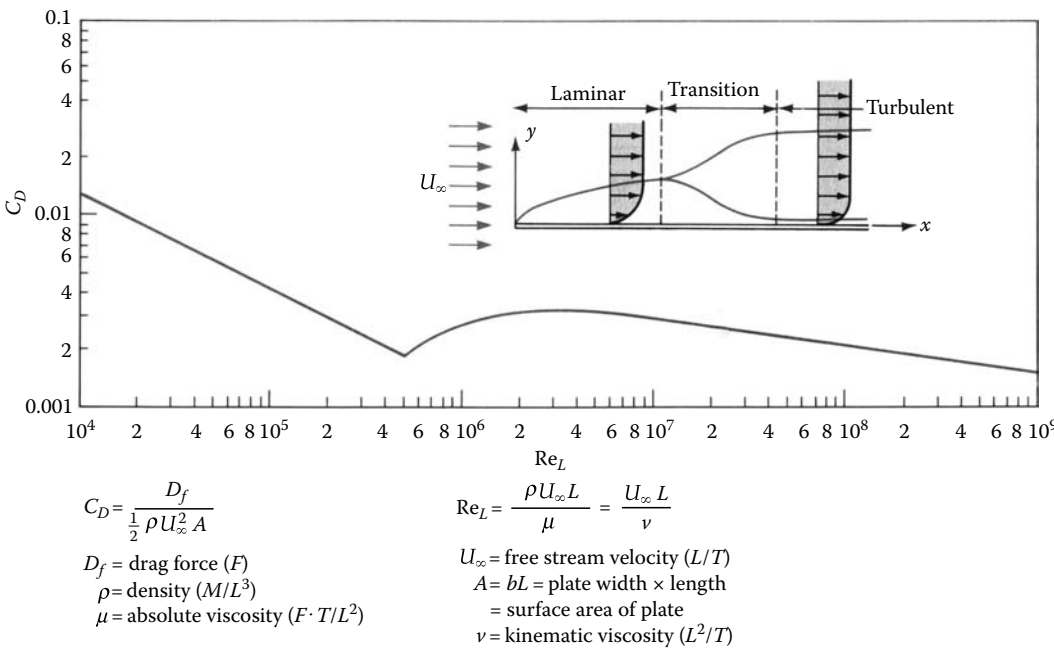


FIGURE 6.3 Drag coefficient versus Reynolds number at the end of a surface for flow over a flat plate.

and

$$Re = \frac{\rho U_\infty D}{\mu} \tag{6.9}$$

where: D_f = drag force
 ρ = density of the fluid
 μ = viscosity of the fluid
 U_∞ = free-stream velocity
 A is a projected frontal area or some other characteristic area of the body
 D is a characteristic dimension of the object

For flow over a flat plate, we can express Equations 6.4 and 6.6 in these terms and calculate drag coefficients and Reynolds numbers. When these results are supplemented with experimental data, the graph of Figure 6.3 results. The drag coefficient varies from 0.001 to 0.1, while the Reynolds number ranges from 10^4 to 10^9 . Note that the characteristic length used in the Reynolds number of Figure 6.3 is the length of the plate. It can be seen that the drag coefficient reaches a low point at transition and again at high Reynolds numbers.

Example 6.1

A 10 m/s wind at a temperature of 22°C blows over the flat plate of Figure 6.2. The plate is 12 m long and 6 m wide.

- a. Sketch the boundary-layer growth for both laminar and turbulent regimes.
- b. Determine the force acting on the plate due to the fluid in contact with it.

SOLUTION

- a. The laminar boundary layer is given by

$$\delta = \frac{5.0x}{\sqrt{\text{Re}_x}} = \frac{5.0x}{(\rho U_\infty x / \mu)^{1/2}}$$

or

$$\delta = 5.0 \sqrt{\frac{\mu x}{\rho U_\infty}}$$

From Table A.3, for air at 22°C, $\rho = 1.197 \text{ kg/m}^3$ and $\mu = 18.22 \times 10^{-6} \text{ N} \cdot \text{s/m}^2$. By substitution, we get

$$\begin{aligned} \delta &= 5.0 \sqrt{\frac{(18.22 \times 10^{-6})(x)}{1.197(10)}} \\ &= 6.17 \times 10^{-3} \sqrt{x} \end{aligned} \quad (\text{i})$$

up to transition. The distance along the wall where transition occurs, x_{critical} , or x_{cr} , is found from

$$\text{Re}_x = 5 \times 10^5 = \frac{\rho U_\infty x_{\text{cr}}}{\mu}$$

so

$$x_{\text{cr}} = \frac{5 \times 10^5 (18.22 \times 10^{-6})}{1.197(10)} = 0.76 \text{ m}$$

For turbulent flow,

$$\begin{aligned} \delta &= \frac{0.37x}{(\text{Re}_x)^{1/5}} = \frac{0.37x}{\left(\frac{\rho U_\infty x}{\mu}\right)^{1/5}} \\ &= 0.37x^{4/5} \left[\frac{18.22 \times 10^{-6}}{1.197(10)} \right]^{1/5} \end{aligned}$$

or

$$\delta = 0.025 \, 4x^{4/5} \quad \text{for } x \geq 0.76 \text{ m} \quad (\text{ii})$$

A plot of Equations i and ii is given in Figure 6.4.

- b. The drag force is found by applying Equations 6.4 and 6.7. However, Equation 6.7 was derived by assuming that the turbulent boundary layer began at the leading edge. Therefore, we must compose an equation to obtain the correct results:

$$\begin{aligned} \text{Drag} &= \text{Laminar drag from } x = 0 \text{ to } x_{\text{cr}} = 0.76 \text{ m} \\ &\quad + \text{turbulent drag from } x = 0 \text{ to } L = 12 \text{ m} \\ &\quad - \text{turbulent drag from } x = 0 \text{ to } x_{\text{cr}} = 0.76 \text{ m} \end{aligned}$$

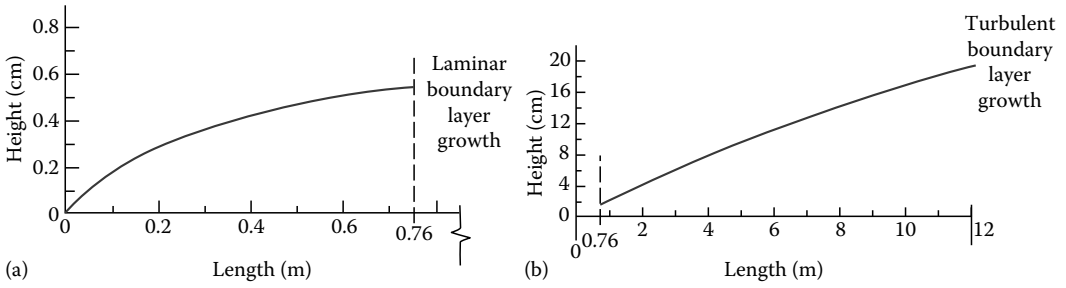


FIGURE 6.4 Plot of (a) laminar and (b) turbulent boundary-layer growths on the plate of Example 6.1.

By substitution, the drag force D_f is

$$D_f = \frac{0.664b\rho U_\infty^2 x_{cr}}{\sqrt{\text{Re}_{x_{cr}}}} + \frac{0.036b\rho U_\infty^2 L}{(\text{Re}_L)^{1/5}} - \frac{0.036b\rho U_\infty^2 x_{cr}}{(\text{Re}_{x_{cr}})^{1/5}}$$

Now

$$\text{Re}_{x_{cr}} = 5 \times 10^5$$

and

$$\text{Re}_L = \frac{\rho U_\infty L}{\mu} = \frac{1.197(10)(12)}{18.22 \times 10^{-6}} = 7.9 \times 10^6$$

Hence,

$$\begin{aligned} D_f &= \frac{0.664(6)(1.197)(10^2)(0.76)}{(5 \times 10^5)^{1/2}} + \frac{0.036(6)(1.197)(10^2)(12)}{(7.9 \times 10^6)^{1/5}} \\ &\quad - \frac{0.036(6)(1.197)(10^2)(0.76)}{(5 \times 10^5)^{1/5}} \\ &= 0.513 + 12.9 - 1.42 \end{aligned}$$

$$D_f = 12 \text{ N}$$

This problem can also be solved by using Figure 6.3. The Reynolds number at the plate end is calculated as

$$\text{Re}_L = 7.9 \times 10^6$$

At this value, Figure 6.3 shows

$$C_D = \frac{D_f}{\frac{1}{2}\rho U_\infty^2 A} = 0.003$$

The drag force is found to be

$$D_f = 0.003\left(\frac{1}{2}\right)(1.197)(10^2)(6)(12)$$

or

$$D_f = 12.9 \text{ N}$$

The result obtained with the equations (12 N) is based on transition occurring at a single point. The result of 12.9 N is believed to be more accurate because it is obtained from a graph constructed in part with experimental data. Either answer is acceptable.

We see that the laminar boundary-layer thickness grows to just less than 0.8 cm and begins transition within approximately 1 m from the leading edge. The turbulent boundary-layer thickness grows to nearly 20 cm over a 12-m length. The combined effect is to exert a drag force on the surface of 12 N, most of which is due to the turbulent boundary layer.

6.1.2 SEPARATION

We have discussed the formation of a boundary layer in flow over a flat plate. Now we examine fluid behavior in flow over a curved surface. Consider flow past a curved boundary like that illustrated in Figure 6.5. Again the surface is stationary, and the free-stream velocity is U_∞ . Point A at the nose is where the velocity normal to the surface is zero. This point is referred to as a **stagnation point**, and the pressure measured at A is termed **stagnation pressure**. The boundary layer begins its growth from here. At B and C, the boundary layer has experienced a growth that is intuitively predictable. Over the rear portion of the surface, starting at point D, the pressure increases with distance. The fluid particles are slowed down in the boundary layer. The decelerating effect is due to the positive or adverse pressure gradient that has developed. If the decrease in kinetic energy is great, a region of flow reversal may form. The velocity distribution changes as depicted at points E and F. The velocity at the wall is zero owing to viscosity. At point D, where separation begins, $dV_x/dy = 0$ at the wall surface. The region of flow reversal is called the **separation region** because the forward flow has been separated from the boundary by the adverse pressure gradient $dp/dx > 0$. Vortices, swirls, and, in general, reversed flows occur in the separation region. Moreover, the pressure in the separation region is nearly equal to the pressure at point D. The location of point D has a strong effect on the drag and lift forces exerted. This effect is discussed in more detail in the following sections.

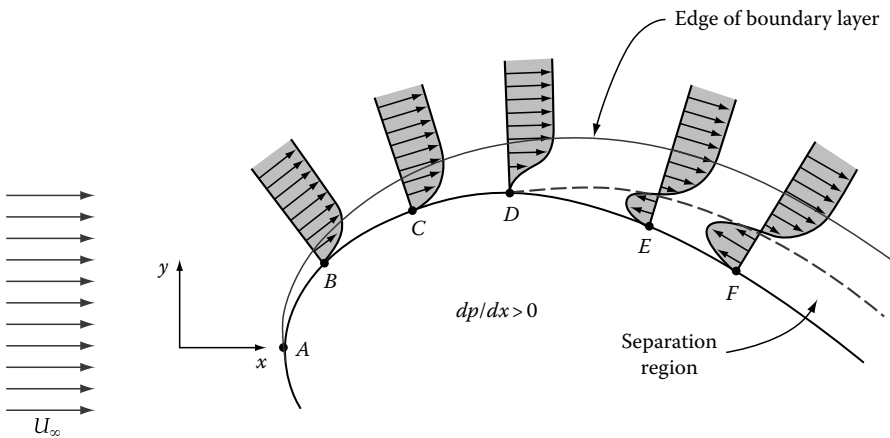


FIGURE 6.5 Flow past a curved surface.

6.2 DRAG ON VARIOUS TWO-DIMENSIONAL BODIES

The drag force exerted on various types of bodies is presented in this section. The first body to be discussed is an infinitely long cylinder immersed in a uniform flow of velocity U_∞ . The velocity profile and pressure distribution about the cylinder are important. From observations of the flow pattern around the cylinder, streamlines can be sketched as in Figure 6.6. Point A is the stagnation point, and B is the point of separation. Beyond point B and immediately downstream of the cylinder is the separation region (or wake). Separation occurs because of the adverse pressure gradient that forms. Because the flow cannot easily negotiate the turn past B , the main flow separates from the cylinder boundary. Because of the complex nature of the flow, the velocity distribution at every point on the cylinder cannot be derived mathematically. To determine the pressure distribution, therefore, experimental means are necessary.

Suppose that a hollow cylinder drilled every 10° with a static pressure tap is placed in a uniform flow (such as that produced in a wind tunnel). Each tap is connected to a manometer. The arrangement shown in Figure 6.7 would give the pressure distribution on the surface of the cylinder. Only half the cylinder is used because the distribution is symmetric. Experiment shows that at the stagnation point (A), pressure is greater than the reference pressure (atmospheric pressure) because the velocity at this point is zero. The pressure decreases with the angle θ until at 70° (or thereabouts), the minimum pressure corresponding to maximum velocity is reached. Beyond this, at 120° , separation occurs because the flow cannot negotiate the abrupt boundary change. In the separation region, the pressure on the surface of the cylinder is a constant and very nearly equals that at 120° . For a more meaningful representation, a typical pressure distribution is sketched on a polar coordinate grid in Figure 6.8. The cylinder surface is drawn as a circle, and the pressure at any point along the surface is represented as a line with an arrowhead. The length of any line is proportional to the magnitude of the pressure at its location.

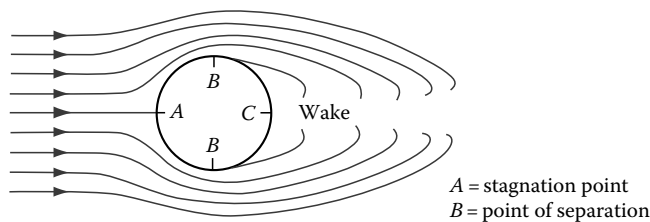


FIGURE 6.6 Uniform flow past an infinitely long cylinder.

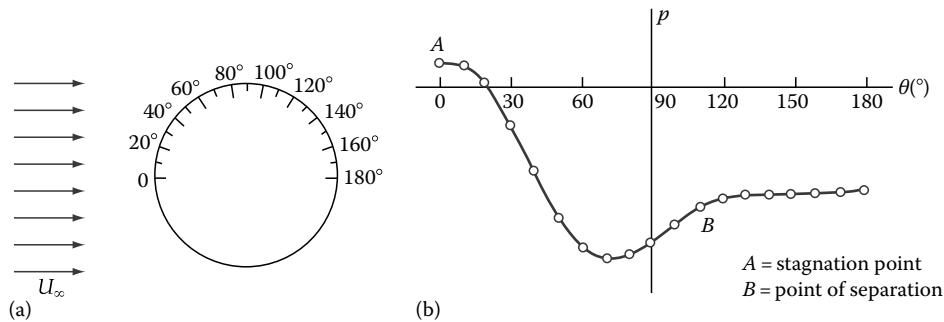


FIGURE 6.7 An experimental arrangement to determine pressure distribution on the surface of a cylinder immersed in a uniform flow: (a) each pressure tap is connected to a manometer and (b) representative results.

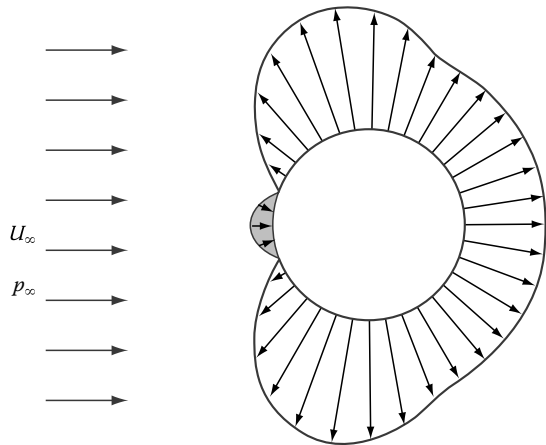


FIGURE 6.8 Polar plot of pressure distribution on the surface of a cylinder immersed in a uniform flow.

The direction (signified by the arrowhead) indicates whether the pressure at a location is greater or less than the free-stream pressure p_∞ . A line with an arrow pointing at the cylinder surface means that the pressure at that location is greater than p_∞ , and the converse is also true.

From Figure 6.8, it is apparent that the pressure distribution over the front half of the cylinder is different from that over the rear half. This difference in pressure, which acts over the projected frontal area of the cylinder, results in a net force acting on the cylinder in the direction of flow. This net force due to pressure differences is called **pressure drag** or **form drag**. Form drag combined with skin friction drag gives the total drag exerted on the cylinder.

The form drag force exerted on a cylinder can be calculated from a pressure distribution obtained experimentally by integration over the cylinder surface. Figure 6.9 gives the direction of the pressure force component that contributes to the drag. By integration of experimental data, we obtain

$$D_f = \int_0^{2\pi} \int_0^L p \cos \theta \, dA$$

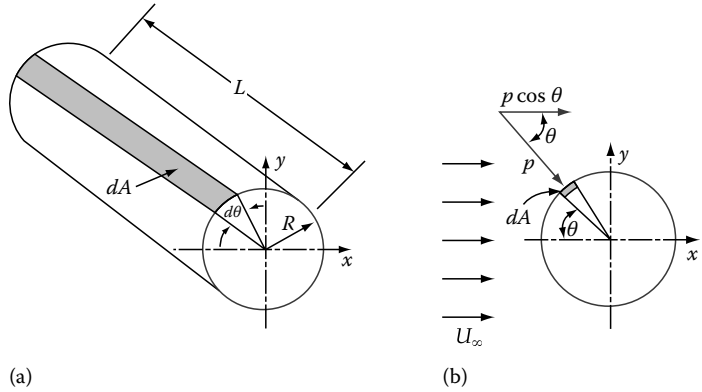


FIGURE 6.9 (a) Definition sketch of the area dA on a cylinder and (b) pressure p and its component, $p \cos \theta$, in the main flow direction.

where L is the cylinder length. Now $dA = dL(R d\theta)$, so

$$D_f = \int_0^{2\pi} \int_0^L p \cos \theta dL(R d\theta)$$

Integrating once, we get

$$D_f = RL \int_0^{2\pi} p \cos \theta d\theta$$

or

$$D_f = 2RL \int_0^{\pi} p \cos \theta d\theta$$

due to symmetry.

For another illustration of the concepts of skin friction drag and form drag, let us examine two cases of flow past a flat plate (Figure 6.10). In one case, the plate is aligned parallel to the flow, and there is no separation from the boundary. Here the total drag on the plate is due to skin friction. In the second case, the plate is normal to the flow. Separation occurs, a wake forms, and the drag exerted on the plate is due primarily to the pressure difference from front to back.

The location of the point of separation affects the drag force, and this in turn can be influenced by whether the boundary layer is laminar or turbulent. A typical velocity profile for each type of boundary layer is shown in Figure 6.11. The laminar profile near the wall is more positively sloped

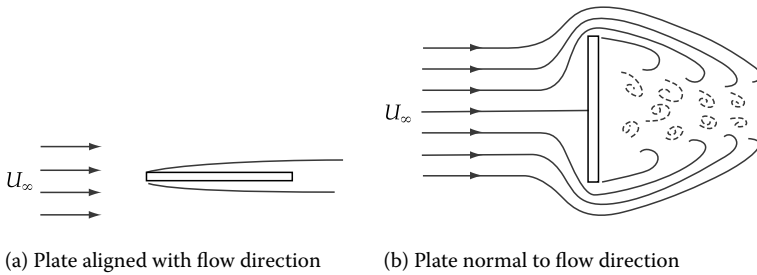


FIGURE 6.10 Two cases of flow past a flat plate.

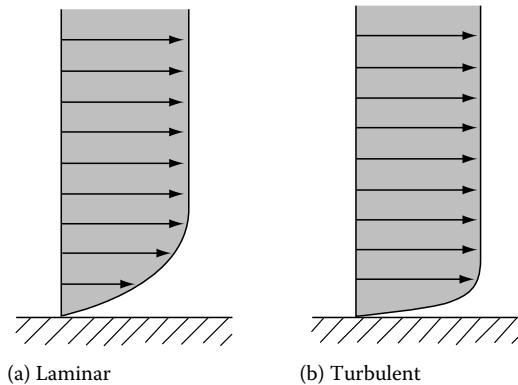


FIGURE 6.11 Laminar and turbulent boundary-layer velocity profiles.

than the turbulent profile. There is considerably more mixing action in the turbulent case, which tends to distribute the kinetic energy of the flow evenly. Thus, the turbulent profile can offer more resistance to an adverse pressure gradient. For a turbulent boundary layer, we therefore expect that separation will occur farther downstream than that for a laminar boundary layer. To see how the location of the point of separation affects our example of flow past a cylinder, refer to Figure 6.12. In the laminar case, the boundary layer remains laminar to the point of separation. In the turbulent case, the laminar boundary layer experiences a transition to a turbulent boundary layer; as a result, the point of separation is moved farther downstream on the cylinder surface, and the form drag is thus reduced. A common technique of inducing transition is to roughen the surface of the object. A familiar example for a sphere is the surface of a golf ball.

Figure 6.13 is a graph of drag coefficient as a function of Reynolds number for a cylinder having a large length-to-diameter ratio. The drag coefficient decreases steadily from 60 to 1 as the Reynolds number increases from 10^{-1} to 10^3 . For a Reynolds number in the range 10^3 to 10^4 , C_D remains

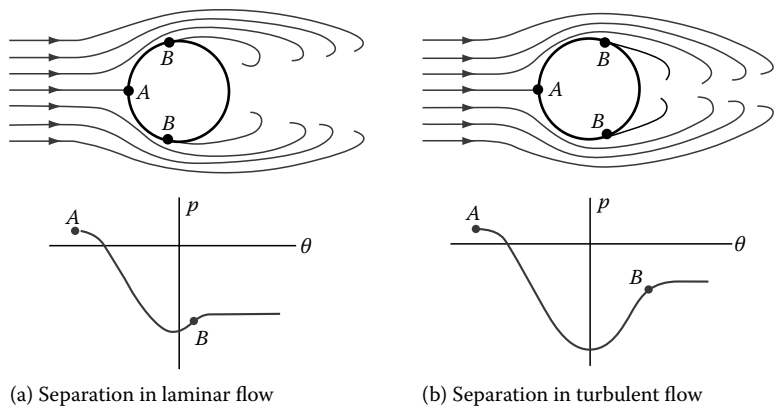


FIGURE 6.12 A comparison of laminar and turbulent separation.

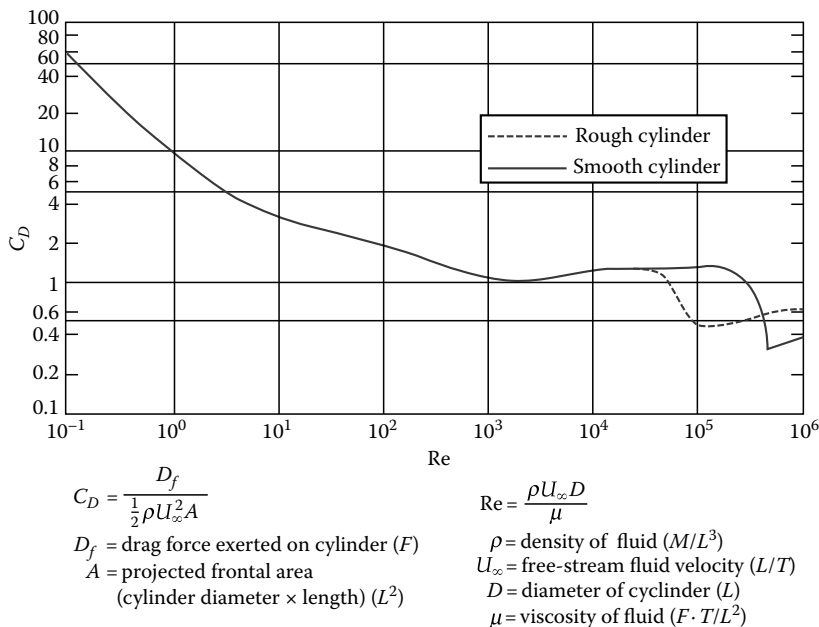


FIGURE 6.13 Drag coefficient as a function of Reynolds number for long circular cylinders. (Adapted from Schlichting, H., *Boundary Layer Theory*, 7th ed., McGraw-Hill, Inc., New York, 1979. With permission.)

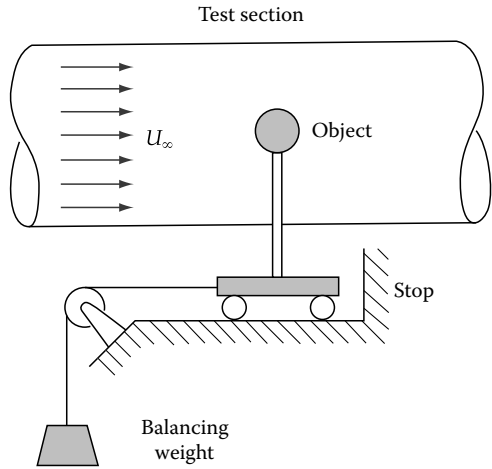


FIGURE 6.14 An experimental setup for measuring drag on an object immersed in a uniform flow of velocity U_∞ .

approximately constant. At a Reynolds number greater than 4×10^4 , a roughened cylinder exhibits a different drag coefficient curve than does a smooth cylinder. The entire plot can be obtained from experimental results measured with the setup shown in Figure 6.14.

Example 6.2

A flagpole consists of two telescoping cylinders. The smaller cylinder is made of 3½-nominal, schedule 40 galvanized pipe, which is 6 ft long. This pipe just fits into 4-nominal, schedule 40 pipe (also galvanized). The pipes are welded together end to end to form a flagpole that is to extend 12 ft above ground. Local safety requirements stipulate that the flagpole must withstand 80-mi/h winds. Before deciding on how deep to bury the lower portion of the pole, it is necessary to calculate forces due to the wind.

- a. Determine the total drag force exerted on the installed flagpole for a wind speed of 80 mi/h.
- b. Determine the moment at the base of the pole exerted by these forces. Assume a temperature of 71°F.

SOLUTION

We can determine the drag forces acting on the flagpole by using Figure 6.13. We use the property tables to find

Air at 71°F	$\rho = 0.00232 \text{ slug/ft}^3$	
	$\mu = 0.3801 \times 10^{-6} \text{ lbf} \cdot \text{s/ft}^2$	Table A.3
3½-nom, sch 40	OD = 4 in. = 0.333 ft	Table C.1
4-nom, sch 40	OD = 4.5 in. = 0.375 ft	Table C.1

The flow velocity is

$$U_\infty = \frac{80 \text{ mi}}{1 \text{ h}} \frac{5280 \text{ ft}}{1 \text{ mi}} \frac{1 \text{ h}}{3600 \text{ s}} = 117 \text{ ft/s}$$

The Reynolds number of the flow past the $3\frac{1}{2}$ -nominal pipe is

$$\text{Re}_3 = \frac{\rho U_\infty D}{\mu} = \frac{0.00232(117)(0.333)}{0.3801 \times 10^{-6}} = 2.38 \times 10^5$$

Similarly, for the 4-nominal pipe,

$$\text{Re}_4 = \frac{\rho U_\infty D}{\mu} = \frac{0.00232(117)(0.375)}{0.3801 \times 10^{-6}} = 2.7 \times 10^5$$

For these Reynolds numbers, Figure 6.13 gives

$$C_{D3} = 1.2$$

$$C_{D4} = 1.1$$

where the smooth cylinder curve was selected for a galvanized surface. (It is difficult to read the figure with great accuracy.) By definition,

$$C_D = \frac{D_f}{\frac{1}{2}\rho U_\infty^2 A}$$

which is rearranged to solve for the drag force:

$$D_f = C_D \frac{1}{2} \rho U_\infty^2 A$$

The area A is the projected frontal area. A cylinder viewed from the direction of the approach flow appears as a rectangle whose area is length times diameter. For the pipes of this example,

$$A_3 = LD|_3 = 6(0.333) = 2.0 \text{ ft}^2$$

$$A_4 = LD|_4 = 6(0.375) = 2.25 \text{ ft}^2$$

a. Substituting, we find the drag force for each as

$$D_{f3} = \frac{1.2}{2} (0.00232)(117)^2 (2.0)$$

$$D_{f3} = 38.1 \text{ lbf}$$

and

$$D_{f4} = \frac{1.1}{2} (0.00232)(117)^2 (2.25)$$

$$D_{f4} = 39.3 \text{ lbf}$$

b. The moment exerted at the base will equal the sum of force times distance for both pipes. We take each force to act at the centroid of the projected frontal area. So the force exerted on the $3\frac{1}{2}$ -nominal pipe acts at a distance of 9 ft ($= 6 + 6/2$) from the base. The force

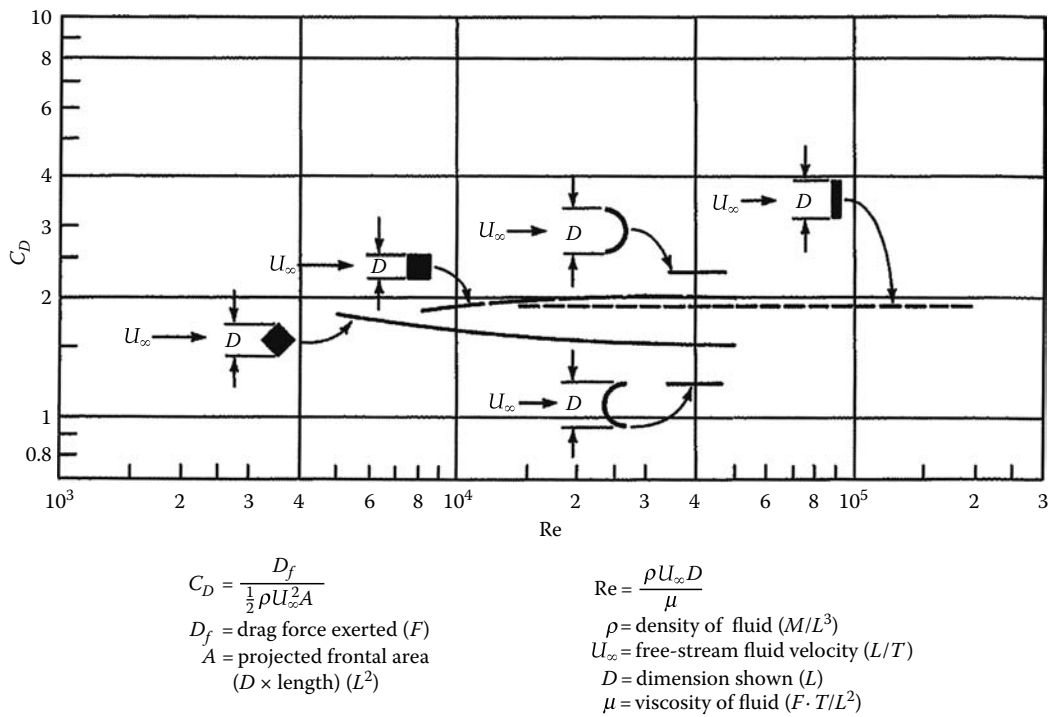


FIGURE 6.15 Drag coefficient of various two-dimensional bodies. (Data from several sources; see references at end of this text.)

exerted on the 4-nominal pipe acts at a distance of 3 ft (=6/2) from the base. The moment, then, is

$$\sum M_{\text{base}} = 38.1(9) + 39.3(3)$$

$$\sum M_{\text{base}} = 460 \text{ ft} \cdot \text{lbf}$$

Drag coefficient versus Reynolds number is available for other two-dimensional shapes; these data are provided in Figure 6.15.

Example 6.3

A 6-m-tall utility pole used for a streetlight is square in cross section. At its base, the pole is 15 × 15 cm, and at the top it is 7 × 7 cm. The cross section tapers linearly from base to top. The wind velocity past the pole is 30 m/s. Determine the drag force exerted on the pole for both square cylinder configurations illustrated in Figure 6.15. Take the air temperature to be 25°C.

SOLUTION

The pole is tapered, but we can estimate the force acting on the entire pole by using dimensions at its midpoint. We use Table A.3 to find

air at 26.85°C $\rho = 1.177 \text{ kg/m}^3$ $\mu = 18.46 \times 10^{-6} \text{ N} \cdot \text{s/m}^2$

At the midpoint of the pole, its dimension is 11 × 11 cm [= (15 + 7)/2]. We perform the calculations for two configurations that have these dimensions. The first is for $D_1 = 0.11 \text{ m}$. The second is for $D_2 = 0.11/\cos 45^\circ = 0.156 \text{ m}$. The Reynolds numbers are calculated as

$$\text{Re}_1 = \frac{\rho U_\infty D_1}{\mu} = \frac{1.177(30)(0.11)}{18.46 \times 10^{-6}} = 2.1 \times 10^5$$

$$\text{Re}_2 = \frac{1.177(30)(0.156)}{18.46 \times 10^{-6}} = 3.0 \times 10^5$$

From Figure 6.15, we read

$$C_{D1} = 2$$

$$C_{D2} = 1.5$$

By definition,

$$C_D = \frac{D_f}{\frac{1}{2} \rho U_\infty^2 A}$$

which is rearranged to solve for the drag force:

$$D_f = C_D \frac{1}{2} \rho U_\infty^2 A$$

For the first configuration, the area is

$$A_1 = 0.11(6) = 0.66 \text{ m}^2$$

Likewise,

$$A_2 = 0.156(6) = 0.93 \text{ m}^2$$

The drag forces are calculated as

$$D_{f1} = \frac{2}{2} (1.177)(30)^2 (0.66)$$

$$D_{f1} = 700 \text{ N}$$

and

$$D_{f2} = \frac{1.5}{2} (1.177)(30)^2 (0.93)$$

$$D_{f2} = 740 \text{ N}$$

6.3 DRAG ON VARIOUS THREE-DIMENSIONAL BODIES

This section presents data on drag coefficients for several three-dimensional bodies. A curve for a sphere is given in Figure 6.16. Note that the drag coefficient decreases from more than 200 to 0.4 over the Reynolds number range of 10^{-1} to 10^4 . The drag coefficient is nearly constant for Reynolds numbers from 10^3 to 2×10^5 , but there is a sudden drop in drag coefficient beyond 2×10^5 . An analytic solution has been derived by Stokes for flow about a sphere. The analysis shows that for $\text{Re} < 1$,

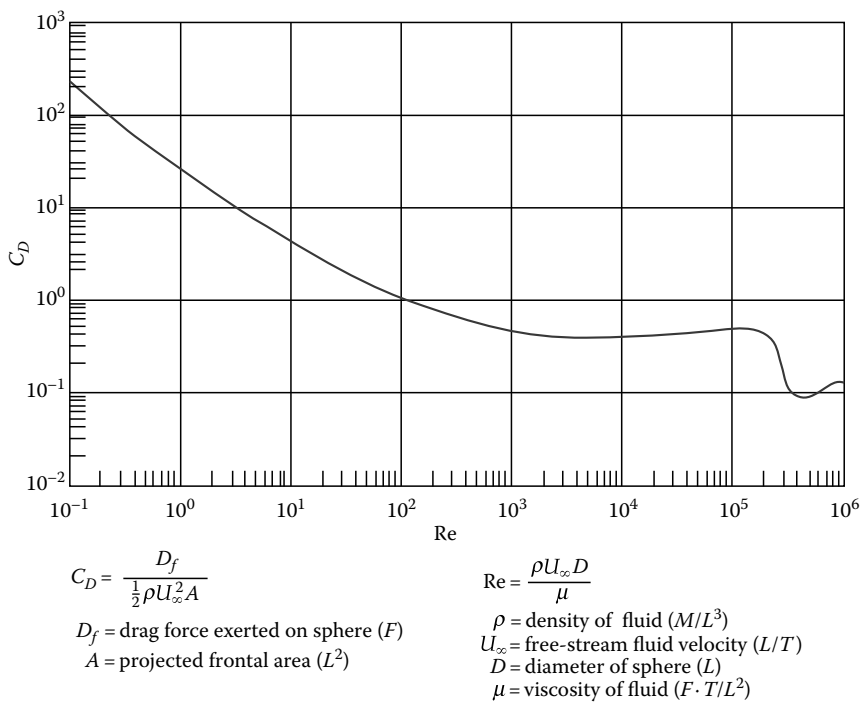


FIGURE 6.16 Drag coefficient as a function of Reynolds number for spheres. (Adapted from Schlichting, H., *Boundary Layer Theory*, 7th ed., McGraw-Hill, Inc., New York, 1979. With permission.)

$$C_D = \frac{24}{Re} \tag{6.10}$$

where $Re = \rho U_\infty D / \mu$.

A second graph of drag data on spheres is presented in Figure 6.17. The vertical axis of this graph, drag coefficient C_D , is identical to that of Figure 6.16. The horizontal axis, however, is of a different parameter: $Re\sqrt{C_D}$. The curve of Figure 6.17 extends from about 2 on the horizontal axis to about 4×10^5 and looks similar to that of Figure 6.16.

Figures 6.16 and 6.17 are useful when making calculations on finding what is known as **terminal velocity** for spheres. When a body travels steadily through a fluid (acceleration is zero) and the forces acting are in equilibrium, the body is said to be traveling at a constant terminal velocity. One familiar example of this phenomenon is a parachutist. There are other examples: a sphere, such as a ball bearing falling through liquid; pulverized coal particles suspended in an airstream that is traveling in a pipe to a boiler; and liquid fuel particles sprayed into the airstream of an engine carburetor. The terminal velocity of a particle can be determined from the data presented in this chapter. In the case of a sphere, finding its terminal velocity using Figure 6.16 involves a trial-and-error calculation method. Trial and error is avoided when using Figure 6.17. Both graphs are merely different forms of the same data.

Consider a sphere of known properties falling through a fluid at terminal velocity. The forces acting on the sphere are due to drag, buoyancy, and gravity, as shown in Figure 6.18. Applying Newton's law, we have

$$\sum F = ma = 0$$

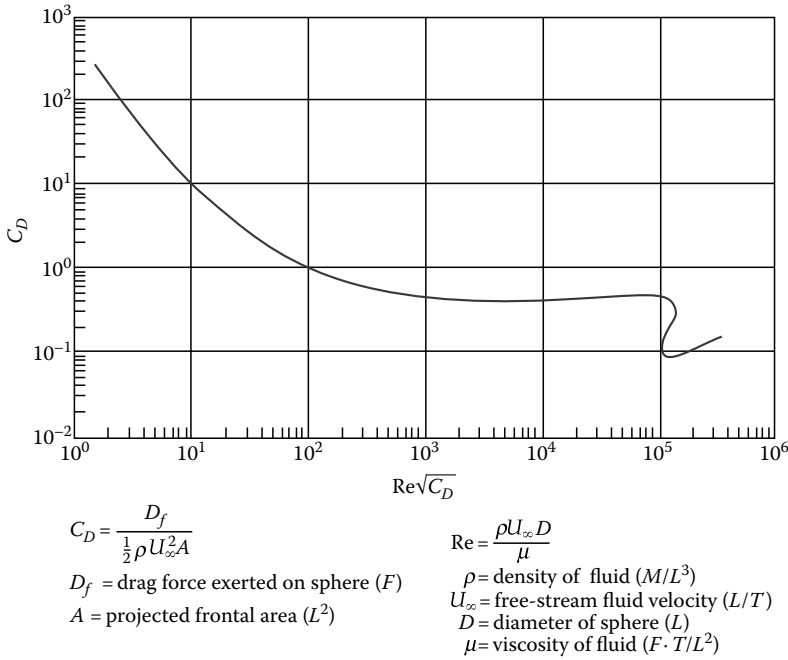


FIGURE 6.17 Drag coefficient as a function of $\text{Re}\sqrt{C_D}$ for spheres. (Note on how this figure was developed: An enlarged copy of Figure 6.16 was scanned into a computer. The drawing was scaled and digitized to yield tabular data of C_D versus Re . The data were then manipulated appropriately to obtain $\text{Re}\sqrt{C_D}$, which was graphed versus C_D .)

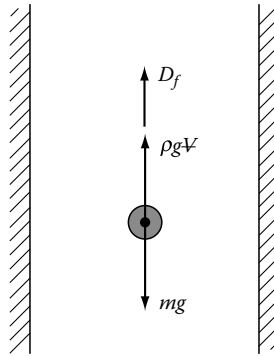


FIGURE 6.18 Forces acting on a sphere falling at terminal velocity in a fluid.

because the sphere is not accelerating. By substitution, we get

$$mg - \rho g V - \frac{1}{2} C_D \rho V^2 A = 0$$

Now the sphere volume is $V = \pi D^3/6$, and the projected frontal area is $A = \pi D^2/4$. If the sphere density ρ_s is known, the preceding equation can be rewritten as

$$\rho_s g \frac{\pi D^3}{6} - \rho g \frac{\pi D^3}{6} - \frac{1}{2} C_D \rho V^2 \frac{\pi D^2}{4} = 0 \quad (6.11a)$$

Solving for the terminal velocity, we obtain

$$V = \left[\frac{4}{3} \frac{gD}{C_D} \left(\frac{\rho_s}{\rho} - 1 \right) \right]^{1/2} \quad (6.11b)$$

The difficulty in using this equation is that the drag coefficient C_D depends on the terminal velocity, which is not known. The technique for finding velocity is illustrated in the following example.

Example 6.4

A 1-cm-diameter marble is falling through a tank of water at 25°C. Calculate the terminal velocity of the marble, assuming that it has the same properties as glass.

SOLUTION

From Table A.7, for glass, $s = 2.6$ (the average value). From Table A.5, for water, $\rho = 1\,000 \text{ kg/m}^3$ and $\mu = 0.89 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$. By substitution into Equation 6.11b, we get

$$\begin{aligned} V &= \left[\frac{4}{3} \frac{gD}{C_D} \left(\frac{\rho_s}{\rho} - 1 \right) \right]^{1/2} \\ &= \left\{ \frac{4}{3} \frac{(9.81)(0.01)}{C_D} \left[\frac{2.6(1\,000)}{1\,000} - 1 \right] \right\}^{1/2} \\ &= \frac{0.457\,5}{\sqrt{C_D}} \end{aligned} \quad (i)$$

Also

$$\text{Re} = \frac{\rho VD}{\mu} = \frac{1\,000(V)(0.01)}{0.89 \times 10^{-3}} = 1.12 \times 10^4 V$$

Assume $C_D = 1.0$; then $V = 0.458 \text{ m/s}$ and $\text{Re} = 5.12 \times 10^3$. From Figure 6.16 at $\text{Re} = 5.12 \times 10^3$, we find $C_D = 0.4$, which is our second trial value. Therefore, assume that $C_D = 0.4$; then $V = 0.723 \text{ m/s}$ and $\text{Re} = 8.10 \times 10^3$. From Figure 6.16 at $\text{Re} = 8.10 \times 10^3$, we find $C_D = 0.4$, which checks with the assumed value. Thus, the terminal velocity of the marble is

$$V = 0.723 \text{ m/s}$$

The trial-and-error process can be avoided by using Figure 6.17. We begin in the usual way and derive Equation i:

$$V\sqrt{C_D} = 0.457\,5 \quad (i)$$

Next, we multiply both sides by $\rho D/\mu$ to obtain

$$\frac{\rho VD}{\mu} \sqrt{C_D} = 0.457\,5 \frac{1\,000(0.01)}{0.89 \times 10^{-3}}$$

or

$$\text{Re}\sqrt{C_D} = 5.14 \times 10^3$$

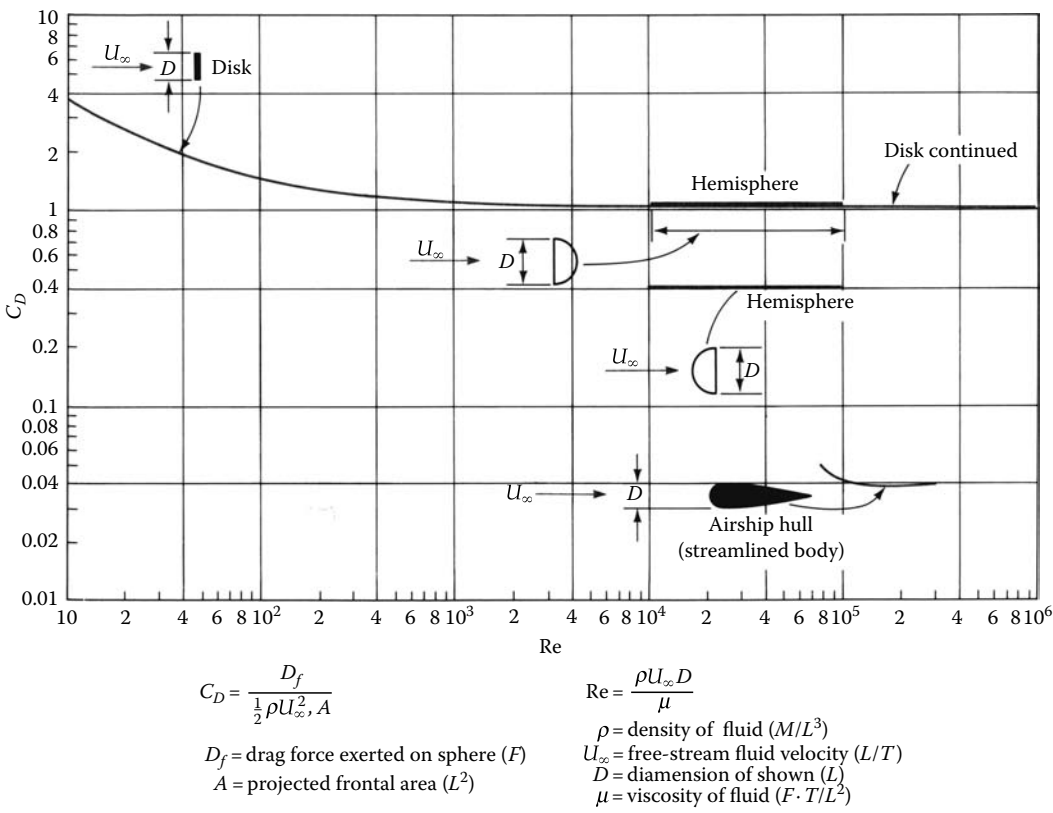


FIGURE 6.19 Drag coefficient versus Reynolds number for various three-dimensional bodies. (Data from various sources; see references at end of text.)

At this value. Figure 6.17 gives

$C_D = 0.4$

which leads to the same result obtained after several trials with Figure 6.16.

Curves of drag coefficient versus Reynolds number for various three-dimensional bodies are provided in Figure 6.19. Data for a disk, two hemispheres, and a streamlined body of revolution are shown.

6.4 APPLICATIONS TO GROUND VEHICLES

As was mentioned in Section 6.2, the total drag force exerted on an object immersed in a uniform flow is made up of two components: skin friction drag and form (or pressure) drag. In this section, we discuss how these two components affect ground vehicles. Specifically, we shall examine bicycle–rider combinations, automobiles, and tractor-trailer trucks.

First it is necessary to define the concept of *streamlining*. A ground vehicle requires power to move it over land. A portion of this power goes to overcoming the rolling resistance offered by friction between the tires (or wheels) and the road and by friction in bearings or other surfaces moving with respect to each other. Another portion of the power required goes to overcoming the drag encountered by the vehicle as it moves through air. With ground vehicles, it will in general not

be possible to significantly reduce the skin friction drag. We can, however, modify the shape of the vehicle so that the form or pressure drag is reduced. When the shape is modified and the pressure drag is reduced, the object is said to be **streamlined**.

Consider, for example, the streamlined body of revolution in Figure 6.19. The thickness of the rear half of the object gradually decreases with length. Because the flow no longer has an abrupt turn to make, separation occurs over only a small portion of the trailing edge. Thus, form drag has been minimized, and most of the drag exerted on the streamlined shape is skin friction drag. Note that a typical airship hull is shaped like the streamlined body of revolution of Figure 6.19.

6.4.1 BICYCLE–RIDER COMBINATIONS

The design of a conventional bicycle has remained almost unchanged for nearly a century. Aerodynamically, a bicycle–rider combination is not considered to be streamlined. A tremendous wake exists behind the bicycle and rider, which contributes to a substantial form or pressure drag. Designers have long recognized that air resistance is a significant factor, but constraints have been placed on design that have prevented streamlining of the vehicle. Until 1900, the crouched position commonly used with downturned handlebars was an accepted means of reducing air resistance. The multiple-rider bicycle was placed ahead of a single rider to reduce the wind resistance encountered by the single rider. After 1900, a streamlined enclosure for bicycle riders, resembling a dirigible, was patented. Human-powered vehicles set speed records with this enclosure and others like it. Also in an effort to reduce wind resistance, a recumbent bicycle, in which the rider pedaled while in a reclined position, was built and later streamlined.

The people who were interested in designing and riding streamlined bicycles were primarily bicycle racers. But the world governing body for cycle racing banned the use of aerodynamic devices and recumbents in racing, thus deterring research and development of streamlined bicycles. Recently, however, regular races for human-powered vehicles have been instituted in which there are no restrictions on the aerodynamic design of bicycle–rider combinations. As a result, streamlined bicycles have been pedaled to speeds in excess of 60 mi/h (27 m/s). (The record for an unaided bicycle–rider combination is 43.45 mi/h (19.42 m/s), set by a world-class racing cyclist.)

Figure 6.20 shows some of the early designs of aerodynamic devices for bicycles. Note that in all cases, there is a gradual reduction in the thickness of the trailing edge, the objective being to reduce the size of the wake behind the vehicle. Figure 6.21 shows a few of the more conventional designs.

As we have seen, a rider must overcome rolling resistance and air resistance to move the vehicle. Neglecting rolling resistance for the moment, we know that the drag force increases with the square of the velocity. Power is proportional to the product of drag force and velocity, or, in other words, power is proportional to the cube of the velocity. Riding at 20 mi/h (8.9 m/s), for example, requires eight times the power required to ride at 10 mi/h (4.5 m/s). Studies have shown that a well-trained athlete can produce 1 hp (750 W) for about 30 s and about 0.4 hp (300 W) for about 8 h. A healthy individual can sustain 1 hp (750 W) of output for about 12 s and roughly 0.1 hp (75 W) for 8 h.

Table 6.1 shows aerodynamic data for a number of bicycle–rider combinations. Drag coefficient and rolling resistance data are given for a speed of 20 mi/h (8.9 m/s). Several trends can be noticed from the data. First, in comparing the “arms straight” (no. 2) position to the “fully crouched” (no. 3) position, we see that the frontal area, the drag coefficient, and the drag force are all smaller when the rider is in the crouched position. Second, when the components—brake calipers, crankset, rims, and so on—are streamlined, there is only a small reduction in the drag force (compare no. 3 to no. 4) over the unstreamlined case. Third, the technique of riding in the wake of another rider—called drafting, no. 7—provides a decrease in the drag force (compare no. 3 to no. 7). Fourth,

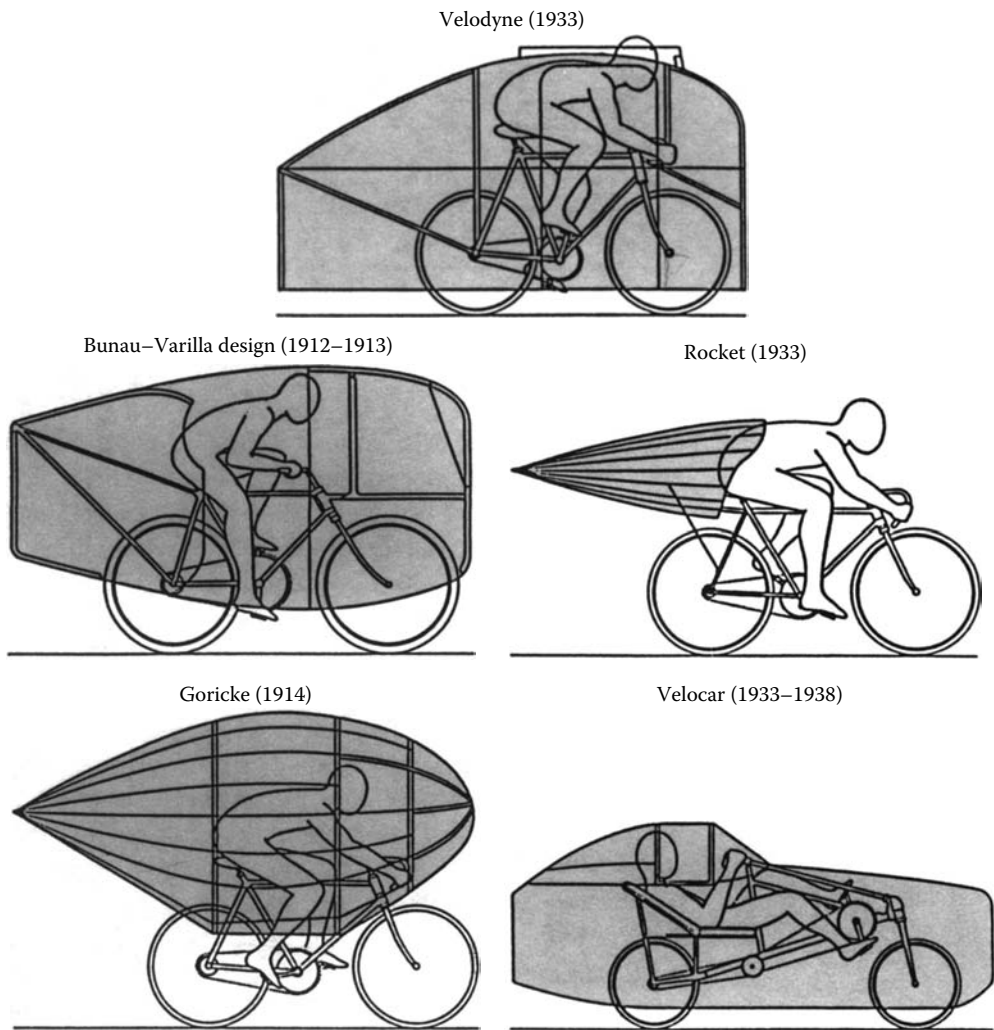


FIGURE 6.20 Early designs of aerodynamic devices for human-powered vehicles. Dates indicate the year of invention or the year when speed records were set. (Reprinted from Gross, A.C. et al., *Sci. Am.*, 249, 142, December 1983. With permission.)

aerodynamic devices (nos. 5, 8, and 9) yield substantial reductions in drag force over the unstreamlined rider (no. 1). Other trends can be seen as well.

Figure 6.22 gives data on drag coefficient versus Reynolds number for bicycle-rider combinations with and without streamlining. Streamlining in this case is achieved with a wing-shaped shell that fits over the rider. From a top view, the fairing appears to be like the streamlined body of revolution in Figure 6.19.

Once the drag force (or the total resisting force, which equals drag + rolling resistance) is known, the power required to maintain speed is given by

$$\frac{dW}{dt} = D_f U_\infty \tag{6.12}$$

Note that in Table 6.1, data are given for both drag force and for rolling resistance.

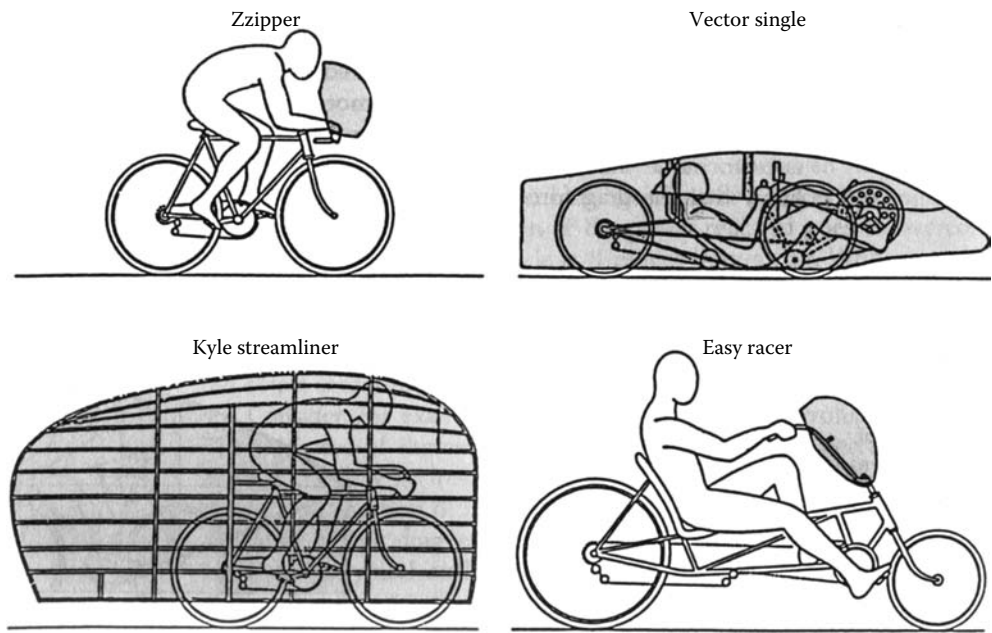


FIGURE 6.21 Conventional designs of aerodynamic devices for human-powered vehicles. (Reprinted from Gross, A.C. et al., *Sci. Am.*, 249, 142, December 1983. With permission.)

Example 6.5

A cyclist rides at 20 mi/h, and 20% of her output goes into overcoming rolling resistance. What power is required to maintain this speed if the “not-streamlined” curve of Figure 6.22 applies?

SOLUTION

Figure 6.22 was prepared by using data listed with the figure. We assume the rider of this example has similar body features. Our result must, therefore, be an estimate at best. The rider velocity is

$$U_\infty = \frac{20 \text{ mi}}{1 \text{ h}} \cdot \frac{5280}{3600} = 29.3 \text{ ft/s}$$

The Reynolds number for use with Figure 6.22 is

$$\text{Re} = \frac{U_\infty D}{\nu} = \frac{29.3(5.42)}{1.69 \times 10^{-4}} = 9.4 \times 10^5$$

The drag coefficient is read as

$$C_D = \frac{D_f}{\frac{1}{2} \rho U_\infty^2 A} \approx 0.85$$

The drag force becomes

$$D_f = \frac{0.85}{2} (0.0022)(29.3)^2 (5.87) = 4.71 \text{ lbf}$$

TABLE 6.1
Aerodynamic and Rolling Resistance Data for Several Bicycle–Rider Configurations Traveling at a Speed of 20 mi/h (8.9 m/s)

Configuration			Drag Force, D_f		Rolling Resistance		Drag Coefficient, $C_D = \frac{D_f}{\frac{1}{2}\rho U_\infty^2 A}$	Frontal Area, A	
			lbf	N	lbf	N		ft ²	m ²
European upright commuter	40-lb bike, 160-lb rider, tires: 27 in. diameter, 40 psi		6.14	27.3	1.20	5.34	1.1	5.5	0.51
Touring (arms straight)	25-lb bike, 160-lb rider, tires: 27 in. diameter, 90 psi		4.40	19.6	0.33	3.69	1.0	4.3	0.40
Racing (fully crouched)	20-lb bike, 160-lb rider, tires: 27 in. diameter, 105 psi		3.48	15.5	0.54	2.4	0.88	3.9	0.36
Aerodynamic components (fully crouched)	20-lb bike, 160-lb rider, tires: 27 in. diameter, 105 psi		3.17	14.5	0.54	2.4	0.83	3.9	0.36
Partial fairing (Zzipper, crouched)	21-lb bike, 160-lb rider, tires: 27 in. diameter, 105 psi		2.97	13.2	0.54	2.4	0.70	4.1	0.38
Recumbent (Easy Racer)	27-lb bike, 160-lb rider, tires: 20 in. front, 27 in. rear, 90 psi		2.97	13.2	0.94	4.2	0.77	3.8	0.35
Drafting (closely following another bicycle)	20-lb bike, 160-lb rider, tires: 27 in. diameter, 105 psi		1.94	8.63	0.54	2.4	0.50	3.9	0.36
Blue Bell (two wheels, one rider)	40-lb bike, 160-lb rider, tires: 20 in. front, 27 in. rear, 105 psi		0.61	2.7	0.8	4	0.12	5.0	0.46
Vector Single (three wheels)	68-lb bike, 160-lb rider, tires: 24 in. front, 27 in. rear		0.51	2.3	1.02	4.54	0.11	4.56	0.424

Source: Modified from Gross, A.C., Kyle, C.R., and Malewicki, D.J., *Sci. Am.*, 249(6), 142, December 1983.

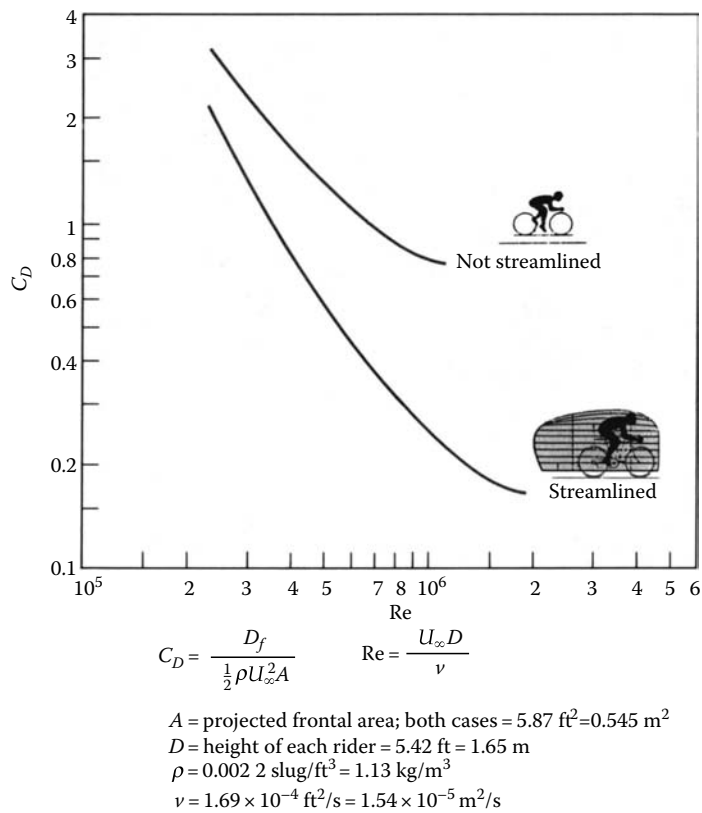


FIGURE 6.22 Drag coefficient versus Reynolds number for streamlined and unstreamlined bicycle–rider combinations. (Data from ASME, 2(1), 1.)

The total force the rider must overcome includes the 4.71 lbf drag force plus 20% of the total for rolling resistance. Thus,

$$F_{\text{total}} = 4.71 + 0.2F_{\text{total}}$$

or

$$0.80F_{\text{total}} = 4.71$$

Solving,

$$F_{\text{total}} = 5.90 \text{ lbf}$$

The power required is force times velocity:

$$\frac{dW}{dt} = 5.90(29.3) = 173 \text{ ft} \cdot \text{lbf/s}$$

With 1 hp = 550 ft · lbf/s, we calculate

$$\frac{dW}{dt} = \frac{173}{550}$$

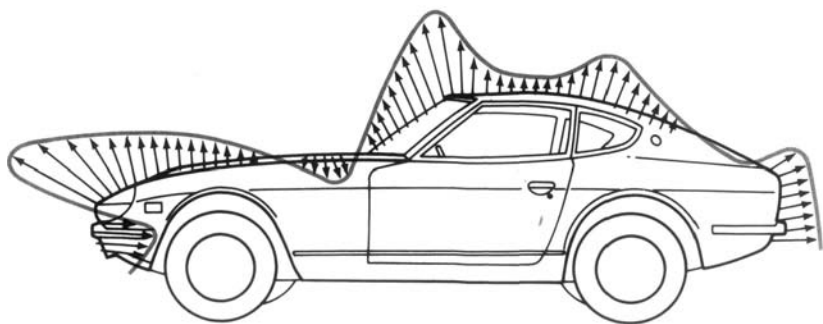


FIGURE 6.23 Pressure profile on an automobile.

or

$$\frac{dW}{dt} = 0.31 \text{ hp}$$

6.4.2 AUTOMOBILES

For ground vehicles, the power required to propel an object through a fluid depends on the drag force, as we have seen. In the case of an automobile traveling at constant velocity, the power required to maintain speed is the sum of the power required to overcome rolling resistance between the tires and the road plus the power required to overcome aerodynamic drag. At low speeds, the predominant resistance to motion is rolling resistance. At high speeds, aerodynamic drag predominates as the resisting force.

Figure 6.23 shows a pressure profile sketched on a side view of an automobile. As with the cylinder of Figure 6.8, data are represented as arrows, and the length of each line is proportional to the magnitude of the pressure at each location. An arrow pointing away from the vehicle signifies a pressure that is less than the free-stream pressure, and the converse is also true (somewhat different than in Figure 6.8). The pressure profile shows that there is a difference in pressure from the front of the vehicle to the rear. The horizontal component of each pressure, multiplied by the area over which it acts, gives the drag force. The area of importance is the projected frontal area for the vehicle.

Table 6.2 gives data useful for estimating automobile drag coefficients. The drag coefficient for a particular body style is calculated with

$$C_D = 0.16 + 0.0095 \sum_i C_{Di} \tag{6.13}$$


where values of C_{Di} are obtained and summed from each of eight categories listed. It can be seen from the sketches that squared ends, where the flow must make abrupt turns, contribute greatly to the overall drag of the vehicle.

6.4.3 TRACTOR-TRAILER TRUCKS*

Tractor-trailer trucks are used primarily for transporting goods from one location to another. The actual transportation process itself adds no tangible value to the product being shipped, although

* This discussion is based on a report, courtesy of Professor Colin H. Marks, entitled "A study of aerodynamic methods for improving truck fuel economy," prepared by F. T. Buckley Jr., C. H. Marks, and W. H. Watson Jr. of the University of Maryland, for the National Science Foundation.

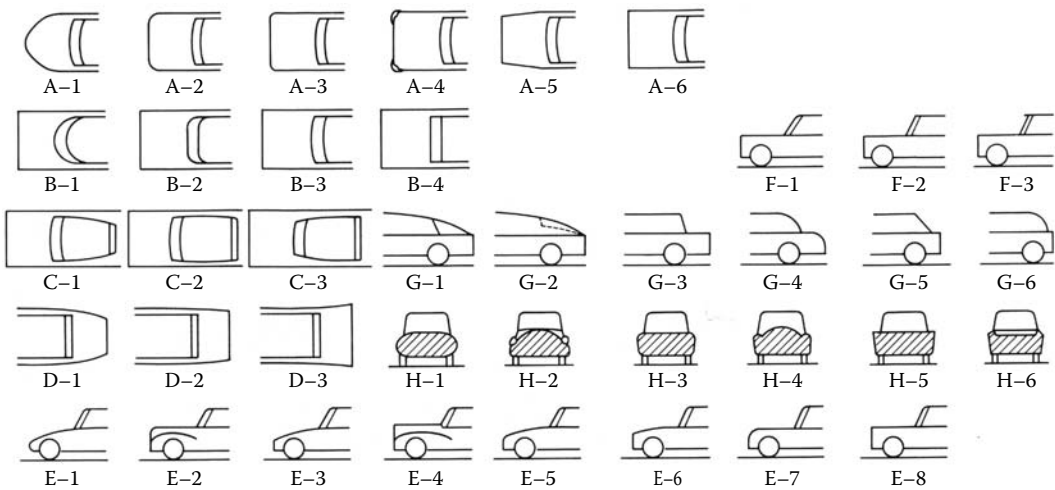TABLE 6.2
Estimates of Automobile Drag Coefficient



A. Plan view, front end

- A-1 Approximately semi circular (1)
- A-2 Well-rounded outer quarters (2)
- A-3 Rounded corners without protuberances (3)
- A-4 Rounded corners with protuberances (4)

- A-5 Squared tapering-in corners (5)
- A-6 Squared constant-width front (6)

B. Plan view, windshield

- B-1 Full wraparound (approximately semicircular) (1)
- B-2 Wraparound ends (2)
- B-3 Bowed (3)
- B-4 Flat (4)

C. Plan view, roof

- C-1 Well- or medium-tapered to rear (1)
- C-2 Tapering to front and rear (maximum width at BC post) or approximately constant width (2)
- C-3 Tapering to front (max. width at rear) (3)

D. Plan view, lower rear end

- D-1 Well- or medium-tapered to rear (1)
- D-2 Small taper to rear or constant width (2)
- D-3 Outward taper (or flared-out fins) (3)

E. Side elevation, front end

- E-1 Low, rounded front, sloping up (1)
- E-2 High, tapered, rounded hood (1)
- E-3 Low, squared front, sloping up (2)
- E-4 High, tapered, squared hood (2)

- E-5 Medium-height, rounded front, sloping up (3)
- E-6 Medium-height, squared front, sloping up (4)
- E-7 High, rounded front, with horizontal hood (4)
- E-8 High, squared front, with horizontal hood (5)

F. Side elevation, windshield peak

- F-1 Rounded (1)
- F-2 Squared (including flanges or gutters) (2)
- F-3 Forward-projecting peak (3)

G. Side elevation, rear roof/trunk

- G-1 Fastback (roofline continuous to tail) (1)
- G-2 Semi fastback (with discontinuity in line to tail) (2)
- G-3 Squared roof with trunk rear edge squared (3)
- G-4 Rounded roof with rounded trunk (4)

- G-5 Squared roof with short or no trunk (4)

- G-6 Rounded roof with short or no trunk (5)

H. Front elevation, cowl and fender cross section at wind-shield

- H-1 Flush hood and fenders, well-rounded body sides (1)
- H-2 High cowl, low fenders (2)
- H-3 Hood flush with rounded-top fenders (3)
- H-4 High cowl with rounded-top fenders (3)
- H-5 Hood flush with square-edged fenders (4)
- H-6 Depressed hood with high squared-edged fenders (5)

Source: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Note: Drag rating values in parentheses are for use in Equation 6.13.

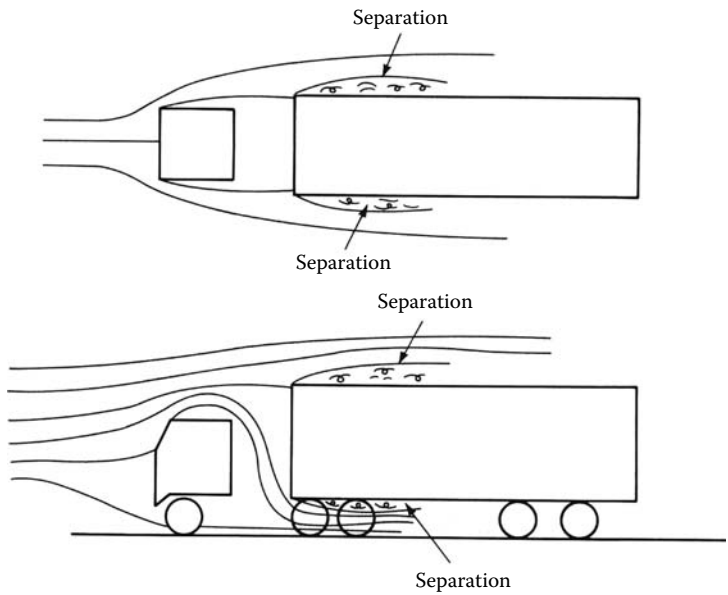


FIGURE 6.24 Plan and profile views of streamlines about a cab-over-engine tractor-trailer combination.

the purchaser must necessarily pay for the service. It is, therefore, important to reduce this cost in any feasible manner. One way of cutting transportation costs is to reduce the fuel consumption of the shipping vehicle, which in turn can be done by reducing the power needed to overcome drag forces. Thus, streamlining can become a significant cost-effective technique for reducing the price we have to pay for desired goods.

The vehicle that we consider in this discussion is a cab-over-engine tractor-trailer combination. Figure 6.24 shows plan and profile views of the vehicle as well as streamlines of airflow about the vehicle. Neglecting the wake behind the vehicle, we shall focus on the interaction between the cab and the trailer. As shown in the figure, there are a number of locations where the flow has separated from the vehicle surface. Figure 6.24 shows the vehicle moving through still air. Figure 6.25 shows the flow pattern that results if there is a cross wind. Note the substantial separation region on the downstream side of the truck. In both figures, it appears that the flow patterns contain regions that contribute greatly to the drag exerted on the vehicle.

Figure 6.26 shows a definition sketch of the velocities and angles associated with the analysis. The velocity vector labeled V_T is the forward velocity of the vehicle. The vector labeled V_W is the wind velocity, which makes an angle ϕ with the axis of the truck. The angle ψ is defined as the yaw angle, which is found from the following equation:

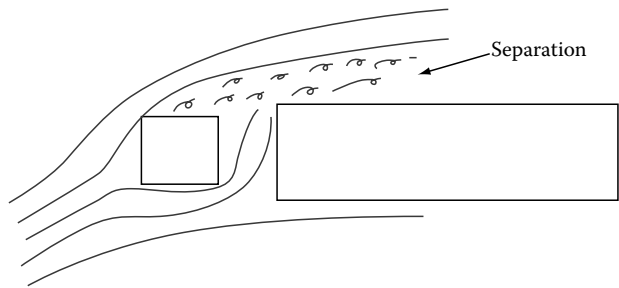


FIGURE 6.25 Plan view of the flow pattern on a yawed truck.

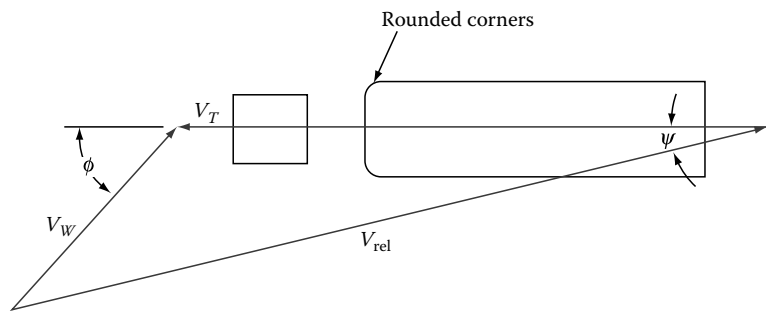


FIGURE 6.26 Wind velocity diagram for analysis of flow about a truck.

$$\sin \psi = \frac{V_W \sin \phi}{\sqrt{(V_W \cos \phi + V_T)^2 + (V_W \sin \phi)^2}}$$

Experiments with a number of designs of aerodynamic devices have yielded useful results that lead to substantial savings in fuel costs. One small but important design change involves rounding the front corners on the trailer of the vehicle (see Figure 6.26). This change tends to reduce the separation region along the front sides of the trailer (see top portion of Figure 6.24). A second drag reduction method involves the addition of what is known as a **fairing**. Figure 6.27 shows a fairing placed on the roof of the cab. The fairing illustrated is as long and wide as the cab roof, and it extends to the height of the trailer. It contains no abrupt changes in curvature that might produce separation. Of the fairing designs currently in use or available, the one illustrated here gives the greatest reduction in drag for the cab-over-engine vehicle. A third drag reduction technique involves the use of a gap seal, as illustrated in Figure 6.27. A **gap seal** is a flat vertical

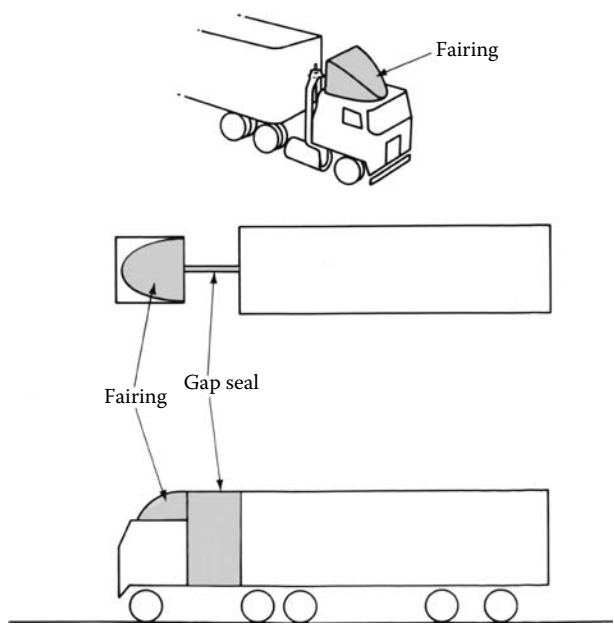


FIGURE 6.27 A fairing and gap seal attached to a tractor-trailer truck.

piece of material that extends from the bottom of the trailer and cab to the top of the trailer and fairing. The gap seal is most effective when there is a crosswind. Recent designs of tractor trailers do not use gap seals, however. Instead the sides of the cab are extended back and the effect is to reduce the amount of crosswind that passes through.

In the study upon which this discussion is based, a $\frac{1}{8}$ -scale model of a truck was constructed and tested in a wind tunnel. Data were recorded at Reynolds numbers of 10^6 (using the trailer width as the characteristic length) to simulate full-scale vehicles traveling at highway speeds. Underbody details, air horns, and cab roof lights were not included in the model because they have a negligible effect on the drag coefficient. The exhaust stack (see top portion of Figure 6.27) was found to have the greatest effect at a yaw angle of 0° , but its effect is not considered here.

To correlate all the data obtained (including effects of various yaw angles and crosswind velocities), a wind-averaged drag coefficient was used. This parameter is defined as

$$\bar{C}_D = \frac{1}{\pi} \int_0^\pi C_D(\psi) \left[1 + \left(\frac{V_W}{V_T} \right)^2 + 2 \left(\frac{V_W}{V_T} \right)^2 \cos \phi \right] d\phi$$

(6.14)

- where:
- $\bar{C}_D$ = wind-averaged drag coefficient

ψ = yaw angle (Figure 6.26)

ϕ = angle between the wind velocity vector and the truck axis (Figure 6.26)

$\bar{C}_D(\psi)$ = drag coefficient at the yaw angle ψ

V_T = absolute velocity of the truck (assumed to be 55 mi/h = 80.7 ft/s = 24.6 m/s)

V_W = wind velocity (assumed to be the national average of 9.5 mi/h = 13.9 ft/s = 4.25 m/s)

The need for a parameter such as the wind-averaged drag coefficient arises from the number of uncontrollable variables involved, such as wind speed and direction, amount of city driving at speeds less than 55 mi/h (24.6 m/s), and so on. The problem, then, became one of finding the effect that drag-reducing devices have on the wind-averaged velocity to determine the percent reduction in $\bar{C}_D$ when aerodynamic devices are added to the vehicle. For comparison, the results of measurements taken are provided in Table 6.3.

TABLE 6.3

Wind-Averaged Drag Coefficient $\bar{C}_D$ for a Number of Tractor-Trailer Configurations

Model Description	Basic Configuration	With Fairing (Figure 6.27)	With Fairing and Gap Seal (Figure 6.27)
Square-edged trailer	0.96	0.76	0.70
Round-edged trailer	0.89	0.73	0.68

Conditions:

$Re = \frac{V_T D}{\nu} = 10^6$ where D = trailer width = 8 ft = 2.44 m (full scale)

$\bar{C}_D = \frac{D_f}{\frac{1}{2} \rho V_T^2 A}$ where A = trailer width above ground $\times$ width

= 108 ft² = 10.0 m² (full scale)

Example 6.6

A truck having a square-edged trailer like that shown in Figure 6.24 travels about 100,000 mi/year (highway driving) and averages 5 mi/gal of fuel. The owner purchases a fairing and attaches it to the cab. By how much are the fuel costs reduced in 1 year if the owner pays \$5.00/gal of fuel?

SOLUTION

Without any fairing, the owner’s fuel cost is

$$\begin{aligned}\text{Fuel cost} &= (100,000 \text{ mi/year})(1 \text{ gal}/5 \text{ mi})(\$5.00/\text{gal}) \\ &= \$100,000/\text{year}\end{aligned}$$

By attaching a fairing, the drag coefficient is reduced by 21% (calculated as $(0.96 - 0.76)/0.96$ with values from Table 6.3). The mileage increase of the vehicle is $5 \times 0.21 = 1.05 \text{ mi/gal}$. In other words, with the fairing, the owner can expect to get 6.05 mi/gal. The fuel cost becomes

$$\begin{aligned}\text{Fuel cost with fairing} &= (100,000 \text{ mi/year})(1 \text{ gal}/6.05 \text{ mi}) \times (\$5.00/\text{gal}) \\ &= \$82,645/\text{year}\end{aligned}$$

The savings in fuel costs become $\$100,000 - \$82,645$ or

Savings = \$17,355/year

6.5 LIFT ON AIRFOILS

In the preceding sections, we discussed the effect of drag on various bodies. In this section, we examine both lift and drag forces on airfoils. As illustrated in Figure 6.28, the geometric dimensions of importance are the wingspan b , the length or chord of the wing c , and the maximum thickness D . A common definition associated with airfoil geometry is **aspect ratio**: $AR = b/c$. The dynamic features of importance include the free-stream velocity, the lift and drag forces, and the angle of attack α of the wing. These features are also shown in Figure 6.28.

From observations of flow patterns about airfoils at various angles of attack, streamlines can be sketched as in Figure 6.29. It is known that as the angle of attack α is increased, fluid moving over the top surface must accelerate to keep up with the slower-moving fluid on the bottom surface. Moreover, the faster-moving fluid with the higher kinetic energy must have a correspondingly lower pressure. The difference between the pressure acting on the lower surface and that acting on the upper surface results in a net lifting force on the foil. The lift force, like the drag force, is usually expressed in terms of a lift coefficient:

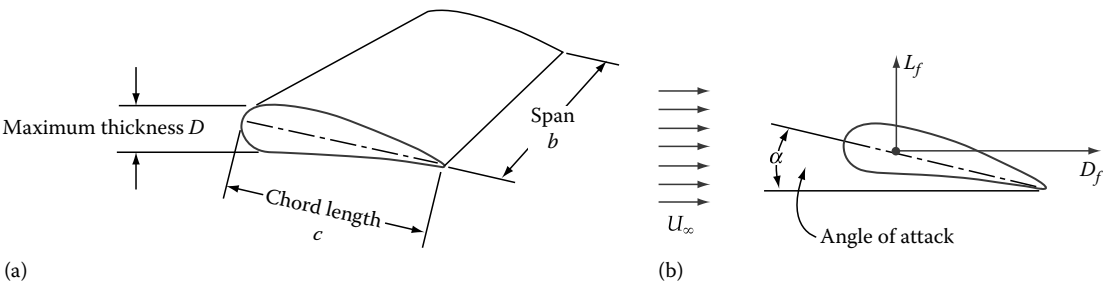


FIGURE 6.28 Geometric and dynamic parameters of airfoils.

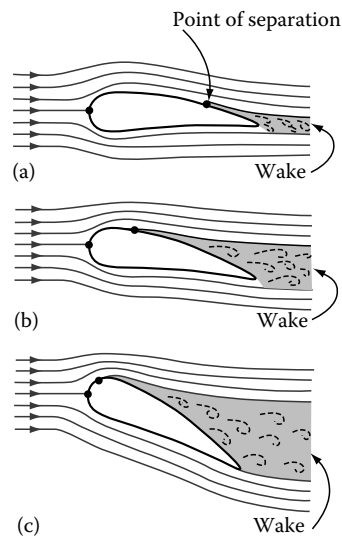


FIGURE 6.29 Streamlines of flow about an airfoil at various angles of attack.

$$C_L = \frac{L_f}{\frac{1}{2}\rho U_\infty^2 A} \tag{6.15}$$

where A is the planform area (the area seen in the plan view) perpendicular to the chord (a constant for the wing).

As the angle of attack is increased, the point of separation on the upper surface moves toward the leading edge of the foil, as in Figure 6.29. The pressure in the wake is nearly equal to that at the separation point. When the separation point is almost to the leading edge, the entire upper surface is in the wake; the flow has separated from the entire upper surface. For this condition, the pressure on the upper surface is approximately the same as that upstream with the net effect that a decrease in lift is noticed at this angle of attack. This condition is called **stall**; its location is shown in Figure 6.30, a typical plot of C_L versus α . Figure 6.31 gives a measured pressure distribution acting on an airfoil immersed in a uniform flow.

Abundant data on lift and drag of various airfoils have been obtained by wind tunnel testing. The results of such tests are typically presented as plots of lift and drag coefficients versus angle of

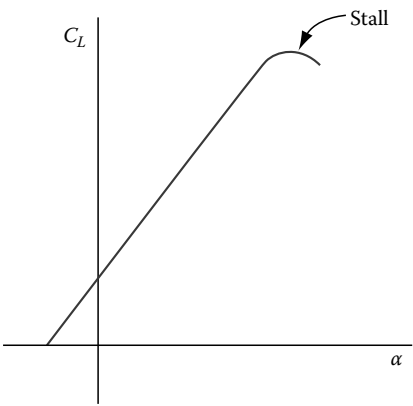


FIGURE 6.30 A typical plot of lift coefficient versus angle of attack for an airfoil.

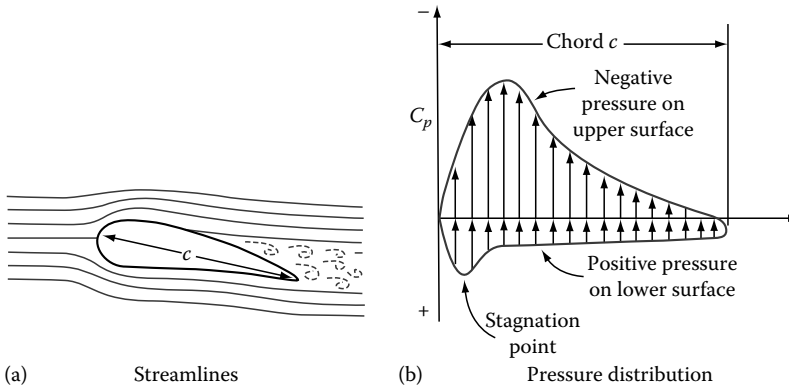


FIGURE 6.31 Pressure coefficient versus chord length for an airfoil.

attack. Efficiency of an airfoil, however, is more appropriately defined as a function of the ratio of lift to drag or C_L/C_D . To consolidate the results of a series of tests on one airfoil at a given free-stream velocity, a polar diagram is helpful. A **polar diagram** is a plot of C_L versus C_D with various angles of attack represented by different points on the curves. The ratio C_L/C_D at any point is the slope of the line from the origin to that point; the maximum value of the ratio is the line that passes through the origin tangent to the curve. The stall point is easily discernible. A polar diagram for the Clark Y airfoil is given in Figure 6.32. The data were obtained with a rectangular airfoil (36-ft span by 6-ft chord). An important reference is that which corresponds to zero lift—in this case, -5.6° . In general, this point corresponds to minimum drag.

Example 6.7

The cruising speed of an airplane with a Clark Y airfoil cross section is 145 mi/h. The plane flies at an altitude of 20,000 ft ($p_\infty = 6.8$ psi, $T_\infty = 450^\circ\text{R}$). Using the data of Figure 6.32, determine the lift and drag forces for an angle of attack of 8.0° . Calculate the horsepower required to overcome drag.

SOLUTION

The forces are found from

$$L_f = \frac{1}{2} C_L \rho V^2 A$$

$$D_f = \frac{1}{2} C_D \rho V^2 A$$

From Figure 6.32, at $\alpha = 8^\circ$, we find that $C_L = 1.0$ and $C_D = 0.065$. From the ideal gas law,

$$\rho = \frac{p}{RT} = \frac{6.8(144)}{1710(450)} = 0.0013 \text{ slug/ft}^3$$

The area is the planform area $6 \times 36 \text{ ft} = 216 \text{ ft}^2$. By substitution, we get

$$L_f = \frac{1}{2} (1.0) (0.0013) \left[\frac{145(5280)}{3600} \right]^2 (216)$$

$$L_f = 6300 \text{ lbf}$$

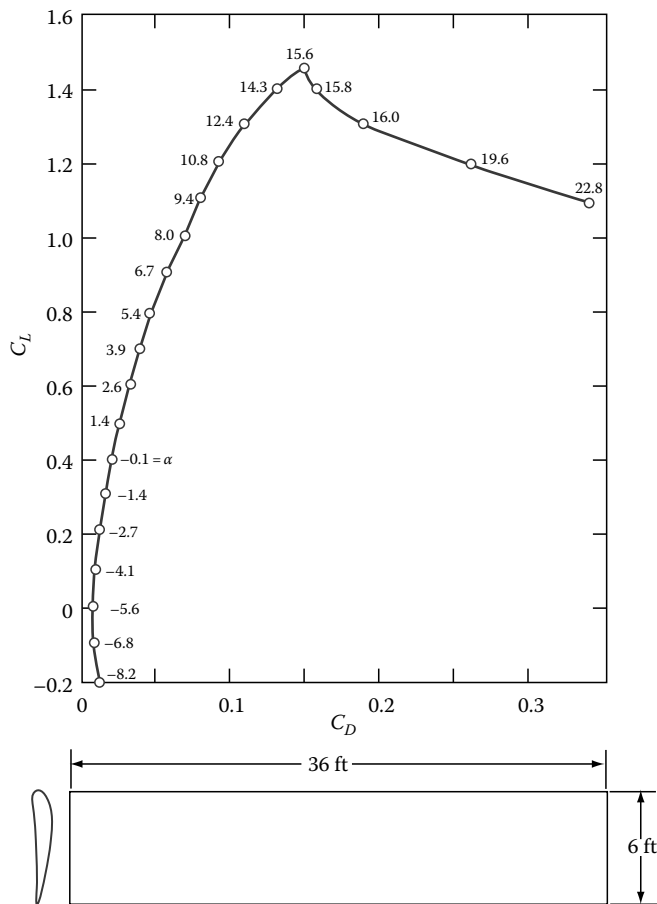


FIGURE 6.32 A polar diagram for the Clark Y airfoil. (Data from Silverstein, A., NACA Report 502, 1934, p. 15.)

Similarly,

$$D_f = \frac{1}{2}(0.065)(0.0013) \left[\frac{145(5280)}{3600} \right]^2 (216)$$

$D_f = 410 \text{ lbf}$

The power required to overcome drag is

$$\frac{dW}{dt} = D_f V = \frac{410(145)(5280)}{3600} = 87,000 \text{ ft} \cdot \text{lbf/s}$$

By definition, 1 hp = 550 ft · lbf/s, so

$\frac{dW}{dt} = \frac{87,000}{550} = 158 \text{ hp}$

So far in our consideration of flow past wings, we have discussed lift and drag forces exerted on a wing in a two-dimensional analysis. There is a three-dimensional effect known as a **wing vortex**,

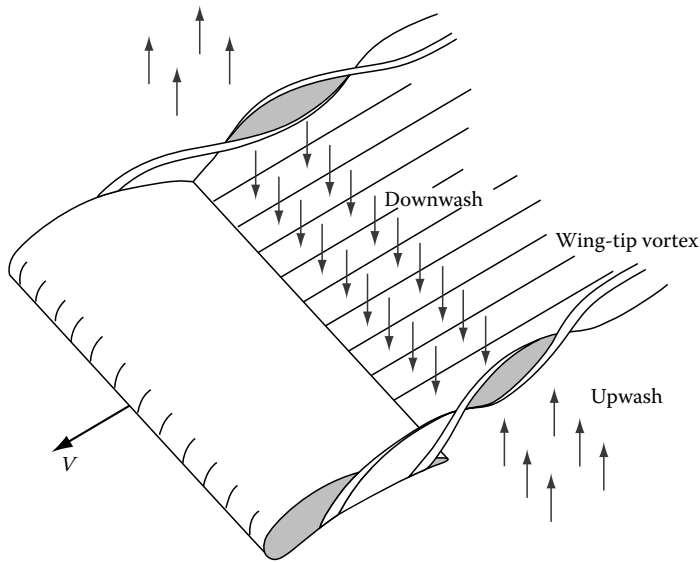


FIGURE 6.33 Three-dimensional flow effects about a wing showing helical motion of the wing-tip vortices, induced downwash in the wake of the wing, and induced upwash outboard of the wing.

which is illustrated in Figure 6.33. The air in the wake of a wing is set in motion, and at the wing tip this motion is recognized as a *vortex*. We normally refer to this phenomenon as a vortex being *shed* from the wing. The rotational movement of the air is said to occur about an imaginary line called a **vortex filament**. At the trailing edge of the wing, we have what is referred to as a **vortex sheet**, which “rolls up” into a pair of discrete vortices. The distance between the rolled-up vortices is less than the wing span. In a fluid that has zero viscosity, the vortices continue to infinity. In a real fluid, however, the vortices become unstable and break up due to viscous effects.

The vorticity shed from a wing is usually greatest near the wing tip. Air pressure below the wing is greater than that above it. The pressure difference causes air to flow around the tip from bottom to top, as indicated in Figure 6.33. There is a decrease in pressure near the center of the vortex, which leads to a corresponding decrease in temperature. If the humidity is high, the temperature drop causes vapor to condense, which makes the helical flow of a trailing vortex clearly visible. At takeoff and landing of an aircraft, detactable wing flaps are used as an aid to increase the lift, and similar vortices are shed at the tips of these flaps.

The trailing vortices of a moving wing cause what is known as a **downwash** in the wake of the wing (Figure 6.33). The downwash affects a large region or volume of air that extends well above and below the aircraft. One effect is that when the plane flies close to the ground, some of the downwash is suppressed, leading to an increase in lift. This increase is manifested in a tendency of the plane to “float” during the time that it is landing and when its height is less than one-third to one-half of the wing span.

An interesting phenomenon occurs when an airplane flies into the trailing vortex shed by another airplane. The vortex causes a lift increase on one end of the wing of the trailing craft and a lift decrease on the other end. This results in a rolling moment exerted on the aircraft, which is a dangerous condition, especially if the trailing airplane is a much smaller craft. Thus the Federal Aviation Administration specifies air-traffic rules, which, among other things, require that a minimum separation distance be maintained between flying aircraft. Although the vortices eventually break up, they exist for a long enough time to cause a limitation on the capacity of airport runways.

An airplane in the downwash of another will experience what is called **induced drag**. The trailing airplane is essentially pushed down, and the flow of air past the wing is affected. Figure 6.34

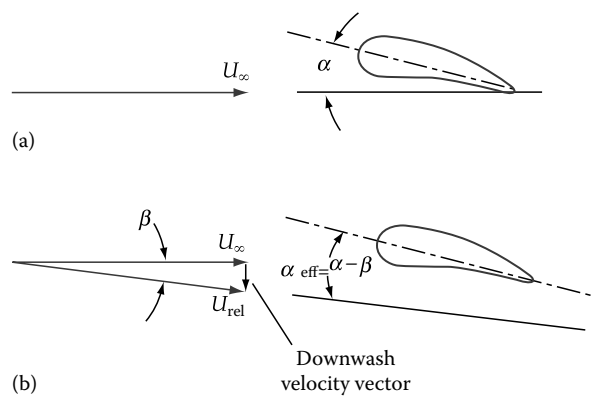


FIGURE 6.34 Flow past a wing showing how angle of attack is affected by downwash.

shows how this phenomenon is modeled. Figure 6.34a shows flow past a wing and the angle of attack α . Figure 6.34b shows a velocity diagram with the air velocity U_∞ , the downwash velocity vector, and the relative air velocity U_{rel} . The angle between the air velocity U_∞ and the relative air velocity U_{rel} is denoted as β . The angle between the chord c of the wing and the relative air velocity U_{rel} is the effective angle of attack $\alpha_{eff} (= \alpha - \beta)$. For a real wing traveling into a downwash, the lift and the drag are both affected. The change in drag is called induced drag. With regard to operation of the aircraft, the engines must exert additional power so that additional lift will overcome the downwash forces. Alternatively, the aircraft must change its orientation so that the angle of attack is increased, again so that additional lift will overcome downwash forces.

There are other practical applications of this three-dimensional effect. One occurs in the case of a fighter aircraft that is approaching a tanker aircraft from the rear. The fighter flies into the downwash of the tanker and, to avoid a dangerous situation, the engine thrust of the fighter must be markedly increased.

Another practical example deals with the **upwash** beyond the tip of the wing, or outboard of a lifting wing, as shown in Figure 6.33. Downwash causes downward forces to be exerted on a trailing craft, whereas upwash causes upward forces to be exerted. With regard to the power ($= \text{drag force} \times \text{velocity}$) required, downwash forces cause an increase in drag to be exerted on a trailing craft; an increase in power is thus required to restore the aircraft to its prior condition. Upwash forces cause an increase in lift, and a corresponding decrease in drag and power will be realized. Birds flying in a V-formation make use of upwash forces. Figure 6.35 shows a frontal view of a flying bird with wings extended. As indicated, there is a downwash in the wake of the wing with arrows pointing downward. Outboard of the wing tip, there is an upwash. Also shown are streamlines of flow about the wing. When in a V-formation, each bird (except the lead bird) flies in the upwash of its neighbors, with less lifting power needed.*

Figure 6.36 shows a graph of drag ratio versus spacing for a V-formation of birds. The vertical axis is a ratio of the ideal drag of an entire formation to the sum of the individual drags of the birds flying solo. The horizontal axis is a ratio of the wing span, b , to the wing span plus spacing, $b + s$, as defined in the diagram. The graph shows that a minimum drag ratio occurs when the spacing s equals 0 ($R = 1$). In addition, there is little difference between the performance of 25 birds and an infinite number of birds.

* These results were obtained from an analysis that was performed to model the flight formation of birds: P. B. S. Lissaman and C. A. Shollenberger, Formation flight of birds, *Science*, 168(3934): 1003–1005, May 1970.

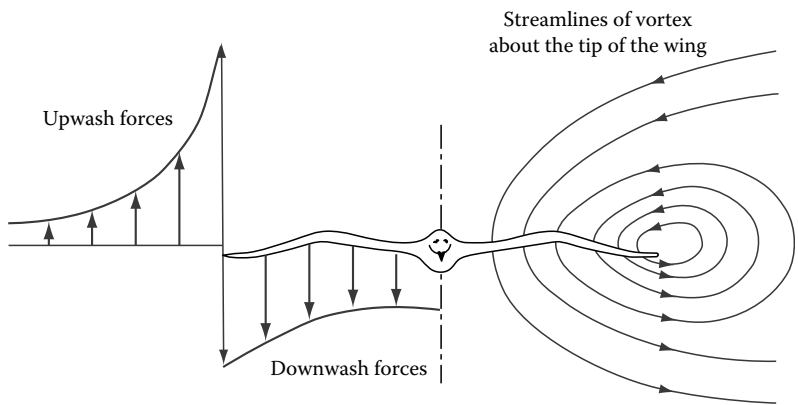


FIGURE 6.35 Flow field about a lifting wing of a bird as viewed in the downstream direction. (From Lissaman, P.B.S. and Shollenberger, C.A., *Science*, 168(3934), 1003, May 1970. With permission.)

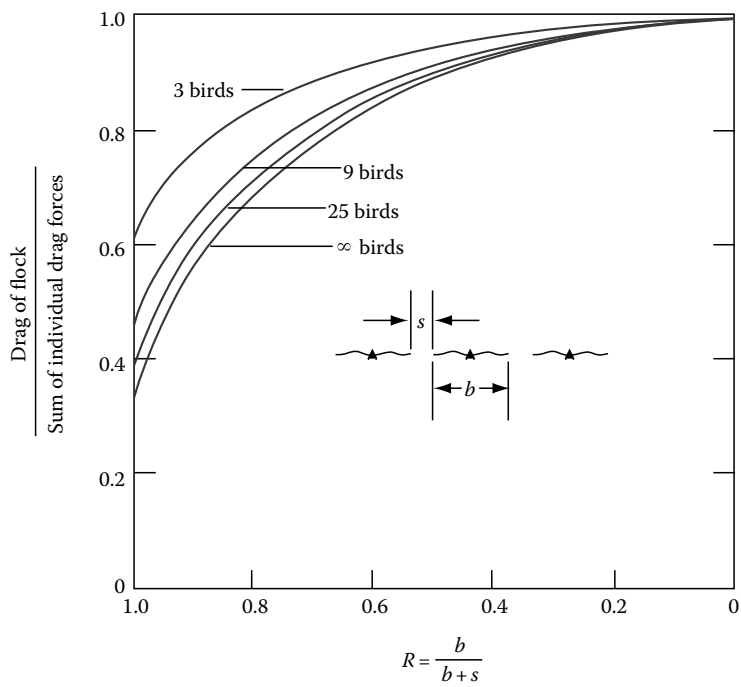


FIGURE 6.36 Drag reduction by V-formation flight. (From Lissaman, P.B.S. and Shollenberger, C.A., *Science*, 168(3934), 1003, May 1970. With permission.)

The ideal formation is not exactly a V, but instead is a formation that is more swept back at the tips and less at the apex. Such a formation is indicated in Figure 6.37, which shows the plan view of a nine-bird formation with a tip spacing s equal to one-fourth of the span b . Note that the outermost birds are a little further behind their neighbors and that this lag distance changes as we approach the apex.

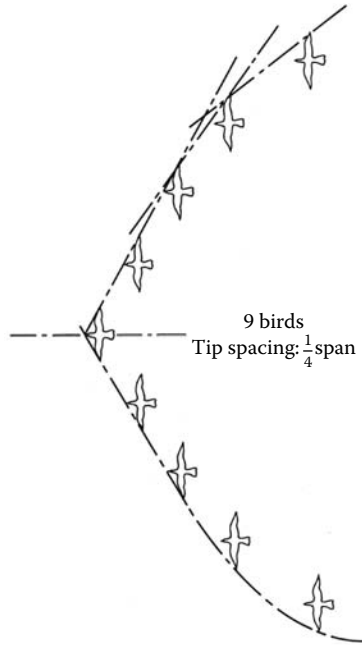


FIGURE 6.37 Optimum V-formation for nine birds flying at a tip spacing equal to one-fourth of the span. (From Lissaman, P.B.S. and Shollenberger, C.A., *Science*, 168(3934), 1003, May 1970. With permission.)

6.6 SUMMARY

In this chapter, we examined the concepts of boundary-layer growth and separation. We saw how these phenomena affect forces that are exerted on variously shaped objects immersed in a uniform flow. The drag and lift coefficients were defined, and data on drag and lift forces were expressed in terms of these coefficients.

PROBLEMS

Flow Past a Flat Plate

- 6.1** Using the information provided in Example 6.1, calculate the displacement thickness for the problem and plot δ^* versus x .
- 6.2**
 - a.** In Example 6.1, what is the velocity U_∞ required for the boundary layer to remain laminar over the entire plate?
 - b.** What is its thickness at the end of the plate?
- 6.3**
 - a.** If U_∞ in Example 6.1 is slow and the boundary layer remains laminar over the entire plate with transition occurring at the end, determine the drag force exerted on the plate.
 - b.** Plot the boundary-layer thickness versus x .
- 6.4** Repeat Example 6.1b for $U_\infty = 120$ mi/h.
- 6.5** A sailboat has a rudder that is 6 in. wide and extends into water a distance of 18 in. At 5 knots, what is the drag force exerted on the rudder?
- 6.6** A 6-m/s wind blows past a billboard measuring 10 m wide by 8 m high. The billboard is aligned with the wind direction as shown in the plan view of Figure P6.6. Calculate the force exerted on the billboard ($T = 22^\circ\text{C}$).

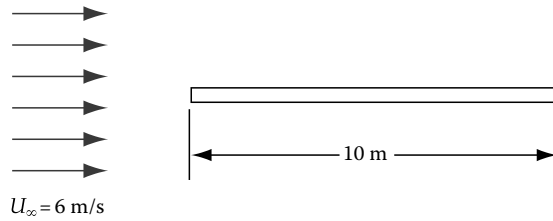


FIGURE P6.6

6.7 A flat plate is falling through a tank of water. The plate is 2 ft long by 1 ft wide and travels as illustrated in Figure P6.7 at 2 ft/s. Determine the drag force on the plate ($T = 68^\circ\text{F}$).

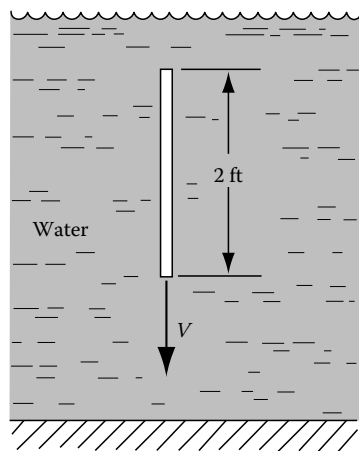


FIGURE P6.7

- 6.8** Air at 20°C and 101.3 kPa absolute flows over a flat plate at a speed of 15 m/s. How thick is the boundary layer at a distance of 1 m from the front edge of the plate? What is the Reynolds number at that point?
- 6.9** A square duct in an air conditioning system is used to convey 50°F air to a plenum chamber. The duct is 3 ft on a side and 9 ft long. Estimate the skin friction drag exerted on the inside walls if the average air velocity in the duct is 5 ft/s.
- 6.10** A boxcar is pulled at a velocity of 16 m/s along a straight stretch of rail. The boxcar is 16.8 m long, and the sides are 2.44 m high. Assuming that the sides are perfectly flat, estimate the skin friction drag force exerted on them.

Flow Past Two-Dimensional Objects

6.11 The following data give pressure versus θ for a 3.75-in.-diameter cylinder that is 10.5 in. high and immersed in a uniform flow of 36.5 mi/h. The pressure data collected are $\Delta p (= p - p_\infty)$ and the ambient pressure $p_\infty = 14.7 \text{ psia}$. The form drag is obtainable from integration of the pressure distribution around the surface of the cylinder.

$$D_f = DL \int_0^\pi p \cos \theta \, d\theta$$

or

$$D_f = DL \int_0^\pi (\Delta p + p_\infty) \cos \theta \, d\theta$$

This becomes

$$D_f = DL \left(\int_0^\pi \Delta p \cos \theta \, d\theta + p_\infty \int_0^\pi \cos \theta \, d\theta \right)$$

Because the latter integral is equal to zero, we get

$$D_f = DL \int_0^\pi \Delta p \cos \theta \, d\theta$$

The data are as follows:

θ (°)	Δp (psf)
0	1.07
10	1.29
20	0.21
30	-1.80
40	-4.72
50	-8.15
60	-11.59
70	-14.38
80	-16.09
90	-15.88
100	-14.81
110	-13.73
120	-10.73
130	-9.87
140	-9.44
150	-9.44
160	-9.44
170	-9.44
180	-9.44

$U_\infty = 36.5$ mi/h
 $L = 10.5$ in.
 $D = 3.75$ in.
 $T = 71^\circ\text{F}$

- a. Sketch Δp versus θ on polar coordinate paper.
- b. Sketch Δp versus θ on rectangular coordinate paper.
- c. Sketch $\Delta p \cos \theta$ versus θ on rectangular coordinate paper. Determine the area under the curve and note which portions are positive and which are negative. Calculate the form drag force.
- d. Calculate the drag coefficient and the Reynolds number.
- e. Compare the results to those of Figure 6.12. (There will be discrepancies because of the measurement technique. The wind tunnel test section is small, and interference between the flow at the wall and flow past the cylinder affects the results. Data were taken at the University of New Orleans Fluid Mechanics Laboratory.)

6.12 Repeat Problem 6.11 for the following data:

θ (°)	Δp (psf)
0	0.90
10	0.82
20	−0.086
30	−1.63
40	−3.48
50	−5.58
60	−7.99
70	−9.58
80	−10.31
90	−9.88
100	−9.45
110	−8.81
120	−7.52
130	−7.09
140	−6.87
150	−6.87
160	−6.87
170	−6.87
180	−6.87

$U_\infty = 43.3 \text{ ft/s}$
 $L = 10.5 \text{ in.}$
 $D = 3.75 \text{ in.}$
 $T = 71^\circ\text{F}$

6.13 Repeat Problem 6.11 for the following data:

θ (°)	Δp (Pa)
0	22.6
10	20.6
20	−2.06
30	−41.1
40	−102.8
50	−162.5
60	−226.2
70	−269.4
80	−290.0
90	−277.6
100	−267.3
110	−246.8
120	−236.5
130	−232.4
140	−226.2
150	−226.2
160	−226.2
170	−226.2
180	−226.2

$U_\infty = 10.3 \text{ m/s}$
 $L = 26.7 \text{ cm}$
 $D = 9.53 \text{ cm}$
 $T = 22^\circ\text{C}$

6.14 Repeat Problem 6.11 for the following data:

θ (°)	$\Delta\rho$ (psf)
0	0.086
10	0.043
20	-0.13
30	-0.43
40	-1.12
50	-1.72
60	-2.23
70	-2.58
80	-2.58
90	-2.49
100	-2.49
110	-2.49
120	-2.49
130	-2.49
140	-2.49
150	-2.49
160	-2.49
170	-2.45
180	-2.40

$U_\infty = 22 \text{ ft/s}$
 $L = 10.5 \text{ in.}$
 $D = 3.75 \text{ in.}$
 $T = 71^\circ\text{F}$

- 6.15** A cylindrical smokestack is 26 m high and has an average diameter of 4 m. For a wind speed past the smokestack of 1.5 m/s, determine the drag force exerted ($T = 7^\circ\text{C}$).
- 6.16** A flagpole consists of two sections and each is 6 m long. The lower section has a diameter of 15 cm and the upper section has a diameter of 12.5 cm. Determine the bending moment exerted at the base of the pole if no flag is flying and if the wind velocity is 50 km/h. Assume smooth cylinder surfaces.
- 6.17** An automobile aerial consists of three telescoping sections (6, 4, and 2 mm in diameter). When fully extended, each section is 23 cm long. For an automobile speed of 75 km/h, estimate the force exerted on the aerial and the moment exerted on its base ($T = 27^\circ\text{C}$).
- 6.18** An electrical wire on a utility pole is 2.6 cm in diameter and 20 m long. If a 4-m/s wind passes, determine the drag force exerted on the wire. Ignore any translational motion of the wire.
- 6.19** Two cylinders are attached to a balance arm, as illustrated in Figure P6.19. The cylinder on the left has a roughened surface; otherwise, they are identical. A uniform flow of air is directed upward past both of them. At what velocity will the balance arm tilt clockwise? At what velocity will it tilt counterclockwise? Take the diameter of each cylinder to be 15 cm.

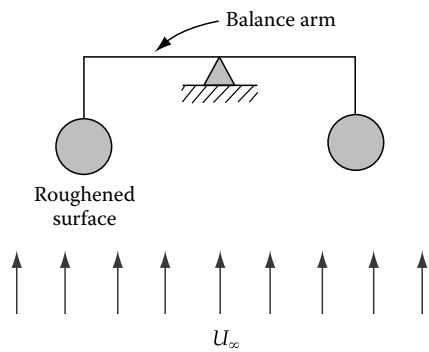


FIGURE P6.19

6.20 Two square rods of equal length are immersed in a uniform flow of oxygen, as illustrated in Figure P6.20. The oxygen velocity is 5 m/s. If D_1 is 10 cm, determine D_2 , assuming that the drag force exerted on each is the same.

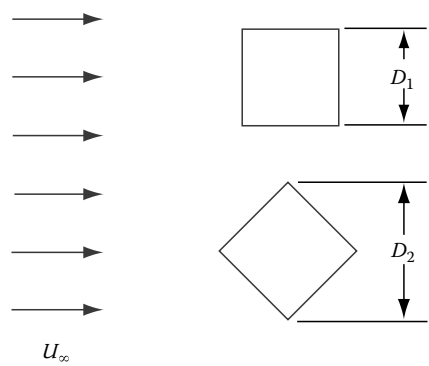


FIGURE P6.20

6.21 A Savonius rotor is a type of windmill (Figure P6.21). For a uniform airspeed of 2 mi/h directed at a stationary rotor, estimate the torque exerted about the shaft. (The data of this chapter will not yield an accurate result because here the half cylinders are attached together.)

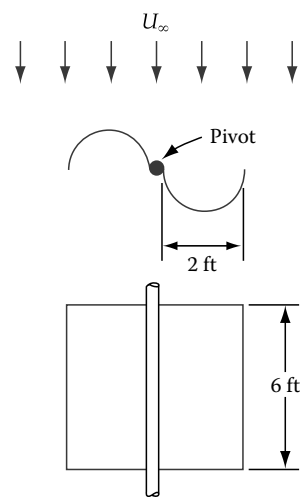


FIGURE P6.21

- 6.22** Consider airflow past a square cylinder 10 cm on a side and 6 m long as shown in Figure P6.22a. The free-stream velocity is 4.5 m/s.
- Use Figure 6.15 to find the drag force exerted.
 - Find the drag force for the cross section consisting of three flat plates pieced together as in Figure P6.22b. Compare the results.

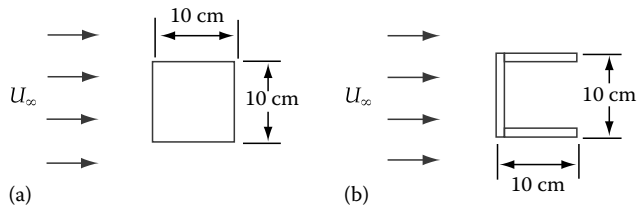


FIGURE P6.22

Flow Past a Sphere

- 6.23** A stainless steel sphere of diameter 2 cm falls through castor oil. Calculate the terminal velocity of the sphere.
- 6.24** Paraffin in the form of a sphere is released in a tank of water. Determine the terminal velocity of the sphere if its diameter is 3 cm.
- 6.25** A simple trick performed with a table tennis ball and a vacuum cleaner exit hose is sketched in Figure P6.25. The exhaust air causes the ball to remain suspended at a certain height above the exit. If a typical table tennis ball weighs 3.08 g and is 3.81 cm in diameter, determine the air velocity required to perform the trick. Take the exhaust air temperature to be 37°C.

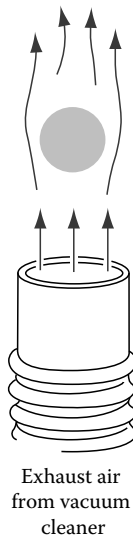


FIGURE P6.25

- 6.26** A steel sphere is dropped into a tank of glycerine. The sphere diameter is 3 mm. Calculate its terminal velocity. Repeat for a steel sphere of 3 cm in diameter.
- 6.27** Equation 6.11b was derived for the general case of a sphere falling through a liquid. Rederive Equation 6.11b for the case in which the Reynolds number of the flow is less than 1. Show that

$$V = \frac{1}{18} g \frac{D^2}{\mu} (\rho_s - \rho) \quad \text{if } \text{Re} < 1$$

- 6.28** A lead ball that is 1 in. in diameter is suspended by a thin piece of thread in the test section of a wind tunnel. The uniform speed past the sphere is 150 mi/h. Determine the resultant angle that the thread makes with the horizontal (see Figure P6.28). Take $T = 62^\circ\text{F}$.

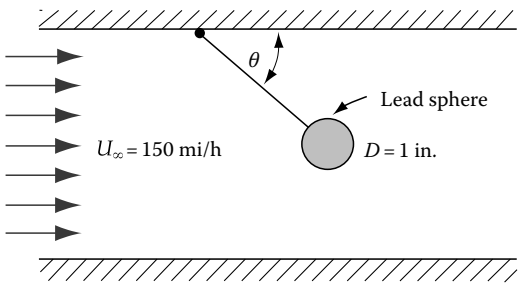


FIGURE P6.28

- 6.29** A brass sphere that is 1.2 cm in diameter falls through a tank of turpentine. Determine the terminal velocity of the sphere.
- 6.30** A gasoline (assume octane) fuel droplet $500 \mu\text{m}$ in diameter is injected into an airstream at the intake of an engine. The air velocity is a uniform 2 m/s downward. Determine the final velocity of the droplet ($T = 22^\circ\text{C}$).
- 6.31** If a solid sphere made of brass is dropped into a tank of glycerine, its terminal velocity is measured as 30 mm/s. Determine the sphere's diameter.

Flow Past Three-Dimensional Objects

- 6.32** A 10-in.-diameter hemisphere is supported in a uniform airflow of 12 ft/s (Figure P6.32). What diameter sphere will have the same drag exerted on it by the air at the same uniform flow velocity?

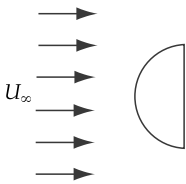


FIGURE P6.32

- 6.33** Repeat Problem 6.32 but turn the hemisphere around (Figure P6.33).

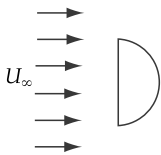


FIGURE P6.33

- 6.34** A four-cup wind speed indicator or anemometer is shown in a plan view in Figure P6.34. The bearings on which the assemblage turns are rusty, and the torque required to start the cups rotating is high. Determine the torque exerted if a velocity U_∞ of 12 mi/h is required to start rotation. Ignore the effects of the cups labeled *A* and the connecting rods ($T = 62^\circ\text{F}$).

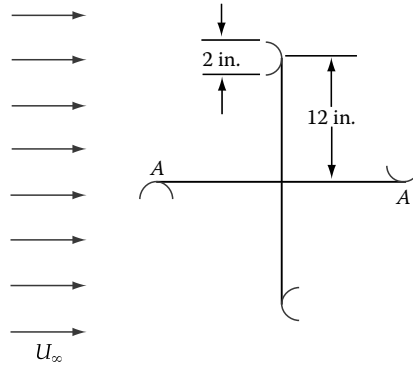


FIGURE P6.34

- 6.35** A motorist wishes to install a rear view mirror on the front fender of his car. The mirror housing is a hemisphere of diameter 6 in.; the convex side faces forward. Determine the additional drag on the automobile at 20 mi/h if two of these mirrors are installed.
- 6.36** A disk and a hemisphere are attached to a balance arm, as shown in Figure P6.36. Both are subjected to a uniform upward air velocity of 15 m/s. The hemisphere is 6 cm in diameter. If the scale is to balance, what is the required diameter of the disk?

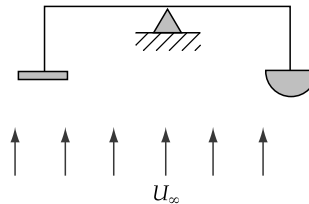


FIGURE P6.36

- 6.37** Repeat Problem 6.36 but replace the hemisphere with a streamlined body having $D = 0.2$ m.

Flow Past Ground Vehicles: Cyclists

- 6.38** Calculate the power required to overcome drag for a cyclist riding at 8.9 m/s in a touring position (no. 2 of Table 6.1). Is it enough to power a 100-W light bulb?
- 6.39** a. Determine the power required for a cyclist to ride at 20 mi/h in the racing position (no. 3 of Table 6.1).
b. If the cyclist maintains this speed and drafts another cyclist (no. 7), what power is required?
- 6.40** Which vehicle requires more power to overcome drag at 20 mi/h: the vector single of Table 6.1 or the streamlined vehicle of Figure 6.22? Calculate the power for both vehicles.
- 6.41** A cyclist rides at 7 m/s. At this velocity, 18% of her total power input goes into overcoming rolling resistance. If the cyclist uses this same input to power the streamlined vehicle of Figure 6.22, what is the expected velocity, again assuming that 18% of the input goes into overcoming rolling resistance?

- 6.42** Two athletes intend to have a bicycle race. Athlete 1 is in fairly good condition and can maintain an output equivalent to 0.1 hp for 1 h on a bicycle. Athlete 2 is not in such good shape; his output is equivalent to only 0.08 hp for 1 h on a bicycle. Athlete 2, however, is permitted the use of a fairing. Determine how far each rider can travel after 1 h if only 90% of each rider's output goes to overcoming drag. (Assume that Figure 6.22 applies.)

Flow Past Ground Vehicles: Automobiles

- 6.43** Using the data of Table 6.2, estimate the drag coefficient for an automobile of your choice. Then determine the projected frontal area A of the automobile. Next calculate the aerodynamic drag as a function of velocity using

$$D_f = \frac{1}{2} C_D A \rho V^2$$

Let the velocity vary from 0 to 100 mi/h. Calculate the horsepower required to overcome the aerodynamic drag at each velocity by using

$$\text{Horsepower} = \frac{D_f V}{550}$$

where: D_f is in lbf
 V is in ft/s

Construct a plot of D_f and horsepower as a function of V .

- 6.44** Sketch an automobile that has minimum drag.
6.45 Sketch an automobile that has maximum drag.
6.46 According to a popular automotive magazine, the drag coefficient of a 1986 Honda Accord LXi is 0.32, and its frontal area is 53 in. $\times$ 66 in. wide. Locate such a vehicle and determine whether Equation 6.13 predicts the same result. Using a drag coefficient of 0.32, calculate the power required for the vehicle to maintain a speed of 55 mi/h.
6.47 According to a popular automotive magazine, the drag coefficient of a 1986 Mazda RX-7 is 0.29, and its frontal area is 126.5 cm $\times$ 160 cm wide. Locate such a vehicle and determine whether Equation 6.13 predicts the same result. Using a drag coefficient of 0.29, calculate the power required for the vehicle to maintain a speed of 24.6 m/s.

Flow Past Ground Vehicles: Trucks

- 6.48** If the square-edged trailer of Example 6.6 were replaced with a round-edged trailer, how would the savings in fuel costs be affected? Use the data for the square-edged, unstreamlined trailer as a basis for comparison.
6.49 A truck having a square-edged trailer like that shown in Figure 6.24 travels 160 000 km/year and averages 2 000 km/(m³ of fuel). A fairing and a gap seal are then attached to the vehicle. Calculate the power required to overcome drag at 24.6 m/s for both configurations and compare the results.
6.50 A truck having a round-edged trailer like that shown in Figure 6.26 travels 80,000 mi/year and averages 5.1 mi/(gal of fuel). Diesel fuel costs \$1.16/gal.
 a. Calculate the yearly cost of fuel to run the vehicle.
 b. Calculate the yearly cost of fuel to run the vehicle if it has a fairing attached.
 c. Calculate the yearly cost of fuel to run the vehicle if it has a fairing and a gap seal attached.
6.51 Calculate the horsepower required to overcome drag for a tractor-trailer combination where the trailer has rounded front edges for the following cases: (a) basic configuration, (b) with a fairing attached, and (c) with a fairing and gap seal attached. Take the speed in all cases to be 55 mi/h.

Flow Past Airfoils

6.52 The data given in Figure P6.52 are for a NACA 23012 airfoil.

- a. Construct a polar diagram for the airfoil.
- b. Determine the angle of attack for maximum C_L/C_D . (Data from NACA Report 524.)

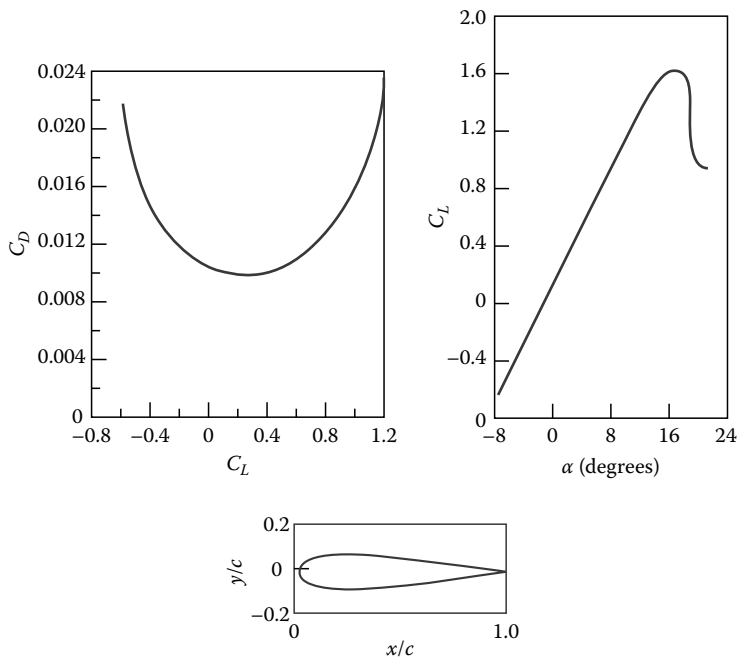


FIGURE P6.52

- 6.53 An airplane with a NACA 23012 airfoil cruises at 138 m/s at an altitude of 6 100 m ($p_\infty = 46.5$ kPa, $T_\infty = 250$ K). The airfoil has an aspect ratio of 10 with a span of 36 m. Using the data of Figure P6.52, determine the lift and drag forces. Then determine the horsepower required to overcome drag. Take the angle of attack to be 8° .
- 6.54 The following data were obtained on a NACA 2412 airfoil. Plot the polar diagram for the airfoil. (Data from NACA Technical Note 404.)

α	C_D	C_L
-3.4	0.0096	-0.178
-1.7	0.0092	-0.026
-0.4	0.0090	+0.133
+1.1	0.0090	+0.288
+2.6	0.0095	+0.439
+5.6	0.0110	+0.744
+8.7	0.0143	+1.049
+11.8	0.0201	+1.328
+13.4	0.0261	+1.457
+15.0	0.0352	+1.566
+15.8	0.0422	+1.589
+19.8	0.2269	+1.307
+26.8	0.4189	+1.003

- 6.55** Airfoils have a maximum lift coefficient corresponding to a certain angle of attack. When operated beyond this angle of attack, the wing stalls, as indicated in Figure 6.30 in general and in Figure 6.32 for the Clark Y airfoil. At the stall condition, the wing is supporting the dead weight W of the aircraft. Thus, at stall we have

$$L_f = W = (C_{L_{\max}}) \frac{\rho V_{\text{stall}}^2 A}{2}$$

The stall velocity found in this above equation is the absolute minimum landing speed for an aircraft.

A modified version of the North American P-51D Mustang Fighter plane of World War II is the speed record holder for a propeller-driven plane (499 mi/h). Consider a Mustang racer having a wing area of 233 ft² and a weight of 9,500 lbf. Its landing speed is designed to be 1.25 times the stall speed. At stall, the lift coefficient of the wing is 1.65. Calculate the stall velocity of the aircraft and its minimum landing speed.

- 6.56** A Clark Y airfoil is on an aircraft whose stall speed is 100 mi/h. Determine the weight of the aircraft if the wing area is 216 ft². (See Problem 6.55.)
- 6.57** An aircraft has a Clark Y airfoil and is flying at 130 knots, with an angle of attack of the wing of 8°. The plane is following another aircraft such that the downwash vector is represented by a velocity of 8 knots. Determine
- The effective angle of attack
 - The change in the lift coefficient
 - The change in the drag coefficient
 - The ratio lift coefficient/drag coefficient for both angles

Miscellaneous Problems

- 6.58** Assuming that the velocity distribution in the boundary layer for flow over a flat plate is given by

$$\frac{V_x}{U_\infty} = \frac{y}{\delta}$$

and that the boundary-layer thickness is given by

$$\frac{\delta}{x} = \frac{3.46}{(\text{Re}_x)^{1/2}}$$

use Equation 6.1 to show that the displacement thickness is given by

$$\frac{\delta^*}{x} = \frac{1.73}{(\text{Re}_x)^{1/2}}$$

Compare your answer to the results for the displacement thickness from the exact solution given by Equation 6.3.

- 6.59** Repeat Problem 6.58 for

$$\frac{V_x}{U_\infty} = 2\left(\frac{y}{\delta}\right) - \left(\frac{y}{\delta}\right)^2$$

$$\frac{\delta}{x} = \frac{5.48}{(\text{Re}_x)^{1/2}}$$

to obtain

$$\frac{\delta^*}{x} = \frac{1.83}{(\text{Re}_x)^{1/2}}$$

6.60 Repeat Problem 6.58 for

$$\frac{V_x}{U_\infty} = \frac{3y}{2\delta} - \frac{1}{2} \left(\frac{y}{\delta} \right)^3$$

$$\frac{\delta}{x} = \frac{4.64}{(\text{Re}_x)^{1/2}}$$

to obtain

$$\frac{\delta^*}{x} = \frac{1.74}{(\text{Re}_x)^{1/2}}$$

6.61 Repeat Problem 6.58 for

$$\frac{V_x}{U_\infty} = \sin \frac{\pi y}{2\delta}$$

$$\frac{\delta}{x} = \frac{4.80}{(\text{Re}_x)^{1/2}}$$

to obtain

$$\frac{\delta^*}{x} = \frac{1.74}{(\text{Re}_x)^{1/2}}$$

6.62 Assume that the velocity distribution in a turbulent boundary layer for flow over flat plate is given by

$$\frac{V_x}{U_\infty} = \left(\frac{y}{\delta} \right)^{1/7}$$

and that the boundary layer thickness is given by

$$\frac{\delta}{x} = \frac{0.37}{(\text{Re}_x)^{1/5}}$$

Show that Equation 6.1 gives the following for the displacement thickness

$$\frac{\delta^*}{x} = \frac{0.046}{(\text{Re}_x)^{1/5}}$$

6.63 An ornamental iron gate consists of six vertical rods welded at their ends to horizontal crosspieces. Each vertical rod is a $\frac{1}{2} \times \frac{1}{2}$ in. square rod 5 ft 6 in. long; the horizontal top and bottom pieces are in. diameter cylinders 42 in. long. The square rods are placed as illustrated

in Figure P6.63. For a uniform wind speed of 20 mi/h, estimate the total force exerted on the gate ($T = 71^\circ\text{F}$).

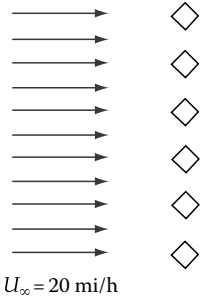


FIGURE P6.63

6.64 A 12-in.-diameter telephone pole 30 ft tall has four crosspiece wire hangers attached as in Figure P6.64. The crosspieces are 2 in. square in cross section and 4 ft long; they are separated by a distance of 1 ft. Estimate the moment exerted about the base of the pole in a uniform wind of velocity 25 mi/h. Assuming that the surface of the pole affects the results (smooth versus rough), perform calculations for both cases.

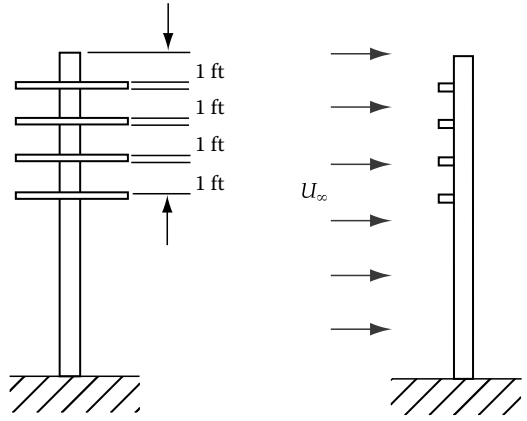


FIGURE P6.64

6.65 Figure P6.65 shows a cylindrical aluminum rod of diameter 1 cm and length 15 cm falling with axis vertical through water. For a small diameter, the drag force is due primarily to skin friction, which can be approximated by using flat plate data. The cylinder surface is treated as if it were a flat plate that has been rolled up into a rod. The surface area of this “rolled-up plate” is πDL . Estimate the terminal velocity of the rod as it falls through the water by completing the following steps:

- a. Perform a force balance for the cylinder and show that the descriptive equation is

$$\rho_c g \frac{\pi D^2}{4} L - \rho g \frac{\pi D^2}{4} L - \frac{1}{2} C_D \rho V^2 \pi DL = 0$$

where ρ_c is the density of the cylinder material and ρ is the density of the liquid.

b. Substitute and simplify the preceding equation to show that it becomes

$$C_D V^2 = 0.083 \quad (i)$$

c. Show that the Reynolds number ($= \rho V L / \mu$) at terminal velocity is given by

$$Re = 1.685 \times 10^5 V \quad (ii)$$

d. Initiate the trial-and-error procedure by assuming a value for drag coefficient; substitute into Equation i and calculate the velocity; determine the Reynolds number; use Figure 6.3 for flow over a flat plate and read a new value for drag coefficient. Repeat the calculations until the results converge. What is the terminal velocity of the cylinder?

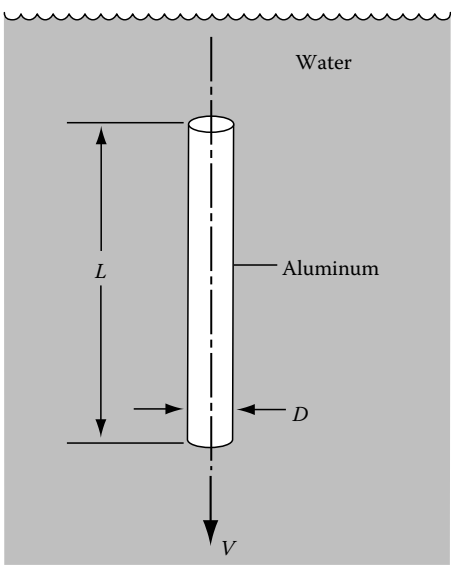


FIGURE P6.65

6.66 A billboard measures 12 m wide by 6 m high. It is attached to vertical posts set in the ground (see Figure P6.66). The posts are 10 cm in diameter and hold the billboard 10 m above the ground. Estimate the moment exerted about the posts at ground level in a uniform wind of velocity 0.5 m/s.

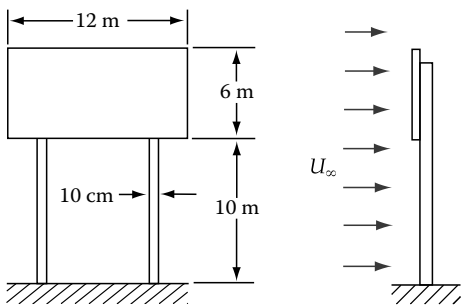


FIGURE P6.66

Computer Problems

6.67 Equation 6.11a was written for a sphere falling at terminal velocity, but it can be modified to describe the motion of the sphere while it is still accelerating (or decelerating). This period lasts for only a few moments after the sphere is released in the fluid. Equation 6.11a can be rewritten as

$$\rho_s g \frac{\pi D^3}{6} - \rho g \frac{\pi D^3}{6} - \frac{1}{2} C_D \rho V^2 \frac{\pi D^2}{4} = \left(\rho_s \frac{\pi D^3}{6} \right) \frac{dV}{dt}$$

in which the left-hand side is a summation of forces and the right-hand side is mass times acceleration. Because the preceding equation is a nonlinear differential equation that does not have a known solution, we must resort to an approximation to solve it. We rewrite dV/dt as $\Delta V/\Delta t$ and when solving, choose a suitable small increment of time for Δt . After substitution and rearrangement, we obtain

$$\Delta V = \left(g - \frac{\rho g}{\rho_s} - \frac{3}{4} \frac{C_D \rho V^2}{\rho_s D} \right) \Delta t \quad (\text{i})$$

Use of this equation in solving an accelerating sphere problem requires a stepwise solution. It is also necessary to use Figure 6.16 for spheres to determine C_D . Although the data of that figure were obtained at steady state, it is assumed that a quasi-steady process occurs because the flow is unsteady.

Consider the marble ($\rho_s = 2\,600 \text{ kg/m}^3$) of Example 6.4 ($D = 0.01 \text{ m}$, terminal velocity $V = 0.723 \text{ m/s}$). If the marble starts from rest in water ($\rho = 1\,000 \text{ kg/m}^3$, $\mu = 0.89 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$), determine a velocity–time history for its fall during the first 0.1 s by following these steps:

a. By substitution in Equation i, show that the following working equation results:

$$\Delta V = (6.037 - 28.8 C_D V^2) \Delta t \quad (\text{ii})$$

b. Show that the Reynolds number of the sphere at any time is given by

$$\text{Re} = 1.12 \times 10^4 V \quad (\text{iii})$$

c. Verify that the initial condition ($V = 0$ at $t = 0$) reduces the previous equation to

$$\Delta V_{(\text{after } 1 \Delta t)} = (6.037) \Delta t$$

d. From the example, it is known that the terminal velocity is 0.723 m/s. So if Δt is chosen as 0.12 s, for example, then $\Delta V_{(\text{after } 1 \Delta t)} = 6.037(0.12) = 0.72 \text{ m/s}$. We therefore conclude that 0.12 s is too large a time increment and that for an accurate and realistic representation, Δt should be kept small. Arbitrarily, we select $\Delta t = 0.01 \text{ s}$. With this choice and with a modification in the notation, we find the change in velocity from time 0 to time 0.01 s to be

$$\Delta V_{(\text{after } 1 \Delta t)} = \Delta V_{0.01} = (6.037)(0.01) = 0.060 \text{ m/s}$$

The velocity of the sphere after 0.01 s thus becomes

$$V_{0.01} = V_0 + \Delta V_{0.01} = 0 + 0.06 = 0.06 \text{ m/s}$$

The Reynolds number is $\text{Re} = 1.12 \times 10^4 V$, or after 0.01 s

$$\text{Re}_{0.01} = 1.12 \times 10^4 (0.06) = 6.72 \times 10^2$$

and from Figure 6.15, we get $C_D=0.55$. By substitution into the working equation, we obtain

$$\Delta V_{0.02} = [6.037 - 28.8(0.55)(0.06)^2](0.01) = 0.06 \text{ m/s}$$

Therefore,

$$V_{0.02} = V_{0.01} + \Delta V_{0.02} = 0.12 \text{ m/s}$$

With this value, a new Reynolds number is calculated, a new drag coefficient is determined, and a new velocity is found. Continue this stepwise procedure and produce a table of results showing the following as column headings: t (s), V (m/s), Re , C_D , and ΔV (m/s).

- e. Prepare a graph of velocity versus time (horizontal axis). Show the terminal velocity on the graph.
- 6.68** The graph of Figure 6.22 shows drag coefficient versus Reynolds number for a streamlined and an unstreamlined cyclist. Use the not-streamlined cyclist curve.
- a. Read values from the graph and prepare a table of C_D and corresponding Re .
 - b. Use the data below the graph with your table to produce values of free-stream velocity U_∞ and drag force D_f .
 - c. Make calculations of power for each velocity and drag force.
 - d. Construct a graph of power dW/dt (vertical axis) versus velocity U_∞ . Let U_∞ vary from 5 to 25 mi/h.
- 6.69** The graph of Figure 6.22 shows drag coefficient versus Reynolds number for a streamlined and an unstreamlined cyclist. Use the streamlined cyclist curve.
- a. Read values from the graph and prepare a table of C_D and corresponding Re .
 - b. Use the data below the graph with your table to produce values of free-stream velocity U_∞ and drag force D_f .
 - c. Make calculations of power for each velocity and drag force.
 - d. Construct a graph of power dW/dt (vertical axis) versus velocity U_∞ . Let U_∞ vary from 5 to 40 mi/h.
- 6.70** A 3-in.-diameter sphere was immersed in a uniform flow of air at room temperature. The sphere has a smooth surface; as a result of measurements made, the following data were reported:

Smooth Surface Sphere	
Free-Stream Velocity, U_∞ (ft/s)	Drag Force, D_f (lbf)
19.8	0.025
30.3	0.043
38.8	0.045
45.1	0.083
48.9	0.102
55.2	0.129
59.5	0.151
64.2	0.173
69.2	0.201
77.2	0.232

Use these data to produce a graph of drag coefficient versus Reynolds number and compare the results to those in Figure 6.16. (Data were obtained by Lance Lane.)

6.71 A 3-in.-diameter sphere was immersed in a uniform flow of air at room temperature. The sphere has a roughened surface and as a result of measurements made, the following data were reported:

Rough Surface Sphere	
Free-Stream Velocity, U_∞ (ft/s)	Drag Force, D_f (lbf)
19.8	0.025
25.6	0.027
34.3	0.026
38.8	0.039
47.5	0.057
51.8	0.069
58.4	0.084
63.2	0.105
67.7	0.126
81.0	0.192

Use these data to produce a graph of drag coefficient versus Reynolds number and compare the results to those in Figure 6.16. (Data were obtained by Lance Lane.)

Design Problems

6.72 Design of a Drag Flow Meter

A flow indicator is sketched in Figure P6.72. The meter consists of a hinged flat plate (a proposed design) inserted into the flow line. Drag on the plate causes it to deflect by an amount that is proportional to the flow rate. At the other end of the plate is a pointer that is used to give an indication of the flow rate. A prototype of this meter is to be designed for a 12-nominal pipeline that conveys water at an average velocity that varies from 0.1 to 2.2 m/s.

- a. Select a flat plate (or some other shape) that can be used as a drag object.
- b. Design the readout system such that it is calibrated in cubic meters per second (not velocity units). Is the hinge system shown acceptable or is some other mechanism preferable?
- c. Determine how the meter would be installed in a preexisting piping system.
- d. Select the materials of construction.
- e. Complete the design and give reasons for all decisions made.

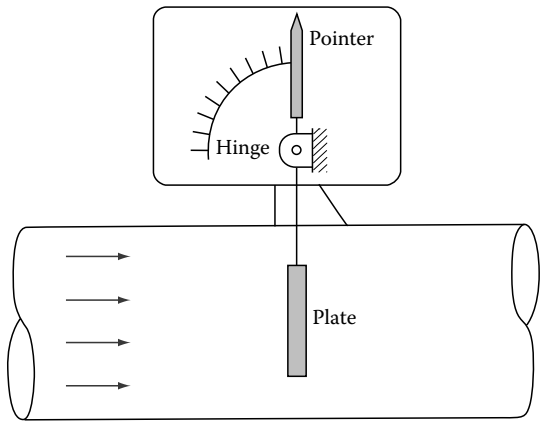


FIGURE P6.72

6.73 Golf Ball Testing Method

The manufacturer of golf balls believes it is necessary to test its products before selling them. The test involves a method that is sketched in Figure P6.73. A jet of air issuing from the exit of a tube is directed upward. A golf ball placed in the path of the air stream has certain forces acting on it, with the result that the ball is elevated to a certain height. A “good” golf ball will rise to a predetermined height; otherwise, the ball is unacceptable (due, for example, to it not being acceptably spherical or to some other anomaly).

- a. A golf ball manufacturer might produce too many balls to test each one individually (too costly). From a statistical viewpoint, how many balls per thousand should be tested and judged acceptable in order that the entire thousand be considered good?
- b. A jet of air issuing from a pipe like that in the figure dissipates. The velocity profile and magnitude change with distance from the exit. Determine (either by locating results of previous research or by experiment) the velocity at selected locations from the exit.
- c. Using results from part b, predict the expected height a good golf ball will reach. (This will require measurements to be made on golf balls.)
- d. Design an assembly line type of system where balls enter and are tested and sorted according to acceptability. The design should include pipe exit diameter, golf ball feeding and sorting, associated equipment, and directions to the company on how the system is to be used.


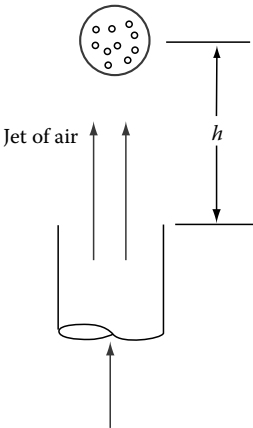


FIGURE P6.73

This page intentionally left blank

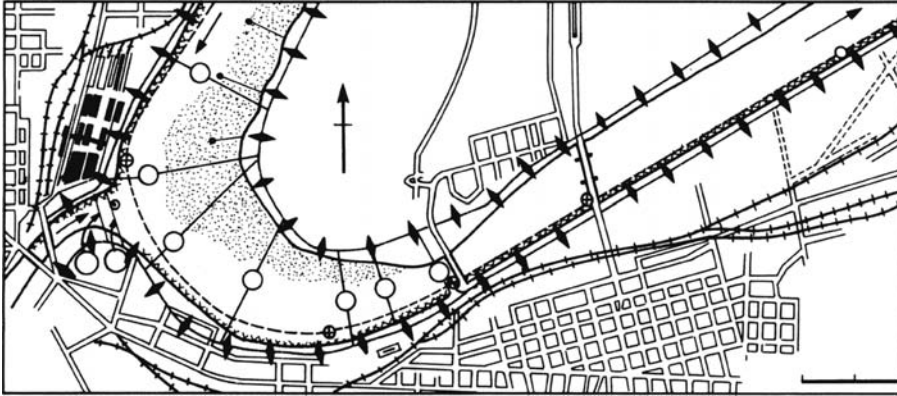7 Flow in Open Channels



The flow of liquid in a conduit may be either pipe flow or open-channel flow. The feature that differentiates these two types is that open-channel flow must have a free surface subject to atmospheric pressure or a constant pressure—examples include flow in a river, a roadside gutter, an irrigation canal, or a submerged culvert. There are many examples of open-channel flow, and in this chapter, we will examine the variables that are useful in mathematically modeling such flows. Topics of discussion will include types of open-channel flow, properties of open channels, momentum and energy considerations, critical flow, gradually varied flow, and rapidly varied flow.

7.1 TYPES OF OPEN-CHANNEL FLOWS

Open-channel flows can be classified into many categories according to how the depth of the flow changes with respect to time and position:

- **Steady flow** exists if the volume flow rate does not change during the interval of interest.
- **Unsteady flow** exists if the volume flow rate does change with time. (Floods and surges are examples.)
- **Nonuniform flow** exists in a channel if liquid enters or leaves along the course of the flow. This type is also known as spatially varied or discontinuous flow. (Flow in roadside gutters, main drainage canals, flood surges, and feeding channels of irrigation systems are examples.)
- **Uniform flow** exists if the depth is uniform (i.e., unchanging) at every section of the channel. Uniform flow occurs when the flow is steady.
- **Steady uniform flow** exists if the depth of flow does not change during the time interval under consideration.
- **Unsteady uniform flow** exists if the water surface fluctuates while remaining parallel to the channel bottom—a practically impossible condition.
- **Varied flow** exists if the depth changes with increasing distance along the channel.
- **Rapidly varied flow** exists if the liquid depth changes abruptly over a relatively short channel length. (Hydraulic jump and hydraulic drop are examples.) Otherwise, the flow is gradually varied.

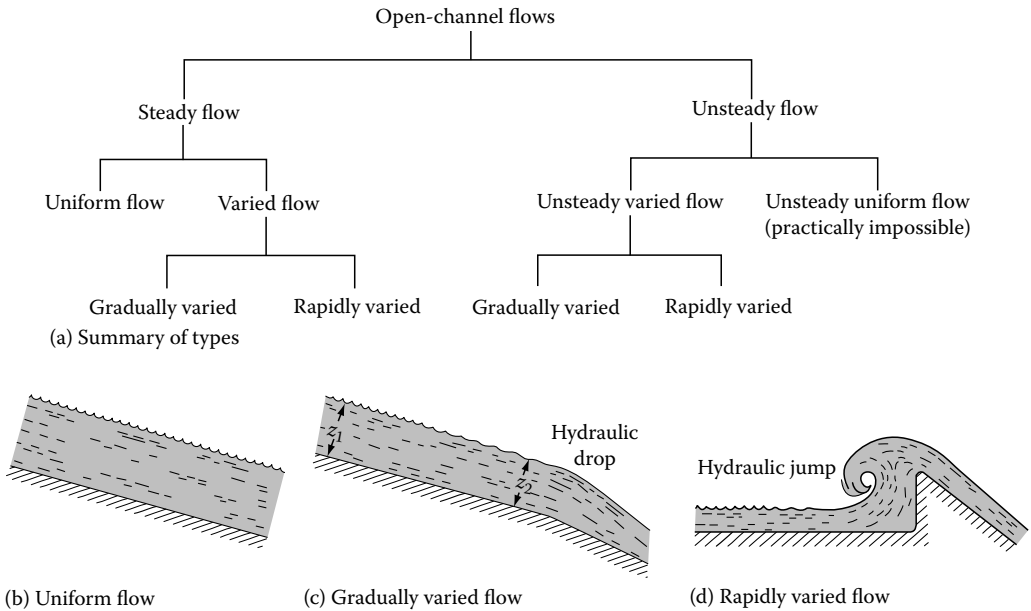


FIGURE 7.1 Types of open-channel flows.

These descriptions are summarized in Figure 7.1. In this chapter, we are concerned only with steady uniform flow and varied flow.

The forces of importance in open-channel flow are due to inertia, viscosity, and gravity. The ratio of the inertia force to the viscous force is the **Reynolds number**; accordingly, the flow can be further classified as laminar, transitional, or turbulent. Experiments have shown that the flow is always turbulent when the Reynolds number exceeds 1 000* and that most open-channel flows are turbulent.

The ratio of inertia to gravity forces is known as the **Froude number** given by $Fr = V^2/g\ell$. Accordingly, the flow can be further classified as critical, subcritical, or supercritical. When the Froude number of the flow equals 1, the flow is **critical**. If the Froude number is less than 1, the flow is **subcritical**—it has a low velocity and can be described as tranquil and streaming. When the Froude number is greater than 1, the flow is **supercritical**—it has a high velocity and can be described as rapid and torrential.

7.2 OPEN-CHANNEL GEOMETRY FACTORS

An open-channel conduit can be either natural or artificial. Natural channels include brooks, streams, and rivers—in general, any watercourse that exists naturally. Artificial open-channel conduits include canals, flumes, and culverts. The analysis of artificial channels produces results that are applicable to natural conditions.

In this section, we will consider geometric factors of four different types of prismatic channels—that is, channels with unvarying cross sections and constant bottom slopes. These cross sections are rectangular, triangular, trapezoidal, and circular. A rectangular section is the shape produced

* Based on one-fourth of the hydraulic diameter (as defined in Chapter 5) for characteristic length; see Section 7.2.

by common building materials such as brick and timber. A triangular section is usually constructed for small ditches and roadside gutters. The rectangular and triangular sections are both special cases of the trapezoidal section. The circular section is conventionally used for sewers and culverts of small to intermediate size. Each of these cross sections is shown schematically in the first column of Table 7.1.

The geometric factors for each cross section given in Table 7.1 are defined as follows:

- **Depth of flow** z is the vertical distance from the channel bottom to the liquid surface.
- **Top width** b_t is the width of the channel section at the free surface.
- **Flow area** A is the cross-sectional area of flow perpendicular to the flow direction.
- **Wetted perimeter** P is the length of the channel cross section in contact with liquid.
- **Hydraulic radius** R_h is the ratio of area to wetted perimeter:

$$R_h = \frac{A}{P} \quad (7.1)$$

This definition seems to be inconsistent with the definition of hydraulic diameter in Chapter 5:

$$D_h = \frac{4A}{P}$$

because for a pipe, $R_h = \pi R^2 / 2\pi R = R/2$ and $D_h = 4\pi R^2 / 2\pi R = 2R$. However, most hydraulics (open-channel flow) texts use Equation 7.1 because of its convenience. Consider an open channel of rectangular cross section flowing with liquid of depth z . The width is b . The flow area thus becomes bz , and the wetted perimeter is $b + 2z$. For very wide channels, $b \gg 2z$, and the hydraulic radius becomes

$$R_h = \frac{bz}{b + 2z} \approx \frac{bz}{b} = z$$

where z is the depth of flow.

- **Mean depth** z_m is the ratio of water area to top width:

$$z_m = \frac{A}{b_t} \quad (7.2)$$

This expression, useful in modeling wide natural channels, allows us to calculate the depth of an equivalent rectangular channel. For the wide channel of Figure 7.2, an equivalent rectangular channel would have depth z_m .





- **Section factor** Z (used in making critical flow calculations) is the product of water area and square root of hydraulic depth.

$$Z = A\sqrt{z_m} = A\sqrt{\frac{A}{b_t}} \quad (7.3)$$

- **Depth to centroid** z_c is the distance from the free surface to the centroid of the flow area.

Table 7.1 provides definitions for each of these factors for four different channel sections.

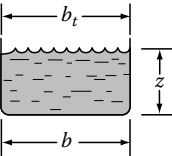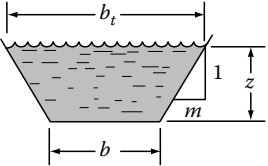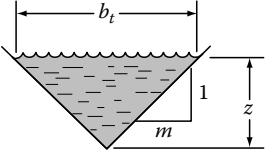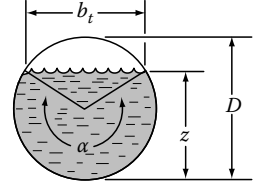TABLE 7.1
Geometric Elements of Various Channel Sections

Section	Area, A	Wetted Perimeter, P	Hydraulic Radius, R_h	Top Width, b_t	Hydraulic Depth, z_m	Section Factor, Z	Depth to Centroid, z_c
	bz	$b + 2z$	$\frac{bz}{b + 2z}$	b	z	$bz^{1.5}$	$\frac{z}{2}$
	$(b + mz)z$	$b + 2z\sqrt{1 + m^2}$	$\frac{(b + mz)z}{b + 2z\sqrt{1 + m^2}}$	$b + 2mz$	$\frac{(b + mz)z}{b + 2mz}$	$\frac{[(b + mz)z]^{1.5}}{\sqrt{b + 2mz}}$	$\frac{z(3b + 2mz)}{6(b + mz)}$
	mz^2	$2z\sqrt{1 + m^2}$	$\frac{mz}{2\sqrt{1 + m^2}}$	$2mz$	$\frac{z}{2}$	$\frac{\sqrt{2}}{2}mz^{2.5}$	$\frac{z}{3}$
	$(\alpha - \sin \alpha) \frac{D^2}{8}$	$\frac{\alpha D}{2}$	$\frac{D}{4} \left(1 - \frac{\sin \alpha}{\alpha} \right)$	$(\sin \frac{1}{2} \alpha) D$ or $2\sqrt{z(D - z)}$	$\frac{D}{8} \left(\frac{\alpha - \sin \alpha}{\sin \frac{1}{2} \alpha} \right)$	$\frac{\sqrt{2}}{32} \frac{(\alpha - \sin \alpha)^{0.5}}{(\sin \frac{1}{2} \alpha)^{0.5}} D^{2.5}$	—

Source: Adapted from Chow, V.T., *Open-Channel Hydraulics*, McGraw-Hill, Inc., New York, 1959.

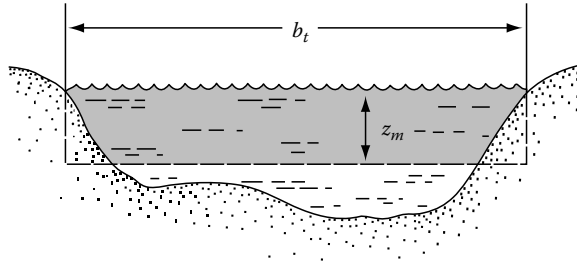


FIGURE 7.2 Equivalent or mean depth.

7.3 ENERGY CONSIDERATIONS IN OPEN-CHANNEL FLOWS

The equations of motion for flow in open channels are the continuity, momentum, and energy equations. The momentum equation is particularly useful for flows with friction, which are primarily uniform, and rapidly varied flows (discussed in Section 7.7.2). The energy or Bernoulli equation is applicable to steady one-dimensional frictionless flows or gradually varied flows where area changes predominate over frictional effects. We illustrate the use of the energy equation in solving frictionless open-channel flow problems in this section.

7.3.1 FLOW UNDER A SLUICE GATE

A sluice gate is a vertical gate used in spillways to retain the flow. A sketch of a partially raised gate is shown in Figure 7.3. For frictionless flow under a partially raised gate in a rectangular channel, we can write the following equations:

$$\text{Continuity: } Q = AV = bz_1V_1 = bz_2V_2 \quad (7.4)$$

$$\text{Energy: } \frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2$$

where b is the width of the channel. Now $p_1 = p_2 = p_{\text{atm}}$; and with $V_1 \ll V_2$, the energy equation becomes

$$z_1 = \frac{V_2^2}{2g} + z_2 \quad (7.5)$$

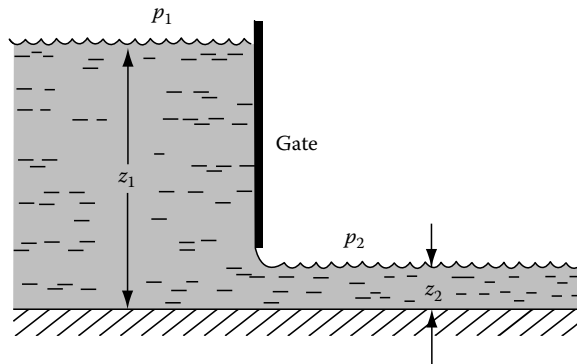


FIGURE 7.3 Flow under a sluice gate.

Combining with Equation 7.4 and rearranging give

$$1 = \frac{Q^2}{2b^2 z_2^2 g z_1} + \frac{z_2}{z_1}$$

or

$$2 \left(1 - \frac{z_2}{z_1} \right) = \frac{Q^2}{b^2 z_1 z_2^2 g} \quad (7.6)$$

To remove z_2 from the denominator, multiply Equation 7.6 by $(z_2/z_1)^2$:

$$2 \left(\frac{z_2}{z_1} \right)^2 \left(1 - \frac{z_2}{z_1} \right) = \frac{Q^2}{b^2 z_1^3 g} \quad (7.7)$$

This equation is the frictionless sluice gate equation for a rectangular channel. Note that when the gate is touching the bottom of the channel, $z_2 = 0$. When the gate is withdrawn from the liquid, $z_1 = z_2$. Thus, z_2/z_1 varies from 0 to 1. The right-hand side of Equation 7.7 is the upstream Froude number. A rectilinear plot of the sluice gate equation is given in Figure 7.4a. Point A represents a condition of maximum flow determined by differentiating Equation 7.7 and setting the result equal to zero:

$$\frac{d(Q^2/b^2 z_1^3 g)}{d(z_2/z_1)} = 2 \left(\frac{z_2}{z_1} \right)^2 (-1) + 2(2) \left(\frac{z_2}{z_1} \right) \left(1 - \frac{z_2}{z_1} \right) = 0$$

or

$$2 - 3 \left(\frac{z_2}{z_1} \right) = 0$$

with solution

$$\frac{z_2}{z_1} = \frac{2}{3} \quad (7.8)$$

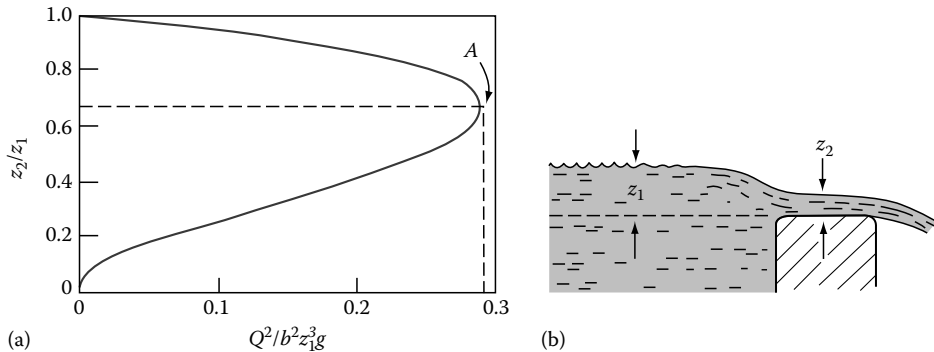


FIGURE 7.4 (a) A plot of the sluice gate equation for a rectangular channel and (b) flow over the crest of a dam.

Thus, maximum flow occurs at this ratio of liquid depths. Substituting Equation 7.8 back into Equation 7.7 yields

$$2\left(\frac{2}{3}\right)^2\left(1 - \frac{2}{3}\right) = \frac{Q_{\max}^2}{b^2 z_1^3 g}$$

from which we obtain the upstream Froude number at maximum flow:

$$\frac{Q_{\max}^2}{b^2 z_1^3 g} = \frac{8}{27} \quad (7.9)$$

The downstream Froude number is

$$\frac{Q_{\max}^2}{b^2 z_2^3 g} = \frac{Q_{\max}^2}{b^2 z_1^3 g} \left(\frac{z_1}{z_2}\right)^3 = \frac{8}{27} \left(\frac{3}{2}\right)^3$$

or

$$\frac{Q_{\max}^2}{b^2 z_2^3 g} = 1 \quad (7.10)$$

Thus, at maximum flow conditions, the flow upstream of the sluice gate is subcritical, whereas downstream the flow is critical.

Data taken from a sluice gate under laboratory conditions agree well with the curve of Figure 7.4a for frictionless flow over the lower portion of the curve—that is, for $z_2/z_1 < \frac{2}{3}$. Above this point, the assumption $V_1 \ll V_2$ is no longer valid.

The equation and results obtained for a sluice gate are applicable to flow over a crest of a dam shown in Figure 7.4b. Let z_1 be the upstream height and z_2 be the height directly over the dam. The flow rate curve that results is given in Figure 7.4a.

7.3.2 FLOW THROUGH A VENTURI FLUME

Consider a channel of rectangular cross section where the width gradually changes with distance (Figure 7.5). We apply Bernoulli's equation to any streamline of the flow; but for convenience, we choose the free surface where pressure is a constant. Applied to points 1 and 2, Bernoulli's equation is

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2$$

With $p_1 = p_2$ and $Q = b_1 z_1 V_1 = b_2 z_2 V_2$, after simplification and substitution, we have

$$\frac{Q^2}{2b_1^2 z_1^2 g} + z_1 = \frac{Q^2}{2b_2^2 z_2^2 g} + z_2$$

or

$$\frac{Q^2}{2g} \left(\frac{1}{b_1^2 z_1^2} - \frac{1}{b_2^2 z_2^2} \right) = z_2 - z_1$$

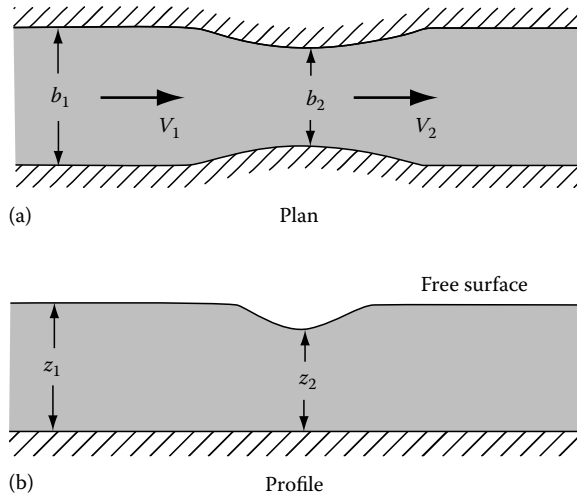


FIGURE 7.5 Flow through a rectangular venturi flume.

Solving for flow rate, we obtain

$$Q = \left[\frac{2g(z_1 - z_2)}{1/b_2^2 z_2^2 - 1/b_1^2 z_1^2} \right]^{1/2} \quad (7.11)$$

Thus, volume flow rate in a rectangular channel can be measured by inserting a venturi flume and measuring liquid depths at the minimum width and upstream sections.

When Bernoulli's equation was applied in the preceding problems, the following term appeared:

$$E = \frac{V^2}{2g} + z \quad (7.12)$$

The sum of kinetic and potential energies is labeled E and defined as the **specific energy** of the flow. Let us examine this equation in general. From continuity, $V = Q/A$; after substitution, we have

$$E = \frac{Q^2}{2gA^2} + z \quad (7.13)$$

and thus for a given rate of flow, E depends only on z . If the depth of flow is plotted as a function of specific energy for a constant area and flow rate, the resulting graph is referred to as a **specific-energy diagram** (Figure 7.6). Two intersecting curves result for any constant Q line, such as BC and AC in Figure 7.6. Curve BC asymptotically approaches a 45° line that passes through the origin. (A 45° line corresponds to channels of zero or very small slopes.) Curve AC asymptotically approaches the horizontal axis.

There are several points of interest in the diagram. First, the point at which minimum specific energy exists, $E_{\min}$, corresponds to what is called **critical flow**; the flow depth is thus called **critical depth**. The Froude number is unity at the critical depth z_{cr} . To investigate this point, we first differentiate the expression for E :

$$E = \frac{Q^2}{2gA^2} + z$$

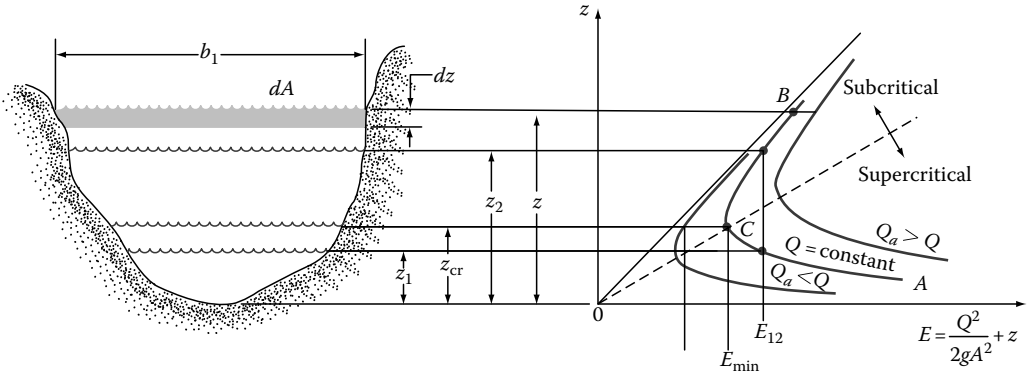


FIGURE 7.6 Specific-energy diagram and corresponding depths for various conditions.

With Q equal to a constant,

$$\frac{dE}{dz} = -\frac{Q^2}{gA^3} \frac{dA}{dz} + 1 = -\frac{V^2}{gA} \frac{dA}{dz} + 1 \quad (7.14)$$

At the free surface,

$$dA = b_t dz$$

and, by definition, the mean depth is

$$z_m = \frac{A}{b_t}$$

By substitution into Equation 7.14, we obtain

$$\frac{dE}{dz} = -\frac{V^2 b_t}{gA} + 1 = -\frac{V^2}{gz_m} + 1$$

At the minimum, $dE/dz = 0$. Thus, at critical flow,

$$\frac{V^2}{gz_m} = \text{Fr} = 1 \quad (7.15)$$

So at the critical state, $z_m = z_{cr}$ —that is, the critical depth equals the mean flow depth.

Figure 7.6 shows that two depths correspond to any value of specific energy greater than the minimum; for example, z_1 and z_2 correspond to E_{12} . The depths z_1 and z_2 are called **alternate depths**. If the depth is greater than the critical depth, the velocity will be less than the critical flow velocity, and subcritical flow therefore exists. If the depth of flow is less than z_{cr} , the flow is supercritical because the velocity will be greater than the critical flow velocity. Thus, by definition, z_1 is the depth of a supercritical flow, whereas z_2 is the depth of a subcritical flow. Generalizing, we conclude that

$$\begin{aligned} V &= \sqrt{gz_{cr}} & \text{Fr} &= 1 & \text{(critical flow)} \\ V &< \sqrt{gz_{cr}} & \text{Fr} &< 1 & \text{(subcritical flow)} \\ V &> \sqrt{gz_{cr}} & \text{Fr} &> 1 & \text{(supercritical flow)} \end{aligned} \quad (7.16)$$

which is true for any of the prismatic channels sketched in Table 7.1.

Example 7.1

Consider a rectangular channel of width 8 m.

- a. Plot a family of specific-energy lines for $Q = 0, 10, 20, 40,$ and $80 \text{ m}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q as a function of critical depth.

SOLUTION

For a rectangular channel, $A = bz$; therefore,

$$E = \frac{Q^2}{2gA^2} + z$$

becomes

$$\begin{aligned} E &= \frac{Q^2}{2gb^2z^2} + z = \frac{Q^2}{2(9.81)(8)^2z^2} + z \\ &= \frac{Q^2}{1\,260z^2} + z \end{aligned}$$

The resulting equations are

$$\begin{aligned} Q = 0 \quad E &= z \\ Q = 10 \quad E &= \frac{1}{12.6z^2} + z \\ Q = 20 \quad E &= \frac{1}{3.14z^2} + z \\ Q = 40 \quad E &= \frac{1}{0.785z^2} + z \\ Q = 80 \quad E &= \frac{1}{0.196z^2} + z \end{aligned}$$

A plot of these equations appears in Figure 7.7a along with the locus of critical depth points. A plot of Q versus z_{cr} is given in Figure 7.7b. For other than rectangular cross sections, area either is derived or can be obtained from Table 7.1.

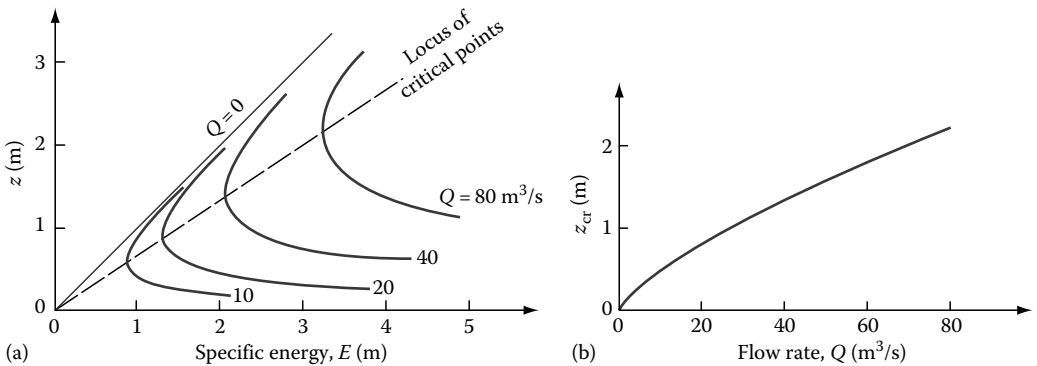


FIGURE 7.7 Solution curves for Example 7.1.

7.4 CRITICAL FLOW CALCULATIONS

It has been shown that at critical flow, $z_m = z_{cr}$; therefore,

$$V_{cr} = \sqrt{gz_{cr}} = \sqrt{gz_m}$$

or

$$\frac{V_{cr}^2}{g} = z_m \quad (7.17a)$$

from which we have

$$\frac{V_{cr}^2}{2g} = \frac{z_m}{2} \quad (7.17b)$$

where the notation V_{cr} has been introduced to denote the velocity corresponding to critical depth or critical velocity. Thus, at critical flow in any channel, half the mean depth equals the kinetic energy of the flow. The section factor Z has been previously defined as

$$Z = A\sqrt{z_m}$$

Combining this definition with $Q_{cr} = AV_{cr}$ and Equation 7.17, we obtain the following at critical flow:

$$Z = \frac{Q_{cr}}{\sqrt{g}} \quad (7.18)$$

Because Z is a function of depth, Equation 7.18 implies that only one depth is possible for critical flow. Similarly, for a fixed depth, there is only one flow rate, Q_{cr} , that corresponds to critical flow.

Example 7.2

Determine the critical depth and the flow velocity in the rectangular channel of Example 7.1 ($b = 8$ m) for a volume flow rate of $40 \text{ m}^3/\text{s}$.

SOLUTION

From Table 7.1 for a rectangular channel, $A = bz_{cr}$. Also, at critical flow, $z_m = z_{cr}$. Therefore, we write

$$V_{cr} = \frac{Q}{A} = \frac{40}{bz_{cr}} = \frac{40}{8z_{cr}} = \frac{5}{z_{cr}}$$

Substituting into Equation 7.17a gives

$$\begin{aligned} \frac{V_{cr}^2}{g} &= z_m \\ \frac{25}{9.81z_{cr}^2} &= z_{cr} \end{aligned}$$

or

$$z_{\text{cr}}^3 = 2.55$$

Solving,

$$z_{\text{cr}} = 1.37 \text{ m}$$

This result can be obtained by using Equation 7.18 where the section factor for a rectangular channel is found from Table 7.1:

$$Z = \frac{Q_{\text{cr}}}{\sqrt{g}}$$

Substituting, we get

$$bz_{\text{cr}}^{1.5} = \frac{Q_{\text{cr}}}{\sqrt{g}}$$

$$z_{\text{cr}}^{1.5} = \frac{40}{8\sqrt{9.81}} = 1.60$$

or

$$z_{\text{cr}} = 1.37 \text{ m}$$

Example 7.3

A trapezoidal channel with a bottom width of 15 ft has sides with slopes $1/m = 2$. For a flow rate of $60 \text{ ft}^3/\text{s}$, determine the critical depth.

SOLUTION

From Table 7.1, the section factor for a trapezoidal channel is

$$Z = \frac{[(b + mz)z]^{1.5}}{(b + 2mz)^{0.5}}$$

With $b = 15 \text{ ft}$, $m = \frac{1}{2}$, and $Q_{\text{cr}} = 60 \text{ ft}^3/\text{s}$, substitution into Equation 7.18 gives the following at critical flow:

$$\frac{[(15 + 0.5z_{\text{cr}})z_{\text{cr}}]^{1.5}}{(15 + z_{\text{cr}})^{0.5}} = \frac{60}{\sqrt{32.2}} = 10.57$$

By trial and error, we find

$$z_{\text{cr}} = 0.785 \text{ ft}$$

Owing to the variety of channel widths, slopes, and volume flow rates requiring trial-and-error solutions for critical depth determinations, design calculations can be quite time consuming.

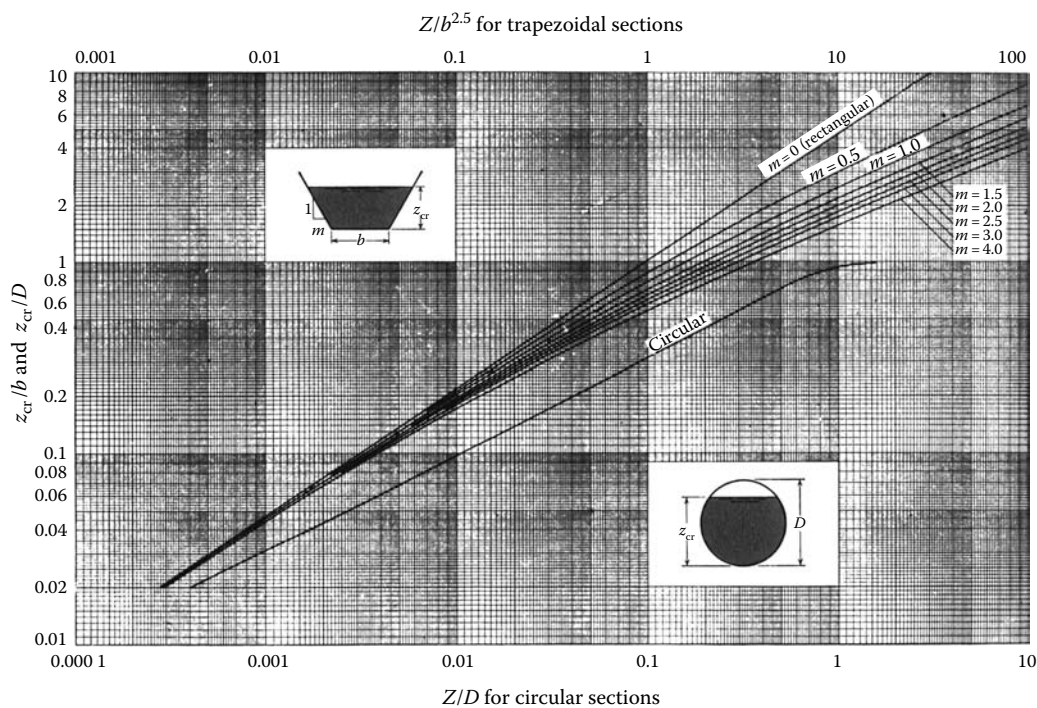


FIGURE 7.8 Curves for determining critical depth in trapezoidal and circular channels. (From Chow, V.T., *Open-Channel Hydraulics*, McGraw-Hill, Inc., New York, 65, 1959. With permission.)

Consequently, a chart has been prepared for critical depth computations (Figure 7.8). Use of the chart is straightforward, as is illustrated in the following example.

Example 7.4

Rework Example 7.3 using Figure 7.8.

SOLUTION

To use the chart, we first find

$$\frac{Z}{b^{2.5}} = \frac{Q_{cr}}{b^{2.5}g^{0.5}} = \frac{60}{15^{2.5}32.2^{0.5}} = 0.012$$

With m given as $\frac{1}{2}$, enter the chart at the horizontal axis for $Z/b^{2.5} = 0.012$ to the $m = \frac{1}{2}$ line; find

$$\frac{z_{cr}}{b} = 0.052$$

Solving, we obtain

$$z_{cr} = 0.052(15)$$

$$z_{cr} = 0.78 \text{ ft}$$

7.5 EQUATIONS FOR UNIFORM OPEN-CHANNEL FLOWS

In this section, we will develop equations for laminar and for turbulent open-channel flow. The conditions are that the liquid depth and flow rate are constant at any cross section; the water surface and the channel bottom are parallel. Up to now, we have considered the open channels of study to be horizontal, whereas in fact there must be at least a very mild slope in the channel to sustain the flow. The forces of importance are friction (due to viscosity) and gravity. Pressure forces, as we will see, are not as significant. For open-channel flow to exist, gravity forces must overcome the friction or viscous forces, and this requires a nonzero slope.

7.5.1 LAMINAR OPEN-CHANNEL FLOW

Let us first consider laminar flow down an incline. This type of flow occurs in a thin sheet of liquid flow on, for example, a long, sloping roof. Frictional forces are significant. The case we will examine is flow down a very wide incline that is essentially two-dimensional. Figure 7.9 illustrates the situation—the x -direction is along the surface, the z -direction is normal to it, and the y -direction is into the plane of the page. For laminar flow, only the velocity in the x -direction, V_x , is nonzero. Moreover, we expect V_x to be a function of only z . An expected-velocity profile (V_x versus z) is shown in the figure.

Figure 7.10a shows a control volume consisting of an infinitesimal volume element with x -directed forces of pressure, gravity, and shear acting on it. By applying the momentum equation, we obtain

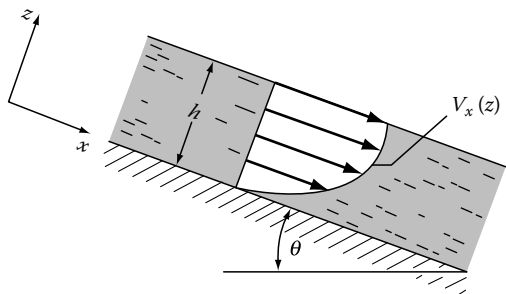


FIGURE 7.9 Laminar uniform open-channel flow.

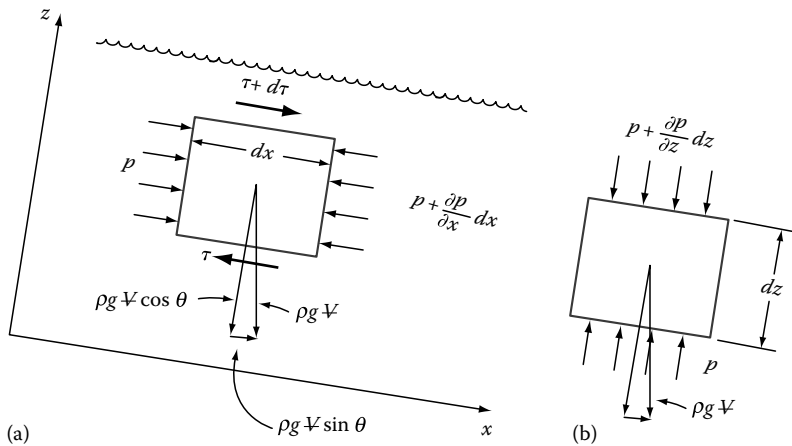


FIGURE 7.10 Control volume with forces acting on it for uniform open-channel flow.

$$\sum F_x = ma = 0$$

because the acceleration is zero. By substitution,

$$\sum F_x = -\tau dx dy + (\tau + d\tau)dx dy + \rho g dx dy dz \sin \theta + p dy dz - \left(p + \frac{\partial p}{\partial x} dx\right) dy dz = 0$$

Simplifying yields

$$\frac{d\tau}{dz} + \rho g \sin \theta - \frac{\partial p}{\partial x} = 0 \quad (7.19)$$

To evaluate p and $\partial p/\partial x$, we now write the momentum equation for the z -direction. Referring to Figure 7.10b, we have, for a non-accelerating control volume,

$$\sum F_z = 0$$

or

$$\sum F_z = p dx dy - \left(p + \frac{\partial p}{\partial z} dz\right) dx dy + \rho g dx dy dz \cos \theta = 0$$

Simplifying, we get

$$\frac{\partial p}{\partial z} = \rho g \cos \theta \quad (7.20)$$

Integrating with respect to z gives

$$p = \rho g z \cos \theta + f_1(x) + C_1 \quad (7.21)$$

where: $f_1(x)$ is an unknown function of x
 C_1 is a constant of integration

To evaluate $f_1(x)$ and C_1 , we must ensure that Equation 7.21 satisfies the boundary condition

$$\text{At } z = h, \quad p = p_{\text{atm}} = \text{a constant}$$

Applying the boundary condition to Equation 7.21 brings

$$p_{\text{atm}} = \rho g h \cos \theta + f_1(x) + C_1$$

We therefore conclude that

$$f_1(x) = 0$$

and

$$C_1 = p_{\text{atm}} - \rho g h \cos \theta$$

Substitution into Equation 7.21 gives

$$p - p_{\text{atm}} = \rho g z \left(1 - \frac{h}{z} \right) \cos \theta \quad (7.22)$$

which is the hydrostatic equation. Differentiating with respect to x , we get

$$\frac{\partial p}{\partial x} = 0$$

Thus, the x -directed momentum Equation 7.19 becomes

$$\frac{d\tau}{dz} = \rho g \sin \theta$$

Integrating with respect to z yields

$$\tau = -\rho g z \sin \theta + C_2 \quad (7.23a)$$

This equation must satisfy the boundary condition

At $z = h$, $\tau = 0$ = shear stress exerted on surface of liquid by air

Applying the boundary condition to Equation 7.23a, we obtain

$$C_2 = \rho g h \sin \theta$$

and therefore,

$$\tau = -\rho g (z - h) \sin \theta \quad (7.23b)$$

For laminar flow in the x -direction, Newton's law of viscosity is

$$\tau = \mu \frac{dV_x}{dz}$$

Combining with Equation 7.23b and rearranging give

$$\frac{dV_x}{dz} = \rho g (h - z) \sin \theta$$

After integrating with respect to z , we have

$$V_x = \rho g \left(h z - \frac{z^2}{2} \right) \sin \theta + C_3 \quad (7.24a)$$

which must satisfy the boundary condition of zero velocity at the wall:

$$\text{At } z = 0, \quad V_x = 0$$

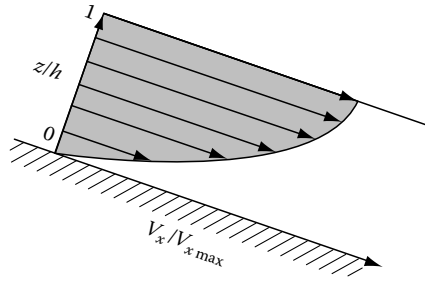


FIGURE 7.11 Dimensionless velocity distribution for laminar flow down an incline.

Applying this boundary condition gives $C_3 = 0$. Thus, after simplification, the velocity is

$$V_x = \frac{\rho g}{\mu} \frac{h^2}{2} \left(\frac{2z}{h} - \frac{z^2}{h^2} \right) \sin \theta \quad (7.24b)$$

The maximum velocity occurs where $z = h$:

$$V_{x \max} = \frac{\rho g}{\mu} \frac{h^2}{2} \sin \theta \quad (7.25)$$

In terms of $V_{x \max}$, V_x is

$$\frac{V_x}{V_{x \max}} = \left(\frac{2z}{h} - \frac{z^2}{h^2} \right) \left(\begin{array}{l} \text{laminar flow} \\ \text{down an incline} \end{array} \right) \quad (7.26)$$

A dimensionless plot of $V_x/V_{x \max}$ versus z/h is provided in Figure 7.11.

The volume flow rate is obtained by integration of Equation 7.24b over the cross-sectional flow area:

$$Q = \int_0^h \int_0^b V_x dy dz$$

where b is the width of the channel. After substitution and integration, we obtain

$$Q = \frac{\rho g h^3 b}{3\mu} \sin \theta = \frac{g h^3 b}{3\nu} \sin \theta \left(\begin{array}{l} \text{laminar flow} \\ \text{down an incline} \end{array} \right) \quad (7.27)$$

Thus, gravity directly influences the volume flow rate, whereas kinematic viscosity is inversely proportional to it. Forces due to pressure do not influence Q .

7.5.2 REYNOLDS NUMBER AND TRANSITION

Just as in pipe flow, there exists a transition region in open-channel flow between the laminar and turbulent regimes. Again, the Reynolds number is the basis on which the flow can be classified. In open-channel flow, the Reynolds number is defined as

$$\text{Re} = \frac{\rho V R_h}{\mu} \quad (7.28)$$

where the characteristic length R_h is the hydraulic radius defined earlier as the ratio of cross-sectional flow area to wetted perimeter. The hydraulic radius is one-fourth the hydraulic diameter, which was introduced in Chapter 5. For flow in an open channel, transition occurs over the Reynolds number in the range of 5×10^2 to 2×10^3 . For our purposes, we will assume that transition occurs at a Reynolds number of 1 000. To achieve this value in a rectangular channel 3 m wide carrying water at a depth of 1 m, the velocity of flow is calculated to be

$$\begin{aligned} V &= \frac{1\,000\mu}{\rho R_h} = \frac{1\,000(0.89 \times 10^{-3})}{(1\,000)(3)(1)/5} \\ &= 1.48 \times 10^{-3} \text{ m/s} = 1.48 \text{ mm/s} \end{aligned}$$

where property values were obtained from Table A.5. In most open-channel flows, the velocity is usually several meters per second. Thus, most common open-channel flows are turbulent.

As with flow in pipes, open-channel flows exhibit frictional characteristics. Because of the highly turbulent nature of the flow, these frictional effects are for the most part independent of the Reynolds number. Experiments have shown that the one-dimensional approximation is suitable for modeling open-channel flows. In the following paragraphs, we will develop equations for this purpose.

7.5.3 TURBULENT OPEN-CHANNEL FLOW

Consider a uniform open-channel flow in a prismatic channel at steady conditions. The flow is fully turbulent and is assumed to be one-dimensional; that is, the velocity is a constant at any point in a given cross section. Figure 7.12 illustrates the situation with the x -direction along the channel and the z -direction upward and normal to the channel bottom. The y -direction is into the paper. The liquid depth is h .

The control volume shown has forces due to pressure, gravity, and viscosity acting on it. The momentum equation in the x -direction is

$$\begin{aligned} \sum F_x &= 0 \\ &= -\tau_w dA_s + \rho g A dx \sin \theta + pA - \left(p + \frac{\partial p}{\partial x} dx \right) A = 0 \end{aligned}$$

where: τ_w = wall shear stress

dA_s = wall area over which τ_w acts and is equal to the product of wetted perimeter and dx

A = cross-sectional area of the flow

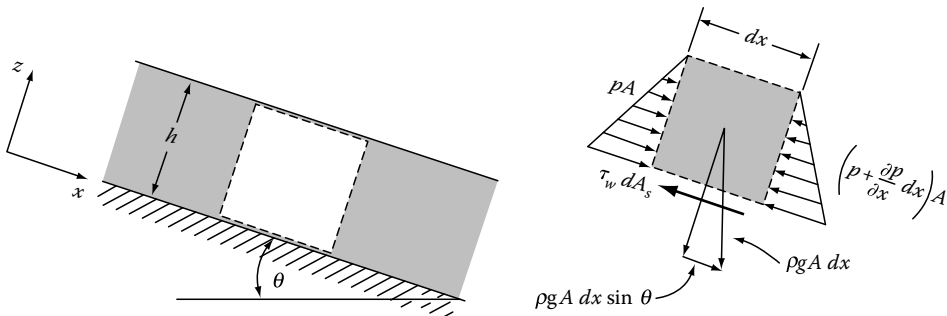


FIGURE 7.12 A control volume for one-dimensional, turbulent, uniform open-channel flow.

As with laminar flow, it can be shown that $\partial p / \partial x = 0$; consequently, pressure does not enter into the mathematical model for uniform flow. The x -momentum equation thus becomes

$$\tau_w(P dx) + \rho g A dx \sin \theta = 0$$

or

$$\tau_w = \rho g \frac{A}{P} \sin \theta = \rho g R_h \sin \theta \quad (7.29)$$

where P is the wetted perimeter. The wall shear stress is expressed in terms of a friction factor as in pipe flow:

$$\tau_w = \frac{f}{4} \frac{\rho V^2}{2} \quad (7.30)$$

Combining with Equation 7.29 and solving for velocity, we obtain

$$V = \left(\frac{8gR_h}{f} \sin \theta \right)^{1/2} \quad (7.31)$$

The term $\sin \theta$ is called the **slope** because for small angles, $\sin \theta = \tan \theta = \theta$, or the slope S . Equation 7.31 is known as the **Chezy formula**, which was later modified to better describe experimental data. It was originally believed that $\sqrt{8g/f}$ was a constant dependent on surface roughness only. When experiments showed that it also depends on channel dimensions, the following formula was derived:

$$\sqrt{\frac{8g}{f}} = \frac{1}{n} (R_h)^{1/6} \quad (7.32)$$

where n is called the **Manning roughness coefficient** with dimensions of $(L)^{1/6}$. Coefficient n is a function of several factors: the roughness of the channel wall; the vegetation, if any, that is common in natural streams; channel irregularity such as changes in cross section (sand bars, ridges, depressions, holes, etc.); channel alignment, which depends on curvature of the path (smooth as opposed to sharp); and several other factors detailed in hydraulics texts. This coefficient has the same significance in open-channel flow as ε/D has in pipe flow. Typical values of the Manning coefficient for various channel shapes and beds are provided in Table 7.2.

Combining Equations 7.31 and 7.32 gives the Manning formula for open-channel flow:

$$V = \frac{(R_h)^{2/3} (S)^{1/2}}{n} \quad (7.33)$$

This equation is independent of liquid properties and applies only to fully developed turbulent flow. The liquid velocity in an open channel is thus a function of slope, channel geometry, and an inverse function of the wall roughness.

Example 7.5

Water flows in a 2-m-diameter culvert at a depth of 1.2 m. The culvert is uniform in cross section, made of concrete, and laid on a slope of 0.5° . Determine the volume flow rate through the culvert.

TABLE 7.2
Average Values of the Manning Roughness Coefficient for Various Channels and Bed Materials

Channel or Bed Material	Manning Coefficient, <i>n</i>	
	(m) ^{1/6}	(ft) ^{1/6}
<i>Metal</i>		
Brass	0.010	0.0067
Steel (smooth painted or unpainted)	0.012	0.0081
Steel (welded)	0.012	0.0081
Steel (riveted)	0.016	0.011
Cast iron (coated)	0.013	0.0087
Cast iron (uncoated)	0.014	0.0094
Wrought iron (black)	0.014	0.0094
Wrought iron (galvanized)	0.016	0.011
Corrugated metal	0.024	0.016
<i>Nonmetal</i>		
Cement (concrete)	0.012	0.0081
Wood	0.012	0.0081
Wood planks	0.015	0.010
Clay	0.015	0.010
Brickwork	0.014	0.0094
Rubble masonry (cemented)	0.025	0.017
Asphalt (smooth)	0.013	0.0087
<i>Excavated or dredged</i>		
Earth (straight, uniform, weathered)	0.022	0.012
Earth (winding, sluggish, some weeds)	0.030	0.020
Channels (not maintained, weeds, brush)	0.080	0.054

Source: Adapted from Chow, V.T., *Open-Channel Hydraulics*, McGraw-Hill, Inc., New York, 1959.

SOLUTION

The geometry of the cross section is given in Table 7.1, where $z = 1.2$ m and $D = 2$ m. The equations for area and the other factors are given in terms of α , and α is found in terms of z by writing

$$\frac{D}{2} + \frac{D}{2} \cos\left(180 - \frac{\alpha}{2}\right) = z$$

or

$$1 + \cos\left(180 - \frac{\alpha}{2}\right) = 1.2$$

Solving, we get

$$\alpha = 203^\circ = 3.53 \text{ rad}$$

Substituting into the appropriate equations of Table 7.1 gives

$$\begin{aligned} A &= \frac{D^2}{8} (\alpha - \sin \alpha) = \frac{(2)^2}{8} (3.53 - \sin 3.53) \\ &= 1.95 \text{ m}^2 \end{aligned}$$

and

$$R_h = \frac{D}{4} \left(1 - \frac{\sin \alpha}{\alpha} \right) = \frac{2}{4} \left(1 - \frac{\sin 3.53}{3.53} \right) \\ = 0.55 \text{ m}$$

For a slope of 0.5° , we calculate $S = \sin \theta = \sin 0.5 = 0.00873$. (Note also that $\tan 0.5 = 0.00873$ and $0.5^\circ = 0.00873 \text{ rad.}$) For a concrete culvert, Table 7.2 shows $n = 0.012 \text{ m}^{1/6}$. Assuming fully turbulent flow, the Manning equation (Equation 7.33) applies:

$$V = \frac{(R_h)^{2/3} (S)^{1/2}}{n} = \frac{(0.55)^{2/3} (0.00873)^{1/2}}{0.012} \\ = 5.23 \text{ m/s}$$

As a check on the turbulent-flow assumption, we find

$$\text{Re} = \frac{\rho V R_h}{\mu} = \frac{1000(5.23)(0.55)}{0.89 \times 10^{-3}} = 3.23 \times 10^6 > 10^3$$

Because the Reynolds number is greater than 1000 (the transition value), the flow is turbulent. The volume flow rate is calculated as

$$Q = AV = 1.95(5.23)$$

$$Q = 10.2 \text{ m}^3/\text{s}$$

Example 7.6

A rectangular concrete channel with a width of 18 ft conveys water at $350 \text{ ft}^3/\text{s}$. The channel has a slope of 0.001. Determine the liquid depth for uniform flow. Is the flow supercritical or subcritical?

SOLUTION

From Table 7.2, we get $n = 0.0081 \text{ ft}^{1/6}$. For a rectangular cross section, Table 7.1 shows that

$$R_h = \frac{bz}{b + 2z}$$

Substitution into Equation 7.33 yields

$$V = \left(\frac{bz}{b + 2z} \right)^{2/3} \frac{S^{1/2}}{n} = \frac{Q}{bz}$$

or

$$\left(\frac{18z}{18 + 2z} \right)^{2/3} \frac{\sqrt{0.001}}{0.0081} = \frac{350}{18z}$$

Simplifying, we get

$$\left(\frac{18z}{18 + 2z} \right)^{2/3} = \frac{4.981}{z}$$

Solving by trial and error yields the following:

<i>z</i> (ft)	LHS	RHS
5	2.18	0.996
4	2.77	1.25
3	1.72	1.66
2.75	1.64	1.81
2.85	1.67	1.75
2.9	1.69	1.72
2.92	1.69	1.705
2.93	1.70	1.70

Thus, the depth for uniform flow is

$$z = 2.93 \text{ ft}$$

For critical flow, we use Equation 7.17*a*:

$$\frac{V_{\text{cr}}^2}{g} = z_m$$

where: $V_{\text{cr}} = \frac{Q}{bz_{\text{cr}}}$

$$z_m = z_{\text{cr}}$$

So, by substitution,

$$\frac{Q^2}{b^2 z_{\text{cr}}^2 g} = z_{\text{cr}}$$

or

$$z_{\text{cr}}^3 = \frac{(350)^2}{18^2(32.2)}$$

$$z_{\text{cr}} = 2.27 \text{ ft}$$

Because $z > z_{\text{cr}}$ we conclude that the flow is subcritical. Alternatively, we find that

$$\frac{V^2}{gz} = \frac{Q^2}{b^2 z^3 g} = \frac{350^2}{18^2(32.2)(2.93)^3} = 0.466$$

Because the Froude number is less than unity, the flow is subcritical.

As we saw in the last example, uniform flow calculations require a trial-and-error solution. As with critical flow, dimensionless curves have been prepared for uniform flow to simplify the calculation procedure. Figure 7.13 is a graph of $AR_h^{2/3}/b^{8/3}$ and $AR_h^{2/3}/D^{8/3}$ versus z/b and z/D . Thus, knowing the channel cross section and material allows us to find the depth for uniform flow.

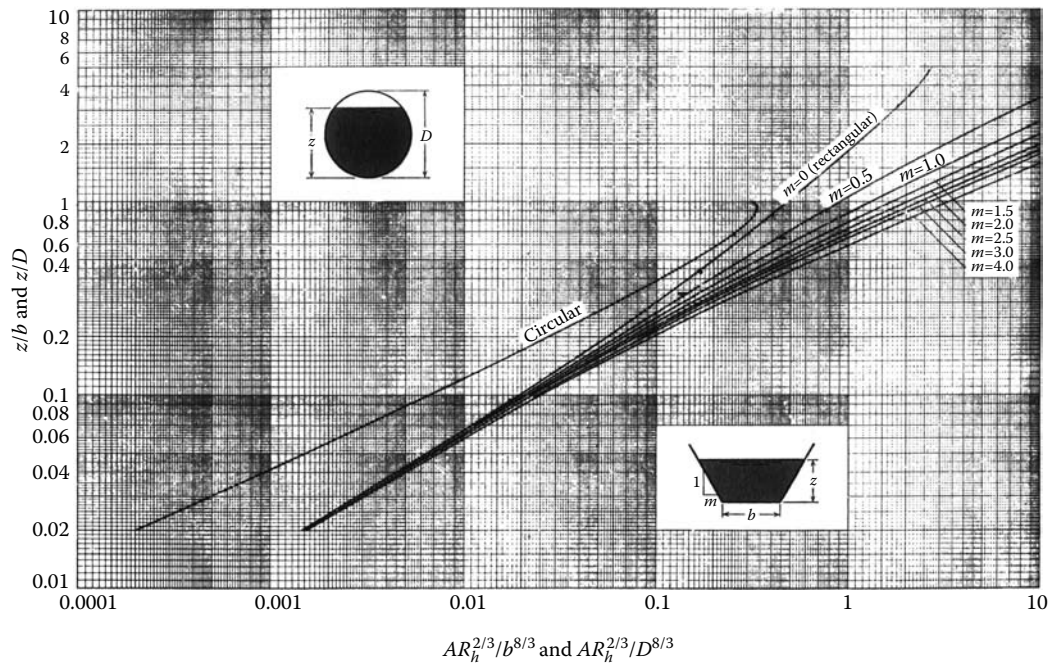


FIGURE 7.13 Curves for finding uniform depth in open-channel flow. (From Chow, V.T., *Open-Channel Hydraulics*, McGraw-Hill, Inc., New York, 130, 1959. With permission.)

Example 7.7

Find the uniform flow depth for the channel described in Example 7.6 (rectangular; $b = 18$ ft, $S = 0.001$, $n = 0.008$ $1 \text{ ft}^{1/6}$, and $Q = 350$ ft^3/s). Use Figure 7.13.

SOLUTION

The volume flow rate in the channel is given by

$$Q = AV = \frac{AR_h^{2/3}S^{1/2}}{n}$$

from which we find

$$AR_h^{2/3} = \frac{Qn}{S^{1/2}} = \frac{350(0.0081)}{\sqrt{0.001}} = 89.65$$

With $b = 18$ ft,

$$\frac{AR_h^{2/3}}{b^{8/3}} = \frac{89.65}{(18)^{8/3}} = 0.0403$$

Using Figure 7.13, enter the chart from the horizontal axis at 0.0403; moving to the $m = 0$ line, read from the vertical axis:

$$\frac{z}{b} = 0.16$$

which yields

$$z = 0.16(18)$$

$$z = 2.88 \text{ ft}$$

This result is different by only 1.7% from the 2.93 ft found by trial and error in Example 7.6.

7.6 HYDRAULICALLY OPTIMUM CROSS SECTION

A **hydraulically optimum cross section** in open-channel flow is one that provides maximum conveyance or volume-carrying capacity for a given flow area. In the preceding discussion, we found that the discharge in an open channel can be obtained from the Manning formula for velocity:

$$Q = AV = \frac{AR_h^{2/3} S^{1/2}}{n}$$

or

$$Q = \frac{A^{5/3} S^{1/2}}{P^{2/3} n} \quad (7.34)$$

from which it is seen that for a given slope and area, the wetted perimeter P must be minimized if Q is to be maximized. Of the four cross sections in Table 7.1, the semicircle has the least perimeter with the same area. Thus, the semicircle is said to be the most hydraulically efficient of all cross sections. In practice, however, it may be impractical to construct a semicircular channel owing to conventional construction techniques and use of materials. (Digging and earth-moving methods produce planar walls more conveniently, for example, and materials such as bricks and wood are manufactured in planar configuration.) It is therefore of practical interest to examine hydraulically optimum cross sections for other shapes.

Consider a channel of rectangular cross section. The channel width is b , and the liquid depth is z . The flow area is

$$A = bz$$

or

$$b = \frac{A}{z}$$

and the wetted perimeter is

$$P = 2z + b$$

In terms of area,

$$P = 2z + \frac{A}{z}$$

For maximum discharge, the perimeter P must be a minimum; differentiating with respect to z and setting the result equal to zero yield

$$\frac{dP}{dz} = 2 - \frac{A}{z^2} = 0$$

Solving, we get

$$z^2 = \frac{A}{2} = \frac{bz}{2}$$

or

$$z = \frac{b}{2}$$

So for maximum flow through a rectangular open channel, the liquid depth should equal half the channel width.

Example 7.8

Determine the dimensions of a hydraulically optimum trapezoidal cross section using the notation of Figure 7.14.

SOLUTION

The area for the trapezoidal section is

$$A = bz + \frac{z^2 \cos \alpha}{\sin \alpha} = bz + z^2 \cot \alpha \quad (i)$$

Rewriting, we have

$$b = \frac{A}{z} - z \cot \alpha$$

The wetted perimeter is

$$P = b + \frac{2z}{\sin \alpha} = \frac{A}{z} - z \cot \alpha + \frac{2z}{\sin \alpha}$$

Differentiating with respect to z gives

$$\frac{dP}{dz} = -\frac{A}{z^2} - \cot \alpha + \frac{2}{\sin \alpha}$$

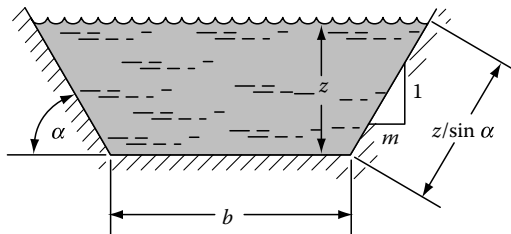


FIGURE 7.14 A trapezoidal cross section.

For minimum perimeter, $dP/dz = 0$. Solving, we obtain

$$z^2 = \frac{A \sin \alpha}{2 - \cos \alpha} \quad (\text{ii})$$

Next differentiate z with respect to α and set the result equal to zero:

$$2z \frac{dz}{d\alpha} = A \left[\frac{(2 - \cos \alpha) \cos \alpha - \sin \alpha (\sin \alpha)}{(2 - \cos \alpha)^2} \right] = 0$$

which becomes

$$2 \cos \alpha - 1 = 0$$

We find that

$$\begin{aligned} \cos \alpha &= \frac{1}{2} \\ \alpha &= 60^\circ \end{aligned}$$

Substituting into Equation ii for α gives

$$z^2 = \frac{A}{\sqrt{3}}$$

or

$$A = z^2 \sqrt{3}$$

Combining with the equation for area (Equation i),

$$A = bz + z^2 \cot \alpha = bz + \frac{z^2}{\sqrt{3}}$$

we obtain

$$bz + \frac{z^2}{\sqrt{3}} = z^3 \sqrt{3}$$

or

$$b = \frac{2\sqrt{3}}{3} z$$

The length of the sloping side is

$$\frac{z}{\sin \alpha} = \frac{z}{\sin 60} = \frac{2\sqrt{3}}{3} z = b$$

The wetted length along the sloping sides is the same as the bottom width b . Thus, for a given cross-sectional area, the trapezoidal section that gives a minimum perimeter is half a hexagon. This result can also be derived with the equations of Table 7.1.

7.7 NONUNIFORM OPEN-CHANNEL FLOW

As we mentioned earlier, we will confine our discussion to steady flows. Having previously examined uniform flows, in this section we focus on the two types of nonuniform flow: gradually varied flow and rapidly varied flow.

7.7.1 GRADUALLY VARIED FLOW

In preceding sections, we considered only uniform flow in which the liquid surface in the open channel remained parallel to the channel bottom. We were able to develop expressions for velocity in both laminar and turbulent regimes. Although these expressions are adequate for most open-channel flows, the water depth in a river can change by as much as 100 ft over a distance of 5 mi. In modeling such flows, it is important to remember that the change in depth is gradual. Here again, forces of pressure, viscosity, and gravity influence the flow. In contrast to uniform flow, we will see that pressure does influence the velocity of nonuniform flow. Because the change in flow depth is gradual, moreover, we can assume that frictional losses at any section are given by the Manning equation for uniform flow. Gravity is the primary driving force.

Figure 7.15 illustrates a control volume for analysis of gradually varied flow. The x -direction is taken to be in the direction of flow, the z -direction is normal to the channel bottom, and the y -direction is into the page. The momentum equation for the x -direction is

$$\sum F_x = \iint_{CS} V_x(\rho V_n) dA$$

Applied to Figure 7.15, we have

$$pA - (p + dp)(A + dA) - \tau_w dA_s + \rho g A dx \sin \theta = \rho Q(V + dV - V)$$

where: p = pressure

A = cross-sectional area

τ_w = wall shear stress

dA_s = wetted perimeter times dx

θ = angle of inclination of the channel

Simplifying, we obtain

$$-p dA - A dp - dp dA - \tau_w P dx + \rho g A dx \sin \theta = \rho AV dV$$

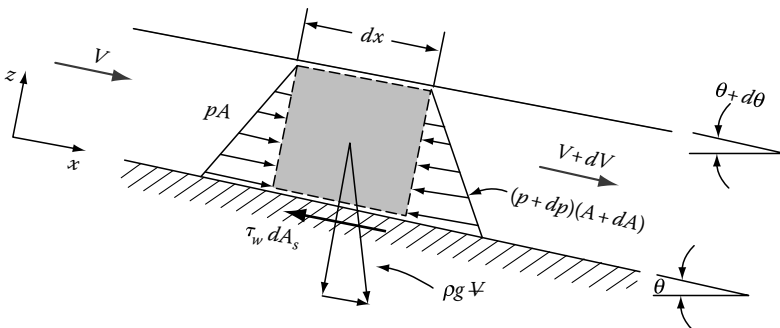


FIGURE 7.15 Gradually varied flow.

Neglecting $dp \, dA$ as a second-order term leaves

$$-d(Ap) - \tau_w P \, dx + \rho g A \, dx \sin \theta = \rho A V \, dV \quad (7.35)$$

The continuity equation is

$$Q = AV = (A + dA)(V + dV)$$

or

$$AV = AV + A \, dV + V \, dA + dA \, dV$$

Again neglecting the second-order term, we rearrange this equation to solve for $V \, dV$:

$$V \, dV = -V^2 \frac{dA}{A}$$

Substituting into Equation 7.35 yields

$$-d(Ap) - \tau_w P \, dx + \rho g A \, dx \sin \theta = -\rho V^2 \, dA \quad (7.36)$$

It is now necessary to evaluate the term

$$d(Ap) = A \, dp + p \, dA$$

This evaluation can be done only if a specific cross section is chosen. In this discussion, we will assume a rectangular section of width b and varying water depth z . The area is $A = bz$, and $dA = b \, dz$. The pressure at the centroid at any section is found with the hydrostatic equation

$$p = \rho g z_c$$

where z_c is the liquid depth from the surface to the centroid of the cross section. For a rectangular section of liquid depth z ,

$$z_c = \frac{z}{2} \cos \theta$$

and so

$$p = \rho g \frac{z}{2} \cos \theta$$

By substitution, then,

$$\begin{aligned} d(Ap) &= d\left(bz \, \rho g \frac{z}{2} \cos \theta\right) = \left(\frac{b \, \rho g}{2} \cos \theta\right) d(z^2) \\ &= \rho g b z \, dz \cos \theta \end{aligned}$$

Substitution into Equation 7.36 yields

$$-\rho g b z \, dz \cos \theta - \tau_w P \, dx + \rho g b z \, dx \sin \theta = -\rho V^2 b \, dz$$

Dividing by bz and regrouping terms give

$$\left(\rho g \sin \theta - \tau_w \frac{P}{A}\right) dx = \left(\rho g \cos \theta - \frac{\rho V^2}{z}\right) dz$$

After further rearrangement, we have

$$\left(\cos \theta - \frac{V^2}{gz}\right) dz = \left(\sin \theta - \frac{\tau_w}{R_h \rho g}\right) dx \quad (7.37)$$

By combining the following definition of τ_w ,

$$\tau_w = \frac{f}{4} \frac{\rho V^2}{2} = \frac{f}{8g} \rho g V^2$$

with

$$\sqrt{\frac{8g}{f}} = \frac{1}{n} R_h^{1/6}$$

we get

$$\tau_w = \frac{n^2}{R_h^{1/3}} \rho g V^2$$

Substitution into Equation 7.37 yields

$$\left(\cos \theta - \frac{V^2}{gz}\right) dz = \left(\sin \theta - \frac{n^2 V^2}{R_h^{4/3}}\right) dx$$

or

$$\frac{dz}{dx} = \frac{\sin \theta - n^2 V^2 / R_h^{4/3}}{\cos \theta - V^2 / gz} \quad (7.38)$$

which is the differential equation for gradually varied flow. Because this equation is nonlinear, it cannot be integrated directly to obtain a closed-form solution for the depth z . Instead, numerical means or a stepwise integration is required.

Before proceeding, however, let us investigate Equation 7.38 for uniform supercritical and subcritical flows. First we use the approximation that $\cos \theta = 1$ for small θ . This assumption is reasonable for gradually varied flow. If the flow is uniform and $V^2/gz \neq 1$, then $dz/dx = 0$; Equation 7.38 becomes

$$0 = \sin \theta - \frac{n^2 V^2}{R_h^{4/3}}$$

With $V = Q/A$, we have

$$\sin \theta = \frac{n^2 Q^2}{A^2 R_h^{4/3}}$$

or

$$Q = \frac{A R_h^{2/3}}{n} \sqrt{\sin \theta}$$

which is identical to the previously derived equation (Equation 7.34) for Q for uniform flow. Only one depth corresponds to this condition of uniform flow for a given slope, flow rate, and area. If the flow is supercritical, then $V^2/gz > 1$, and the denominator of the right-hand side of Equation 7.38 is negative. If the slope $\sin \theta$ is greater than that corresponding to uniform flow, then dz/dx is negative. Thus, the depth decreases with distance downstream. Alternatively, if the slope $\sin \theta$ is less than that corresponding to uniform flow, then dz/dx is positive, and depth increases with distance downstream. For subcritical flow, $V^2/gz < 1$, and the opposite effects are predicted. These comments are summarized in Figure 7.16. The surface curves illustrated there can be calculated with Equation 7.38.

One important application of Equation 7.38 is in calculating a **backwater curve**—the liquid surface upstream of a barrier placed in the channel. The results obtained, in turn, depend on the upstream flow conditions. If the upstream flow is subcritical ($V < \sqrt{gz_{cr}}$), then Equation 7.38 predicts the situation depicted in Figure 7.17a. If the upstream flow is supercritical ($V > \sqrt{gz_{cr}}$), then Equation 7.38 predicts that height increases in the upstream direction as in Figure 7.17b. It is not physically possible for the height to increase in the upstream direction, because far upstream the backwater curve should smoothly intersect the uniform flow curve. Figure 7.17b shows the backwater curve diverging from it.

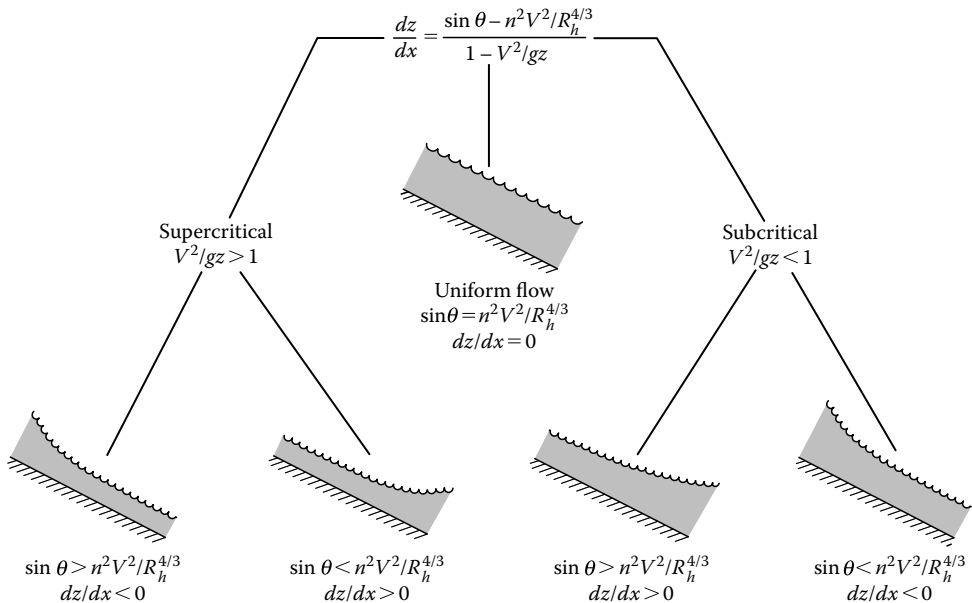


FIGURE 7.16 Analysis of Equation 7.38 with $\cos \theta \approx 1$.

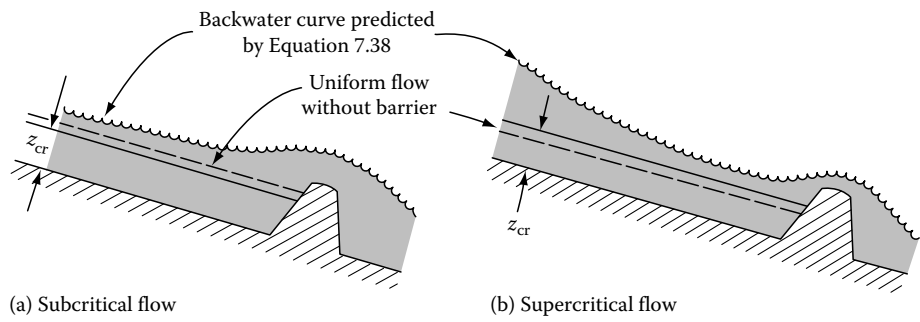


FIGURE 7.17 Flow upstream of a barrier.

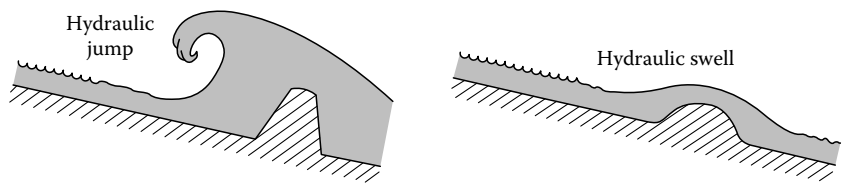


FIGURE 7.18 Supercritical flow adjustment to a barrier: (a) a hydraulic jump ahead of the barrier and (b) a hydraulic swell over the barrier.

When a supercritical flow encounters a barrier, the flow adjusts in the vicinity of the barrier, producing a rapidly varied flow such as a hydraulic jump (huge barrier with respect to the flow depth) or a rise and drop (small barrier). Figure 7.18 illustrates both of these flows.

From the previous discussion, we conclude that in backwater curve calculations, Equation 7.38 is useful only for the physical situation depicted in Figure 7.17a: subcritical flow. To use the equation for solving practical problems, we must rewrite it in a finite difference form as

$$\frac{\Delta z}{\Delta x} = \frac{\sin \theta - n^2 V_{avg}^2 / R_{havg}^{4/3}}{\cos \theta - V_{avg}^2 / g z} \tag{7.39a}$$

where the subscript “avg” denotes an average value. It is apparent that over a channel length Δx , all the flow variables change. To overcome this difficulty, we use average values.

Example 7.9

The city of Memphis, Tennessee, is subject to heavy rainfalls during certain times of the year. Drainage ditches have been dug throughout the city. Most are concrete-lined and all drain ultimately into the Mississippi River.

Consider one such rectangular, concrete-lined channel dug out to a width of 2.5 m and inclined at a slope of 0.002. The channel is very long, and at one end there is a dam that partially restricts the flow. At the dam, the water depth is 3.5 m as sketched in Figure 7.19. Determine the variation of depth with upstream distance if the volume flow rate is 8 m³/s.

SOLUTION

From Table 7.2 for a concrete-lined channel, $n=0.012 \text{ m}^{1/6}$. We must first determine if the flow is subcritical. If not, a rapidly varied flow situation exists, and the backwater curve Equation 7.39a does not apply. To find critical depth, use Equation 7.17a:

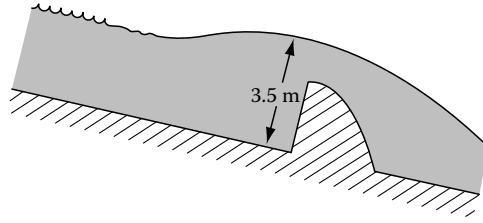


FIGURE 7.19 Backwater curve upstream of a dam.

$$\frac{V_{\text{cr}}^2}{g} = z_m = z_{\text{cr}}$$

With $V = Q/A = Q/bz_{\text{cr}}$, we have

$$\frac{Q^2}{b^2 z_{\text{cr}}^2 g} = z_{\text{cr}}$$

After rearranging and substituting,

$$z_{\text{cr}}^3 = \frac{Q^2}{b^2 g} = \frac{(8)^2}{(2.5)^2 (9.81)} = 1.044$$

Solving, the critical flow depth is

$$z_{\text{cr}} = 1.014 \text{ m}$$

Next, to find the uniform flow depth, we can formulate a trial-and-error solution or we can use Manning's equation and Figure 7.13. Here we use the latter method:

$$Q = AV = A \frac{R_h^{2/3} S^{1/2}}{n}$$

Rearranging and substituting,

$$AR_h^{2/3} = \frac{Qn}{S^{1/2}} = \frac{8(0.012)}{\sqrt{0.002}} = 2.147$$

So

$$\frac{AR_h^{2/3}}{b^{8/3}} = \frac{2.147}{(2.5)^{8/3}} = 0.19$$

At this value, Figure 7.13 gives

$$\frac{z}{b} = 0.52$$

from which we find

$$z = 0.5(2.5) = 1.3 \text{ m}$$

The flow is subcritical because the uniform flow depth is greater than the critical depth; that is, $z > z_{cr}$. Equation 7.39*a* (which applies) is rewritten to solve for Δx :

$$\Delta x = \Delta z \left(\frac{\cos \theta - V_{avg}^2 / g z_{avg}}{\sin \theta - n^2 V_{avg}^2 / R_{havg}^{4/3}} \right)$$

After substituting, we get

$$\Delta x = \Delta z \left(\frac{1 - V_{avg}^2 / 9.81 z_{avg}}{0.002 - (0.012)^2 V_{avg}^2 / R_{havg}^{4/3}} \right) \tag{i}$$

Far upstream of the dam, the depth is 1.3 m. At the dam, the depth is given as 3.5 m. The depth z thus varies from 1.3 to 3.5 m. We arbitrarily divide this depth range into five increments, as shown in columns 1 and 2 of Table 7.3, which displays a summary of the calculations. The last column shows the values of Δx upstream of the dam. A sketch of the backwater curve (z versus x) is given in Figure 7.20.

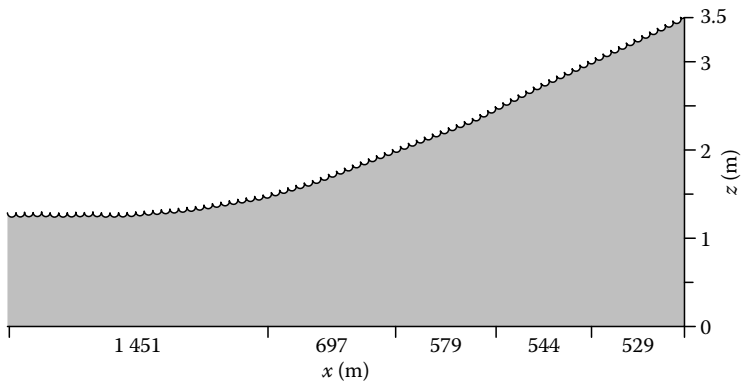


FIGURE 7.20 Backwater curve of Example 7.9.

TABLE 7.3
Summary of Calculations for the Channel of Example 7.9

z	Δz	z_{avg}	$R_{havg}^{4/3} = \left(\frac{bz_{avg}}{b + 2z_{avg}} \right)^{4/3}$	$V_{avg} = \frac{Q}{bz_{avg}}$	$1 - \frac{V_{avg}^2}{9.81z_{avg}}$	$0.002 - \frac{(0.012)^2 V_{avg}^2}{R_{havg}^{4/3}}$	$\frac{\Delta x}{\text{(Equation i)}}$
3.5	0.5	3.25	0.872 5	0.984 6	0.969 6	0.001 883	529
3.0	0.5	2.75	0.817 0	1.164	0.949 8	0.001 745	544
2.5	0.5	2.25	0.747 1	1.422	0.908 4	0.001 570	579
2.0	0.5	1.75	0.656 3	1.829	0.805 1	0.001 155	697
1.5	0.2	1.4	0.575 1	2.286	0.619 5	0.000 427	1 451
1.3							

Note: Channel data: $b = 2.5$ m, $n = 0.012$ m^{1/6}, $Q = 8$ m³/s, and $S = 0.002$.

Note that Equation 7.39a applies only to a rectangular channel. For other types, we have

$$\frac{dz}{dx} = \frac{\sin \theta - n^2 V^2 / R_h^{4/3}}{\cos \theta - 2V^2 / gz} \quad (\text{triangular}) \quad (7.39b)$$

and

$$\frac{dz}{dx} = \frac{\sin \theta - n^2 V^2 / R_h^{4/3}}{\cos \theta - V^2(b + 2mz) / [g(b + mz)z]} \quad (\text{trapezoidal}) \quad (7.39c)$$

The derivation of each of these formulas is reserved as an exercise. By inspection of Equation 7.39 and Table 7.1, we conclude that the general form of these equations is

$$\underbrace{\left(\sin \theta - \frac{n^2 V^2}{R_h^{4/3}} \right)}_{\substack{\text{gravity} \\ \text{term}}} dx = \underbrace{\left(\cos \theta - \frac{V^2}{gz_m} \right)}_{\substack{\text{pressure} \\ \text{term} \\ \text{momentum} \\ \text{or} \\ \text{inertia} \\ \text{term}}} dz$$

Example 7.10

The city of New Orleans, Louisiana, is situated at a relatively low elevation. It is bounded on the north by Lake Pontchartrain and on the south by the Mississippi River. To prevent flooding, levees have been built along the shores of these water masses. Drainage canals have been dug within the city; each leads to the edge of the levee, where a pump is used at appropriate times (as during heavy rainfall) to pump water from the canal and over the levee into the lake.

Consider a single drainage canal, trapezoidal in cross section and lined with concrete. The bottom width is 11 ft, and the channel sides slope upward at 60° . During a rainfall of significant amount, the canal water rises to a point at which the pump is actuated and begins moving water over the levee. After the rainfall, water still drains into the canal from streets, and the pump continues working until the water level drops to nearly its original depth. For this example, we will examine the water surface profile upstream of the pump but neglect the runoff contribution to the flow. The channel slopes downward in the flow direction at an angle of $S = 0.0001$. The pump flow rate is $350 \text{ ft}^3/\text{s}$. At the pump, the water depth is 5.5 ft. Determine the shape of the backwater curve. (See Figure 7.21.)

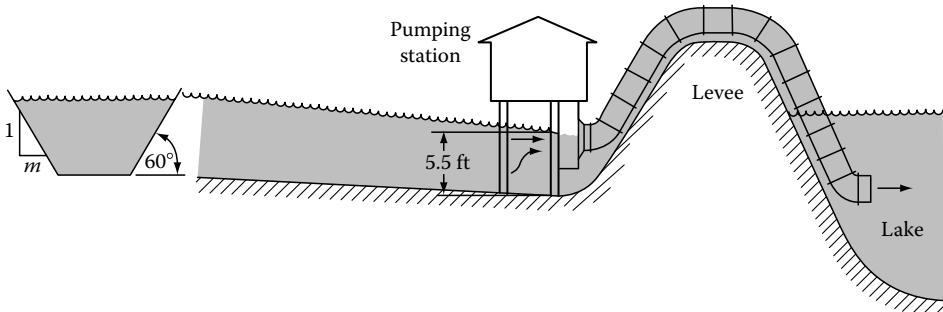


FIGURE 7.21 Schematic of the system described in Example 7.10.

SOLUTION

For a concrete-lined channel, $n = 0.0081 \text{ ft}^{1/6}$ from Table 7.2. From Table 7.1 for a trapezoidal channel,

$$A = (b + mz)z$$

$$R_h = \frac{(b + mz)z}{b + 2z\sqrt{1 + m^2}}$$

$$z_m = \frac{(b + mz)z}{b + 2mz}$$

$$Z = \frac{[(b + mz)z]^{1.5}}{\sqrt{b + 2mz}}$$

From the geometry of the section,

$$\tan(90^\circ - \alpha) = m$$

If $\alpha = 60^\circ$, then

$$m = \tan(30^\circ) = 0.577$$

With $b = 11 \text{ ft}$, by substitution we get

$$A = (11 + 0.577z)z$$

$$R_h = \frac{(11 + 0.577z)z}{11 + 2.309z}$$

$$z_m = \frac{(11 + 0.577z)z}{11 + 1.154z}$$

$$Z = \frac{(11 + 0.577z)z}{\sqrt{11 + 1.154z}}$$

The critical depth of the flow can be calculated with Equation 7.17a:

$$\frac{V_{\text{cr}}^2}{g} = z_m$$

From continuity, $V_{\text{cr}} = Q/A$; therefore,

$$\frac{Q^2}{(11 + 0.577z_{\text{cr}})^2 z_{\text{cr}}^2 g} = \frac{(11 + 0.577z_{\text{cr}})z_{\text{cr}}}{11 + 1.154z_{\text{cr}}}$$

$$\frac{350^2}{(11 + 0.577z_{\text{cr}})^2 z_{\text{cr}}^2 (32.2)} = \frac{(11 + 0.577z_{\text{cr}})z_{\text{cr}}}{11 + 1.154z_{\text{cr}}}$$

Or, after simplifying,

$$\frac{(11 + 0.577z_{\text{cr}})^3 z_{\text{cr}}^3}{11 + 1.154z_{\text{cr}}} = 3804$$

By trial and error, we find

z_{cr}	LHS
10	209,000
8	96,360
6	36,400
3	3,850
2.9	3,460
2.99	3,811

or

$$z_{cr} = 2.99 \text{ ft}$$

Alternatively, Figure 7.8 can be used to find the critical depth as follows. Equation 7.18 gives

$$Z = \frac{Q}{\sqrt{g}} = \frac{350}{\sqrt{32.2}} = 61.9$$

To use the chart, we first find

$$\frac{Z}{b^{2.5}} = \frac{61.9}{11^{2.5}} = 0.154$$

Using this value with $m = 0.577$, we find from Figure 7.8 that

$$\frac{z_{cr}}{b} = 0.26$$

So

$$z_{cr} = 0.26(11) = 2.86 \text{ ft}$$

This result is 4% different from the 2.99 ft obtained by trial and error. Although use of either value is permissible, 2.99 ft is closer to being exact. To find the uniform flow depth, we use Manning's equation and Figure 7.13:

$$\begin{aligned} Q &= AV = \frac{AR_h^{2/3}S^{1/2}}{n} \\ \frac{AR_h^{2/3}}{b^{8/3}} &= \frac{Qn}{S^{1/2}b^{8/3}} \\ &= \frac{(350)(0.0081)}{(0.0001)^{1/2}(11)^{8/3}} = 0.473 \end{aligned}$$

Using this value with $m = 0.577$, we find from Figure 7.13 that

$$\frac{z}{b} = 0.66$$

and for uniform flow, we obtain

$$z = 0.66(11) = 7.26 \text{ ft}$$

Since the uniform flow depth is greater than the critical depth, the flow is subcritical, and Equation 7.39c applies. At the pump, the depth is 5.5 ft; far upstream, the depth is uniform at 7.26 ft. The depth range is divided into four increments arbitrarily, and Equation 7.39c is rewritten in difference form:

$$\Delta x = \Delta z \left\{ \frac{1 - V_{\text{avg}}^2 (11 + 0.577 z_{\text{avg}}) / [(32.2)(11 + 0.577 z_{\text{avg}}) z_{\text{avg}}]}{0.0001 - n^2 V_{\text{avg}}^2 / R_{h \text{ avg}}^{4/3}} \right\} \quad (\text{i})$$

Table 7.4 summarizes the calculations for this equation. A plot of the results is given in Figure 7.22.

7.7.2 RAPIDLY VARIED FLOW

As we previously discussed, an open-channel flow can adjust in two ways to a barrier placed in the stream. If the flow is subcritical, the flow adjusts gradually, and Equation 7.39 can be applied. If the flow is supercritical, the flow adjusts over a relatively short channel length and is therefore called a rapidly varied flow. An example of such a flow is the hydraulic jump. Downstream of the jump, the flow becomes subcritical. Because this change occurs over a short length of channel, the energy loss is considerable. One common example of a hydraulic jump is in a kitchen sink where a downward-moving jet strikes the flat horizontal surface; the flow moves outward radially along the sink surface, and a jump occurs.

In this discussion, we will consider jumps occurring in rectangular cross sections; other cross sections are reserved for the problems at the end of the chapter. A hydraulic jump is illustrated in profile view in Figure 7.23. The channel bed is horizontal. The forces acting are due to gravity and a change in pressure across the jump. It is permissible to neglect the forces due to viscosity because of the relatively short channel length and the highly turbulent nature of the jump.

The momentum equation for one-dimensional flow becomes

$$\sum F_x = \rho Q(V_2 - V_1)$$

or

$$p_1 A_1 - p_2 A_2 = \rho Q(V_2 - V_1) \quad (7.40)$$

From hydrostatics, for a rectangular cross section,

$$p = \rho g z_c$$

where z_c is the distance from the centroid of the liquid cross section to the surface. For a rectangular section,

$$z_c = \frac{z}{2}$$

(See Table 7.1 for other cross sections.) By substitution into Equation 7.40, we obtain

$$\rho g \frac{z_1}{2} (bz_1) - \rho g \frac{z_2}{2} (bz_2) = \rho Q(V_2 - V_1) \quad (7.41)$$

From continuity,

$$Q = AV = bz_1 V_1 = bz_2 V_2$$

TABLE 7.4
Summary of Calculations for the Channel of Example 7.10

z	Δz	z_{avg}	$A_{\text{avg}} = (11 + 0.577z_{\text{avg}}) z_{\text{avg}}$	$R_{\text{havg}}^{4/3} = \left(\frac{A_{\text{avg}}}{11 + 2.309z_{\text{avg}}} \right)^{4/3}$	$V_{\text{avg}} = \frac{Q}{A_{\text{avg}}}$	$\frac{(1 - V_{\text{avg}}^2)(11 + 0.577z_{\text{avg}})}{[(32.2)(11 + 0.577z_{\text{avg}})z_{\text{avg}}]}$	$\left(0.0001 - \frac{n^2 V_{\text{avg}}^2}{R_{\text{havg}}^{4/3}} \right)$	Δx (Equation i)
7.26								
	0.26	7.13	107.8	6.192	3.247	0.9416	-1.171×10^{-5}	-20,906
7.0								
	0.5	6.75	100.5	5.889	3.486	0.9296	-3.516×10^{-5}	-13,219
6.5								
	0.5	6.25	91.29	5.496	3.834	0.9089	-7.548×10^{-5}	-6,020
6.0								
	0.5	5.75	82.33	5.095	4.251	0.8798	-1.327×10^{-4}	-3,311
5.5								$\Sigma \Delta x = -43,466 \text{ ft}$

Note: Channel data: $b = 11 \text{ ft}$, $m = 0.577$, $Q = 350 \text{ ft}^3/\text{s}$, $n = 0.0081 \text{ ft}^{1/6}$, and $S = 0.0001$.

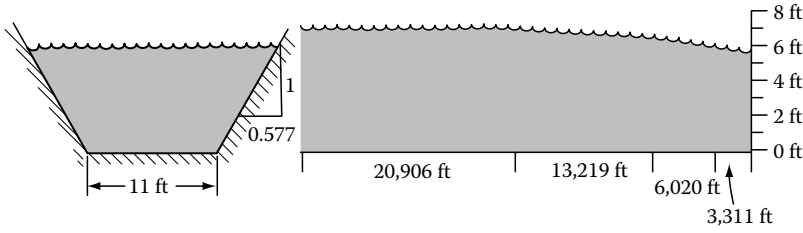


FIGURE 7.22 Backwater curve for the trapezoidal channel of Example 7.10.

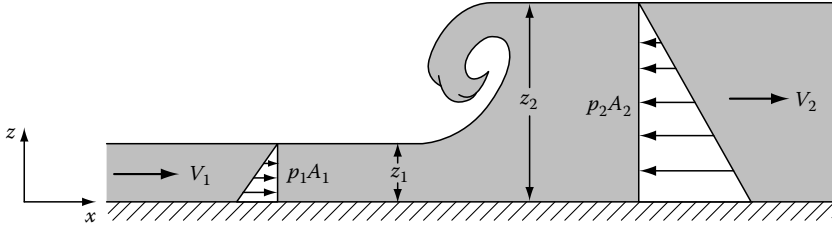


FIGURE 7.23 A hydraulic jump.

Combining with Equation 7.41 and simplifying give

$$\frac{bz_1^2}{2} + \frac{Q^2}{gbz_1} = \frac{bz_2^2}{2} + \frac{Q^2}{gbz_2} \quad (7.42)$$

Rearranging, we get

$$z_2^2 - z_1^2 = \frac{2Q^2}{gb^2} \left(\frac{1}{z_1} - \frac{1}{z_2} \right) = \frac{2Q^2}{gb^2} \left(\frac{z_2 - z_1}{z_1 z_2} \right)$$

Dividing by $z_2 - z_1$ gives

$$z_2 + z_1 = \frac{2Q^2}{gb^2 z_1 z_2} \quad (7.43)$$

from which we get

$$z_2^2 + z_1 z_2 - \frac{2Q^2}{gb^2 z_1} = 0$$

This quadratic equation can be solved for the downstream height as

$$z_2 = -\frac{z_1}{2} \pm \sqrt{\frac{z_1^2}{4} + \frac{2Q^2}{gb^2 z_1}} \quad (7.44a)$$

We reject the negative root because a negative z_2 has no physical meaning. The equation can now be rearranged to give dimensionless quantities:

$$\frac{z_2}{z_1} = -\frac{1}{2} + \sqrt{\frac{1}{4} + \frac{2Q^2}{gb^2 z_1^3}} \quad (7.44b)$$

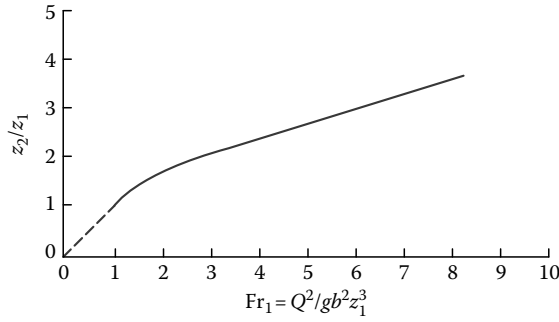


FIGURE 7.24 Depth ratio for hydraulic jump as a function of upstream Froude number.

A graph of this equation is given in Figure 7.24, where the horizontal axis is the upstream Froude number and the vertical axis is z_2/z_1 . If $z_1 = z_2$, then it is obvious that no jump has occurred, so the only portion of the graph that is physically significant is the portion corresponding to $z_2/z_1 > 1$. The upstream Froude number, as mentioned earlier, must be greater than 1 (supercritical flow) if a jump is to exist.

The energy loss across the jump, gh_j , can be calculated by using the modified Bernoulli equation applied at the free surface:

$$\frac{p_{\text{atm}}}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_{\text{atm}}}{\rho} + \frac{V_2^2}{2} + gz_2 + gh_j$$

from which we have

$$gh_j = \frac{V_1^2 - V_2^2}{2} + g(z_1 - z_2)$$

By combining with the continuity equation,

$$Q = AV = bz_1 V_1 = bz_2 V_2$$

we get

$$gh_j = \frac{Q^2}{2b^2 z_1^3} - \frac{Q^2}{2b^2 z_2^3} + g(z_1 - z_2) \quad (7.45)$$

Substitution for Q^2/b^2 from Equation 7.43 gives

$$gh_j = \frac{(z_2 + z_1)gz_2}{2(2z_1)} - \frac{(z_2 + z_1)gz_1}{2(2z_2)} + g(z_1 - z_2)$$

which finally becomes

$$h_j = \frac{(z_2 - z_1)^3}{4z_1 z_2} \quad (7.46a)$$

which is valid only for a rectangular channel. Thus, for a given volume flow, the rate of energy loss in a hydraulic jump is

$$\frac{dW}{dt} = \rho g Q h_j \quad (7.46b)$$

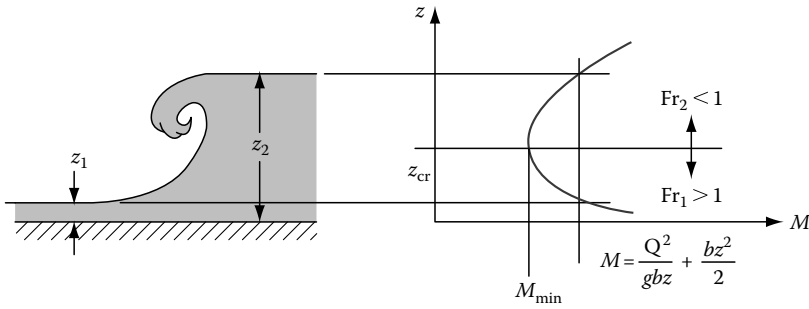


FIGURE 7.25 A momentum diagram for a hydraulic jump.

An alternative representation of hydraulic jump can be developed from a graph of height z as a function of the parameter appearing in Equation 7.42—namely, the momentum of the flow:

$$M = \frac{Q^2}{gbz} + \frac{bz^2}{2} \quad (7.47)$$

Figure 7.25 illustrates the relationship between this graph and a hydraulic jump. The curve is similar to a specific-energy diagram but should not be confused with it. The heights z_1 and z_2 are known as **conjugate depths** of the jump that lie on a vertical line through the graph. The critical depth z_{cr} occurs when M is a minimum. When $z < z_{cr}$, the flow is supercritical, and the curve corresponds to the upstream condition. When $z > z_{cr}$, the flow is subcritical, and the curve corresponds to the downstream condition. The momentum of the flow in both conditions is the same.

Example 7.11

A hydraulic jump occurs in a channel 1 m wide that conveys water at $0.6 \text{ m}^3/\text{s}$. The upstream depth of flow is 0.2 m.

- Determine the downstream height.
- Calculate the energy loss in the jump.
- Sketch a momentum diagram for the channel and show where the operating point appears.

SOLUTION

- For water, $\rho = 1\,000 \text{ kg/m}^3$. For the hydraulic jump of the problem, Equation 7.44b applies:

$$\frac{z_2}{z_1} = -\frac{1}{2} + \sqrt{\frac{1}{4} + \frac{2Q^2}{gb^2z_1^3}}$$

By substitution, we find

$$\frac{2Q^2}{gb^2z_1^3} = \frac{2(0.6)^2}{9.81(1)^2(0.2)^3} = 9.17$$

and so

$$\frac{z_2}{z_1} = -\frac{1}{2} + 3.07 = 2.57$$

Therefore,

$$z_2 = 2.57(0.2)$$

$$z_2 = 0.514 \text{ m}$$

b. The rate of energy loss in the jump is found with

$$h_j = \frac{(z_2 - z_1)^3}{4z_1 z_2} = \frac{(0.514 - 0.2)^2}{4(0.514)(0.2)}$$

$$h_j = 0.075 \text{ 3 m}$$

The rate of energy loss is

$$\frac{dW}{dt} = \rho g Q h_j = (1\,000 \text{ kg/m}^3) (9.81 \text{ m/s}^2) (0.6 \text{ m}^3/\text{s}) (0.075 \text{ 3 m})$$

or

$$\frac{dW}{dt} = 443 \text{ W}$$

c. The momentum for this flow situation is

$$M = \frac{Q^2}{g b z} + \frac{b z^2}{2} = \frac{(0.6)^2}{9.81(1)z} + \frac{z^2}{2}$$

or

$$M = \frac{0.036 \text{ 7}}{z} + \frac{z^2}{2}$$

This equation is written for a constant flow rate. A plot of this equation is given in Figure 7.26. The operating point is shown.

Similar developments for other than rectangular cross sections lead to the following formulas for a hydraulic jump:

Triangular channel:

$$\left(\frac{z_1^3}{z_2^3} + \frac{z_1}{z_2} + 1 \right) \frac{z_2^2}{z_1 + z_2} = \frac{3Q^2}{m^2 g z_2^2 z_1^2} \quad (7.48)$$

Trapezoidal channel:

$$3b(z_1 + z_2) + 2m(z_1^2 + z_1 z_2 + z_2^3) = \frac{6Q^2}{g z_1 z_2} \left[\frac{b + m(z_1 + z_2)}{(b + m z_2)(b + m z_1)} \right] \quad (7.49)$$

The derivation of these equations is left as an exercise.

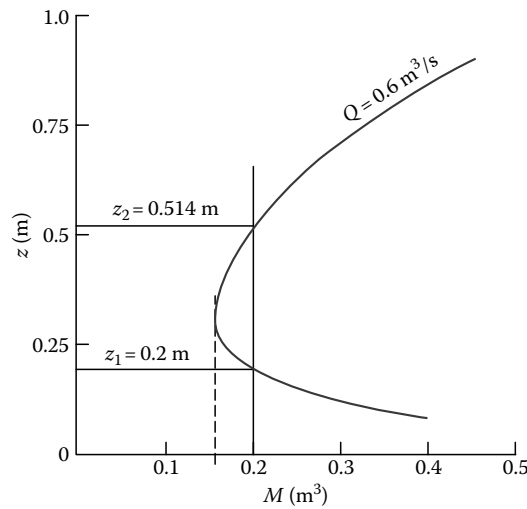


FIGURE 7.26 Graph of the momentum function for the channel of Example 7.11.

7.8 SUMMARY

This chapter introduced some of the simpler topics of open-channel flow. We saw that various types of flows can exist and that geometry greatly influences the flow itself. We calculated energies associated with open-channel flows; from these, we determined that critical depth and uniform flow depth are very significant. We were able to formulate an expression for velocity in both laminar and turbulent regimes and used the turbulent expression to predict backwater surface profiles. We also found the hydraulically optimum cross section, and finally, we wrote descriptive equations for hydraulic jumps. This introduction to open-channel flow constitutes a solid foundation for further study in hydraulics.

PROBLEMS

Sluice Gate and Venturi Flume

- 7.1** The right-hand side of Equation 7.7 for flow under a sluice gate in a rectangular channel is $Q^2/b^2z_1^3g$. Show that this term is really the Froude number upstream of the gate.
- 7.2** A rectangular channel 8 ft wide conveys water at $300 \text{ ft}^3/\text{s}$. A partially raised sluice gate in the channel restricts the flow. Determine the downstream liquid height if the upstream height is 6 ft.
- 7.3** A rectangular channel 0.5 m wide conveys water. A partially raised sluice gate in the channel restricts the flow such that the upstream height is 1 m and the downstream height is 0.3 m. Determine the volume flow rate under the gate.
- 7.4** A rectangular channel 2.3 m wide conveys water at a volume flow rate of $30 \text{ m}^2/\text{s}$. A partially raised sluice gate in the channel restricts the flow so that the downstream water height is 0.68 m. Determine the upstream water height.
- 7.5** Plot the sluice gate equation (Equation 7.7) to obtain a curve similar to that in Figure 7.4a.

- a. Plot the following data on the same graph to determine how well the sluice gate equation describes actual conditions:

$Q_{ac} = 0.341 \text{ ft}^3/\text{s}$ (all cases)

$b = 0.5 \text{ ft}$

z_1 (ft)	z_2 (ft)
0.479	0.167
0.500	0.161
0.510	0.156
0.552	0.155
0.625	0.135
0.635	0.135
0.667	0.125
0.708	0.104
0.906	0.0989

- b. Use the height data with the sluice gate equation to find $Q_{th}^2/b^2z_1^3g$. Compare to $Q_{ac}^2/b^2z_1^3g$. (Data were taken in the University of New Orleans Fluid Mechanics Laboratory.)

- 7.6 a. Derive the sluice gate equation for flow in a triangular cross-sectional channel:

$$\left(\frac{z_2}{z_1}\right)^4 \left(1 - \frac{z_2}{z_1}\right) = \frac{Q^2}{2m^2z_1^5g}$$

- b. Construct a plot of z_2/z_1 versus $Q^2/m^2z_1^5g$.
 c. Differentiate the expression to find the location of z_2/z_1 that corresponds to Q_{max} .
 d. Substitute this ratio into the equation and evaluate $Q_{max}^2/m^2z_1^5g$.

- 7.7 Derive the sluice gate equation for a trapezoidal cross-sectional channel:

$$\left(\frac{bz_2 + mz_2^2}{bz_1 + mz_1^2}\right)^2 \left(1 - \frac{z_2}{z_1}\right) = \frac{Q^2}{2gz_1(bz_1 + mz_1^2)^2}$$

- 7.8 Derive the sluice gate equation for open-channel flow in a circular channel.
 7.9 A venturi flume is placed in a rectangular channel. The upstream channel width is 3 m, and the minimum area section is of width 2 m. The upstream water height is 2 m; the height at the throat is 1 m. Determine the volume flow rate through the channel.
 7.10 A venturi flume is placed in a rectangular channel that conveys water at 250 ft³/s. The upstream channel width is 12 ft, and the minimum width in the flume is 10 ft. The upstream water depth is 8 ft. What is the expected water depth at the minimum width?
 7.11 An open-channel-flow apparatus in a hydraulics laboratory is rectangular in cross section and 16 in. wide. A venturi flume is to be placed in the channel to give the volume flow rate. The water height upstream of the flume is 18 in., and at the minimum width it is desired to make the depth about 14 in. Determine the minimum width of the venturi flume for a volume flow rate of 7 ft³/s.

Specific-Energy Diagram

- 7.12 Consider a rectangular channel of width 2 ft.

- a. Plot a family of specific-energy lines for $Q = 0, 3, 6, 10$, and 20 ft³/s.
 b. Draw the locus of critical depth points.
 c. Plot Q as a function of critical depth.

7.13 Consider a rectangular channel of width 12 m.

- a. Plot a family of specific-energy lines for $Q = 0, 8, 12, 20,$ and $35 \text{ m}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q as a function of critical depth.

7.14 Consider a triangular channel of $m = 0.4$.

- a. Plot a family of specific-energy lines for $Q = 0, 4, 8, 12,$ and $16 \text{ ft}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q versus critical depth.

7.15 Consider a triangular channel of $m = 1.2$.

- a. Plot a family of specific-energy lines for $Q = 0, 5, 10, 15,$ and $20 \text{ m}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q versus critical depth.

7.16 Consider a trapezoidal channel with $b = 2 \text{ ft}$ and $m = 0.4$.

- a. Plot a family of specific-energy lines for $Q = 0, 3, 6, 12,$ and $20 \text{ ft}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q versus critical depth.

7.17 Consider a trapezoidal channel of width $b = 12 \text{ m}$ and $m = 0.6$.

- a. Plot a family of specific-energy lines for $Q = 0, 5, 10, 20,$ and $30 \text{ m}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q versus critical depth.

7.18 Consider a circular channel of diameter 2 m carrying water.

- a. Plot a family of specific-energy lines for $Q = 0, 2, 5, 10,$ and $20 \text{ m}^3/\text{s}$.
- b. Draw the locus of critical depth points.
- c. Plot Q versus critical depth.
- d. Plot depth z versus angle α .

Critical Depth and Velocity

7.19 A rectangular channel conveys water at $120 \text{ ft}^3/\text{s}$ and has a width of 12 ft. Determine the critical depth and the corresponding critical velocity.

7.20 A rectangular channel conveys water at $100 \text{ m}^3/\text{s}$ and has a width of 15 m. Calculate the critical depth and corresponding critical velocity.

7.21 A triangular channel with sides having $m = 1.2$ conveys water at $50 \text{ ft}^3/\text{s}$. Determine the critical depth and the corresponding critical velocity.

7.22 A triangular channel with sides having $m = 1.5$ conveys water at $25 \text{ m}^3/\text{s}$. Determine the critical depth and the corresponding critical velocity.

7.23 A trapezoidal channel with $b = 8 \text{ ft}$ and $m = 1.0$ conveys water at $50 \text{ ft}^3/\text{s}$. Determine the critical depth and the corresponding critical velocity.

7.24 A trapezoidal channel with $b = 4 \text{ m}$ and $m = 1.2$ conveys water at $30 \text{ m}^3/\text{s}$. Determine the critical depth and the corresponding critical velocity.

- 7.25** A circular channel with $D = 3.5$ m conveys water at $12 \text{ m}^3/\text{s}$. Determine the critical depth and the corresponding critical flow velocity.
- 7.26** Determine the critical depth for each of the following cases assuming where applicable $b = 10$ m, $m = 1.0$, and $Q = 200 \text{ m}^3/\text{s}$: (a) a triangular channel, (b) a rectangular channel, and (c) a trapezoidal channel.
- 7.27** Show that alternate depths in a rectangular channel are related to the critical depth by

$$\frac{2z_1^2 z_2^2}{z_1 + z_2} = z_{\text{cr}}^3$$

- 7.28** A triangular channel with $m = 1.2$ is made of cement rubble masonry and conveys water at a flow rate of $50 \text{ ft}^3/\text{s}$. At what slope will the flow be critical?
- 7.29** Calculate the critical depth and velocity of flow in the rectangular channel of Example 7.1 for a volume flow rate of $80 \text{ m}^3/\text{s}$.
- 7.30** Figure 7.8 for determining critical depth in trapezoidal and circular sections was presented with no information about how the curves were derived. The derivation is investigated in this problem for a rectangular cross section. The graph of Figure 7.8 is of z_{cr}/b versus $Z/b^{2.5}$ and so we are seeking a relationship between these two variables for $m = 0$. In terms of the critical depth z_{cr} , the section factor Z for a rectangular channel is given in Table 7.1 as

$$Z = bz_{\text{cr}}^{1.5}$$

- a.** By manipulating this equation appropriately, show that

$$\frac{z_{\text{cr}}}{b} = \left(\frac{Z}{b^{2.5}} \right)^{1/1.5}$$

- b.** Select five different points on the graph of Figure 7.8 and show that they fit this equation.

- 7.31** Figure 7.8 for determining critical depth in trapezoidal and circular sections was presented with no information about how the curves were derived. The derivation is investigated in this problem for a trapezoidal cross section. The graph of Figure 7.8 is of z_{cr}/b versus $Z/b^{2.5}$, and so we are seeking a relationship between these two variables for any m . In terms of the critical depth z_{cr} , the section factor Z for a trapezoidal channel is given in Table 7.1 as

$$Z = \frac{[(b + mz_{\text{cr}})z_{\text{cr}}]^{1.5}}{\sqrt{b + 2mz_{\text{cr}}}}$$


- a.** Divide this equation by $b^{2.5}$ and appropriately manipulate the right-hand side to show that

$$\frac{Z}{b^{2.5}} = \frac{(z_{\text{cr}}/b + mz_{\text{cr}}^2/b^2)^{1.5}}{(1 + 2mz_{\text{cr}}/b)^{0.5}}$$

- b.** Select five different points on the graph of Figure 7.8 and show that they fit this equation.

Laminar Open-Channel Flow

- 7.32** Starting with Equation 7.24*b*, derive Equation 7.27 in detail.
- 7.33** Determine the average velocity for laminar flow of a Newtonian fluid down an incline. Begin with Equation 7.24*b*.
- 7.34** A thin film of glycerine flows down an inclined surface. The film thickness is 0.2 in., and the angle of inclination is 0.1° . Plot the velocity distribution in the film. Calculate the Reynolds number of the flow.
- 7.35** A 1-mm-thick film of carbon tetrachloride flows down an incline. The free-surface velocity is 3 mm/s. Plot the velocity distribution in the film.
- 7.36** A thin layer of liquid is falling downward along an upward-moving inclined surface, as indicated in Figure P7.36. The liquid is Newtonian, and it is flowing under laminar conditions. Determine the wall velocity U such that the liquid surface velocity is zero.

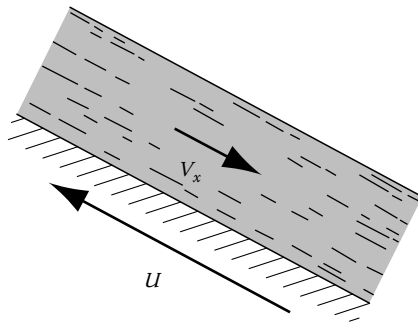**FIGURE P7.36**

- 7.37** A thin layer of liquid is falling downward along an upward-moving inclined surface, as indicated in Figure P7.36. The liquid is Newtonian and it is flowing under laminar conditions. Determine the wall velocity U such that there is no net flow of liquid down the incline.

Turbulent Open-Channel Flow

- 7.38** Rectangular channels made of brick and known as aqueducts were once used to convey water over land. Consider an aqueduct 6 ft wide, filled to a depth of 4 ft, and laid on a slope of 0.0008. Determine the volume carrying capacity of the channel.
- 7.39** Cooling water used in condensers of power plants is sometimes conveyed to cooling ponds before being returned to the body of water from which it came. Since the cooling pond gives the water opportunity to lose heat, the risk of thermal pollution is reduced. One such pond is fed by a channel that is rectangular in cross section, 3 m wide, and formed by dredging. The channel is well maintained, uniform, and weathered. If the water depth is 2 m and the channel slope is 0.09, calculate the flow rate in the channel.
- 7.40** A triangular channel is asphalt-lined and has $m = 1.2$. The channel is laid on a slope of 0.001 and filled to a depth of 2 m. Calculate the volume-carrying capacity of the channel.
- 7.41** A trapezoidal channel carries water at a flow of $200 \text{ ft}^3/\text{s}$. Its width is 8 ft, and $m = 1.0$. The channel is made of riveted steel.
- Calculate the slope necessary to maintain a uniform depth of 3 ft.
 - Calculate the critical depth of the flow.
- 7.42** A circular culvert 4 ft in diameter and made of corrugated metal is filled to a depth of 3.2 ft. Determine the volume flow rate through the culvert and the critical depth of flow. Take the slope to be 0.001.

- 7.43 A triangular channel made of clay conveys water and has $m = 1.6$. If the channel slope is 0.002 and the water depth is 1 m, determine the volume flow rate and the critical depth of flow.
- 7.44 Water is flowing in a 6 m diameter culvert at a depth of 4.7 m. The culvert is uniform, made of concrete, and laid on a slope of 1° . Determine the volume flow rate through the culvert.

Uniform Open-Channel Flow

- 7.45 A trapezoidal channel has $b = 2$ m and conveys water at $60 \text{ m}^3/\text{s}$. The channel is made of wood and is laid on a slope of 0.001. Calculate m if the water depth is uniform at 4 m.
- 7.46 A rectangular cement channel 8 ft wide conveys water at $120 \text{ ft}^3/\text{s}$. The channel slope is 0.001. Determine the liquid depth for uniform flow. Is the flow supercritical or subcritical?
- 7.47 A rectangular brick-lined channel is 2 m wide and conveys water at $40 \text{ m}^3/\text{s}$. The channel slope is 0.000 8. Determine the liquid depth for uniform flow and for critical flow. Is the flow supercritical or subcritical?
- 7.48 A triangular channel with $m = 1.1$ is made of cemented rubble masonry and laid on a slope of 0.000 5. The channel conveys water at a flow rate of $10 \text{ m}^3/\text{s}$. Determine the depth for uniform flow and for critical flow. Is the flow supercritical or subcritical?
- 7.49 An excavated earth-lined trapezoidal channel that is poorly maintained conveys water at a flow of $2 \text{ m}^3/\text{s}$. If the channel slope is 0.001, $b = 0.4$ m, and $m = 0.6$, what is the uniform flow depth? Is the flow subcritical or supercritical?
- 7.50 A trapezoidal channel made of wood planks is used as a log slide so that freshly cut timber can be transported to a waterway. The channel conveys water at $2 \text{ ft}^3/\text{s}$, $b = 4$ ft, $m = 0.4$, and the sloping angle at which it is laid is 38° . Determine the depth of water for uniform flow. Is the flow subcritical or supercritical?
- 7.51 A semicircular channel of diameter 0.9 m is used as a water slide in an amusement park. The slide starts at a position 10 m high and over the course of 100 m descends to the ground. The channel is made of a plastic having $n = 0.004 \text{ m}^{1/6}$. The volume flow of water is $2 \text{ m}^3/\text{s}$. What is the uniform flow depth? Is the flow subcritical or supercritical?

Hydraulically Optimum Cross Section

- 7.52 Determine the hydraulically optimum cross section for the triangular channel shown in Figure P7.52.

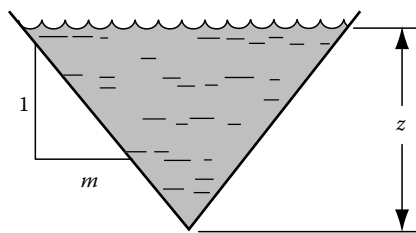


FIGURE P7.52

- 7.53 Rework Example 7.8 using the equations of Table 7.1.
- 7.54 In the discussion of hydraulically optimum cross sections, a rectangular channel was used to show how the depth and width were related. Perimeter was expressed in terms of area ($P = 2z + A/z$) and then differentiated with respect to z to obtain $z = b/2$. So for a rectangular section, the flow is maximized when liquid depth is equal to half the width.
- As an alternative method of obtaining this same result, express area in terms of perimeter and differentiate with respect to z .
 - Show that this method also yields $z = b/2$.

- 7.55** Repeat Example 7.8 by expressing perimeter P in terms of area A and differentiating the expression for area with respect to z . Set the result equal to zero and solve.

Backwater Curve

- 7.56** Consider a rectangular brick-lined channel of width 10 ft and inclined at a slope of 0.0001. The channel is long and contains a dam at one end. The water depth just before the dam is 6.5 ft. The flow rate in the channel is $30 \text{ ft}^3/\text{s}$. Determine the shape of the backwater curve (see Figure 7.19).
- 7.57** A rectangular channel made of cement is 3.5 m wide and conveys water at a flow rate of $12 \text{ m}^3/\text{s}$. A dam is placed at the channel end; the water depth there is 5 m. The channel slope is 0.0002. Determine the shape of the backwater curve (see Figure 7.19).
- 7.58** Derive an expression for gradually varied flow in triangular channels (Equation 7.39b).
- 7.59** A triangular channel is made of cement ($m = 1.0$) and conveys water at a flow rate of $20 \text{ m}^3/\text{s}$. A dam in the channel is used to contain the flow; the water depth at the dam is 6.2 m. The channel slope is 0.0001. Determine the shape of the backwater curve (see Figure 7.19).
- 7.60** Derive an expression for gradually varied flow in trapezoidal channels (Equation 7.39c).
- 7.61** A trapezoidal channel is brick-lined with $b = 4 \text{ m}$, $m = 0.8$, and $S = 0.0002$. The water depth over a dam placed at the downstream end is 7.2 m. For a volume flow rate over the dam of $100 \text{ m}^3/\text{s}$, determine the shape of the backwater curve (see Figure 7.19).
- 7.62** Consider a rectangular earth channel dug out to a width of 3 m and inclined at a slope of 0.001. The channel is very long, and at its end a dam partially restricts the flow. At the dam, the water depth is 5 m and the flow rate over the dam is $10 \text{ m}^3/\text{s}$. Determine the variation of depth upstream.

Hydraulic Jump

- 7.63** A hydraulic jump occurs in a rectangular channel 6 ft wide that conveys water at $150 \text{ ft}^3/\text{s}$. The upstream flow depth is 2 ft.
- Determine the downstream height.
 - Calculate the energy loss in the jump.
 - Sketch a momentum diagram for the channel and show where the operating point appears.
- 7.64** A rectangular open channel is 3 m wide and contains a sluice gate. When the gate is partially raised, the flow passing underneath is supercritical. Downstream, the flow encounters a barrier and adjusts via a hydraulic jump. (See Figure P7.64.) The height upstream of the gate is 3 m, and the volume flow rate is $20 \text{ m}^3/\text{s}$. Determine the water height after the jump.

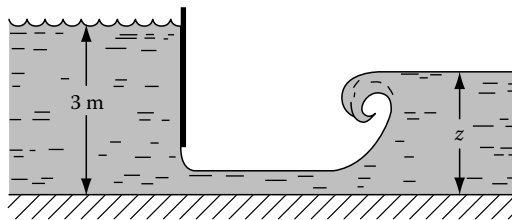


FIGURE P7.64

- 7.65** Equations 7.44 through 7.46 were derived for a hydraulic jump in a rectangular channel. Derive similar expressions for a triangular channel; that is, derive Equation 7.48.
- 7.66** Repeat Problem 7.54 for a trapezoidal channel; that is, derive Equation 7.49.
- 7.67** A hydraulic jump occurs in a rectangular channel 3 m wide that conveys water at $20 \text{ m}^3/\text{s}$. The upstream depth of flow is 1 m.

- a. Determine the downstream height.
- b. Calculate the energy loss in the jump.
- c. Sketch a momentum diagram for the channel and show where the operating point appears.

Computer Problems

7.68 It is indicated in Problem 7.30 that the critical depth in a rectangular channel is given by

$$\frac{z_{\text{cr}}}{b} = \left(\frac{Z}{b^{2.5}} \right)^{1/1.5}$$

Use the computer to generate a log–log graph of z_{cr}/b versus $Z/b^{2.5}$ (horizontal axis).

7.69 It is indicated in Problem 7.31 that the critical depth in a trapezoidal channel is given by

$$\frac{Z}{b^{2.5}} = \frac{(z_{\text{cr}}/b + mz_{\text{cr}}^2/b^2)^{1.5}}{(1 + 2mz_{\text{cr}}/b)^{0.5}}$$

Use the computer to generate a log–log graph of z_{cr}/b versus $Z/b^{2.5}$ (horizontal axis) for $m = 0.5$ and for $m = 1$.

7.70 It is indicated in Problem 7.31 that the critical depth in a trapezoidal channel is given by

$$\frac{Z}{b^{2.5}} = \frac{(z_{\text{cr}}/b + mz_{\text{cr}}^2/b^2)^{1.5}}{(1 + 2mz_{\text{cr}}/b)^{0.5}}$$

Use the computer to generate a log–log graph of z_{cr}/b versus $Z/b^{2.5}$ (horizontal axis) for $m = 1.5$ and for $m = 2$.

7.71 Solve the backwater curve problem of Example 7.9 by letting $\Delta z = 0.1$ m. Compare the results for $\Sigma \Delta x$ of both solutions.

7.72 In Example 7.2, the critical depth for a rectangular channel having $b = 8$ m was found to be 1.37 m when $Q = 40$ m³/s. For this same channel, let Q vary from 0 to 80 m³/s and determine the corresponding critical depths. Graph z_{cr} versus Q (horizontal axis).

Supplementary Problems

Parts a through c refer to the prismatic cross sections given in Problems 7.73 through 7.80. For the prismatic section assigned, perform the following calculations, assuming where appropriate that $b = 6$ m and $m = 2$:

- a. Write geometry factor equations for each column in Table 7.1.
- b. Plot a family of specific-energy lines for $Q = 0, 10, 20, 40,$ and 80 m³/s. Draw the locus of critical depth points.
- c. Determine the critical depth of flow for various flow rates ranging from 0 to 80 m³/s and plot Q versus z_{cr} .
- d. Write the general backwater curve equation for the cross section.
- e. Determine the depth necessary if the cross section is hydraulically optimum.

7.73

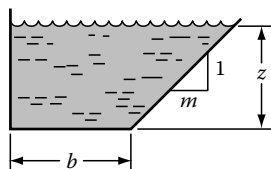


FIGURE P7.73

7.74

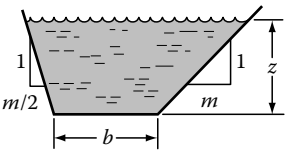


FIGURE P7.74

7.75

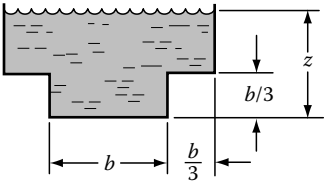


FIGURE P7.75

7.76

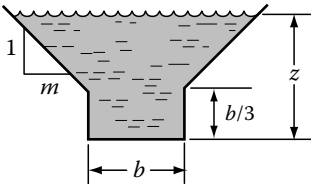


FIGURE P7.76

7.77

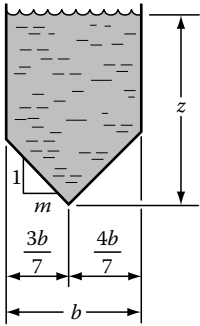


FIGURE P7.77

7.78

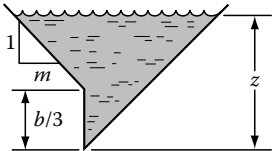


FIGURE P7.78

7.79

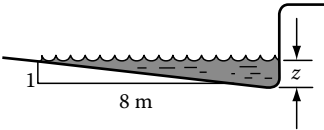


FIGURE P7.79

7.80

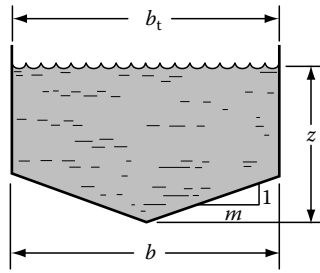


FIGURE P7.80

Design Problems

7.81 Open Channel Inlet to a Power Plant

A power plant is located near a river and uses river water as a cooling medium. Steam in the power plant passes through a turbine and is then condensed in a condensing unit. Heat is transferred from the condensing steam to the river water. Water is drawn from the river into an open channel that must be sized. The open channel conveys the river water to pumps, which move the water through condensers and back to the river.

The open-channel inlet is to convey water at a flow rate of 1000 gal/s over a straight run length of 250 ft. The water will usually contain a number of contaminants that might harm the pumps. Contaminants include anything someone might want to discard into the river, and they must be kept out of the open-channel inlet. In addition, there might be fish in the river that could enter as well, which is also unacceptable for a number of reasons.

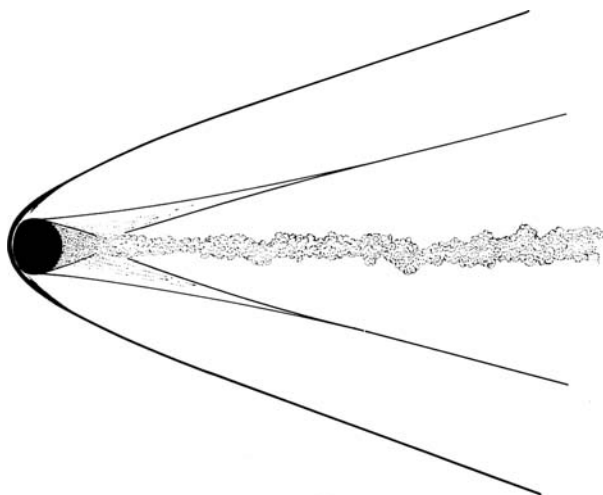
- Interview an engineer who practices in the area of water resources to determine the type of things to expect in an open-channel inlet.
- Determine currently acceptable methods for filtering out contaminants and keeping fish away from an open-channel inlet.
- Design the channel by selecting its width, depth, channel material, and filters, if any. Should the water velocity in the channel be kept under a certain limit to help with the contaminant problem?
- Explain all design decisions.

7.82 Design of a Water Slide

An amusement park water slide is to be designed. People of all ages, sizes, and body shapes will climb stairs to the top of the slide and ride down on mats. The slide is to be inclined at a specified angle and can contain many curves. Water is fed to the slide to help the fun-lover slide down with little frictional resistance. Several features of the design need attention, but here we consider only the slide itself.

- Select height, width, path, and material of construction for the slide. What shape should its cross section have? Should the slide be one long piece of material, or should it consist of many parts that are attached together?
- Select a material and a size for the mats.
- How much water should be directed down the slide?
- Make a layout drawing of the slide and limit the size of the slide itself to no more than 1 acre of land.
- Determine the cost of the slide and its life expectancy.

8 Compressible Flow



In previous chapters, we primarily investigated the flow of liquids. The density of a liquid remains essentially constant under the action of externally applied pressures. For example, a pressure of 200 atm exerted on water raises its density by less than 1% of that at 1 atm. It is therefore assumed with negligible error that no changes of density occur in a liquid as a result of its flow. Such flows are generally referred to as **incompressible**. On the other hand, flowing gases can experience considerable density changes as a result of externally applied pressures. Consider the ideal gas equation presented in Chapter 1:

$$\rho = \frac{P}{RT}$$

It is seen that density depends directly on pressure and inversely on temperature. Thus, density changes in the flow can in fact occur. Such flows, called **compressible** flows, are discussed in this chapter.

A study of compressible flows is important because of the wide range of examples that exist: natural gas piped from producer to consumer, high-speed flight through air, discharging of compressed gas tanks, flow of air through a compressor, flow of steam through a turbine, and many others. Mathematical modeling of compressible flows thus has many applications. The material presented here includes calculation of sonic velocity in a fluid, the concept of isentropic flow, flow through a nozzle, shock waves, and compressible flow in a pipe with friction.

However, several preliminaries should first be presented. The energy equation was presented in Chapter 3. In the study of thermodynamics, the energy equation is known as the first law, with which the idea or existence of internal energy is associated. That is, the energy equation forms a basis for the postulate that substances or systems possess a property called internal energy. There is

also a second law of thermodynamics, analogous to the first law, that forms a basis for the postulate that substances or systems possess still another property called entropy (denoted as S or, on a per-unit-mass basis, s). The dimension of entropy is $(F \cdot L/t)$ or per unit mass $[F \cdot L/(t \cdot M)]$, where t is a temperature unit—for example, Btu/slug $\cdot$ R in engineering units or J/(kg $\cdot$ K) in SI units.

Entropy can be thought of as being associated with probability. As a substance changes from a less probable state to a more probable state, its entropy increases. Specifically, consider a membrane separating two chambers. One chamber contains a gas; the other is evacuated. When the membrane is ruptured, we are more likely to find gas on both sides of the membrane than on just one side with a vacuum on the other. After we rupture the membrane, the system goes from a less probable state to a more probable one with a net increase in entropy.

A concept related to entropy is that of an **irreversible** process. All naturally occurring processes are irreversible. If a cup of hot coffee is placed in a room, heat is transferred from the coffee to the surroundings. It is unlikely that the coffee will regain its heat merely by being removed from the room; to personify the situation, it is unlikely that we can convince molecules in a room to become more active in a region about the coffee in order to heat it. There is a continuing increase in entropy in all naturally occurring processes because they tend to change from a less probable to a more probable state. The idea of efficiency is related to the concept of entropy. A higher efficiency means that we are accomplishing a given objective with a smaller total increase in entropy.

It is convenient in many problems to make calculations for a reversible process and later, if necessary, to determine the magnitude of the deviations from the irreversible process being modeled. Thus, in many of the topics presented in this chapter, we will assume a reversible process with no losses and no change in entropy. Such processes are also adiabatic. And because they involve no change in entropy, they are called **isentropic** processes. The mathematical implications associated with isentropy are not obvious but will be presented where appropriate.

8.1 SONIC VELOCITY AND MACH NUMBER

Consider a long cylinder filled with a fluid and containing a piston. The piston is suddenly moved to the right an infinitesimal amount at a velocity dV (Figure 8.1). If the fluid is incompressible, the entire liquid volume will move to the right. If the fluid is compressible, the gas molecules in layer A will first compress and in turn compress those in layer B . These will then compress the molecules in layer C , and so on. The process of compression of gaseous layers propagates to the right at a finite velocity called the **sonic velocity**; the compression process is like a wave traveling through the medium at sonic speed. After passage of the wave, the fluid velocity equals the piston velocity dV .

Figure 8.2a shows a wave traveling to the right in a duct. Upstream of the wave, the fluid is stationary. After passage of the wave, the fluid velocity is dV . To analyze the wave, we must first render it stationary by imposing a velocity equal to $-a$ on all velocities in the system (assuming one-dimensional flow, of course). The result is shown in Figure 8.2b. The wave is stationary in the new coordinate system and the control surface is drawn about it. Fluid moves into the control volume (and into the wave) from the right at a velocity of a , with a pressure p and density ρ . After passing through the control volume, the fluid velocity becomes $a - dV$. The pressure and density

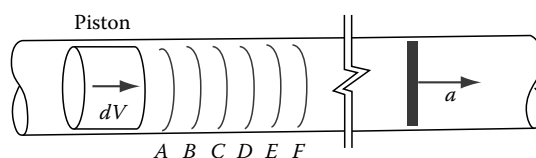


FIGURE 8.1 A piston-cylinder arrangement containing a fluid.

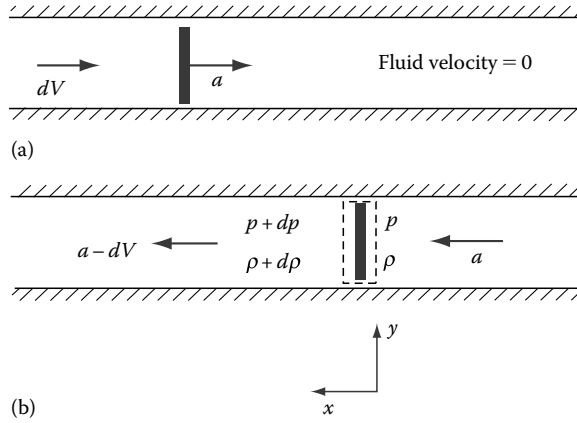


FIGURE 8.2 A moving wave rendered stationary.

downstream are $p + dp$ and $\rho + d\rho$. We write the continuity equation for the control volume of Figure 8.2b as

$$\rho A a = (\rho + d\rho) A (a - dV)$$

Canceling area A and eliminating second-order terms leaves

$$a d\rho = \rho dV$$

or

$$dV = \frac{a d\rho}{\rho} \quad (8.1)$$

The momentum equation in the flow direction is

$$\begin{aligned} \sum F &= \dot{m}(V_{\text{out}} - V_{\text{in}}) \\ &= \rho A a (a - dV - a) \\ &= -\rho A a dV \end{aligned}$$

Neglecting viscous effects (shear stress at the wall), the forces acting in the flow direction on the control volume are due only to pressure differences. Thus, the momentum equation is

$$pA - (p + dp)A = -\rho A a dV$$

Simplifying yields

$$dp = \rho a dV \quad (8.2)$$

Combining with Equation 8.1 gives

$$dp = a^2 d\rho$$

or

$$a^2 = \frac{dp}{d\rho} \quad (8.3)$$

Thus, to determine sonic velocity, we must know the variation of density with pressure. We will assume that the gas with which we are concerned is ideal or perfect and that it has constant specific heats c_p and c_v . The flow upstream and downstream is uniform. There is a temperature gradient within the control volume but not at the control surface bounding the control volume itself. Therefore, there is no heat transfer across the control surface, so the process of wave propagation is adiabatic. Changes in other properties occur across the wave; but because these are infinitesimal, the departure from reversibility is negligible. The process of wave propagation, since it is both adiabatic and reversible (with negligible error), is thus assumed to be isentropic. From thermodynamics, we get the following for a perfect gas with constant specific heats undergoing an isentropic process:

$$\frac{p}{\rho^\gamma} = C_1 \quad (8.4)$$

where $\gamma = c_p/c_v$ and C_1 is a constant. Evaluating the derivative in Equation 8.3 using Equation 8.4 gives

$$\begin{aligned} \frac{dp}{d\rho} &= C_1 \gamma \rho^{\gamma-1} = \frac{\gamma C_1 \rho^\gamma}{\rho} \\ \frac{dp}{d\rho} &= \frac{\gamma p}{\rho} \end{aligned}$$

With the ideal gas assumption,

$$\rho = \frac{p}{RT}$$

we get

$$\frac{dp}{d\rho} = \gamma RT \quad (8.5)$$

Combining with Equation 8.3 gives the sonic velocity for an ideal gas with constant specific heats:

$$a = \sqrt{\gamma RT} \quad (8.6)$$

As an example, let us calculate the sonic velocity in air at room temperature ($T = 70^\circ\text{F} = 530^\circ\text{R}$):

$$\begin{aligned} a &= \sqrt{1.4(1710 \text{ ft} \cdot \text{lbf}/\text{slug} \cdot ^\circ\text{R})(530^\circ\text{R})} \\ &= 1126 \text{ ft/s} \end{aligned}$$

where values for γ and R can be found in Table A.6. Note that absolute temperature units must be used.

Equation 8.3 gives the sonic velocity in terms of dp and $d\rho$. For an incompressible fluid, $d\rho = 0$, and Equation 8.3 predicts an infinite sonic velocity. Generally, the more incompressible the substance, the higher the sonic velocity.

As we saw in the piston-cylinder arrangement, the presence of a disturbance in a compressible medium is signaled by the propagation of a compression or sound wave. The speed at which the wave travels is the sonic velocity. This leads us to the question of what happens if an object that is causing a disturbance travels faster than the sonic velocity. We can analyze such a situation by considering a wing traveling through air. The wing acts very much like the piston, compressing air just ahead of it and thereby sending sound waves in all directions. For a wing traveling at subsonic speed, we can sketch streamlines about the wing, as in Figure 8.3. The air layer at *A* senses the presence of the wing and signals point *B*. The layer at *B* has time to adjust to the oncoming wing and in addition signals point *C* and so forth. The resultant streamline pattern is gradually changing and denotes smooth flow past the wing. For supersonic flow, the wing moves faster than the compression waves it is creating. The resultant flow pattern is illustrated in Figure 8.4. The air layer at point *A* signals point *B*, but the airfoil reaches point *B* before the signal does. Thus, point *B* has no time to adjust smoothly to the oncoming wing. Instead, the layer at *B* must adjust abruptly via formation of a shock wave. A **shock wave** is a very abrupt change in flow properties; in reality, it is a small fraction of an inch in thickness. It is a discontinuity in the flow and is by no means isentropic. After the flow passes the leading edge of the airfoil, it encounters a corner where it must turn sharply. After the turn, the air has room to expand because the wing thickness is decreasing. The abrupt turn is accomplished by what is called an **expansion wave**. Finally, at the trailing edge of the airfoil, the flow again adjusts via another shock wave.

From the preceding discussion, it is apparent that two different flow regimes exist in compressible flow: subsonic and supersonic. The criterion used to distinguish between the two is the **Mach number**, defined as the ratio of flow velocity to the sonic velocity in the medium:

$$M = \frac{V}{a}$$

If the Mach number is less than 1, **subsonic** flow exists. If the Mach number is greater than 1, the flow is **supersonic**. If the Mach number equals 1, the flow is **sonic**.

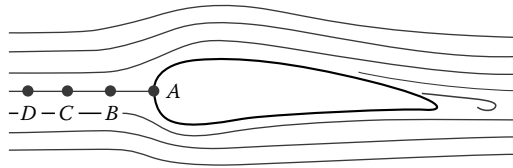


FIGURE 8.3 A wing traveling at subsonic velocity through air.

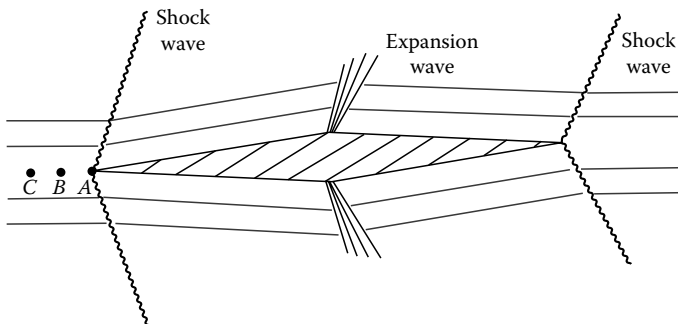


FIGURE 8.4 A diamond-shaped airfoil traveling at supersonic velocity.

8.2 STAGNATION PROPERTIES AND ISENTROPIC FLOW

In this section, we discuss stagnation properties, in particular *stagnation temperature* and *stagnation pressure*. **Stagnation temperature** is the temperature attained in a fluid by bringing the flow adiabatically to rest at a point. The kinetic energy of the flow is transformed entirely into enthalpy. A stagnation property is not to be confused with a static property, which is measured by an instrument moving at the local stream velocity. The two states that we are considering are the stagnation (or total) state and the static state. We can write the energy equation between these two states as

$$h_t = h + \frac{V^2}{2}$$

in which the subscript t represents the stagnation or total property where the velocity is zero. The energy equation is written for steady flow in the absence of potential-energy changes and no heat transfer or shaft work. Assuming that we have an ideal or perfect gas with constant specific heats, the change in enthalpy is

$$dh = c_p dT$$

and the energy equation becomes

$$c_p T_t = c_p T + \frac{V^2}{2}$$

This is a defining equation for stagnation temperature in terms of static temperature and kinetic energy of the flow. Dividing by c_p and rearranging give

$$T_t = T + \frac{V^2}{2c_p}$$

or

$$T_t = T \left(1 + \frac{V^2}{2c_p T} \right) \quad (8.7)$$

Combining the ideal gas law

$$\rho = \frac{p}{RT}$$

with the definition of enthalpy

$$h = u + \frac{p}{\rho}$$

yields the following:

$$h - u = RT$$

For a perfect gas with constant specific heats,

$$du = c_v dT$$

and, by substitution,

$$c_p T - c_v T = RT$$

or

$$c_p - c_v = R$$

Multiplying by c_p/c_v gives

$$c_p \left(\frac{c_p}{c_v} - 1 \right) = \frac{R c_p}{c_v}$$

or

$$c_p(\gamma - 1) = \gamma R$$

Solving for c_p yields

$$c_p = \frac{\gamma R}{\gamma - 1} \quad (8.8)$$

Combining with Equation 8.7 and the definition $a^2 = \gamma RT$ gives

$$\begin{aligned} \frac{T_t}{T} &= 1 + \frac{V^2(\gamma - 1)}{2\gamma RT} \\ &= 1 + \frac{V^2}{a^2} \frac{\gamma - 1}{2} \end{aligned}$$

or

$$\frac{T_t}{T} = 1 + \frac{\gamma - 1}{2} M^2 \quad (8.9)$$

Thus, for any ideal gas with a known value of specific heat ratio, the ratio of stagnation to static temperature is known when the Mach number is given. Equation 8.9 is tabulated in Table D.1 as T/T_t versus M for $\gamma = 1.4$.

To illustrate the importance of stagnation temperature, consider adiabatic flow in a channel of varying cross section (Figure 8.5). The energy equation written between points 1 and 2 is

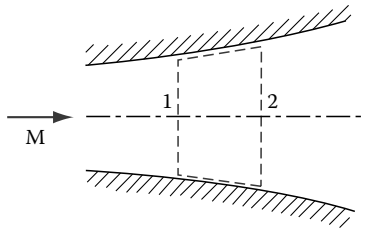


FIGURE 8.5 Adiabatic flow in a channel of varying cross section.

$$\frac{d\tilde{Q}}{dt} = \dot{Q} = \dot{m}_1 \left(h_1 + \frac{V_1^2}{2} \right) - \dot{m}_2 \left(h_2 + \frac{V_2^2}{2} \right)$$

For adiabatic flow, $\dot{Q} = 0$. Assuming a perfect gas, the equation becomes

$$\begin{aligned} c_p T_1 + \frac{V_1^2}{2} &= c_p T_2 + \frac{V_2^2}{2} \\ c_p T_{t_1} &= c_p T_{t_2} \end{aligned}$$

or

$$T_{t_1} = T_{t_2}$$

Regardless of how the static properties and the kinetic energy vary in an adiabatic process, the stagnation temperature thus remains constant. It can therefore be used as a reference property throughout the flow field, provided that adiabatic flow exists.

Stagnation pressure or **total pressure** p_t of a flowing fluid is the pressure attained by bringing the flow isentropically to rest at a point. For an ideal gas,

$$\rho = \frac{p}{RT}$$

and at the stagnation state,

$$\rho_t = \frac{p_t}{RT_t}$$

Combining, we obtain

$$\frac{\rho_t T_t}{\rho T} = \frac{p_t}{p} \quad (8.10)$$

For an isentropic process, $p/\rho^\gamma = \text{a constant}$, or

$$\frac{p}{\rho^\gamma} = \frac{p_t}{\rho_t^\gamma}$$

which becomes

$$\frac{\rho_t}{\rho} = \left(\frac{p_t}{p} \right)^{1/\gamma}$$

Combining with Equation 8.10 gives

$$\begin{aligned} \left(\frac{T_t}{T} \right) \left(\frac{p_t}{p} \right)^{1/\gamma} &= \frac{p_t}{p} \\ \left(\frac{p_t}{p} \right)^{(\gamma-1)/\gamma} &= \frac{T_t}{T} \end{aligned}$$

or

$$\left(\frac{T_t}{T}\right)^{\gamma/(\gamma-1)} = \frac{p_t}{p}$$

Substituting into Equation 8.9 yields

$$\frac{p_t}{p} = \left(1 + \frac{\gamma-1}{2} M^2\right)^{\gamma/(\gamma-1)} \quad (8.11)$$

Thus for an ideal gas with a known ratio of specific heats γ , p_t/p can be determined when the Mach number M is given. Equation 8.11 is tabulated in Table D.1 as p/p_t versus M for $\gamma = 1.4$. For isentropic flow, stagnation pressure and stagnation temperature are constant; for adiabatic flow, stagnation temperature is constant, but stagnation pressure can change.

Example 8.1

Air flows in a duct of inside area 12 in.². At a certain point in the flow, the velocity, temperature, and pressure are measured to be 1000 ft/s, 480°R, and 12 psia, respectively.

- Determine the mass flow rate.
- Determine the Mach number.
- Determine the stagnation pressure.
- Determine the stagnation temperature.

SOLUTION

- The mass flow rate is found with

$$\dot{m} = \rho AV$$

The density is calculated by assuming an ideal gas:

$$\rho = \frac{p}{RT} = \frac{(12 \text{ lbf/in.}^2)(144 \text{ in.}^2/\text{ft}^2)}{[1710 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot ^\circ\text{R})](480^\circ\text{R})}$$

where the gas constant R for air was obtained from Table A.6. The density then is

$$\rho = 0.002105 \text{ slug/ft}^3$$

The area and velocity were given in the problem statement, so

$$\dot{m} = (0.002105 \text{ slug/ft}^3)(12/144 \text{ ft}^2)(1000 \text{ ft/s})$$

or

$$\dot{m} = 0.175 \text{ slug/s}$$

- The sonic velocity is calculated with

$$a = \sqrt{\gamma RT} = \sqrt{1.4[1710 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot ^\circ\text{R})](480^\circ\text{R})} = 1072 \text{ ft/s}$$

The Mach number then is

$$M = \frac{V}{a} = \frac{1000}{1072}$$

$$M = 0.93$$

c. The stagnation pressure is found with Equation 8.11:

$$\frac{p_t}{p} = \left(1 + \frac{\gamma - 1}{2} M^2\right)^{\gamma/(\gamma-1)}$$

We can use this equation or we can use instead the values found in Table D.1. Here we use the table; at a Mach number of 0.93, we read

$$\frac{p}{p_t} = 0.5721 \quad \frac{T}{T_t} = 0.8525$$

The stagnation pressure is found as

$$p_t = \frac{p}{0.5721} = \frac{14.7 \text{ psia}}{0.5721}$$

$$\text{or } p_t = 25.7 \text{ psia}$$

d. For the stagnation temperature,

$$T_t = \frac{T}{0.8525} = \frac{480^\circ\text{R}}{0.8525}$$

$$\text{or } T_t = 563^\circ\text{R}$$

Regarding these properties, we note that sensors moving with the fluid would read 480°R and 14.7 psia (static properties). If the kinetic energy of the flow is converted without heat loss (adiabatically) to enthalpy, the properties would be measured as 563°R and 25.7 psia.

8.3 FLOW THROUGH A CHANNEL OF VARYING AREA

The type of flow considered in this section is steady isentropic flow. Examples of channels of varying area include rocket nozzles, jet engine intake, or passage between adjacent turbine blades. Again we will assume one-dimensional flow with properties considered constant at any cross section.

Figure 8.6 illustrates flow in a channel of varying cross section. The control volume chosen shows only pressure forces acting. Viscous effects are assumed to be negligible because the flow is taken as being isentropic. Gravitational forces too are negligible because we are dealing with a gaseous medium. The continuity equation for the flow is

$$\iint_{\text{CS}} \rho V_n dA = 0$$

$$\dot{m}_{\text{out}} - \dot{m}_{\text{in}} = 0$$

$$(\rho + d\rho)(A + dA)(V + dV) - \rho AV = 0$$

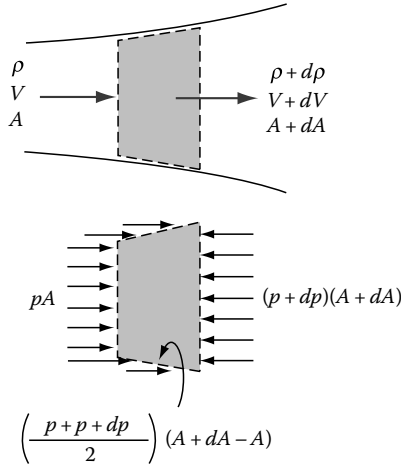


FIGURE 8.6 Control volume for flow through a channel of varying area.

Simplifying and dropping second-order terms yield

$$\frac{d\rho}{\rho} + \frac{dA}{A} + \frac{dV}{V} = 0 \quad (8.12)$$

The momentum equation in the direction of flow is

$$\sum F = \iint_{CS} V \rho V_n dA$$

With pressure as the only external force, we have

$$\sum F = pA + \left(p + \frac{dp}{2}\right)dA - (p + dp)(A + dA)$$

Combining, simplifying, and neglecting the $dp \, dA$ term give

$$\sum F = -A \, dp \quad (8.13a)$$

The integral term (the momentum flux) becomes

$$\iint_{CS} V \rho V_n dA = \rho AV(V + dV - V) = \rho AV \, dV \quad (8.13b)$$

The momentum equation is then

$$-dp = \rho V \, dV \quad (8.13c)$$

Substitution for dV from the continuity Equation 8.12 yields

$$dp + \rho V^2 \left(-\frac{d\rho}{\rho} - \frac{dA}{A} \right) = 0$$

or

$$dp - V^2 d\rho = \rho V^2 \frac{dA}{A}$$

Using the definition of sonic velocity, $a^2 = (dp/d\rho)$, the momentum equation now becomes

$$\begin{aligned} dp - \frac{V^2 d\rho}{a^2} &= \rho V^2 \frac{dA}{A} \\ dp(1 - M^2) &= \rho V^2 \frac{dA}{A} \end{aligned} \quad (8.14)$$

This equation shows the effect of area change on the other flow variables for both subsonic and supersonic flows. For subsonic flow, $M < 1$ and $1 - M^2 > 0$. If dA increases, as in a diverging channel, pressure increases (from Equation 8.14) and velocity decreases (Equation 8.13c). If dA decreases as in a converging channel, however, pressure decreases (Equation 8.14) and velocity increases (Equation 8.13c). These are the same results as would be obtained with the equations written in Chapter 5 for incompressible flow.

For supersonic flow, $M > 1$ and $1 - M^2 < 0$. If dA increases, pressure decreases and velocity increases. If dA decreases, pressure increases and velocity decreases. This effect is the opposite of that in the subsonic case. These comments, applied to subsonic and supersonic flows in diverging and converging channels, are summarized in Figure 8.7.

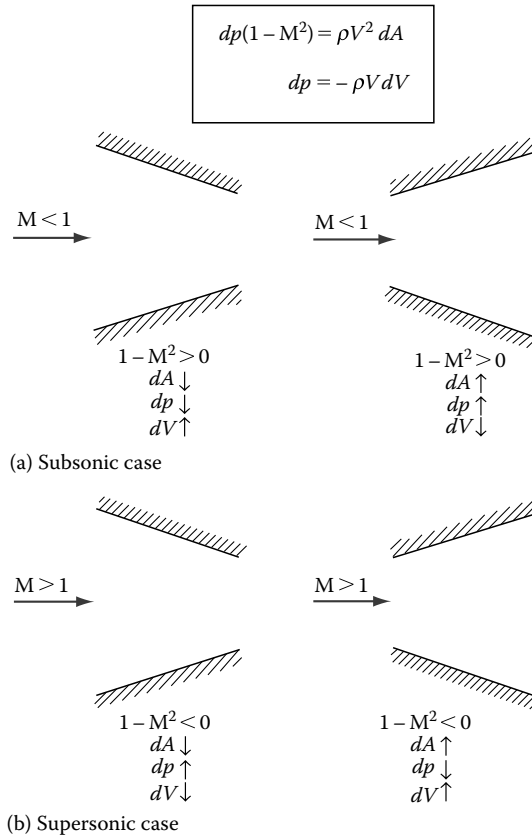


FIGURE 8.7 Effect of varying area on the flow variables for subsonic and supersonic flow.

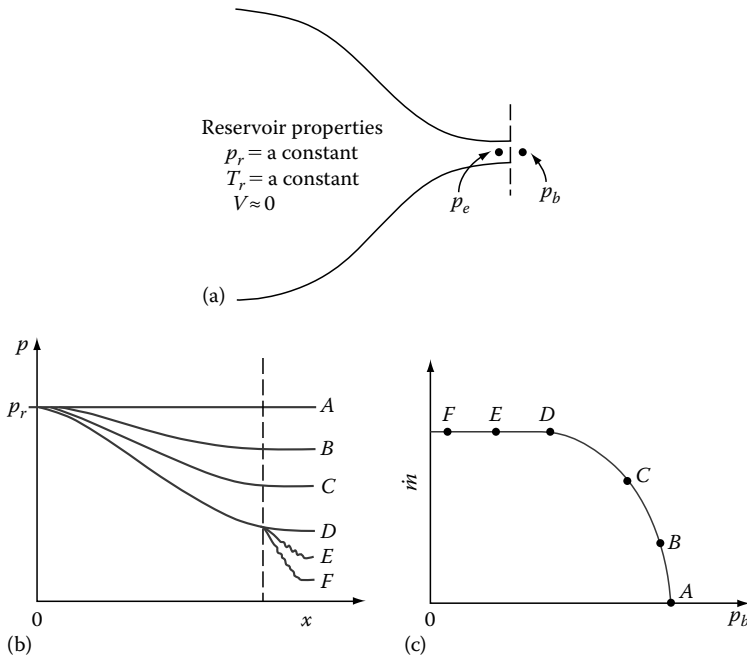


FIGURE 8.8 Flow through a converging nozzle.

It is apparent that a subsonic flow cannot be accelerated to a supersonic velocity in a converging nozzle. This procedure can be done only with a converging–diverging nozzle. To investigate this effect, let us consider a converging nozzle attached to a large reservoir in which conditions are maintained constant. Compared to flow through the nozzle, reservoir velocity is negligible; hence, properties in the reservoir are stagnation properties. The system is sketched in Figure 8.8, which also shows a graph of pressure versus distance from the reservoir to outside the nozzle. We will determine how reducing the back pressure p_b below the reservoir pressure p_r influences the mass flow through the nozzle. If the back pressure p_b equals the reservoir pressure p_r , then no flow exists (curve A). If the back pressure is reduced slightly, some flow goes through the nozzle (curves B and C), and the pressure decreases somewhat with distance. As the back pressure is further reduced, a point is eventually reached at which sonic velocity exists at the exit plane of the nozzle (curve D). This point is a limiting point because it is known that, in a converging nozzle, the flow cannot be accelerated to supersonic speeds. In each case, a decrease in back pressure is sensed by the reservoir, and in turn more flow exits through the nozzle. The decrease in pressure is analogous to a small disturbance that transmits a signal traveling at sonic speed to the reservoir. If the velocity at the exit plane is sonic, however, any further decrease in back pressure is not sensed by the reservoir; consequently, no more flow is induced.

At point D, then, the nozzle is said to be **choked**. For all back pressures less than that corresponding to curve D, the pressure distribution remains the same as curve D up to the exit plane. The flow at the exit plane is at pressure p_e and expands to the back pressure p_b via expansion waves after exiting the nozzle (curves E and F).

When the nozzle is choked, the back pressure is said to be **critical**. The critical exit pressure ratio is found from Equation 8.11:

$$\frac{p_t}{p} = \left(1 + \frac{\gamma - 1}{2} M^2 \right)^{\gamma/(\gamma - 1)}$$

In this case, the stagnation pressure p_t , which is constant throughout the nozzle, equals the reservoir pressure p_r . Also, p equals the pressure at the exit plane p_e , where the Mach number equals 1; thus, for choked flow,

$$\left. \frac{p_t}{p} = \frac{p_r}{p_e} \right|_{\text{cr}} = \left(\frac{\gamma + 1}{2} \right)^{\gamma/(\gamma-1)} \quad (8.15)$$

For $\gamma = 1.4$,

$$\left. \frac{p_e}{p_r} \right|_{\text{cr}} = 0.5283$$

Another important parameter is the mass flow rate. This can be calculated at any point in the nozzle where properties are known with

$$\dot{m} = \rho AV$$

or

$$\dot{m} = \frac{p}{RT} AM \sqrt{\gamma RT} \quad (8.16)$$

For isentropic flow, stagnation pressure and stagnation temperature are constants. By substituting Equations 8.9 and 8.11 for T_t/T and p_t/p , respectively, into Equation 8.16, we obtain an alternative expression for mass flow rate:

$$\dot{m} = \frac{p_t}{\sqrt{RT_t}} A \sqrt{\gamma M} \left(1 + \frac{\gamma - 1}{2} M^2 \right)^{-(\gamma+1)/[2(\gamma-1)]} \quad (8.17)$$

Example 8.2

A converging nozzle of area 3 cm^2 is attached to the exhaust of a rocket as shown in Figure 8.9. The exhaust nozzle is supplied from a reservoir in which the pressure is 150 kPa and the temperature is 1 400 K. Calculate the mass flow rate through the nozzle for back pressures of 100 and 50 kPa. Assume that the rocket exhaust gases have a specific heat ratio of 1.4 and a mean molecular weight of 20 kg/mol. Assume isentropic flow through the nozzle.

SOLUTION

We first find the mass flow at critical conditions—that is, $M_e = 1$. The nozzle critical pressure ratio for $\gamma = 1.4$ is

$$\frac{p_e}{p_{te}} = 0.528$$




FIGURE 8.9 Rocket nozzle of Example 8.2.

from which we obtain

$$p_e = 0.528(150) = 79.2 \text{ kPa} = 79\,200 \text{ Pa}$$

From Table D.1 at $M_e = 1$, we find $T_e/T_{te} = 0.833\,3$; so

$$T_e = 0.833\,3(1\,400) = 1\,166 \text{ K}$$

The gas constant is found from

$$\begin{aligned} R &= \frac{\bar{R}}{\text{MW}} = \frac{8.312 \text{ kJ}/(\text{mol} \cdot \text{K})}{20 \text{ kg/mol}} \\ &= 415.7 \text{ J}/(\text{kg} \cdot \text{K}) \end{aligned}$$

where $\bar{R}$ is the universal gas constant. The mass flow can now be calculated from

$$\dot{m} = \frac{p_e}{RT_e} A M_e \sqrt{\gamma R T_e}$$

At the critical point,

$$\dot{m} = \frac{79\,200}{415.7(1166)} (0.000\,3)(1) \sqrt{1.4(415.7)(1166)}$$

or

$$\dot{m} = 0.040 \text{ kg/s} \quad \text{for } p_b \leq 79.2 \text{ kPa}$$

This is the mass flow rate for all back pressures that are equal to or less than 79.2 kPa. The exit pressure will not fall below this value if the reservoir conditions are maintained.

With a back pressure of 100 kPa, we find

$$\frac{p_e}{p_{te}} = \frac{100}{150} = 0.666$$

From Table D.1 at $p_e/p_{te} = 0.666$, we find $T_e/T_{te} = 0.89$ and $M_e = 0.78$. Thus,

$$T_e = 0.89(1\,400) = 1\,246 \text{ K}$$

The mass flow rate is

$$\begin{aligned} \dot{m} &= \frac{p_e}{RT_e} A M_e \sqrt{\gamma R T_e} \\ &= \frac{100\,000}{415.7(1\,246)} (0.000\,3)(0.78) \sqrt{1.4(415.7)(1\,246)} \end{aligned}$$

or

$$\dot{m} = 0.038 \text{ kg/s} \quad \text{for } p_b = 100 \text{ kPa}$$

It is now apparent that the position at which Mach number equals 1 can be used as a reference point. We have equations for critical temperature and pressure ratio. Regarding the expression for

mass flow rate, we see that a third parameter—area—exists and that it is convenient to determine critical area ratio. We denote the area where Mach number equals 1 as A^* . Using Equation 8.17, we write

$$\dot{m} = \frac{p_t}{\sqrt{RT_t}} A \sqrt{\gamma} M \left(1 + \frac{\gamma-1}{2} M^2 \right)^{-(\gamma+1)/[2(\gamma-1)]}$$

and

$$\dot{m}^* = \frac{p_t}{\sqrt{RT_t}} A^* \sqrt{\gamma} (1) \left(1 + \frac{\gamma-1}{2} \right)^{-(\gamma+1)/[2(\gamma-1)]}$$

These equations could be applied to two points having different areas in a single nozzle wherein mass flow rate and stagnation properties are constant. Taking the ratio of these equations gives

$$1 = \frac{A}{A^*} M \left(\frac{1 + \frac{\gamma-1}{2} M^2}{\frac{\gamma+1}{2}} \right)^{-(\gamma+1)/2(\gamma-1)}$$

or

$$\frac{A}{A^*} = \frac{1}{M} \left(\frac{\frac{\gamma+1}{2}}{1 + \frac{\gamma-1}{2} M^2} \right)^{-(\gamma+1)/2(\gamma-1)} \quad (8.18)$$

This equation is tabulated in Table D.1 for $\gamma = 1.4$ as A/A^* versus M . Note that for any value of A/A^* , two values of M are possible, corresponding to subsonic and supersonic flows. This characteristic is in agreement with the statement that a converging–diverging nozzle is required to accelerate a flow to supersonic speed.

Example 8.3

Air flows into a converging duct from an inlet with cross-sectional area of 25 in.² to the exit, where the area is 10 in.². If the inlet temperature is 70°F, inlet pressure is 14.7 psia, and inlet velocity is 200 ft/s, find the conditions at the exit: Mach number, pressure, and temperature.

SOLUTION

Figure 8.10 is a sketch of the nozzle. We find

$$\begin{aligned} a_1 &= \sqrt{\gamma RT} = \sqrt{1.4(1710)(70 + 460)} \\ &= 1126 \text{ ft/s} \end{aligned}$$

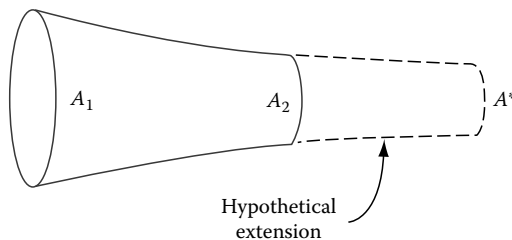


FIGURE 8.10 Converging nozzle of Example 8.3.

and

$$M_1 = \frac{V_1}{a_1} = \frac{200}{1126} = 0.17$$

If the nozzle were extended, the flow would be accelerated to the point at which $M = 1$ and the area is A^* . This hypothetical point is our reference point. From Table D.1 at $M_1 = 0.17$,

$$\frac{p_1}{p_{t_1}} = 0.9800$$

$$\frac{T_1}{T_{t_1}} = 0.9943$$

$$\frac{A_1}{A^*} = 3.4635$$

We now calculate A_2/A^* :

$$\frac{A_2}{A^*} = \frac{A_2}{A_1} \frac{A_1}{A^*} = \frac{10}{25} (3.4635) = 1.385$$

From Table D.1 at $A_2/A^* = 1.38$,

$$M_2 = 0.48$$

$$\frac{p_2}{p_{t_2}} = 0.8541$$

$$\frac{T_2}{T_{t_2}} = 0.9560$$

For isentropic flow, $p_{t_1} = p_{t_2}$ and $T_{t_1} = T_{t_2}$. With these ratios, we obtain

$$p_2 = \frac{p_2}{p_{t_2}} \frac{p_{t_2}}{p_{t_1}} \frac{p_{t_1}}{p_1} p_1 = 0.8541(1) \left(\frac{1}{0.9800} \right) 14.7 \text{ psia}$$

$$p_2 = 12.8 \text{ psia}$$

and

$$T_2 = \frac{T_2}{T_{t_2}} \frac{T_{t_2}}{T_{t_1}} \frac{T_{t_1}}{T_1} T_1 = 0.9560(1) \left(\frac{1}{0.9943} \right) 530^\circ\text{R}$$

$$T_2 = 510^\circ\text{R}$$

Now let us add a diverging section to the nozzle and tank of Figure 8.8 and again investigate the effect of decreasing the back pressure (Figure 8.11). Conditions in the reservoir are assumed to be constant. With negligible reservoir velocity, we note that reservoir temperature and pressure are stagnation properties. If the back pressure equals the reservoir pressure, then no flow goes through the nozzle, and curve *A* of pressure versus distance results. If the back pressure is slightly decreased, curve *B* results. As shown, pressure decreases to a minimum at or near the minimum area, called the **throat**, and increases to the back pressure at the exit. As the back pressure is further decreased, more flow is induced through the nozzle. Eventually, the point will be reached at which sonic velocity exists at the throat and the flow at the exit is subsonic (curve *C*). Any further decrease in back pressure is not sensed by the reservoir owing to sonic velocity at the throat. Therefore, the flow is maximum, and the nozzle is said to be choked.

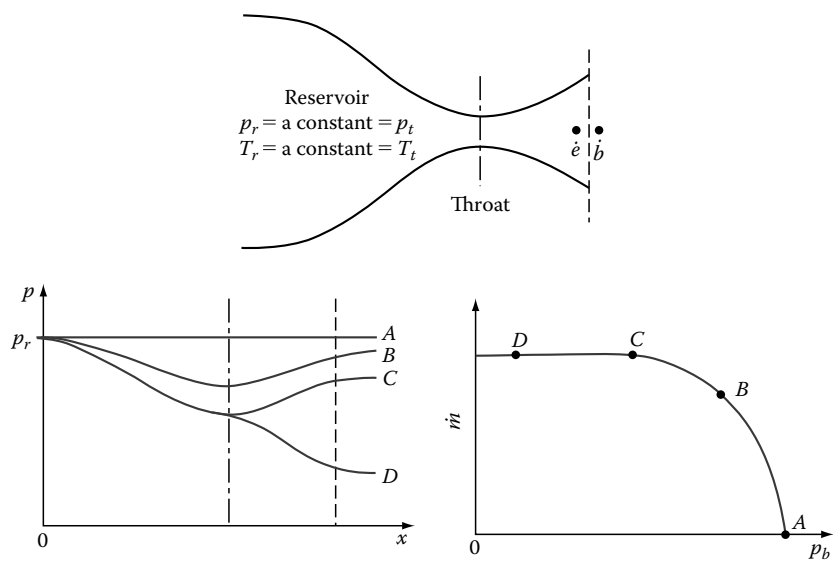


FIGURE 8.11 Isentropic flow through a converging–diverging nozzle.

It is possible to continue lowering the back pressure until the flow at the exit is supersonic. This condition corresponds to curve *D* and is in agreement with our previous conclusion that a stagnant fluid can be accelerated to supersonic speeds with a converging–diverging nozzle and that two solutions exist for a given area ratio with isentropic flow. For all curves shown in Figure 8.11, the exit pressure equals the back pressure. For back pressures corresponding to curves between *C* and *D*, the flow within the nozzle is not isentropic because a shock wave will exist in the diverging portion. For back pressures below those of curve *D*, the exit pressure does not equal the back pressure. Instead, the flow must adjust abruptly via expansion waves beyond the exit.

Example 8.4

Air flows through a converging–diverging nozzle as shown in Figure 8.12. At the throat, the Mach number is 1. At point 1, the Mach number is 0.35, and the area is 25 cm². The area at point

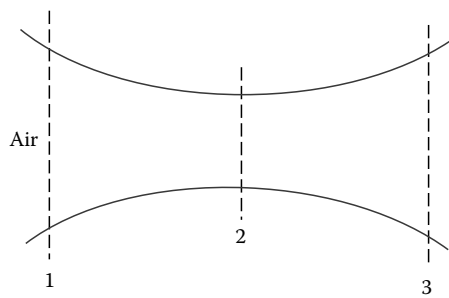


FIGURE 8.12 Converging–diverging nozzle of Example 8.4.

3 is 45 cm². For both subsonic and supersonic flow at the exit (corresponding to curves *C* and *D* of Figure 8.11), determine the following:

- The throat area
- The exit Mach number
- The pressure ratio p_3/p_1
- The temperature ratio T_3/T_1

SOLUTION

From Table A.6, for air, $\gamma = 1.4$, and so Table D.1 can be used. The subsonic and supersonic calculations are presented side by side:

$$M_1 = 0.35 \rightarrow \text{Table D.1} \rightarrow p_1/p_{t_1} = 0.9188, \quad T_1/T_{t_1} = 0.9761,$$

$$A_1/A^* = 1.7780$$

$$\text{Isentropic flow} \rightarrow p_{t_1} = p_{t_2} = p_{t_3}; \quad T_{t_1} = T_{t_2} = T_{t_3}$$

Subsonic	Supersonic
a. $A_1 = 25 \text{ cm}^2$ $A^* = \frac{A^*}{A_1} A_1 = \frac{25}{1.7780}$ $A^* = 14.06 \text{ cm}^2$ $A_3 = 45 \text{ cm}^2$ $\frac{A_3}{A^*} = \frac{45}{14.06} = 3.20$ From Table D.1:	a. $A^* = 14.06 \text{ cm}^2$ $A_3 = 45 \text{ cm}^2$ $\frac{A_3}{A^*} = 3.20$ From Table D.1:
b. $M_3 = 0.18$ $\frac{p_3}{p_{t_3}} = 0.9776$ $\frac{T_3}{T_{t_3}} = 0.9936$ $\frac{p_3}{p_1} = \frac{p_3}{p_{t_3}} \frac{p_{t_3}}{p_{t_1}} \frac{p_{t_1}}{p_1}$ $= (0.9776)(1) \left(\frac{1}{0.9188} \right)$	b. $M_3 = 2.71$ $\frac{p_3}{p_{t_3}} = 0.04229$ $\frac{T_3}{T_{t_3}} = 0.4051$ $\frac{p_3}{p_1} = \frac{p_3}{p_{t_3}} \frac{p_{t_3}}{p_{t_1}} \frac{p_{t_1}}{p_1}$ $= (0.04229)(1) \left(\frac{1}{0.9188} \right)$
c. $\frac{p_3}{p_1} = 1.064$ $\frac{T_3}{T_1} = \frac{T_3}{T_{t_3}} \frac{T_{t_3}}{T_{t_1}} \frac{T_{t_1}}{T_1}$ $= (0.9936)(1) \left(\frac{1}{0.9761} \right)$	c. $\frac{p_3}{p_1} = 0.046$ $\frac{T_3}{T_1} = \frac{T_3}{T_{t_3}} \frac{T_{t_3}}{T_{t_1}} \frac{T_{t_1}}{T_1}$ $= (0.4051)(1) \left(\frac{1}{0.9761} \right)$
d. $\frac{T_3}{T_1} = 1.018$	d. $\frac{T_3}{T_1} = 0.415$

Example 8.5

A huge compressed air tank is slowly being emptied through a valve into a much smaller tank. The valve itself can be considered as a converging–diverging nozzle with an exit area of 12 in.^2 and a throat area of 6 in.^2 . Reservoir conditions are $p_r = 45 \text{ psia}$ and $T_r = 75^\circ\text{F}$. The second tank initially has a pressure of 14.7 psia ; as it fills, this pressure steadily increases.

- Find the maximum back pressure at which the nozzle or valve is choked.
- Determine the mass flow rate at the choked condition.

SOLUTION

Because the fluid is air ($\gamma = 1.4$), Table D.1 can be used. A choked nozzle corresponds to curve *C* or *D* of Figure 8.11. The maximum back pressure for choking occurs with curve *C*, the subsonic solution.

- The exit area $A_e = 12 \text{ in.}^2$, and the throat area for choked flow is $A^* = 6 \text{ in.}^2$. From Table D.1, at $A_e/A^* = 2$, for subsonic flow,

$$M_e = 0.31 \quad \frac{p_e}{p_{te}} = 0.9355 \quad \frac{T_e}{T_{te}} = 0.9811$$

With $p_{te} = p_r$, for isentropic flow, the valve is choked for all back pressures less than

$$p_e = \frac{p_e}{p_{te}} p_r = 0.9355(45 \text{ psia})$$

$$p_e = 42.1 \text{ psia}$$

- The temperature at the exit for the conditions of curve *C* is found as

$$T_e = \frac{T_e}{T_{te}} T_r = 0.9811(75 + 460)^\circ\text{R}$$

$$T_e = 525^\circ\text{R}$$

The mass flow rate can be calculated with the exit properties at choked conditions:

$$\begin{aligned} \dot{m} &= \frac{p_e}{RT_e} A_e M_e \sqrt{\gamma RT_e} \\ &= \frac{42.1(144)}{1710(525)} \frac{12}{144} (0.31) \sqrt{1.4(1710)(525)} \end{aligned}$$

Solving, we get

$$\dot{m} = 0.196 \text{ slug/s}$$

As a check, we can also calculate the mass flow rate with the throat properties at choked conditions:

$$p_{th} = \frac{p_{th}}{p_t} p_r = 0.528(45) = 23.76 \text{ psia}$$

$$T_{th} = \frac{T_{th}}{T_t} T_r = 0.833(75 + 460) = 445.7^\circ\text{R}$$

We thus obtain

$$\begin{aligned}\dot{m} &= \frac{p_{th}}{RT_{th}} A^* M \sqrt{\gamma RT_{th}} \\ &= \frac{23.76(144)}{1710(445.7)} \frac{6}{144} (1) \sqrt{1.4(1710)(445.7)}\end{aligned}$$

$$\dot{m} = 0.193 \text{ slug/s}$$

The discrepancy is attributed to not interpolating values from Table D.1.

8.4 NORMAL SHOCK WAVES

A shock wave, as we stated earlier, is a process wherein a sudden change in fluid properties takes place in supersonic flow. The shock itself is very thin—only a fraction of an inch in thickness. In this section, we deal with shock waves that are normal to the flow direction.

Consider steady, one-dimensional, supersonic flow in which a normal shock occurs. We select a control volume that includes the shock wave and assume that all property changes occur within this control volume (Figure 8.13). In addition, the shock process is taken to be adiabatic because the temperature change occurs within the control volume. The continuity equation is

$$\rho_1 V_1 = \rho_2 V_2 \quad (8.19)$$

If we assume a perfect gas with constant specific heats, the continuity equation becomes

$$\frac{p_1}{RT_1} M_1 \sqrt{\gamma RT_1} = \frac{p_2}{RT_2} M_2 \sqrt{\gamma RT_2} \quad (8.20)$$

The momentum equation is written in the direction of flow as

$$\sum F = \iint_{CS} \rho V_n dA$$

Evaluating the left-hand side, we note that the only external forces acting are pressure forces—gravitational forces are negligible in this case for the gas, and viscous forces can be omitted with

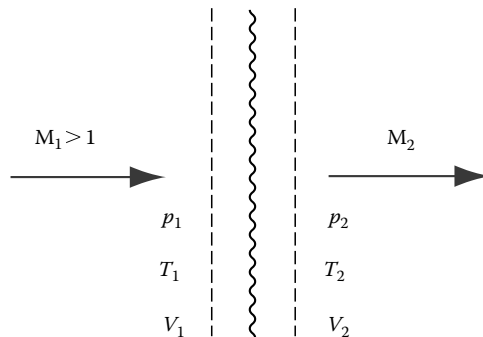


FIGURE 8.13 Supersonic flow with a normal shock wave.

small error because most gases have a relatively low viscosity. Thus, the momentum equation becomes

$$p_1 A_1 - p_2 A_2 = \rho_2 A_2 V_2^2 - \rho_1 A_1 V_1^2$$

Canceling areas and rearranging yield

$$p_1 + \rho_1 V_1^2 = p_2 + \rho_2 V_2^2$$

or

$$p_1 \left(1 + \frac{\rho_1 V_1^2}{p_1} \right) = p_2 \left(1 + \frac{\rho_2 V_2^2}{p_2} \right)$$

For a perfect gas with constant specific heats, $\rho = p/RT$. With $a^2 = \gamma RT$, the momentum equation can be rewritten as

$$\begin{aligned} p_1 \left(1 + \frac{V_1^2}{RT_1} \right) &= p_2 \left(1 + \frac{V_2^2}{RT_2} \right) \\ p_1 (1 + \gamma M_1^2) &= p_2 (1 + \gamma M_2^2) \end{aligned} \quad (8.21)$$

The energy equation for an adiabatic process is

$$h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2}$$

For a perfect gas with constant specific heats, we have

$$\begin{aligned} c_p T_1 + \frac{V_1^2}{2} &= c_p T_2 + \frac{V_2^2}{2} \\ T_1 \left(1 + \frac{V_1^2}{2c_p T_1} \right) &= T_2 \left(1 + \frac{V_2^2}{2c_p T_2} \right) \end{aligned}$$

Recalling that $c_p = \gamma R/(\gamma - 1)$ and that $a^2 = \gamma RT$, we rewrite the energy equation after substitution and simplification as

$$T_1 \left(1 + \frac{\gamma - 1}{2} M_1^2 \right) = T_2 \left(1 + \frac{\gamma - 1}{2} M_2^2 \right) \quad (8.22)$$

Combining Equations 8.21 and 8.22 with Equation 8.20 gives

$$\frac{M_1}{1 + \gamma M_1^2} \sqrt{1 + \frac{\gamma - 1}{2} M_1^2} = \frac{M_2}{1 + \gamma M_2^2} \sqrt{1 + \frac{\gamma - 1}{2} M_2^2} \quad (8.23)$$

Solving for M_2 , we obtain

$$M_2^2 = \frac{M_1^2 + 2/(\gamma - 1)}{2\gamma M_1^2/(\gamma - 1) - 1} \quad (8.24)$$

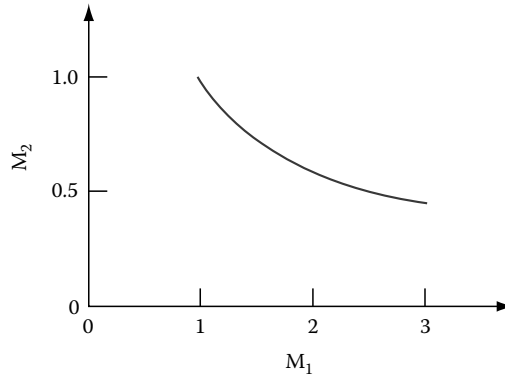


FIGURE 8.14 Mach number relationship across a shock wave (Equation 8.24).

This equation is plotted in Figure 8.14 for $\gamma = 1.4$ and $M_1 > 1$. A calculation of entropy change for the process (which is beyond the scope of this chapter) would show a decrease in entropy corresponding to a shock wave forming in a subsonic flow. An increase in entropy occurs for a shock wave forming in a supersonic flow. From the discussion of entropy in the introduction of this chapter, recall that entropy increases for all naturally occurring processes. We thus conclude that a shock forming in a subsonic flow is not a naturally occurring process and therefore violates the second law of thermodynamics. Equation 8.24 has no physical meaning if $M_1 < 1$. The figure shows that M_2 is always less than 1 if M_1 is supersonic. Equation 8.21 will predict that $p_2 > p_1$, which denotes what is known as a **compression shock**.

The equations thus developed describe flow of an ideal gas through a shock wave. If the ratio of specific heats γ and the inlet Mach number are both known, then M_2 can be determined from Equation 8.24, T_2/T_1 can be determined from Equation 8.22, p_2/p_1 can be determined from Equation 8.21, V_2/V_1 can be calculated by appropriately combining Equation 8.24 and the definition of sonic velocity, ρ_2/ρ_1 ($= V_1/V_2$) can be calculated with Equation 8.19, and p_{t2}/p_{t1} can be determined by combining Equation 8.21 with Equation 8.11. Since the flow is adiabatic through the shock, T_{t2}/T_{t1} . If we know γ and M_1 , in other words, the equations developed so far can be used to find M_2 , p_2/p_1 , T_2/T_1 , V_2/V_1 , ρ_2/ρ_1 , and p_{t2}/p_{t1} . These results are tabulated in Table D.2 for $\gamma = 1.4$.

Example 8.6

A stream of air travels at 500 m/s, has a static pressure of 75 kPa and a static temperature of 15°C, and undergoes a normal shock. Determine air velocity and the stagnation and static conditions after the shock wave.

SOLUTION

For air, $\gamma = 1.4$; from Table A.6, $R = 286.8 \text{ J/(kg} \cdot \text{K)}$. By definition,

$$\begin{aligned} a_1 &= \sqrt{\gamma R T_1} = \sqrt{1.4(286.8)(288)} \\ &= 340 \text{ m/s} \end{aligned}$$

We now find

$$M_1 = \frac{V_1}{a_1} = \frac{500}{340} = 1.47$$

From Table D.2, at $M_1 = 1.47$, we get

$$M_2 = 0.712 \quad \frac{p_2}{p_1} = 2.354 \quad \frac{T_2}{T_1} = 1.300 \quad \frac{p_{t_2}}{p_{t_1}} = 0.9390$$

From Table D.1 at $M_1 = 1.47$, we get

$$\frac{p_1}{p_{t_1}} = 0.2845 \quad \text{and} \quad \frac{T_1}{T_{t_1}} = 0.6982$$

With these ratios, we obtain

$$p_2 = \frac{p_2}{p_1} p_1 = 2.354(75 \text{ kPa}) = 176.55 \text{ kPa}$$

$$T_2 = \frac{T_2}{T_1} T_1 = 1.3(288) = 374.4 \text{ K} = 101.4^\circ\text{C}$$

$$p_{t_1} = \frac{p_{t_1}}{p_1} p_1 = \frac{1}{0.2845}(75 \text{ kPa}) = 263.6 \text{ kPa}$$

$$p_{t_2} = \frac{p_{t_2}}{p_{t_1}} p_{t_1} = 0.9390(263.6) = 247.5 \text{ kPa}$$

$$T_{t_1} = \frac{T_{t_1}}{T_1} T_1 = \frac{1}{0.6982}(288) = 412.5 \text{ K}$$

and finally, for adiabatic flow,

$$T_{t_2} = T_{t_1} = 412.5 \text{ K}$$

We can confirm this result with a different calculation. From Table D.1 at $M_2 = 0.712$,

$$\frac{T_2}{T_{t_2}} = 0.908$$

The stagnation temperature at Section 8.2 then is

$$T_{t_2} = \frac{T_{t_2}}{T_2} T_2 = \left(\frac{1}{0.908} \right) 374.4 \text{ K}$$

$$T_{t_2} = 412.3 \text{ K}$$

Example 8.7

A normal shock with a velocity of 3000 ft/s travels through still air at 14.7 psia (70°F), as illustrated in Figure 8.15. Determine the air velocity V_a and static properties behind the wave.

SOLUTION

To use the equations developed in this section, we must reformulate the problem to render the wave stationary. This is illustrated in Figure 8.15, where a velocity of 3000 ft/s to the right is imposed on all velocities in the system. The inlet Mach number is

$$\begin{aligned} M_1 &= \frac{V_1}{\sqrt{\gamma R T_1}} = \frac{3000}{\sqrt{1.4(1710)(530)}} \\ &= 2.66 \end{aligned}$$

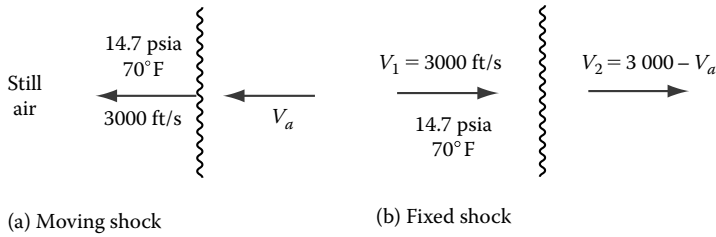


FIGURE 8.15 Moving shock of Example 8.7 rendered stationary.

From Table D.2, at $M_1 = 2.66$,

$$M_2 = 0.4988 \quad \frac{p_2}{p_1} = 8.088 \quad \frac{\rho_2}{\rho_1} = 3.516 \quad \frac{T_2}{T_1} = 2.301$$

So the properties behind the wave are

$$p_2 = \frac{p_2}{p_1} p_1 = 8.088(14.7) = 119 \text{ psia}$$

$$T_2 = \frac{T_2}{T_1} T_1 = 2.301(530) = 1220^\circ\text{R}$$

$$\frac{\rho_2}{\rho_1} = \frac{V_1}{V_2} = 3.516 \quad \text{and} \quad V_2 = \frac{V_1}{3.516} = \frac{3000}{3.516}$$

so

$$V_2 = 853 \text{ ft/s}$$

But, as is seen in Figure 8.15,

$$V_2 = 3000 - V_a$$

or

$$V_a = 3000 - 853$$

$$V_a = 2150 \text{ ft/s}$$

We can now return to the converging–diverging nozzle of Figure 8.11 and add the results of this section. For a back pressure slightly below that of curve *C*, a normal shock forms in the nozzle, just downstream of the throat, as is illustrated in Figure 8.16 (curve *E*). The flow leaves the nozzle with an exit pressure that is equal to the back pressure and still subsonic. As the back pressure is further reduced, the normal shock moves closer to the exit until it eventually reaches the exit plane (curve *F*). If the back pressure is even further reduced, oblique shock waves form at the exit (curve *G*), and the nozzle is said to be **overexpanded**. Curve *D* represents supersonic exit flow; at this condition, the nozzle is said to be **perfectly expanded**. For back pressures below that of curve *D*, the back pressure is less than the exit pressure; expansion waves form at the exit, and the nozzle is said to be **underexpanded**.

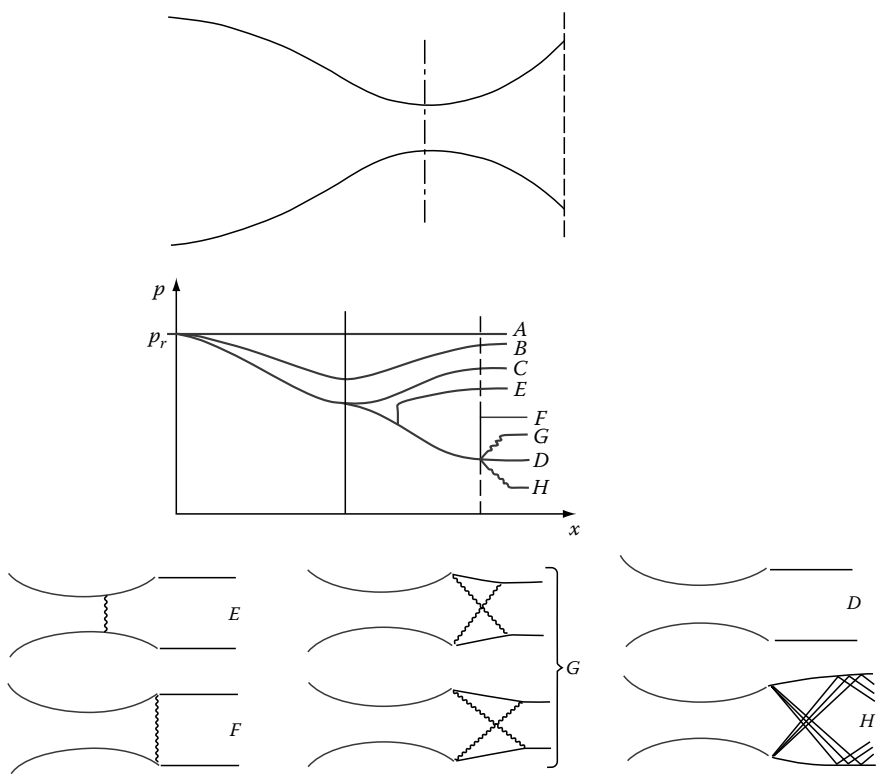


FIGURE 8.16 Summary of possible flows in a converging–diverging nozzle.

Example 8.8

A converging–diverging nozzle is supplied by a huge air reservoir. The nozzle has a throat area of 10 cm² and an exit area of 20 cm². The reservoir conditions are $p_r = 300$ kPa and $T_r = 30^\circ\text{C}$. Determine the range of back pressures over which

- a. Shocks appear in the nozzle
- b. Oblique shocks form beyond the exit
- c. Expansion waves form
- d. Calculate the mass flow rate through the nozzle for the case in which a normal shock appears at the exit plane

SOLUTION

A shock just downstream of the throat exists when the back pressure is slightly below that of curve C in Figure 8.16. For curve C, from Table D.1, at $A_e/A^* = 20/10 = 2$, we find

$$M_e = 0.31 \quad \frac{p_e}{p_{te}} = 0.936$$

Thus,

$$\begin{aligned} p_e &= \frac{p_e}{p_{te}} p_{te} = 0.936 (300 \text{ kPa}) \\ &= 280.8 \text{ kPa} = p_b \quad (\text{curve C}) \end{aligned}$$

For a shock at the nozzle exit plane, curve F of Figure 8.16, we find the following from Table D.1 at $A_e/A^* = 2.0$:

$$M_e = 2.2 \quad \frac{p_e}{p_{te}} = 0.09352 \quad \frac{T_e}{T_{te}} = 0.5081$$

where it is assumed that isentropic flow exists up to the shock wave. From Table D.2, at $M_e = M_1 = 2.20$, we find

$$M_2 = M_b = 0.5471 \quad \frac{p_2}{p_1} = \frac{p_b}{p_e} = 5.480 \quad \frac{T_2}{T_1} = \frac{T_b}{T_e} = 1.857$$

The back pressure for this case is found by

$$\begin{aligned} p_b &= \frac{p_b}{p_e} \frac{p_e}{p_{te}} p_{te} = 5.480(0.09352)(300 \text{ kPa}) \\ &= 153.7 \text{ kPa} \quad (\text{curve } F) \end{aligned}$$

For curve D , we found previously that $M_e = 2.20$ and $p_e/p_{te} = 0.09352$; thus,

$$p_e = p_b = 0.09352(300) = 28.1 \text{ kPa} \quad (\text{curve } D)$$

Summarizing these results, we have the following.

- a. $153.7 < p_b < 280.8 \text{ kPa}$ (shock appears in nozzle)
- b. $28.1 < p_b < 153.7 \text{ kPa}$ (oblique shocks beyond exit)
- c. $p_b < 28.1 \text{ kPa}$ (expansion waves beyond exit)
- d. For a normal shock at the exit, we found that $M_b = 0.5471$ and $p_b = 153.7 \text{ kPa}$. Similarly,

$$\begin{aligned} T_b &= \frac{T_b}{T_e} \frac{T_e}{T_{te}} T_{te} = 1.857(0.5081)(30 + 273) \\ T_b &= 285.9 \text{ K} \quad (\text{curve } F) \end{aligned}$$

Mass flow is

$$\begin{aligned} \dot{m} &= \frac{p_b}{RT_b} A M_b \sqrt{\gamma R T_b} \\ &= \frac{153700}{286.8(285.9)} \frac{20}{10^4} (0.5471) \sqrt{1.4(286.8)(285.9)} \\ \dot{m} &= 0.695 \text{ kg/s} \end{aligned}$$

As a check, let us calculate mass flow for conditions before the shock. First we find

$$\begin{aligned} p_e &= \frac{p_e}{p_{te}} p_{te} = 0.09352(300) = 28.1 \text{ kPa} \\ T_e &= \frac{T_e}{T_{te}} T_{te} = 0.5081(303) = 153.9 \text{ K} \end{aligned}$$

With $M_e = 2.20$, we obtain

$$\begin{aligned} \dot{m} &= \frac{p_e}{RT_e} A_e M_e \sqrt{\gamma R T_e} \\ &= \frac{28100}{286.8(153.9)} \frac{20}{10^4} (2.2) \sqrt{1.4(286.8)(153.9)} \\ \dot{m} &= 0.696 \text{ kg/s} \end{aligned}$$

8.5 COMPRESSIBLE FLOW WITH FRICTION

In this section, we consider compressible flow with friction in insulated ducts of constant area. In real situations, frictional forces are present and may significantly affect the flow. In addition, such a study provides insight into the general effects of friction on compressible flow.

Consider flow in a constant-area duct and select a control volume like that shown in Figure 8.17. The continuity equation is

$$\rho V = C_1 = \text{a constant} \quad (8.25)$$

Implicitly differentiating yields

$$\rho dV + V d\rho = 0$$

Dividing by ρV , we get

$$\frac{d\rho}{\rho} + \frac{dV}{V} = 0 \quad (8.26)$$

We can obtain Equation 8.26 alternatively by logarithmic differentiation of Equation 8.25. Taking the natural logarithm of Equation 8.25 gives

$$\ln \rho + \ln V = \ln C_1 \quad (8.27)$$

Implicit differentiation gives Equation 8.26.

Returning to Figure 8.17, the momentum equation in the direction of flow is

$$\sum F_x = \iint_{CS} V_x \rho V_n dA$$

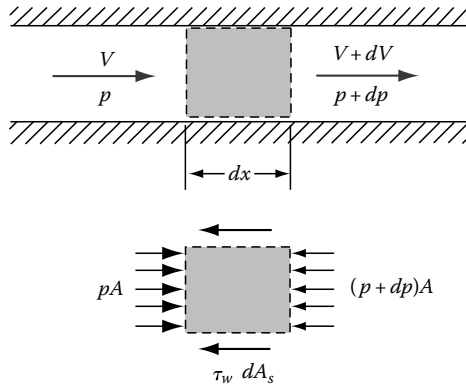


FIGURE 8.17 Control volume for flow in a constant-area duct.

The external forces acting on the control volume are due to pressure and wall friction. By substitution, the momentum equation becomes

$$pA - (p + dp)A - \tau_w dA_s = \rho AV(V + dV - V) \quad (8.28)$$

where: A = cross-sectional area

dA_s = surface area over which the friction shear stress τ_w acts

From Chapter 5, recall the definition of hydraulic diameter:

$$D_h = \frac{4A}{P}$$

where P is perimeter. For a circular duct,

$$D_h = \frac{4(\pi D^2/4)}{\pi D} = D$$

and the surface area is

$$dA_s = P dx = \pi D dx = \frac{4A dx}{D}$$

By substitution into Equation 8.28 and after simplification, we obtain

$$-dp - \tau_w \left(\frac{4 dx}{D} \right) = \rho V dV \quad (8.29)$$

As was done for incompressible flow, we will introduce a friction factor f , which is dependent upon Reynolds number and relative roughness:

$$f = \frac{4\tau_w}{\frac{1}{2}\rho V^2}$$

Combining with Equation 8.29 gives

$$-dp - \frac{\rho V^2}{2} \frac{f dx}{D} = \rho V dV \quad (8.30)$$

We are working toward integration of this expression to obtain an equation relating duct length to velocity or Mach number. Dividing by p and substituting $\rho = p/RT$, we obtain

$$-\frac{dp}{p} - \frac{1}{2} \frac{1}{RT} V^2 \frac{f dx}{D} = \frac{V dV}{RT}$$

With the definitions $a^2 = \gamma RT$ and $M = V/a$, we have

$$-\frac{dp}{p} - \frac{\gamma M^2}{2} \frac{f dx}{D} = \gamma M^2 \frac{dV}{V} \quad (8.31)$$

Logarithmic differentiation of the ideal gas law, $p = \rho RT$, gives

$$\frac{dp}{p} = \frac{d\rho}{\rho} + \frac{dT}{T} \quad (8.32)$$

Similarly, for the definition of Mach number,

$$\begin{aligned} M &= \frac{V}{\sqrt{\gamma RT}} \\ \frac{dM}{M} &= \frac{dV}{V} - \frac{1}{2} \frac{dT}{T} \end{aligned} \quad (8.33)$$

Combining Equations 8.26, 8.32, and 8.33 with Equation 8.31 yields

$$+\frac{1}{2} \frac{dT}{T} - \frac{dM}{M} + \frac{\gamma}{2} M^2 \frac{f dx}{D} + \gamma M^2 \frac{dM}{M} + \frac{\gamma}{2} M^2 \frac{dT}{T} = 0$$

For an adiabatic flow, stagnation temperature is constant, so

$$T \left(1 + \frac{\gamma - 1}{2} M^2 \right) = \text{a constant}$$

Logarithmically differentiating, we obtain

$$\frac{dT}{T} + \frac{(\gamma - 1)M^2(dM/M)}{1 + \frac{\gamma - 1}{2} M^2} = 0 \quad (8.34)$$

Substituting, we get

$$\frac{(\gamma - 1)M^2(dM/M)}{1 + \frac{\gamma - 1}{2} M^2} \left(\frac{1}{2} + \frac{\gamma M^2}{2} \right) - (\gamma M^2 - 1) \frac{dM}{M} = \frac{\gamma}{2} M^2 \frac{f dx}{D}$$

Combining terms, we get

$$\frac{f dx}{D} = \frac{2 dM}{M} \left[\frac{1 - M^2}{\left(1 + \frac{\gamma - 1}{2} M^2 \right) \gamma M^2} \right] \quad (8.35)$$

The left-hand side of Equation 8.35 is always positive. However, the bracketed term on the right-hand side can be positive or negative, depending on whether the flow is subsonic or supersonic. It is interesting to analyze this equation for both cases. If the flow is subsonic, then the term in brackets in Equation 8.35 is positive. Consequently, dM/dx must also be positive, which means that the Mach number of the flow is predicted to increase with distance along the duct. If the flow is supersonic, the bracketed term is negative, so that dM/dx must be negative. The Mach number of the flow is thus predicted to decrease with distance. For either condition, wall friction causes the Mach number of the flow to approach unity. Therefore, a subsonic flow cannot be accelerated to supersonic speed in a duct. Sonic speed can be achieved, however, and this will occur at the end of the duct. Conversely, a supersonic flow can undergo a shock and change to subsonic flow.

From Chapter 5, we know that the friction factor depends on Reynolds number and wall roughness. If the fluid is a liquid, moreover, the Reynolds number is essentially constant along the length of the constant area pipe, and velocity is a constant. If the fluid is a gas, the product ρV is a

constant. Temperature, however, can vary by as much as 20% for subsonic airflow in a pipe, causing a viscosity variation of roughly 10%. In turn, the Reynolds number would change by about 10%, affecting the friction factor. For turbulent flow, which is usually the case in compressible flow, the change in friction factor f is quite small. It is therefore reasonable to assume that friction factor f is a constant when integrating Equation 8.35 and that f is equal to some average value. Often the initial value in the pipe is used.

We are now ready to integrate Equation 8.35. It is convenient to choose as our limits the following:

$$\begin{aligned} 0 &\leq dx \leq L_{\max} \\ M &\leq M \leq 1 \end{aligned}$$

Thus the flow at the pipe entrance (or the control volume entrance) has a Mach number of M and is accelerated to $M=1$, where $x=L_{\max}$. The location, $x=L_{\max}$, can exist at the end of the pipe or it may be at the end of a hypothetical extension. It serves merely as a reference point in our equations where the Mach number equals unity. Integrating Equation 8.35 gives

$$\frac{fL_{\max}}{D} = \frac{1-M^2}{\gamma M^2} + \frac{\gamma+1}{2\gamma} \ln \left[\frac{\gamma+1}{2} M^2 \left(1 + \frac{\gamma-1}{2} M^2 \right)^{-1} \right] \quad (8.36)$$

Calculations of $fL_{\max}/D$ as a function of M made with this equation are tabulated in Table D.3 for $\gamma=1.4$.

A similar analysis can be developed to obtain an expression between pressure and Mach number. Using Equation 8.31 and substituting from continuity for dV/V in terms of M yields the following, after simplification:

$$\frac{dp}{p} = -\frac{dM}{M} \left[\frac{1 + (\gamma-1)M^2}{1 + \frac{\gamma-1}{2}M^2} \right]$$

Integrating between p and p^* corresponding to limits M and 1 gives the following relationship for p/p^* versus M :

$$\frac{p}{p^*} = \left[\frac{2M^2}{\gamma+1} \left(1 + \frac{\gamma-1}{2}M^2 \right) \right]^{-1/2} \quad (8.37)$$

Calculations made with this equation are also tabulated in Table D.3 for $\gamma=1.4$. Again $M=1$ is a reference point, and the corresponding pressure is denoted with an asterisk.

Similarly, we can derive the following expression for T/T^* versus M from Equation 8.22 for adiabatic flow:

$$\frac{T}{T^*} = \frac{\gamma+1}{2} \left(1 + \frac{\gamma-1}{2}M^2 \right)^{-1} \quad (8.38)$$

Combining Equations 8.33 and 8.34 yields an integrable expression for dV versus dM . After integration, the result is

$$\frac{V}{V^*} = M \left[\frac{\gamma+1}{2} \left(1 + \frac{\gamma-1}{2}M^2 \right)^{-1} \right]^{1/2} \quad (8.39)$$

Finally, the stagnation pressure ratio p_t/p_t^* is found to be

$$\frac{p_t}{p_t^*} = \frac{1}{M} \left[\frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{\{(\gamma+1)/[2(\gamma-1)]\}} \quad (8.40)$$

Results of calculations made with these equations are also tabulated in Table D.3 for $\gamma = 1.4$. With the equations thus described and tabulated, one-dimensional, adiabatic, compressible flow of an ideal gas with friction, referred to as **Fanno flow**, can be adequately modeled.

Example 8.9

An airflow enters a constant-area pipe at 100 ft/s, 15 psia, and 530°R. The pipe is 500 ft long and made of 2-nominal schedule 40 PVC. Determine conditions at the pipe exit.

SOLUTION

From the appendix tables,

$$\begin{aligned} \mu &= 0.3801 \times 10^{-6} \text{ lbf} \cdot \text{s/ft}^2 \text{ (Table A.3 for air)} \\ D &= 0.1723 \text{ ft} \quad A = 0.02330 \text{ ft}^2 \text{ (Table C.1 for pipe)} \end{aligned}$$

Also for air,

$$\rho = \frac{p}{RT} = \frac{15(144)}{1710(530)} = 0.00238 \text{ slug/ft}^3$$

The sonic velocity at inlet is

$$a_1 = \sqrt{\gamma RT_1} = \sqrt{1.4(1710)(530)} = 1126 \text{ ft/s}$$

Therefore,

$$M_1 = \frac{V_1}{a_1} = \frac{100}{1126} = 0.09$$

From Table D.3 at $M_1 = 0.09$, we get

$$\frac{T_1}{T^*} = 1.1981 \quad \frac{p_1}{p^*} = 12.162 \quad \left. \frac{fL_{\max}}{D} \right|_1 = 83.496$$

where $L_{\max}$ is the duct length required for the flow to achieve $M = 1$, at which the pressure is p^* and the temperature is T^* .

The Reynolds number at inlet is

$$Re_1 = \frac{\rho V_1 D}{\mu} = \frac{0.00238(100)(0.1723)}{0.3801 \times 10^{-6}} = 1.08 \times 10^5$$

For PVC pipe, assume that the surface is very smooth. At $Re_1 = 1.08 \times 10^5$, the Moody diagram of Chapter 5 gives

$$f = 0.0175$$

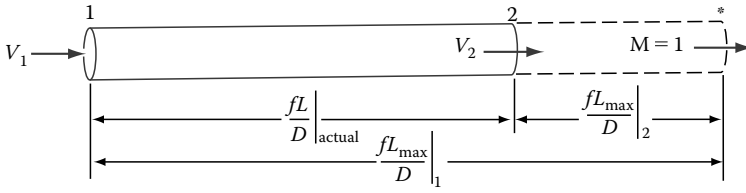


FIGURE 8.18 Sketch for Example 8.9.

and for the actual pipe in this example, we have

$$\left. \frac{fL}{D} \right|_{ac} = \frac{0.0175(500)}{0.1723} = 50.78$$

To find the properties at the pipe exit, it is necessary to combine fL/D terms using $M = 1$ as a reference point. From the definition of length, we recall that $L_{1\max}$ is the distance required to accelerate the flow from the conditions at point 1 to a Mach number equal to 1 at pipe end. Thus,

$$L_{1\max} = L_{\text{actual}} + L_{2\max}$$

Multiplying all terms by f/D , which we assume to be a constant, gives

$$\left. \frac{fL_{\max}}{D} \right|_1 = \left. \frac{fL}{D} \right|_{\text{actual}} + \left. \frac{fL_{\max}}{D} \right|_2$$

This relationship is illustrated in Figure 8.18.

Thus

$$\left. \frac{fL_{\max}}{D} \right|_2 = \left. \frac{fL_{\max}}{D} \right|_1 - \left. \frac{fL_{\max}}{D} \right|_{\text{actual}} = 83.496 - 50.78 = 32.71$$

From Table D.3 at $fL_{\max}/D = 32.71$, we read

$$M_2 = 0.14 \quad \frac{T_2}{T^*} = 1.1953 \quad \frac{p_2}{p^*} = 7.8093$$

With these ratios, we find

$$p_2 = \frac{p_2}{p^*} \frac{p^*}{p_1} p_1 = (7.8093) \left(\frac{1}{12.162} \right) (15 \text{ psia}) = 9.63 \text{ psia}$$

$$T_2 = \frac{T_2}{T^*} \frac{T^*}{T_1} T_1 = (1.1953) \left(\frac{1}{1.1981} \right) (530^\circ\text{R}) = 528.8^\circ\text{R}$$

As we see from these results, temperature did not change significantly. We were justified in assuming a constant value of friction factor, evaluated in this case at the pipe inlet.

8.6 COMPRESSIBLE FLOW WITH HEAT TRANSFER

In this section, we consider compressible flow in a constant-area duct and how heat addition or heat loss affects this flow. Figure 8.19 is a sketch of the control volume used in the analysis. Flow entering the control volume has properties that change by an infinitesimal amount upon leaving. The amount of heat added is denoted by dq , with dimensions of $F \cdot L/M$ (Btu/slug or J/kg). The continuity equation for the control volume is

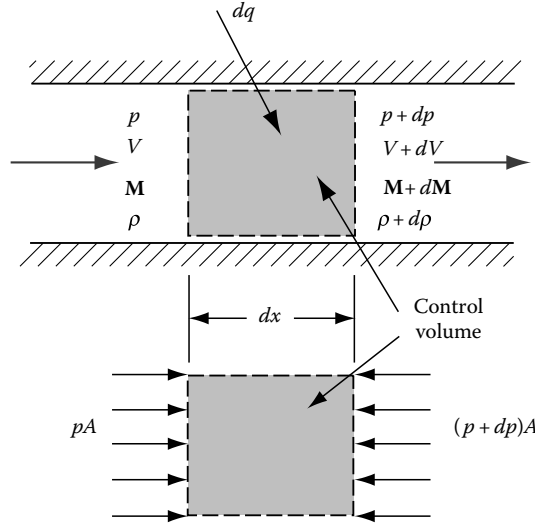


FIGURE 8.19 Control volume for compressible flow in a constant area duct with heat transfer.

$$\rho AV = (\rho + d\rho)A(V + dV)$$

Canceling area and higher-order terms gives, after rearrangement,

$$\frac{d\rho}{\rho} + \frac{dV}{V} = 0 \quad (8.41)$$

or $\rho V = \text{a constant}$. The momentum equation written for the control volume is

$$\sum F_x = \iint V_x \rho V_n dA$$

The only forces we consider are pressure forces, so that the preceding equation becomes

$$pA - (p + dp)A = \rho AV(V + dV - V)$$

Canceling area A and simplifying gives

$$dp = -\rho V dV$$

With ρV equal to a constant, the preceding equation can be integrated from point 1 to 2 to give

$$\begin{aligned} dp &= (\text{constant}) \times dV \\ p_1 - p_2 &= (\text{constant})(V_2 - V_1) = -\rho V(V_2 - V_1) \end{aligned}$$

Noting that $\rho V = (\rho V)_1 = (\rho V)_2$, the last equation can be rewritten to yield

$$(p + \rho V^2)|_1 = (p + \rho V^2)|_2 \quad (8.42)$$

Factoring out the pressure term,

$$p \left(1 + \frac{\rho}{p} V^2 \right) \Big|_1 = p \left(1 + \frac{\rho}{p} V^2 \right) \Big|_2$$

With the ideal gas law ($\rho = p/RT$), the preceding becomes

$$p \left(1 + \frac{V^2}{RT} \right) \Big|_1 = p \left(1 + \frac{V^2}{RT} \right) \Big|_2$$

Using the definition of sonic velocity ($a^2 = \gamma RT$) and Mach number ($M = V/a$), the last equation is rewritten as

$$p(1 + \gamma M^2) \Big|_1 = p(1 + \gamma M^2) \Big|_2 \quad (8.43)$$

It is convenient to select as a reference point the location where the Mach number is 1. Pressure (and other properties) at this location would then be denoted with an asterisk superscript. Thus with regard to Equation 8.43, we let point 1 be any location where the Mach number is M and point 2 be where $M = 1$. Equation 8.43 then becomes

$$p(1 + \gamma M^2) = p^*(1 + \gamma)$$

or

$$\frac{p}{p^*} = \frac{1 + \gamma}{1 + \gamma M^2} \quad (8.44)$$

We now work toward deriving similar expressions for the remaining properties.

The ideal gas law gives, for temperature,

$$T = \frac{p}{\rho R} \quad (8.45)$$

From the definition of mass flow rate, we write

$$\rho = \frac{\dot{m}}{AV}$$

and from the definition of Mach number ($M = V/a$), we have

$$V = M \sqrt{\gamma RT}$$

Combining these equations with Equation 8.45 gives

$$T = \frac{p}{\rho R} = \frac{pAV}{\dot{m}R} = \frac{pAM\sqrt{\gamma RT}}{\dot{m}R}$$

or

$$\sqrt{T} = pM \times (\text{constant})$$

Squaring both sides and writing this equation between any two points in the duct gives

$$\left. \frac{T}{(pM)^2} \right|_1 = \left. \frac{T}{(pM)^2} \right|_2$$

Denoting point 1 as anywhere in the duct and point 2 (with an asterisk) as the location where $M = 1$, this equation becomes

$$\frac{T}{(pM)^2} = \frac{T}{(p^*)^2}$$

or

$$\frac{T}{T^*} = \left(\frac{p}{p^*} \right)^2 M^2$$

Substituting from Equation 8.44 yields

$$\frac{T}{T^*} = \frac{(1 + \gamma)^2 M^2}{(1 + \gamma M^2)^2} \quad (8.46)$$

We now have relationships for static pressure and static temperature. For velocity, we use the continuity equation and the ideal gas law to obtain

$$\frac{V}{V^*} = \frac{\rho^*}{\rho} = \frac{p^*}{RT^*} \frac{RT}{p} = \frac{p^*}{p} \frac{T}{T^*}$$

Substituting from Equations 8.44 and 8.46 and simplifying, we get

$$\frac{V}{V^*} = \frac{(1 + \gamma)M^2}{1 + \gamma M^2} = \frac{\rho^*}{\rho} \quad (8.47)$$

For adiabatic flow, Equation 8.9 was derived to relate stagnation and static temperatures:

$$T_t = T \left(1 + \frac{\gamma - 1}{2} M^2 \right) \quad (8.9)$$

We rewrite this equation for the reference point, where $M = 1$:

$$T_t^* = T^* \left(1 + \frac{\gamma - 1}{2} \right)$$

Dividing Equation 8.9 by the last equation yields

$$\frac{T_t}{T_t^*} = \frac{T}{T^*} \left(\frac{1 + \frac{\gamma - 1}{2} M^2}{1 + \frac{\gamma - 1}{2}} \right)$$

Combining with Equation 8.46 for T/T^* , we get

$$\frac{T_t}{T_t^*} = \frac{(1 + \gamma)^2 M^2}{(1 + \gamma M^2)^2} \left(\frac{1 + \frac{\gamma-1}{2} M^2}{1 + \frac{\gamma-1}{2}} \right) \quad (8.48)$$

Also from the section on isentropic flow, we derived a relationship between static and stagnation pressures:

$$p_t = p \left(1 + \frac{\gamma-1}{2} M^2 \right)^{\gamma/(\gamma-1)} \quad (8.11)$$

At the location where Mach number is 1, we write

$$p_t^* = p^* \left(1 + \frac{\gamma-1}{2} \right)^{\gamma/(\gamma-1)}$$

Dividing the preceding equation into Equation 8.11 and substituting Equation 8.44 for p/p^* , we get the following, after some simplification:

$$\frac{p_t}{p_t^*} = \left(\frac{1 + \gamma}{1 + \gamma M^2} \right) \left(\frac{1 + \frac{\gamma-1}{2} M^2}{1 + \frac{\gamma-1}{2}} \right)^{\gamma/(\gamma-1)} \quad (8.49)$$

Thus far we have relationships for p/p^* , T/T^* , V/V^* , ρ/ρ^* , T_t/T_t^* , and p_t/p_t^* for one-dimensional, compressible flow of an ideal gas with heat transfer for flow in a duct. Results of calculations made with these equations are tabulated in Table D.4 for $\gamma = 1.4$.

Another equation we can derive relates the heat transferred to the stagnation temperature change. In Section 8.2, we wrote the energy equation between the static and stagnation states as

$$h_t = h + \frac{V^2}{2}$$

For an ideal gas with constant specific heats,

$$dh = c_p dT$$

In terms of specific heat, the energy equation becomes

$$c_p T_t = c_p T + \frac{V^2}{2}$$

Differentiating,

$$c_p dT_t = c_p dT + V dV \quad (8.50)$$

We write the energy equation again, but now for the control volume of Figure 8.19, to obtain

$$\frac{d\tilde{Q}}{dt} = \dot{Q} = \dot{m} \left(h_{\text{out}} - h_{\text{in}} + \frac{V_{\text{out}}^2}{2} - \frac{V_{\text{in}}^2}{2} \right)$$

Thus the heat transferred per unit time reflects changes in enthalpy and in kinetic energy of the flow. Dividing by mass flow rate $\dot{m}$ and differentiating yields

$$d\left(\frac{\dot{Q}}{\dot{m}}\right) = dq = (dh + V dV)$$

The heat transfer dq is the quantity with which we have been working in this section; as mentioned earlier, it has dimensions of $F \cdot L/M$ (Btu/slug or J/kg). The enthalpy term is rewritten in terms of temperature to give

$$dq = c_p dT + V dV$$

Substituting from Equation 8.45, we get

$$dq = c_p dT_t$$

So the heat transfer directly affects the stagnation temperature of the fluid. This equation can be integrated between two points in the duct to obtain the following working equation:

$$q = c_p(T_{t2} - T_{t1}) \quad (8.51)$$

The concept of entropy can be used to draw conclusions about the behavior of a flowing compressible fluid under various conditions. Although we do not provide proof here, we will discuss the effect of heat addition on the properties of the fluid. Consider a compressible fluid flowing at subsonic velocity into a duct that is being heated. The fluid will gain energy from the duct walls and eventually reach the point where $M = 1$. Any heat addition beyond this point serves only to reduce the mass flow rate. This means that a maximum amount of heat can be added before the flow will choke. Choked flow, remember, can also occur for flow through a converging–diverging nozzle and for flow with friction.

For supersonic flow entering a duct, the addition of sufficient heat ultimately causes the fluid to attain a Mach number of 1. Cooling (or removal of heat from the fluid) has the effect in both cases of driving the Mach number away from unity. Note that the heat addition can be in any of a number of forms and is not dependent on duct shape or length. Heat can be added over a very short distance, as in a chemical reaction, or over a long distance, as in a heat exchanger.

With the equations thus derived and tabulated, we are now in a position to solve problems dealing with heat transfer to a frictionless one-dimensional flow of an ideal gas (referred to as **Rayleigh flow**).

Example 8.10

Air flows in a constant-area duct. At the inlet the Mach number is 0.2, the static pressure is 90 kPa, and the static temperature is 27°C. Heat is added at a rate of 120 kJ/(kg of air). Assuming a perfect gas with constant specific heats, determine the properties of the air at the end of the duct. Assume also that the flow is frictionless and that $c_p = 1\,000 \text{ J/(kg} \cdot \text{K)}$.

SOLUTION

For subsonic flow being heated in duct, the fluid will eventually reach the point where $M = 1$. This is illustrated in Figure 8.20. The properties we seek are those at Section 8.2. From Table D.1 at $M_1 = 0.2$, we read

$$\frac{p_1}{p_{t1}} = 0.9725 \quad \frac{T_1}{T_{t1}} = 0.9921$$

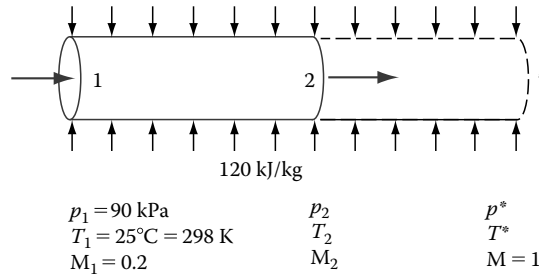


FIGURE 8.20 Flow in a duct with heat addition.

From Table D.4 at $M_1 = 0.2$, we also read

$$\frac{T_{t1}}{T_t^*} = 0.17355 \quad \frac{T_1}{T^*} = 0.20661 \quad \frac{p_1}{p^*} = 2.2727$$

$$\frac{p_{t1}}{p_t^*} = 1.2346 \quad \frac{V_1}{V^*} = 0.09091$$

We can relate the stagnation temperature at 2 to that at Section 8.1 through the heat transfer Equation 8.51:

$$q = c_p(T_{t2} - T_{t1})$$

or

$$T_{t2} = \frac{q}{c_p} + T_{t1} = \frac{120000}{1000} + (27 + 273)$$

$$= 420 \text{ K}$$

The temperature ratio we seek can be found by using the ratios already found:

$$\frac{T_{t2}}{T_t^*} = \frac{T_{t2}}{T_{t1}} \frac{T_{t1}}{T_t^*} = \frac{420}{300} 0.17355 \approx 0.24$$

Entering Table D.4 at this value yields

$$M_2 = 0.24 \quad \frac{T_2}{T^*} = 0.28411 \quad \frac{p_2}{p^*} = 2.2209$$

$$\frac{p_{t2}}{p_t^*} = 1.2213 \quad \frac{V_2}{V^*} = 0.12792$$

Other properties can be found in a similar way:

$$T_2 = \frac{T_2}{T^*} \frac{T^*}{T_1} T_1 = (0.28411) \left(\frac{1}{0.20661} \right) (300 \text{ K})$$

$$T_2 = 412 \text{ K} = 139^\circ\text{C}$$

and

$$p_2 = \frac{p_2}{p^*} \frac{p^*}{p_1} p_1 = (2.2209) \left(\frac{1}{2.2727} \right) (90 \text{ kPa})$$

$$p_2 = 87.95 \text{ kPa}$$

The static temperature changed a great deal, but static pressure changed only slightly. We can investigate the change in sonic velocity also. At inlet,

$$\begin{aligned} a_1 &= \sqrt{\gamma RT} = \sqrt{1.4(286.8)(300)} \\ &= 347.1 \text{ m/s} \end{aligned}$$

At exit,

$$a_2 = \sqrt{1.4(286.8)(412)} = 406.7 \text{ m/s}$$

The velocity at each of these points is

$$\begin{aligned} V_1 &= M_1 a_1 = 0.2(347.1) = 69.4 \text{ m/s} \\ V_2 &= M_2 a_2 = 0.24(406.7) = 97.7 \text{ m/s} \end{aligned}$$

Thus, heat addition has increased all properties except pressure.

8.7 SUMMARY

In this chapter, we examined some concepts associated with compressible flow. We determined an expression for sonic velocity in a compressible medium and also developed equations for isentropic flow. We examined in detail the behavior of a compressible fluid as it goes through a nozzle. We derived equations for normal shock waves and saw the effect of friction and heat transfer on compressible flow through a constant-area duct.

PROBLEMS

Sonic Velocity and Mach Number

- 8.1 Determine the sonic velocity in air at a temperature of 0°F.
- 8.2 Calculate the sonic velocity in argon at a temperature of 25°C.
- 8.3 Calculate the sonic velocity in carbon dioxide at a temperature of 20°C.
- 8.4 Determine the sonic velocity in helium at a temperature of 50°C.
- 8.5 Calculate the sonic velocity in hydrogen at a temperature of 75°F.
- 8.6 Determine the sonic velocity in oxygen at a temperature of 75°F.
- 8.7 Sonic velocity in a solid can be calculated with what is known as the bulk modulus, defined as

$$\beta_s = \rho \left(\frac{dp}{d\rho} \right)$$

with which sonic velocity is determined from

$$a = \sqrt{\frac{\beta_s}{\rho}}$$

For copper, $\beta_s = 17.9 \times 10^6$ psi, and the density can be found in Table A.8. Calculate the velocity of sound in copper.

- 8.8 A wing travels at 800 ft/s in air at a temperature of 40°F and 10 psia. Determine the Mach number.

- 8.9** A bullet fired from a high-powered rifle travels at 3000 ft/s through air at 75°F and 14.7 psia. Is the speed of the bullet supersonic?
- 8.10** A wing travels at 400 m/s through air at 8°C and 50 kPa. Is the wing moving at subsonic velocity? Calculate the Mach number.
- 8.11** At what temperature will an object traveling at 900 ft/s have a Mach number of 1?

Ideal Gas Law

- 8.12** Following the development leading to the derivation of Equation 8.8, similarly derive the equation for specific heat at constant volume:

$$c_v = \frac{R}{\gamma - 1}$$

- 8.13** Using corresponding data for five different temperatures in Table A.3, verify the ideal gas law.
- 8.14** Using corresponding data for any two of the gases in Table A.6, verify whether the following equation is accurate:

$$c_p = \frac{\gamma R}{\gamma - 1}$$

- 8.15** Using corresponding data for any two of the gases in Table A.6, verify whether the following relationship is accurate:

$$c_v = \frac{R}{\gamma - 1}$$

- 8.16** Using corresponding data for any two of the gases in Table A.6, (a) calculate $c_v = c_p/\gamma$ and (b) verify whether the following equation is accurate:

$$c_p - c_v = R$$

Isentropic Flow through a Channel of Varying Area

- 8.17** A converging nozzle of area 3 in.² is attached to a reservoir containing air. The pressure and temperature in the reservoir are 50 psia and 1000°R. Calculate the mass flow rate through the nozzle for choked conditions.
- 8.18** A reservoir discharges air through a converging nozzle with an exit area of 8 cm². The reservoir pressure is 150 kPa, and the temperature is 1000 K. Calculate the mass flow rate through the nozzle for back pressures of 100 and 50 kPa.
- 8.19** A converging nozzle of area 5 cm² is attached to a reservoir containing oxygen maintained at 150 kPa and 300 K. Determine the flow rate through the nozzle for back pressures of 100, 50, and 0 kPa.
- 8.20** Air flows into a converging duct from an inlet area of 15 in.² to the exit, where the area is 10 in.². For inlet conditions of 85°F, 18 psia, and 400 ft/s, determine conditions at the exit.
- 8.21** Air flows through a diverging nozzle from an area of 20 cm² to the exit, where the area is 30 cm². For inlet conditions of 27°C, 200 kPa, and 300 m/s, determine conditions at the exit.
- 8.22** Hydrogen flows into a converging duct from an inlet area of 20 cm² to the exit, where the area is 10 cm². For exit conditions of 40°C, 100 kPa, and 950 m/s, determine conditions at the inlet.

- 8.23** Determine the mass flow rate through the nozzle of Example 8.4 for $p_1 = 150$ kPa and $T_1 = 300$ K.
- 8.24** A converging–diverging nozzle is attached to an air reservoir in which the conditions are 60 psia and 550°R. The throat area is 10 in.², and the exit area is 20 in.². Determine the back pressure required to choke the nozzle.
- 8.25** In a compressed air bottling plant, huge air reservoirs are slowly emptied through valves into smaller tanks intended for consumer use. In one such system, consider the valve as a converging–diverging nozzle of exit area 12 cm² and throat area 8 cm². The reservoir conditions are 400 kPa and 25°C. The smaller tank is initially evacuated; as it fills, its pressure steadily increases.
- Determine the back pressure at which the valve is no longer choked.
 - Calculate the mass flow rate at the choked condition.

Normal Shock

- 8.26** Re-derive Equation 8.24 in detail and verify the plot in Figure 8.14.
- 8.27** An airstream travels at 2100 ft/s and has static properties of 15 psia and 75°F. The stream undergoes a normal shock. Determine air velocity and the stagnation and static conditions after the shock wave.
- 8.28** A stream of oxygen travels at 600 m/s and undergoes a normal shock. Upstream properties are 50 kPa and 12°C. Determine velocity and stagnation and static conditions after the wave.
- 8.29** A stream of helium travels at 4000 ft/s and undergoes a normal shock. Determine helium velocity and static conditions after the shock if the upstream conditions are 15 psia and 30°F.
- 8.30** A normal shock with a velocity of 1200 m/s travels through still air with properties 101.3 kPa and 25°C. Determine the air velocity and static properties behind the wave.
- 8.31** A normal shock of velocity 800 m/s travels through still air. Downstream properties are 600 kPa and 400 K. Determine downstream air velocity and upstream pressure and temperature.

Normal Shock in a Channel of Varying Area

- 8.32** A converging–diverging nozzle is supplied by a huge air reservoir in which conditions are 50 psia and 100°F. The nozzle has throat and exit areas of 12 in.² and 18 in.², respectively. Determine the range of back pressures over which a normal shock appears in the nozzle or oblique shocks form at the exit.
- 8.33** A huge reservoir of air supplies a converging–diverging nozzle with throat and exit areas of 2 and 20 cm², respectively. The reservoir pressure and temperature are 150 kPa and 20°C, respectively. Determine the range of back pressures over which (a) shocks appear in the nozzle, (b) oblique shocks form at the exit, and (c) expansion waves form at the exit.
- 8.34** A converging–diverging nozzle is supplied by a huge oxygen reservoir. The nozzle has throat and exit areas of 5 in.² and 12 in.², respectively. The reservoir conditions are 100 psia and 0°F. Calculate the mass flow rate through the nozzle for the case in which a normal shock appears at the exit plane. Make the calculations both at the throat and just downstream of the shock.
- 8.35** A converging–diverging nozzle is supplied by a huge oxygen reservoir. The nozzle has a throat area of 10 in.² and an exit area of 18 in.². Reservoir conditions are $p_r = 100$ psia and $T_r = 500^\circ\text{R}$. Determine the range of back pressures over which (a) shocks appear in the nozzle, (b) oblique shocks form at the exit, and (c) expansion waves form at the exit.

Flow with Friction

- 8.36** Oxygen flows into a constant-area pipe at 60 ft/s, 40 psia, and 32°F. The pipe is 2000 ft long and made of 3-nominal galvanized iron (schedule 40). Determine the Mach number at the pipe exit.

- 8.37** Air flows into a 12-nominal schedule 80 asphalted cast-iron pipe at 4 m/s, 200 kPa, and 30°C. What length of pipe is required for the exit Mach number to be unity? What is the exit pressure?
- 8.38** Oxygen flows into a 300-m-long pipe at inlet conditions of 20 m/s, 400 kPa, and 6°C. The pipe is made of drawn metal (smooth walled), and the system must be capable of delivering the air at a Mach number of about 0.8. Select a suitable pipe diameter. Calculate exit pressure and temperature.
- 8.39** Air flows into a 6-nominal schedule 80 PVC pipe. At the exit, the velocity is 1500 ft/s, the pressure is 8 psia, and the temperature is 530°R. If the pipe length is 20 ft, calculate the inlet conditions.
- 8.40** Oxygen enters a smooth-walled 1-nominal schedule 40 pipe at a velocity of 100 m/s, 210 kPa, and 300 K. The pipe length is 4.8 m. Determine conditions at the exit.
- 8.41** Air enters a $\frac{1}{2}$ -nominal schedule 40 pipe at a velocity of 1400 ft/s, 12 psia, and 480°R. Determine the length required for flow to be sonic at the exit, and calculate the pressure there. Take ε/D to be 0.00001.

Flow with Heat Transfer

- 8.42** Air at 10°F and 2 psia enters a duct at an inlet velocity of 300 ft/s. Heat is added to the fluid at a rate of 1000 Btu/(slug of air). Determine the pressure and temperature of the air at the exit. Assume specific heat at constant pressure to be 7.72 Btu/(slug · °R) and no friction.
- 8.43** Oxygen at 25°C and 101.3 kPa enters a duct at a velocity of 1 400 m/s. Heat is removed from the oxygen at a rate of 15 000 J/kg. Assuming frictionless flow, determine the properties (pressure, temperature, Mach number, and velocity) at the exit.
- 8.44** Air enters a duct at a velocity of 100 ft/s and it is desired to determine how much heat is required such that the Mach number of the air will reach a value of 1. For inlet static conditions of 75°F and 14.7 psia, determine the conditions (pressure and temperature) at the exit and the heat transfer rate.
- 8.45** Nitrogen [$\gamma = 1.4$, $c_p = 1.04$ kJ/(kg · K)] enters a duct and is heated so that at the exit, the Mach number is 0.4. The heat added amounts to 40 000 J/kg. Determine pressure, temperature, and Mach number at the inlet if the exit properties are 90 kPa and 290 K.
- 8.46** Air at 32°F and 10 psia enters a duct and is heated by an amount equal to 2000 Btu/(slug of air). Calculate the mass flow rate of air using properties at the inlet and again using conditions at the outlet. Assume frictionless flow, a flow area of 4 in.², and an inlet velocity of 400 ft/s.

Computer Problems

- 8.47** Table D.1 is an isentropic flow table for a fluid having a ratio of specific heats $\gamma = 1.4$. A number of other fluids exist that have a different value for γ , as indicated in Table A.6. Using the appropriate equations, generate an isentropic flow table for any of the fluids listed in Table A.6 for which $\gamma \neq 1.4$.
- 8.48** Table D.2 applies to a supersonic flow of a fluid having a ratio of specific heats $\gamma = 1.4$ that undergoes a normal shock. A number of other fluids exist that have a different value for γ , as indicated in Table A.6. Using the appropriate equations, generate a normal shock table for any of the fluids listed in Table A.6 for which $\gamma \neq 1.4$.
- 8.49** Table D.3 applies to a flow with friction of a compressible fluid having a ratio of specific heats $\gamma = 1.4$ in a constant area duct (also known as Fanno flow). A number of other fluids exist that have a different value for γ , as indicated in Table A.6. Using the appropriate equations, generate a Fanno flow table for any of the fluids listed in Table A.6 for which $\gamma \neq 1.4$.
- 8.50** Table D.4 applies to a flow with heat transfer of a compressible fluid having a ratio of specific heats $\gamma = 1.4$ in a constant-area duct (also known as Rayleigh flow). A number of

other fluids exist that have a different value for γ , as indicated in Table A.6. Using the appropriate equations, generate a Rayleigh flow table for any of the fluids listed in Table A.6 for which $\gamma \neq 1.4$.

- 8.51** For any of the problems in this chapter (including example problems) that involve flow through a converging–diverging nozzle due to a decrease in back pressure: (a) write the descriptive equations and outline the procedure for determining mass flow rate through the nozzle and (b) construct a graph of mass flow rate versus back pressure (similar to that of Figure 8.11).

Design Problems

8.52 Effects of Friction on Compressible Flow

An experiment is to be designed to illustrate the effects of friction on compressible flow. The proposed design is shown in Figure P8.52. A pipe is attached to a tank. The pipe has a number of static pressure taps, which are all attached to a manometer board. Air in the tank is evacuated with a vacuum pump until a predetermined pressure is reached. The valve is then opened and air is drawn through the pipe into the tank. The initial tank pressure should be low enough so that the flow through the pipe is choked for a finite time. Just after the valve is opened, a photograph is taken of the manometer board to obtain a pressure-versus-distance graph for a choked, compressible flow of air in a pipe.

- a. Design the system: Select the tank dimensions, tube diameter, the tube length, and materials of construction. Determine the number of static pressure taps and design the manometer board.
- b. Select a valve. Should the valve be electrically operated so that it can be opened quickly by a solenoid? What is the best type of valve to use?
- c. What is proved by obtaining data of pressure versus distance for choked, compressible flow? How would the pressure-versus-distance data change for an unchoked condition? Compose a theoretical basis for predicting the results obtained.
- d. Determine the total cost of the apparatus.

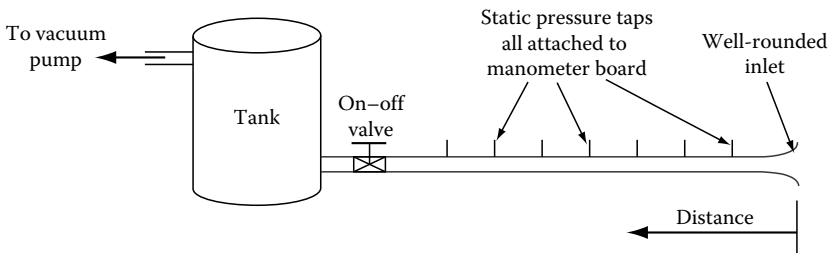
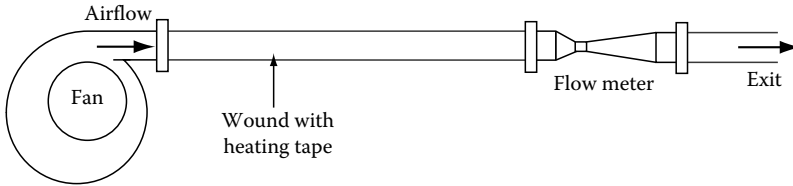


FIGURE P8.52

8.53 Hot Air Source for Calibrating Flow Meters


A system for testing airflow meters operating at various temperatures is to be designed. The proposed system is sketched in Figure P8.53. Air from a fan is discharged into a 4-nominal, schedule 40 pipe that has heating tape (not shown) wound around it. The heating tape applies a uniform addition of heat to the air. Downstream, the air enters a flow meter whose performance will be evaluated. The flow through the pipe is controlled by the rotational speed of the fan. The flow meter is to be tested at inlet (to the flow meter) temperatures that vary to 150°F and at flow rates that vary to as large as 0.001 slug/s. Inlet pressures have no restrictions. The fan draws in air at 70°F, 14.7 psia.

- a. Design the system: Select a line length; determine the fan power required; and calculate the heat input rate. There is to be a flanged fitting at the end of the pipe where the flow meter will attach.
- b. Select materials of construction for each component.
- c. Size and select the fan needed for this installation.
- d. Determine the cost of the test system.
- e. Explain all design decisions.

**FIGURE P8.53**

This page intentionally left blank

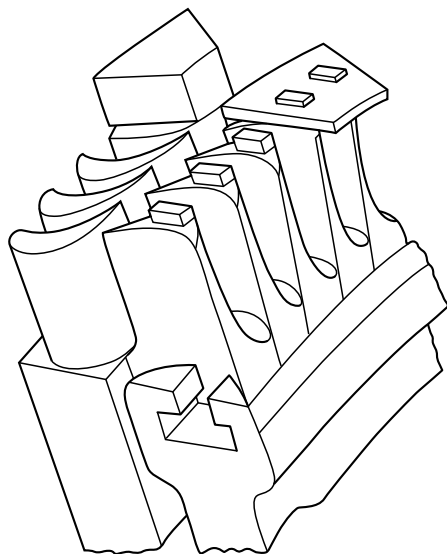9 Turbomachinery



A turbomachine is a device that transfers energy between its own rotating parts and a moving fluid. Examples include steam turbines (as found in conventional power plants), pumps, compressors, ordinary window fans, and windmills. Our objective in this study is to learn to predict general performance characteristics of turbomachines.

A turbomachine can be either of two types: those that use external power to impart energy to a fluid (such as fans, blowers, pumps, compressors, and propellers) and those that produce external power by absorbing energy from a fluid (such as propeller turbines, impulse turbines, and windmills). In this chapter, we study various turbines and pumps and examine their performance characteristics.

The two principal components of a turbomachine are the **output shaft**, which transmits mechanical energy to or from the machine, and the **rotor**, which has vanes or blades attached. In many cases, the rotor is connected directly to the output shaft. In some designs, such as steam turbines, the rotor is housed in a casing to allow the working fluid to change pressure within the machine; the casing completely separates the fluid and machine from the surroundings. In other designs, such as windmills, the rotor is completely exposed.

The majority of turbomachines can be classified into axial-flow, radial-flow, or mixed-flow types. In an axial-flow machine, the main path of the fluid through the device is in the same direction as the rotor axis. In the radial-flow type, the main flow direction is perpendicular to the axis of rotation. In the mixed-flow type, the main flow direction is neither purely radial nor purely axial but a combination of the two. Radial- and axial-flow types are discussed in detail in this chapter.

The chapter concludes the study of turbomachines by giving an overview of general equations that are used to characterize them. Dimensional analysis is employed to obtain expressions that are useful for modeling purposes. An analysis and performance data for a centrifugal pump are also presented. This machine is the only one considered in detail here, but the information given is

representative of the type of data to be expected in describing performance characteristics of turbomachines. The chapter ends with a discussion of hydraulic turbines.

In mathematically modeling flows through turbomachines, it is important to remember the common thread that runs throughout the analyses: the objective is to relate the shaft work or torque to the properties of the fluid while it flows through the machine.

9.1 EQUATIONS OF TURBOMACHINERY

In Chapter 3, we derived the linear momentum equation from Newton's law of motion. In applying this law to rotating bodies, such as parts of a turbomachine, it is necessary to consider moments relative to the axis of rotation and to evaluate moments exerted on the fluid volume. Because the axis of rotation is fixed, we can use Newton's law to develop what we will call the **angular momentum equation**.

Consider the general two-dimensional case depicted in Figure 9.1. A differential element located at a distance r from the origin is acted upon by a force dF . The force may be due to fluid moving through a turbine, for example, whereas the differential element might be part of the rotor. The component of the force acting perpendicular to r is dF_t , where the subscript t denotes a tangential force. The moment exerted on the differential element is dT_s , found from

$$dT_s = r dF_t \quad (9.1)$$

The differential force in the tangential direction is determined by applying the linear momentum equation in the tangential direction:

$$\sum F_t = \frac{\partial}{\partial t}(mV)_t \Big|_{CV} + \iint_{CS} V_t \rho V_n dA$$

or, in differential form,

$$dF_t = \frac{\partial}{\partial t}(V_t dm) \Big|_{CV} + V_t \rho V_n dA \quad (9.2)$$

where V_t is the tangential velocity at radius r . Combining Equations 9.1 and 9.2 gives the following for the differential moment:

$$dT_s = r \frac{\partial}{\partial t}(V_t dm) \Big|_{CV} + r V_t (\rho V_n dA)$$

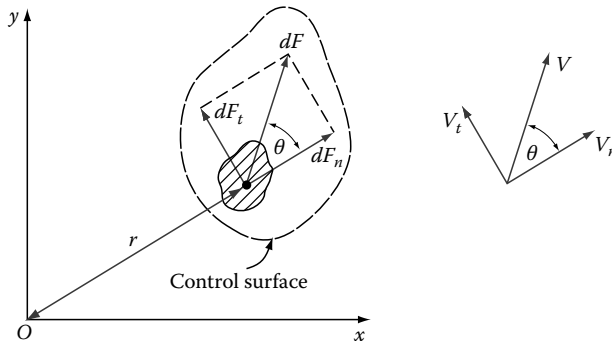


FIGURE 9.1 Force acting on a differential element at a fixed distance from the origin.

The total torque is determined by integration:

$$T_s = \frac{\partial}{\partial t} \iiint_{CV} r V_t \, dm + \iint_{CS} r V_t (\rho V_n \, dA) \quad (9.3)$$

The term T_s represents the sum of all externally applied moments or torques due to pressure forces, gravity, viscous forces, and so on. The first term on the right-hand side is the rate at which angular momentum is stored in the control volume. The second term represents the net rate out (out minus in) of angular momentum from the control volume.

From Figure 9.1, we see that $V_t = V \sin \theta$. Equation 9.3 can therefore be rewritten as

$$T_s = \frac{\partial}{\partial t} \iiint_{CV} r V \sin \theta \, dm + \iint_{CS} r V \sin \theta (\rho V_n \, dA) \quad (9.4)$$

We can generalize this result into a vector form that is applicable to the three-dimensional case:

$$\mathbf{T} = \frac{\partial}{\partial t} \iiint_{CV} (\mathbf{r} \times \mathbf{V}) \, dm + \iint_{CS} (\mathbf{r} \times \mathbf{V}) (\rho \mathbf{V} \cdot \mathbf{dA}) \quad (9.5)$$

For steady flow, Equation 9.4 becomes

$$T_s = \iint_{CS} r V \sin \theta (\rho V_n \, dA) \quad (9.6)$$

The angular momentum equation is applied to a simple problem in the following example.

Example 9.1

A lawn sprinkler is shown schematically in Figure 9.2. The sprinkler consists of two nozzles at opposite ends of a rotor that rotates about its center. Water leaving the nozzles causes the rotor to spin at a constant angular velocity depending on the volume flow of water and the magnitude of the opposing torque due to bearing friction. Determine an expression for the torque in terms of the operating variables.

SOLUTION

Select a control volume to include the entire sprinkler rotor, as shown in Figure 9.2. Next choose a constant moment arm R from the pivot to the center of the exit. All fluid particles leaving the exit do not exert the same torque, but we can make this assumption with negligible error because the nozzle exit dimension is small in comparison to R . While the rotor is rotating, the only external applied torque is due to bearing friction. No angular momentum is stored in the control volume. Further, all fluid enters in the axial direction and therefore has no angular momentum.

It is helpful to sketch a velocity diagram for the water leaving the nozzles (Figure 9.3). We have the following:

V = absolute velocity of water leaving nozzle (as seen by stationary observer)

V_{rel} = relative velocity of water leaving nozzle (as seen by observer moving with nozzle)

V_n = velocity normal to control surface with $V_n = V \cos \theta = V_{\text{rel}} \cos \alpha$

V_t = tangential velocity component of V , $V_t = V \sin \theta$

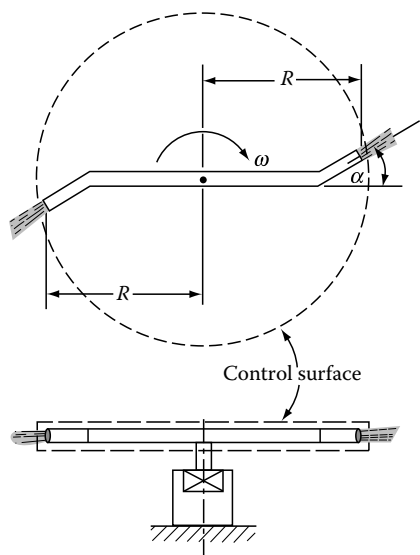


FIGURE 9.2 Lawn sprinkler of Example 9.1.

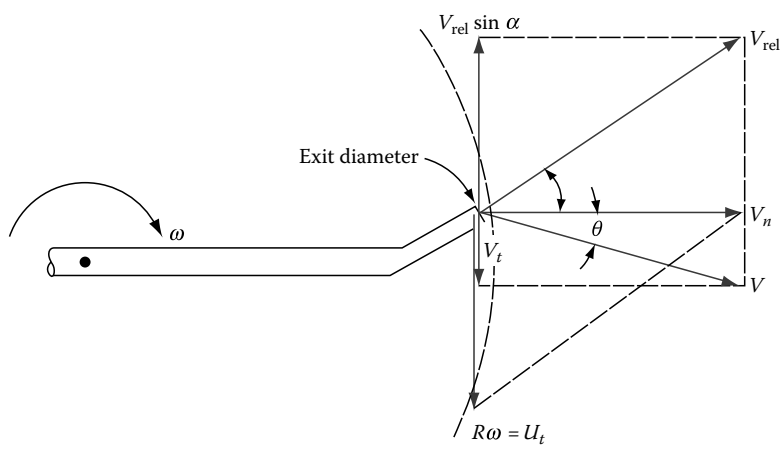


FIGURE 9.3 Velocity diagram for the water leaving the nozzle.

$V_{\text{rel}} \sin \alpha = \text{tangential velocity component of } V_{\text{rel}} = V_{\text{rel}t}$
 $U_t = R\omega = \text{tip velocity of rotor in tangential direction}$

From the velocity diagram, we see that the tangential velocity components must balance; that is,

$$V_{\text{rel}} \sin \alpha = V_t + U_t$$

or

$$V_t = V \sin \theta = V_{\text{rel}} \sin \alpha - R\omega$$

As indicated in Figure 9.2, the relative velocity is perpendicular to the nozzle exit. Therefore, for one nozzle, we have

$$Q|_{\text{nozzle}} = Q_1 = AV_{\text{rel}} = \frac{\pi D^2}{4} V_{\text{rel}}$$

or

$$V_{\text{rel}} = \frac{4Q_1}{\pi D^2}$$

where D is the nozzle exit diameter and Q_1 is the volume flow rate through only one nozzle (equal to half that delivered by the sprinkler). The tangential velocity now becomes

$$V_t = V \sin \theta = \frac{4Q_1}{\pi D^2} \sin \alpha - R\omega$$

Equation 9.4 applied to one nozzle discharging liquid out of the control volume becomes

$$T_s = \iint_{\text{CS}} r V_t (\rho V_n dA)$$

With the efflux at $r=R$, for constant density ρ , and with no inflow in the tangential direction, the preceding equation becomes, for two identical nozzles,

$$T_s = 2\rho R \iint_{\text{CS}} V_t (V_n dA)$$

Substituting for tangential velocity, we get

$$T_s = 2\rho R \iint_{\text{CS}} \left(\frac{4Q_1}{\pi D^2} \sin \alpha - R\omega \right) V_n dA$$

Integrating, and recalling that the volume flow rate Q_1 is for one nozzle, we obtain, for the torque,

$$T_s = 2\rho Q_1 R \left(\frac{4Q_1}{\pi D^2} \sin \alpha - R\omega \right)$$

If the nozzles are discharging equal amounts of flow, then the total flow rate Q equals $2Q_1$. The torque then becomes

$$T_s = \rho Q R \left(\frac{2Q}{\pi D^2} \sin \alpha - R\omega \right)$$

We are now ready to apply the angular momentum equation to the case of a generalized turbomachine. A typical control volume is given in Figure 9.4. It is customary to take V_t as positive when it is in the direction of rotation. The normal velocities V_n are assumed to be average velocities. The continuity equation for the control volume is

$$\iint_{\text{CS}} \rho V_n dA = 0$$

or

$$\rho_2 A_2 V_{n_2} - \rho_1 A_1 V_{n_1} = 0 \quad (9.7a)$$

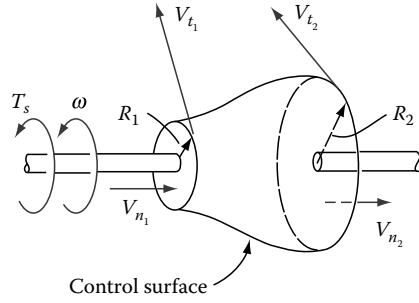


FIGURE 9.4 Control volume for a generalized turbomachine.

For an incompressible fluid, $\rho_1 = \rho_2$, and the continuity equation becomes

$$A_1 V_{n1} = A_2 V_{n2} = Q \quad (9.7b)$$

Applying the steady-flow angular momentum equation, we get

$$T_s = \iint_{CS} r V_t (\rho V_n dA) = (R_2 V_{t2} \rho_2 Q_2 - R_1 V_{t1} \rho_1 Q_1)$$

Combining with Equation 9.7, we get

$$T_s = \rho Q (R_2 V_{t2} - R_1 V_{t1}) \quad (9.8)$$

in which R_1 and R_2 are average radial distances at inlet and outlet, whereas V_{t1} and V_{t2} are corresponding average tangential velocities. Equation 9.8—known as the **Euler turbine equation**—relates shaft torque to fluid velocities through a turbomachine. The shaft torque is taken as positive if the turbomachine is a pump; it is taken as negative for a turbine.

By definition, the power or rate of doing work is the product of shaft torque and rotational speed:

$$-\frac{dW_s}{dt} = T_s \omega = \rho Q \omega (R_2 V_{t2} - R_1 V_{t1}) \quad (9.9)$$

The tangential velocity of the rotor is $U_t (= R\omega)$, and by substitution, Equation 9.9 becomes

$$-\frac{dW_s}{dt} = T_s \omega = \rho Q (U_{t2} V_{t2} - U_{t1} V_{t1}) \quad (9.10a)$$

On a per-unit-mass basis, we have

$$-\frac{1}{\rho Q} \frac{dW_s}{dt} = \frac{T_s \omega}{\rho Q} = (U_{t2} V_{t2} - U_{t1} V_{t1}) \quad (9.10b)$$

Thus, the difference of the product of two velocities ($U_t V_t$) is proportional to the power per unit mass of fluid passing through the turbomachine. The power in Equation 9.10 is the actual power measured at the shaft.

Applying the steady-flow energy equation (Equation 3.21) to the control volume of Figure 9.4 gives

$$\frac{d(\tilde{Q} - W)}{dt} = \left[\left(h + \frac{V^2}{2} + gz \right) \Big|_{\text{out}} - \left(h + \frac{V^2}{2} + gz \right) \Big|_{\text{in}} \right] \rho Q$$

In the absence of heat transfer (as with an adiabatic machine) and using subscript notation, the energy equation becomes

$$-\frac{dW}{dt} = \left[\left(h_2 + \frac{V_2^2}{2} + gz_2 \right) - \left(h_1 + \frac{V_1^2}{2} + gz_1 \right) \right] \rho Q$$

The work term W is made up of two parts—shaft work and friction work. Rewriting the energy equation, we get

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho Q \left[\left(h_2 + \frac{V_2^2}{2} + gz_2 \right) - \left(h_1 + \frac{V_1^2}{2} + gz_1 \right) \right] \quad (9.11a)$$

If work is done by the fluid, the shaft work W_s is a positive quantity (as in turbines). If work is done on the fluid (pumps, fans, and compressors), however, W_s is negative. The friction work W_f is always a positive quantity because it represents shear work done by the fluid.

Equation 9.11a gives the power based on the change in fluid properties across the machine and is useful primarily for turbomachines that have a gas or vapor as the fluid medium (as in an air compressor or steam turbine). With these fluids in general, enthalpy differences are far more significant than differences in kinetic and potential energies, which are therefore usually ignored in the equation. Equation 9.11a thus becomes for a gas or vapor fluid medium

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho Q \Delta h \quad (9.11b)$$

where $\Delta h = h_2 - h_1$, the enthalpy difference across the machine.

If the fluid medium is a liquid (as in a water turbine or pump), a modified version of Equation 9.11a is more appropriate. Recall the definition of enthalpy:

$$h = u + \frac{p}{\rho}$$

For liquids, the change in internal energy of the fluid from inlet to outlet is negligible in comparison to the changes in pressure, kinetic energy, and potential energy. Thus, Equation 9.11a becomes

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho Q \left[\left(\frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) - \left(\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) \right] \quad (9.12a)$$

The quantity

$$\frac{p}{\rho g} + \frac{V^2}{2g} + z = Z$$

is called the total head Z . In terms of total head, Equation 9.12a is, for a liquid,

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho Q \Delta Z g \quad (9.12b)$$

where $\Delta Z = Z_2 - Z_1$.

Equation 9.10 is an expression for power measured at the shaft of a turbomachine, whereas Equations 9.11 and 9.12 tell how the fluid itself changes properties across the machine. The difference in these expressions is due to friction and other irreversibilities. This condition leads us to the concept of efficiency. For a fan or a pump, we put work into the system by rotating the shaft (Equation 9.10) while the output goes into overcoming frictional effects and increasing the energy of the fluid (Equations 9.11 or 9.12). By defining efficiency as

$$\eta = \frac{\text{Energy out}}{\text{Energy in}}$$

we obtain the following for a pump, fan, or compressor:

$$\eta = \frac{-(dW_s/dt) - (dW_f/dt)}{-(dW_s/dt)}$$

By substitution from Equations 9.10 through 9.12, we have

$$\text{Compressor or fan efficiency: } \eta = \frac{\Delta h}{U_{t2} V_{t2} - U_{t1} V_{t1}} \quad (9.13)$$

$$\text{Pump efficiency: } \eta = \frac{g\Delta Z}{U_{t2} V_{t2} - U_{t1} V_{t1}} \quad (9.14)$$

For a gas turbine or a water turbine, the fluid loses energy on its way through the machine. This energy goes into overcoming frictional effects and into useful power as measured at the output shaft. So for a turbine, efficiency is

$$\begin{aligned} \eta &= \frac{\text{Energy out}}{\text{Energy in}} \\ &= \frac{-(dW_s/dt)}{-(dW_s/dt) - (dW_f/dt)} \end{aligned}$$

By substitution from Equations 9.10 through 9.12, we obtain

$$\text{Gas or vapor turbine efficiency: } \eta = \frac{U_{t2} V_{t2} - U_{t1} V_{t1}}{\Delta h} \quad (9.15)$$

$$\text{Water turbine efficiency: } \eta = \frac{U_{t2} V_{t2} - U_{t1} V_{t1}}{g\Delta Z} \quad (9.16)$$

These equations were developed for a generalized turbomachine and give an idea of what is to be expected in analyzing fluid machinery. The general equations will be modified where appropriate to make them applicable specifically to the various devices discussed in this chapter.

9.2 AXIAL-FLOW TURBINES

In an axial-flow turbine, the flow through the machine is mainly in the axial direction. A schematic of a conventional axial-flow turbine is given in Figure 9.5. It consists of a **stator**, which is a stationary housing onto which fixed blades are attached, and a rotating **rotor**, also with blades attached. The flow of fluid is through the passage between adjacent blades in the same row.

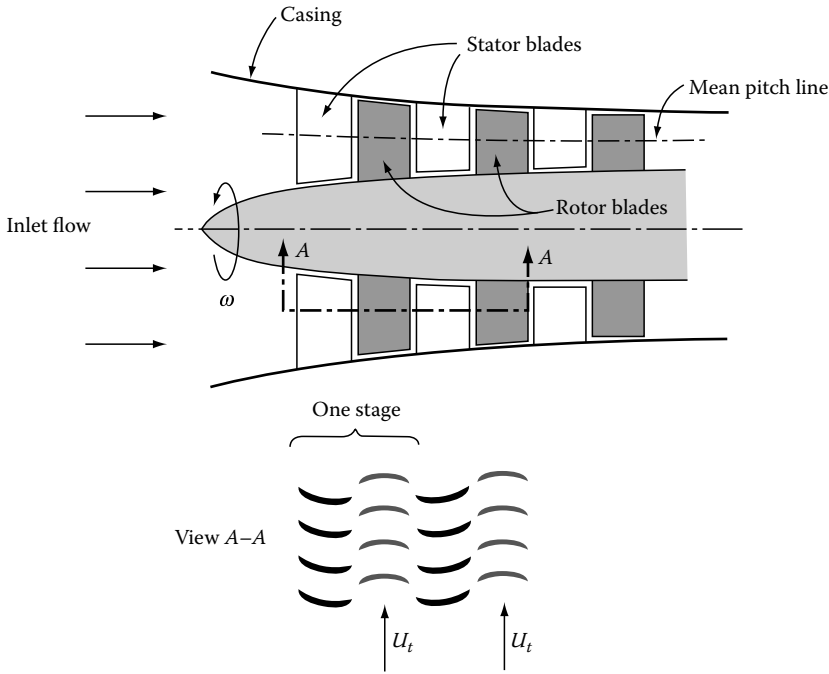


FIGURE 9.5 Schematic of an axial-flow turbine.

The passage is sometimes referred to as a **nozzle**. A **turbine stage** is defined as one stator and one rotor set of blades. The dimensions of the rotor and stator can change with distance along the machine to make better use of the energy in the fluid from stage to stage—that is, to extract as much energy from the fluid as efficiently as possible. The multistage machine shown in Figure 9.5 is used primarily for gas and steam flows. Steam turbines are used extensively in conventional power plants for the production of electricity.

A simple approach to the study of such a machine is to assume that conditions at the mean flow radius (the pitch line) fully represent the flow at all other radii in one set of blades. This two-dimensional analysis is reasonable if the ratio of blade height to mean radius is small. If this ratio is large, however, a three-dimensional analysis is required. Because a three-dimensional analysis is beyond the range of what we wish to study, we will formulate only a two-dimensional approach.

A velocity diagram for one stage is given in Figure 9.6. It is assumed that radial velocities are zero and that the flow does not vary in the circumferential direction. The velocities of importance are the absolute velocities V_0 , V_1 , and V_2 , the relative velocity V_{rel} , the tangential velocity V_t , the rotor tangential velocity U_t , and the axial velocity V_a . The stage is referred to as **normal** if $V_0 = V_2$. It is customary to take the axial velocity as constant through the machine. Because the change of fluid properties within each stage is small, the fluid can be assumed to be incompressible in each stage. A different density is then selected for each successive stage to account for the compressibility effect. The controllable features of importance are the blade angles α_1 and β_2 . The angle α_1 is determined by the setting of the stator blades; β_2 is determined by the setting of the moving rotor blades. Because these blade angles are independent of the flow through the machine, it is desirable to express our equations in terms of these design angles.

Equations 9.10a and 9.11a can be applied to any stage in the turbine. For the velocity diagram of Figure 9.6, Equation 9.10a becomes

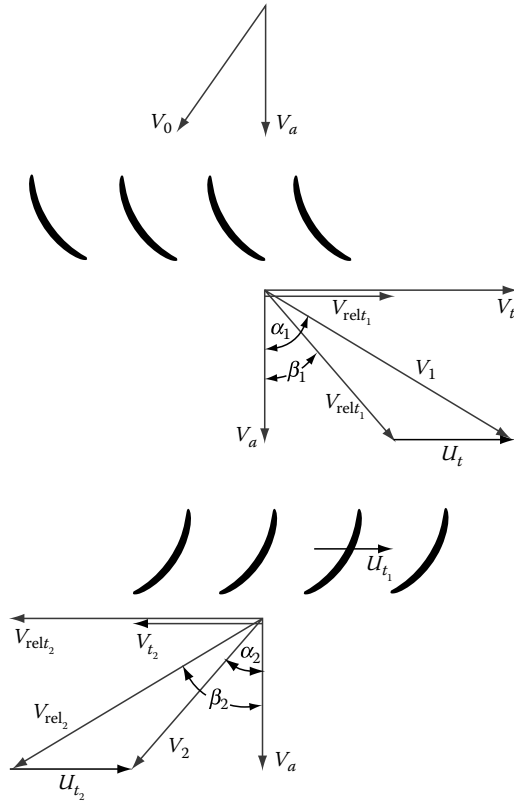


FIGURE 9.6 Velocity diagram for the axial-flow turbine stage.

$$\frac{dW_s}{dt} = T_s \omega = \rho Q U_t (V_{t_2} + V_{t_1}) \quad (9.17)$$

The sign on the shaft work term is positive because we are dealing with a turbine. Moreover, the peripheral velocities are taken at the same radius, so $U_{t_2} = U_{t_1} = U_t$. Finally, the sign convention that the tangential velocity is positive if in the same direction as U_t requires the sign change on V_{t_1} .

Next we apply Equation 9.11a, assuming frictionless flow through the stage and no changes in potential energy:

$$-\frac{dW_s}{dt} = \rho Q \left[\left(h_2 + \frac{V_2^2}{2} \right) - \left(h_0 + \frac{V_0^2}{2} \right) \right]$$

Because we are treating each stage as though the fluid medium passing through is incompressible, the enthalpy terms become pressure terms. We therefore obtain

$$-\frac{dW_s}{dt} = \rho Q \left[\left(\frac{p_2}{\rho} + \frac{V_2^2}{2} \right) - \left(\frac{p_0}{\rho} + \frac{V_0^2}{2} \right) \right] \quad (9.18a)$$

For a normal stage ($V_0 = V_2$), Equation 9.18a becomes

$$-\frac{dW_s}{dt} = Q(p_2 - p_0) \quad (9.18b)$$

Combining Equations 9.17 and 9.18 gives the following for the pressure drop across the stage:

$$p_0 - p_2 = \rho U_t (V_{t_2} + V_{t_1}) \quad (9.19)$$

Another important pressure-drop term that we will need is across the rotor row. Again we apply Equations 9.10a and 9.11a. The following equations result:

$$\frac{dW_s}{dt} = \rho Q U_t (V_{t_2} + V_{t_1}) \quad (9.20)$$

and

$$-\frac{dW_s}{dt} = \rho Q \left[\left(\frac{p_2}{\rho} + \frac{V_2^2}{2} \right) - \left(\frac{p_1}{\rho} + \frac{V_1^2}{2} \right) \right] \quad (9.21)$$

Equating and regrouping give

$$\frac{p_1 - p_2}{\rho} + \frac{V_1^2 - V_2^2}{2} - U_t (V_{t_2} + V_{t_1}) = 0$$

From the velocity diagrams, we have the following for both V_1 and V_2 :

$$V^2 = V_a^2 + V_t^2$$

By substitution, we get

$$\frac{p_1 - p_2}{\rho} + \frac{V_{t_1}^2 - V_{t_2}^2}{2} - U_t (V_{t_1} + V_{t_2}) = 0$$

because V_a is a constant. Further simplification gives

$$\frac{p_1 - p_2}{\rho} + \frac{1}{2} [(V_{t_1} - V_{t_2})(V_{t_1} + V_{t_2}) - 2U_t (V_{t_1} + V_{t_2})] = 0$$

or

$$\frac{p_1 - p_2}{\rho} + \frac{1}{2} (V_{t_1} + V_{t_2}) [(V_{t_1} - U_t) - (V_{t_2} + U_t)] = 0 \quad (9.22)$$

Again from the velocity diagrams, the tangential velocities must balance:

$$\begin{aligned} V_{t_1} - U_t &= V_{\text{rel}t_1} \\ V_{t_2} + U_t &= V_{\text{rel}t_2} \end{aligned} \quad (9.23)$$

Adding these gives yet another relationship:

$$V_{t_1} + V_{t_2} = V_{\text{rel}t_1} + V_{\text{rel}t_2} \quad (9.24)$$

Substituting Equations 9.23 and 9.24 into Equation 9.22 gives

$$\frac{p_1 - p_2}{\rho} + \frac{1}{2}(V_{\text{rel}t_1} + V_{\text{rel}t_2})(V_{\text{rel}t_1} - V_{\text{rel}t_2}) = 0$$

$$\frac{p_1 - p_2}{\rho} + \frac{1}{2}(V_{\text{rel}t_1}^2 - V_{\text{rel}t_2}^2) = 0$$

Adding and subtracting V_a^2 from the kinetic-energy term yield

$$\frac{p_1 - p_2}{\rho} + \frac{V_{\text{rel}t_1}^2 + V_a^2 - V_{\text{rel}t_2}^2 - V_a^2}{2} = 0$$

Simplifying and dividing by g , we obtain

$$\frac{p_1 - p_2}{\rho g} + \frac{V_{\text{rel}t_1}^2 - V_{\text{rel}t_2}^2}{2g} = 0 \quad (9.25a)$$

Thus, we have proved that, through the rotor, Bernoulli's equation using relative velocities is valid. The pressure drop across the rotor row of blades is thus

$$p_1 - p_2 = \frac{\rho}{2}(V_{\text{rel}t_2}^2 - V_{\text{rel}t_1}^2) \quad (9.25b)$$

Performance of an axial-flow turbine stage is conveniently described by means of what is called **degree of reaction** or **reaction ratio**, **RR**. The classic definition is the ratio of static pressure drop in the rotor to the static pressure drop in the stage:

$$\text{RR} = \frac{p_1 - p_2}{p_0 - p_2} \quad (9.26)$$

In terms of velocities, the reaction ratio is

$$\text{RR} = \frac{V_{\text{rel}t_2}^2 - V_{\text{rel}t_1}^2}{2U_t(V_{t_2} + V_{t_1})} \quad (9.27)$$

where Equations 9.19 and 9.25b for pressure drops have been substituted. With

$$V_{\text{rel}}^2 = V_a^2 + V_{\text{rel}t}^2$$

and Equation 9.24, Equation 9.27 becomes

$$\text{RR} = \frac{V_{\text{rel}t_2}^2 - V_{\text{rel}t_1}^2}{2U_t(V_{t_2} + V_{t_1})} = \frac{(V_{\text{rel}t_2} - V_{\text{rel}t_1})(V_{\text{rel}t_2} + V_{\text{rel}t_1})}{2U_t(V_{t_1} + V_{t_2})}$$

or

$$\text{RR} = \frac{V_{\text{rel}t_2} - V_{\text{rel}t_1}}{2U_t} \quad (9.28)$$

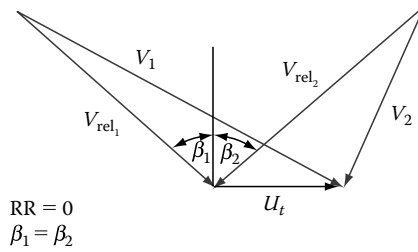


FIGURE 9.7 Combined velocity diagram for a zero reaction turbine stage.

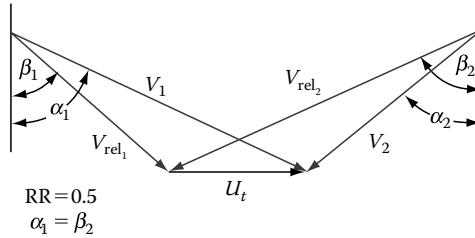


FIGURE 9.8 Combined velocity diagram for a 50% reaction turbine stage.

In terms of axial velocity, the tangential velocities can be written as

$$\begin{aligned} V_{rel1} &= V_a \tan \beta_1 \\ V_{rel2} &= V_a \tan \beta_2 \end{aligned} \quad (9.29)$$

Combining these and Equation 9.23 with Equation 9.28 gives

$$\begin{aligned} RR &= \frac{V_a}{2U_t} (\tan \beta_2 - \tan \beta_1) \\ RR &= \frac{1}{2} + \frac{V_a}{2U_t} (\tan \beta_2 - \tan \alpha_1) \end{aligned} \quad (9.30)$$

Two cases of note are the zero reaction stage and the 50% reaction stage. From Equation 9.30, if $RR = 0$, then $\beta_1 = \beta_2$. We can now resketch the velocity diagram as in Figure 9.7 to illustrate a zero reaction stage. According to Equation 9.26, this means that there is no pressure drop across the rotor row. A 50% reaction stage can be represented by the velocity diagram of Figure 9.8. From Equation 9.30, if $RR = 0.5$, then $\beta_2 = \alpha_1$. Half the pressure drop in the stage occurs across the rotor row.

In conventional machines, the reaction ratio falls between zero and unity. However, an undesirable phenomenon occurs if the reaction ratio exceeds unity. For this case, the absolute velocity leaving the stator row V_1 is less than the inlet velocity V_0 . Accordingly, an adverse pressure gradient exists that causes separation of the flow from the blades in the stator. Since this separation results in large-scale losses, reaction ratios greater than unity are avoided in good design.

Example 9.2

Measurements on a single-stage gas turbine indicate that at stage entry the pressure is 110 psia and temperature is 1000°R. Pressure drop across the stage is 10 psf. The rotational speed of the rotor is 180 rpm; at this speed, the shaft torque is measured to be 2.0 ft·lbf. The rotor diameter is 1.5 ft, and blade height is 1 in. The mean pitch line is at half the blade height. The mass flow of gas is

0.062 slug/s, and the specific heats are the same as those for air. Assume ideal gas behavior and that the stage is normal. The inlet flow angle between the absolute velocity and the axial velocity is 38° . Determine

- a. Velocity diagrams
- b. Efficiency of the turbine
- c. The reaction ratio

SOLUTION

For the following calculations, it is helpful to refer to Figure 9.6.

- a. The density is found with the ideal gas law as

$$\rho = \frac{p}{RT} = \frac{110(144)}{1710(1000)} = 0.00926 \text{ slug/ft}^3$$

where R for air has been used. Density is assumed to be constant through the stage. The gas flows through the annulus formed by the rotor and the casing. The clearance is 1 in. (the blade height). The flow area is

$$\begin{aligned} A &= \frac{\pi}{4} (D_o^2 - D_i^2) = \frac{\pi}{4} \left[\left(1.5 + \frac{2}{12} \right)^2 - (1.5)^2 \right] \\ &= 0.415 \text{ ft}^2 \end{aligned}$$

The axial velocity can now be determined with

$$\begin{aligned} \dot{m} &= \rho A V_a \\ V_a &= \frac{0.062}{0.00926(0.415)} = 16.2 \text{ ft/s} \end{aligned}$$

The inlet velocity is calculated by using

$$V_a = V_0 \cos \alpha_0$$

With α_0 given as 38° , we find

$$V_0 = \frac{16.2}{\cos 38^\circ} = 20.6 \text{ ft/s}$$

Because the stage is normal,

$$V_2 = V_0 = 20.6 \text{ ft/s}$$

For a constant axial velocity, then

$$\alpha_2 = \alpha_0 = 38^\circ$$

Also,

$$V_{t_2} = V_2 \sin \alpha_2 = 12.7 \text{ ft/s}$$

The mean pitch line is found at a radius located at half the blade height:

$$R = \frac{1.5 + \frac{1}{12}}{2} = 0.79 \text{ ft}$$

Given a rotational speed of 180 rev/min, the tangential velocity of the rotor is

$$\begin{aligned} U_t &= R\omega = 0.79 \text{ ft}(180 \text{ rev/min})(2\pi \text{ rad/rev})(1 \text{ min}/60 \text{ s}) \\ &= 14.9 \text{ ft/s} \end{aligned}$$

Summing tangential velocities, we have

$$V_{\text{rel}2} = V_{t_2} + U_t = 12.7 + 14.9 = 27.6 \text{ ft/s}$$

We can now find β_2 with

$$\begin{aligned} \tan \beta_2 &= \frac{V_{\text{rel}2}}{V_a} = \frac{27.6}{16.2} = 1.71 \\ \beta_2 &= 59.6^\circ \end{aligned}$$

In addition, we also have

$$\begin{aligned} V_{\text{rel}2} \sin \beta_2 &= V_{\text{rel}2} \\ V_{\text{rel}2} &= 32.0 \text{ ft/s} \end{aligned}$$

Equation 9.17 gives the power as

$$\frac{dW_s}{dt} \rho Q U_t (V_{t_2} + V_{t_1}) = T_s \omega$$

For a torque of 2.0 ft · lbf at 180 rev/min, we have

$$\begin{aligned} \frac{dW_s}{dt} &= (2.0 \text{ ft} \cdot \text{lbf})(180 \text{ rev/min})(2\pi \text{ rad/rev})(1 \text{ min}/60 \text{ s}) \\ &= 37.7 \text{ ft} \cdot \text{lbf/s} \end{aligned}$$

Rearranging the preceding power equation, we find

$$\begin{aligned} V_{t_1} &= \frac{dW_s}{dt} \frac{1}{\dot{m} U_t} - V_{t_2} \\ &= \frac{37.7}{0.062(14.9)} - 12.7 = 40.7 - 12.7 = 28.0 \text{ ft/s} \end{aligned}$$

Using the tangential velocity relationship, we obtain

$$V_{\text{rel}1} = V_{t_1} - U_t = 28.0 - 14.9 = 13.1 \text{ ft/s}$$

Also,

$$\tan \alpha_1 = \frac{V_{t_1}}{V_a} = \frac{28.0}{16.2} = 1.73$$

$$\alpha_1 = 59.9^\circ$$

Next,

$$\tan \beta_1 = \frac{V_{rel1}}{V_a} = \frac{13.1}{16.2} = 0.808$$

$$\beta_1 = 39.0^\circ$$

From the velocity triangles, we get

$$V_1 = \frac{V_a}{\cos \alpha_1} = \frac{16.2}{\cos 59.9^\circ} = 32.3 \text{ ft/s}$$

and finally

$$V_{rel1} = \frac{V_a}{\cos \beta_1} = \frac{16.2}{\cos 39.0^\circ} = 20.9 \text{ ft/s}$$

The velocity diagrams are sketched to scale in Figure 9.9.

- b. The efficiency of the turbine is the ratio of the power measured at the output shaft to the energy loss in the fluid:

$$\eta = \frac{dW_s/dt}{Q(p_0 - p_2)}$$

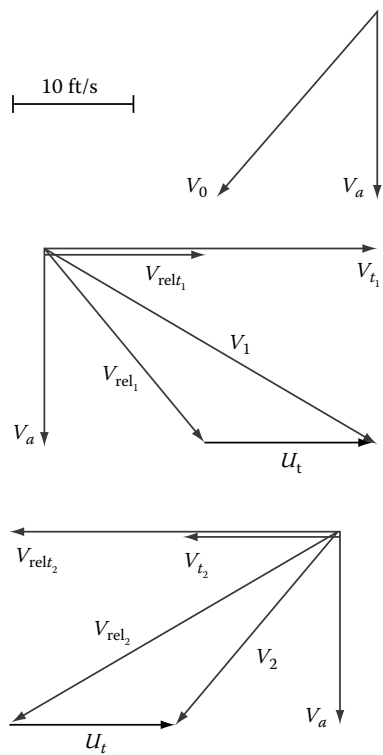


FIGURE 9.9 Velocity diagrams for the turbine of Example 9.2.

With $Q = \dot{m}/\rho = 0.062/0.00926 = 6.73 \text{ ft}^3/\text{s}$, we get

$$\eta = \frac{37.7}{6.73(10)}$$

$$\eta = 0.56 = 56\%$$

c. The reaction is found with Equation 9.28:

$$RR = \frac{V_{relf_2} - V_{relf_1}}{2U_t} = \frac{27.6 - 13.1}{2(14.9)}$$

$$RR = 0.49$$

As was mentioned earlier, a mean pitch line can be selected as representative of the entire stage when the blade height is small in comparison to the rotor diameter. When the blades are not short, however, we must account for the radial distance variation. This difficulty can be circumvented by dividing the blade into elements, as shown in Figure 9.10, and adding the contribution to the torque of each element. The total shaft torque thus becomes the sum of the individual contributions, and the angular momentum Equation 9.11 can be applied to each element.

Another type of axial-flow turbine is the hydraulic propeller turbine. This machine can be located in or near a dam, for example, so that water passing through provides power for the turbine to rotate a generator to produce electricity. As shown in Figure 9.11, the flow enters the system through the guide vanes, which give the liquid a tangential velocity before it reaches the turbine blades. (That is, the guide vanes cause a vortex to form.) The propeller blades are in the midst of the vortex, and the transfer of energy is thus enhanced. In a fixed turbine blade runner, the guide vanes can be set to any desired angle (within limits) to accommodate changes in head water elevation and output power demand. The objective in an electrical generation installation is to achieve the constant rotational speed required by the generator to produce a constant frequency. This control could be achieved by adjusting the guide vanes. In a **Kaplan turbine** system, the turbine blades themselves and the inlet guide vanes can be made to change their orientation. The two adjustments are made simultaneously to accommodate changes in conditions. The Kaplan turbine system is suited for a wider range of operating variables than the fixed-blade type.

The turbine blades are few in number, and each is relatively flat. The blades are placed so that the relative velocity at the entrance (or exit) to the rotor is tangential to the leading edge of the blade



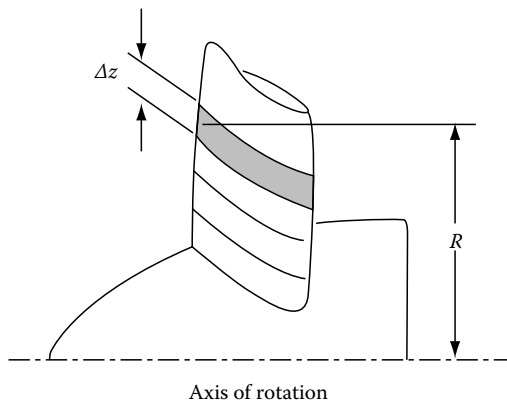


FIGURE 9.10 A rotor blade divided into a number of elements.

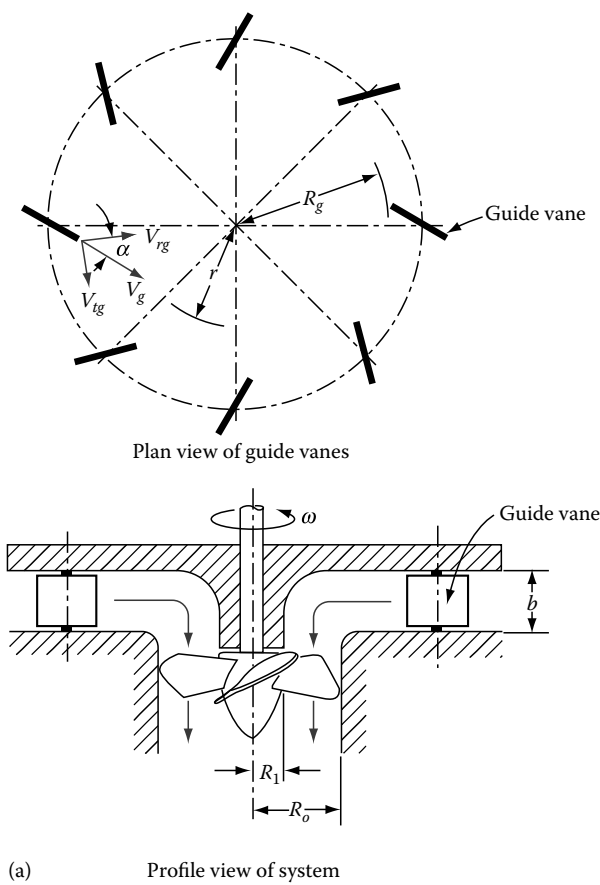

(b)

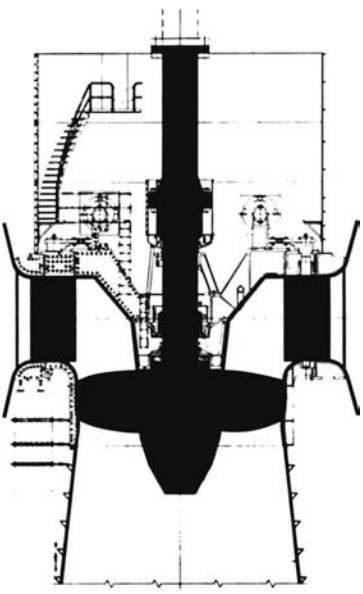

(c)

FIGURE 9.11 (a) Axial-flow propeller turbine. (b) Kaplan runner of an axial-flow turbine. (Courtesy of Allis-Chalmers Hydro Turbine Division. With permission.) (c) Typical installation of an axial-flow turbine system. (Courtesy of Allis-Chalmers Hydro Turbine Division. With permission.)

(or trailing edge). The liquid relative velocity is high and changes slightly while passing through the turbine. Thus, a change in head requires a change in guide vane setting and, if possible, an accompanying change of the blade setting.

Analysis of the flow through the turbine is based on the same axial-flow equations that have been derived previously. The difference here, however, is that we must in addition describe the vortex flow field that is caused by the presence of the guide vanes. For this purpose, we select as our control volume the region downstream of the guide vanes and upstream of the turbine blades. Assuming steady flow without any external torques on this fluid, the angular momentum equation becomes

$$0 = \iint_{CS} r V_t \rho V_n dA$$

Applying this between the entrance point at radius R_g and at any radial position r , we have

$$r V_t \rho Q - R_g V_{tg} \rho Q = 0$$

or

$$r V_t = R_g V_{tg}$$

where V_{tg} is the tangential velocity component at the radius R_g . In terms of the absolute entrance velocity V_g and the guide vane angle α , the preceding equation becomes

$$V_t = \frac{R_g V_g \sin \alpha}{r} \quad (9.31)$$

This equation gives the tangential fluid velocity input to the turbine blades. Furthermore, the flow rate through the turbine is

$$Q = 2\pi R_g b V_{rg} = 2\pi R_g b V_g \cos \alpha \quad (9.32)$$

where: b = guide vane height

V_{rg} = radial component of V_g

the product $2\pi R_g b$ is the inflow area (customarily discounting guide vane thickness)

Finally, the axial velocity at the turbine blades is found with

$$V_a = \frac{Q}{\pi(R_o^2 - R_i^2)} \quad (9.33)$$

where R_o and R_i are casing and hub radii, respectively. The casing and tip radii are assumed to be equal, although there must be a slight clearance.

Example 9.3

An axial-flow propeller turbine installation is sketched in Figure 9.11a. The guide vanes are set at an angle of 30° from the radial direction. The inner radius of the guide vanes is 1.5 m, and their height is 0.5 m. The guide vanes are in a location where the water head is equivalent to 0.45 m.

The turbine blades have a hub radius of 0.15 m and a tip radius of 0.8 m. The rotor speed is 360 rev/min. Select appropriate blade angles for the leading edge of the turbine blades.

SOLUTION

We can apply Bernoulli's equation at the guide vanes to calculate V_g :

$$\frac{V_g^2}{2g} = \Delta H$$

or

$$V_g = \sqrt{2g\Delta H} = \sqrt{2(9.81)(0.45)} = 2.97 \text{ m/s}$$

First make calculations for the fluid at the hub; then repeat for the tip. At the hub, $R_i = 0.15$ m. Then

$$\begin{aligned} V_{ti} &= \frac{R_g V_g \sin \alpha}{R_i} = \frac{1.5(2.97) \sin 30^\circ}{0.15} \\ &= 14.9 \text{ m/s} \end{aligned}$$

The radial velocity at the guide vanes is

$$V_{rg} = V_g \cos \alpha = 2.97 \cos 30^\circ = 2.57 \text{ m/s}$$

From Equation 9.32, the volume flow rate is

$$\begin{aligned} Q &= 2\pi R_b b V_{rg} = 2\pi(1.5)(0.5)(2.57) \\ &= 12.1 \text{ m}^3/\text{s} \end{aligned}$$

Using Equation 9.33, we determine the axial velocity to be

$$\begin{aligned} V_a &= \frac{Q}{\pi(R_o^2 - R_i^2)} = \frac{12.1}{\pi(0.8^2 - 0.15^2)} \\ &= 6.23 \text{ m/s} \end{aligned}$$

The tangential velocity at the hub is

$$\begin{aligned} U_{ti} &= R_i \omega \\ &= 0.15(360)(2\pi/60) \\ &= 5.65 \text{ m/s} \end{aligned}$$

The velocity diagram at the hub can now be drawn as shown in Figure 9.12a. The blade angle can be found from

$$\tan(\beta_i - 90^\circ) = \frac{V_a}{V_{ti} - U_{ti}} = \frac{6.23}{14.9 - 5.65} = 0.674$$

Solving, we find the blade angle at the hub:

$$\beta_i = 123.9^\circ$$

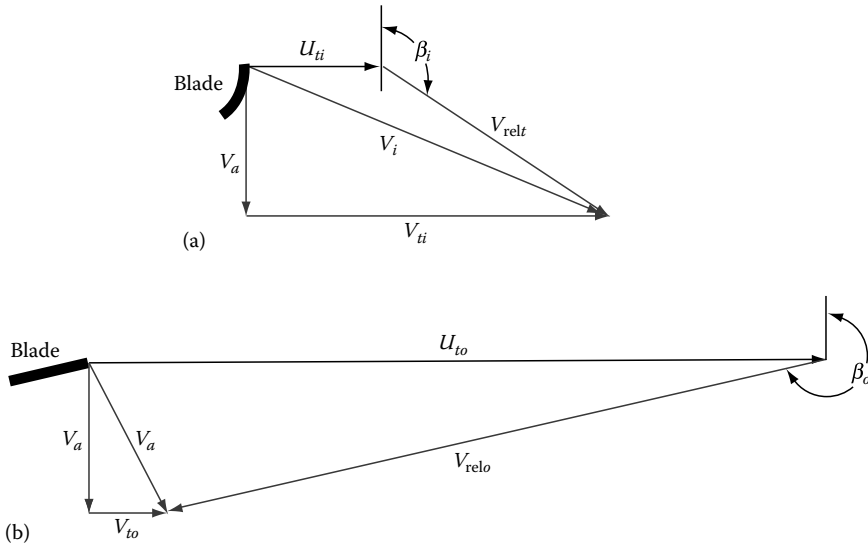


FIGURE 9.12 Velocity diagrams at the hub (a) and tip (b) of the propeller turbine of Example 9.3.

Performing similar calculations at the tip yields the following:

$$\left. \begin{aligned}
 1. \quad V_{to} &= \frac{R_g V_g \sin \alpha}{R_o} = \frac{1.5(2.97) \sin 30^\circ}{0.8} = 2.78 \text{ m/s} \\
 2. \quad V_{rg} &= V_g \cos \alpha = 2.97 \cos 30^\circ = 2.57 \text{ m/s} \\
 3. \quad Q &= 2\pi R_g b V_{rg} = 2\pi(1.5)(0.5)(2.57) = 12.1 \text{ m}^3/\text{s} \\
 4. \quad V_a &= \frac{Q}{\pi(R_o^2 - R_i^2)} = \frac{12.1}{0.8^2 - 0.15^2} = 6.23 \text{ m/s} \\
 5. \quad U_{to} &= R_o \omega = 0.8(360)(2\pi/60) = 30.16 \text{ m/s}
 \end{aligned} \right\} \text{(constants)}$$

The velocity diagram is sketched in Figure 9.12b. The blade angle is found with

$$\tan(270^\circ - \beta_o) = \frac{V_a}{U_{to} - V_{to}} = \frac{6.23}{30.16 - 2.78} = 0.228$$

Solving, we find the blade angle at the tip:

$$\beta_o = 257.2^\circ$$

A similar procedure can be followed at selected points along the blade between 0.15 and 0.8 m. With the one-dimensional assumption, the product $U_t V_t$ at any blade location is a constant.

The third type of axial-flow turbine that we will consider is the windmill. Windmills are primarily open turbines that are not surrounded by a casing (except in some experimental or nontraditional designs). The familiar Dutch windmill with sail-like blades has been used to pump water. These huge, four-bladed types have efficiencies of $\sim 5\%$. Recently, there has been a renewed interest in windmills, especially as electrical generation devices. For our purposes, we will examine the factors that directly influence the machine's performance—specifically, the factors that control the efficiency of the conversion of wind motion to propeller rotation.

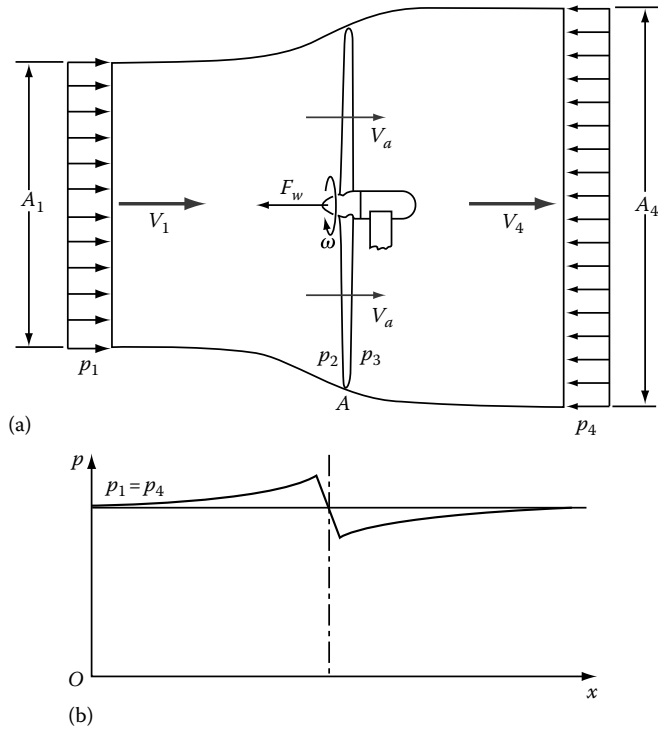


FIGURE 9.13 (a) Flow of air through the blades of a windmill (a) and corresponding pressure profile (b).

An interesting result becomes evident when the momentum equation is applied to the airflow in the vicinity of a windmill. Consider the sketch of Figure 9.13. The windspeed upstream is uniform at A_1 , the area of moving air to be intercepted by the disk formed by blade rotation. The pressure sufficiently far upstream is p_1 and equals the pressure sufficiently far downstream p_4 . The pressure steadily increases from p_1 to p_2 , then drops across the blades to p_3 , then increases back to p_4 . This pressure variation causes the moving air to take on the characteristic shape, called a **slipstream**, of Figure 9.13a. Selecting the slipstream between points 1 and 4 as our control volume, we write the momentum equation:

$$\sum F_z = \iint_{CS} V_z \rho V_n dA$$

The only force acting is exerted by the windmill on the air at the propeller to keep the machine stationary. This must balance the change in momentum experienced by the fluid:

$$\sum F_z = -F_w = (p_3 - p_2)A = \rho A V_a (V_4 - V_1) \quad (9.34a)$$

or

$$p_3 - p_2 = \rho V_a (V_4 - V_1) \quad (9.34b)$$

Applying Bernoulli's equation between points 1 and 2, we get

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} = \frac{p_2}{\rho g} + \frac{V_2^2}{2g}$$

Between points 3 and 4, we have

$$\frac{p_3}{\rho g} + \frac{V_3^2}{2g} = \frac{p_4}{\rho g} + \frac{V_4^2}{2g}$$

Adding these gives

$$\frac{p_3}{\rho g} + \frac{V_1^2}{2g} = \frac{p_2}{\rho g} + \frac{V_4^2}{2g} \quad (9.35)$$

where the relationships $p_1 = p_4$ and $V_2 = V_3 = V_a$ have been used. Equating Equations 9.34b and 9.35 gives

$$V_a = \frac{V_4 + V_1}{2} \quad (9.36)$$

This states that the velocity through the disk at the propeller is the average of the uniform velocities far ahead of and far behind the unit.

For frictionless flow through the machine, the power delivered to the windmill equals exactly the power extracted from the air. Applying the energy equation about the blade shows that this power equals the change in kinetic energy of the fluid:

$$\frac{dW_s}{dt} = \frac{\rho A V_a}{2} = (V_1^2 - V_4^2) \quad (9.37)$$

The power originally available in the wind of cross-sectional area A and velocity V_1 is

$$\frac{dW_a}{dt} = \frac{\rho A V_1^3}{2} \quad (9.38)$$

found also by application of the energy equation. Windmill efficiency is defined as

$$\eta = \frac{dW_s/dt}{dW_a/dt} = \frac{\rho A V_a (V_1^2 - V_4^2)}{\rho A V_1^3} = \frac{V_a (V_1^2 - V_4^2)}{V_1^3}$$

or, after combining with Equation 9.36,

$$\eta = \frac{(V_1 + V_4)(V_1^2 - V_4^2)}{2V_1^3} = \frac{1}{2} \left(1 + \frac{V_4}{V_1} \right) \left[1 - \left(\frac{V_4}{V_1} \right)^2 \right] \quad (9.39)$$

The maximum efficiency is found by differentiating this expression with respect to V_4/V_1 and setting the result equal to zero. This gives

$$\left. \frac{V_4}{V_1} \right|_{\eta_{\max}} = \frac{1}{3} \quad (9.40)$$

which can then be substituted into Equation 9.39 to find

$$\eta_{\max} = \frac{16}{27} = 59.3\%$$

This efficiency is the maximum that exists for frictionless flow. Because of friction and other losses, this value can only be approached in practice. The maximum efficiency for a real windmill appears to be about 50%.

Example 9.4

A two-bladed windmill with a diameter (tip-to-tip) of 35 ft is in a stream of air of velocity 70 ft/s. The air temperature is 65°F, and atmospheric pressure is 14.69 psia. Downstream the uniform flow velocity is 60 ft/s. Under these conditions, find the electrical power output. Calculate the thrust on the windmill and the overall efficiency of the installation.

SOLUTION

The velocity at the blades is found with Equation 9.36:

$$V_a = \frac{V_1 + V_4}{2} = \frac{70 \text{ ft/s} + 60 \text{ ft/s}}{2} = 65 \text{ ft/s}$$

Assuming a constant air density and ideal gas behavior,

$$\rho = \frac{p}{RT} = \frac{14.69(144)}{1710(460 + 65)} = 0.00236 \text{ slug/ft}^3$$

The disk area is

$$A = \frac{\pi D^2}{4} = \frac{\pi(35)^2}{4} = 962 \text{ ft}^2$$

The thrust is calculated with Equation 9.34a as

$$\begin{aligned} -F_w &= \rho A V_a (V_4 - V_1) \\ &= 0.00236(962)(65)(60 - 70) \end{aligned}$$

$$F_w = 1470 \text{ lbf}$$

The power originally available in the airstream is

$$\frac{dW_a}{dt} = \frac{\rho A V_1^3}{2} = \frac{0.00236(962)(70)^3}{2} = 3.89 \times 10^5 \text{ ft} \cdot \text{lbf/s}$$

The actual power output is, from Equation 9.37,

$$\begin{aligned} \frac{dW_s}{dt} &= \frac{\rho A V_a}{2} (V_1^2 - V_4^2) \\ &= \frac{0.00236(962)(65)}{2} (70^2 - 60^2) \\ &= 9.59 \times 10^4 \text{ ft} \cdot \text{lbf/s} \end{aligned}$$

Converting to kilowatts (conversion factor from Table A.2), we find the actual power output for frictionless flow to be

$$\frac{dW_s}{dt} = 9.59 \times 10^4 (1.355 \times 10^{-3}) = 130 \text{ kW}$$

The overall efficiency is

$$\eta = \frac{9.59 \times 10^4}{3.89 \times 10^5} = 0.246$$

$$\eta = 24.6\%$$

In preceding discussions, we used one-dimensional flow theory to predict performance of axial-flow turbines. The one-dimensional assumption gives an accurate description of the flow when the number of blades in the machine is large. When the number of blades is few and the distance between them is large, however, each acts like an airfoil. Consequently, we must resort to airfoil theory to analyze a machine such as a two- or three-bladed windmill. To begin, consider the situation sketched in Figure 9.14, which incorporates the notation of Figure 9.13. An airfoil (represented in cross section) is moving at a tangential velocity U_t . The absolute velocity of the approach flow is V_2 , whereas the flow leaves at an absolute velocity V_3 . For the analysis centered about Figure 9.13, the one-dimensional assumption is made. The velocity at the blade is an axial velocity that is constant. With airfoil theory, Figure 9.14 is appropriate.

In this figure, V_2 and V_3 are no longer axial or equal as in Figure 9.13. For the moving airfoil, we therefore construct a velocity diagram before and after the blade. Note that the blade's leading and trailing edges are tangential to the local relative velocity. To simplify the analysis, we reconstruct a single velocity diagram with only one relative velocity found by

$$\bar{V}_{\text{rel}} = \frac{V_{\text{rel}2} + V_{\text{rel}3}}{2} \quad (9.41)$$

as sketched in Figure 9.15. The average relative velocity $\bar{V}_{\text{rel}}$ has an angle of incidence of δ . From Chapter 6, we know that an airfoil experiences lift and drag forces perpendicular and parallel, respectively, to the flow direction. These are shown in Figure 9.16. To determine the forces acting

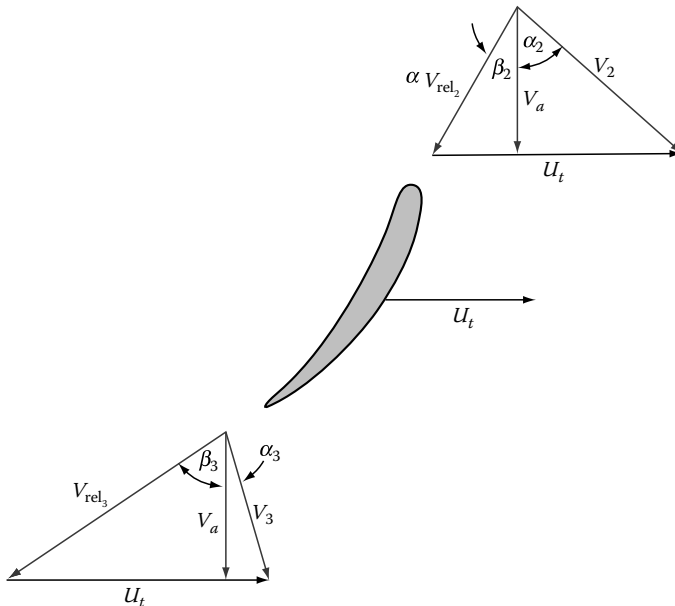


FIGURE 9.14 Flow past a moving airfoil.

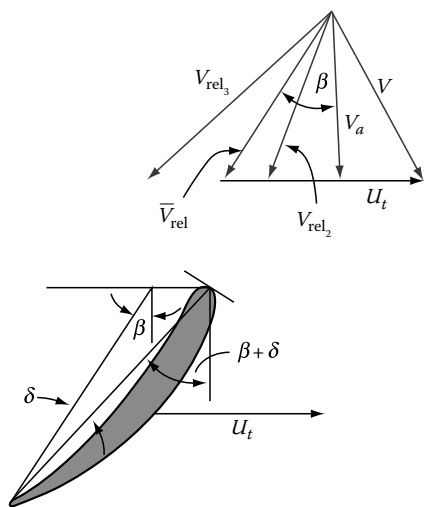


FIGURE 9.15 Average relative velocity for flow past an airfoil.

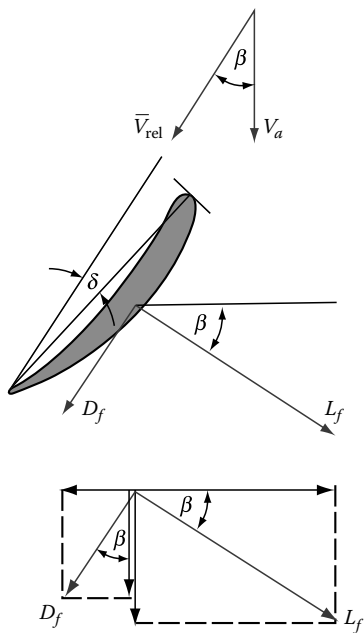


FIGURE 9.16 Forces of lift and drag acting on the airfoil resolved into axial and tangential components.

on the rotor, it is necessary to resolve the lift and drag forces into axial and tangential components. Taking the direction of V_a as positive, the axial force is

$$F_a = L_f \sin \beta + D_f \cos \beta \tag{9.42a}$$

The tangential force is

$$F_t = L_f \cos \beta - D_f \sin \beta \tag{9.42b}$$

where the direction of U_t is considered positive. In terms of lift and drag coefficients, the lift and drag forces are

$$L_f = C_L \frac{\rho \bar{V}_{\text{rel}}^2 A_p}{2}$$

$$D_f = C_D \frac{\rho \bar{V}_{\text{rel}}^2 A_p}{2}$$

where A_p is the planform area (chord length times span) of the airfoil. Before combining these equations, note that it is necessary to account for changes in U_t with distance for the rotor and, moreover, that it may be desired to change the dimension of the airfoil with blade length. We therefore divide the blade into incremental elements Δz wide, as shown in Figure 9.17. The area becomes $A = c \Delta z$. Combining the lift and drag expressions with Equation 9.42 yields the following after simplification:

$$F_a = (C_L \sin \beta + C_D \cos \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2}$$

$$F_t = (C_L \cos \beta + C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} \quad (9.43)$$

These forces exerted on the airfoil can now be related to the properties of the flow (static pressure and velocity). The momentum in the tangential direction is

$$\sum F_t = \iint_{\text{CS}} V_t \rho V_n dA$$

which becomes, for the left-hand side,

$$\sum F_t = N F_t = N (C_L \cos \beta - C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2}$$

where N is the number of blades that contribute to the total force exerted. The change in momentum term is

$$\iint_{\text{CS}} V_t \rho V_n dA = \rho V_a (V_{t_3} - V_{t_2}) 2\pi r \Delta z$$

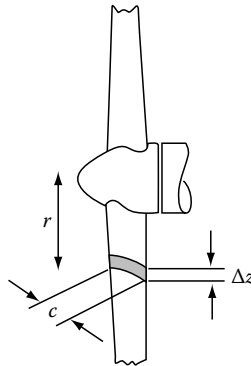


FIGURE 9.17 An element of a blade.

where the notation of Figure 9.13 has been used on the tangential velocity terms. Here the flow rate is the product of axial velocity, which is a constant, and area of an annulus Δz thick and located at r away from the axis of rotation. The momentum equation is

$$N(C_L \cos \beta - C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} = \rho V_a (V_{t_3} - V_{t_2}) 2\pi r \Delta z$$

Substituting $V_a = \bar{V}_{\text{rel}} \cos \beta$ and simplifying yield

$$V_{t_3} - V_{t_2} = \frac{\bar{V}_{\text{rel}} c N}{4\pi r} (C_L - C_D \tan \beta) \quad (9.44)$$

We now have a relationship between the tangential fluid velocities and the characteristics of the airfoil.

The momentum equation can also be applied in the axial direction:

$$\sum F_a = \iint_{\text{CS}} V_a \rho V_n dA$$

Using the notation of Figure 9.13, we obtain

$$NF_a = (p_2 - p_3) 2\pi r \Delta z \quad (9.45)$$

and

$$\iint_{\text{CS}} V_a \rho V_n dA = (\rho 2\pi r \Delta z V_a) (V_{a_3} - V_{a_2})$$

but because $V_{a_3} = V_{a_2} = V_a$, the momentum equation reduces to Equation 9.45. By substitution from Equation 9.43, then, Equation 9.45 becomes

$$N(C_L \sin \beta - C_D \cos \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} = (p_2 - p_3) 2\pi r \Delta z$$

Simplifying and rearranging give

$$p_3 - p_2 = -\frac{\rho \bar{V}_{\text{rel}}^2 c N}{4\pi r} (C_L \sin \beta + C_D \cos \beta) \quad (9.46)$$

This equation relates the pressure drop across the blade to the characteristics of the foil at a location r from the axis of rotation.

Example 9.5

Consider the windmill of the previous example. A summary of the data given there is as follows:

- Number of blades (N) = 2
- Tip-to-tip diameter (D) = 35 ft
- Disk area (A) = 962 ft²

- Upstream air velocity (V_1) = 70 ft/s
- Downstream air velocity (V_4) = 60 ft/s
- Air velocity at blades (V) = 65 ft/s
- Air density (ρ) = 0.00236 slug/ft³
- Shaft work (dW_s/dt) = 130 kW

It is assumed that each blade can be treated as being invariant in cross section—there are no taper and no blade twist variation with blade length. The blade makes an angle of 60° with the axial direction; the chord length is 24 in. Determine the aerodynamic properties of the airfoil and calculate the pressure drop at the midpoint of the blade. Assume a rotational speed of 400 rev/min.

SOLUTION

The axial velocity is the same as the air velocity at the blades:

$$V_a = 65 \text{ ft/s}$$

The relative velocity is found with

$$\bar{V}_{\text{rel}} = \frac{V_a}{\cos \beta} = \frac{65}{\cos 60^\circ} = 130 \text{ ft/s}$$

At blade midpoint, $r = 17.5/2 = 8.75$ ft. Equation 9.46 gives the pressure in terms of lift and drag coefficients:

$$\begin{aligned} p_3 - p_2 &= -\frac{\rho \bar{V}_{\text{rel}}^2 cN}{4\pi r} (C_L \sin \beta + C_D \cos \beta) \\ &= -\frac{0.00236(130)^2(24/12)(2)}{4\pi(8.75)} (C_L \sin 60^\circ + C_D \cos 60^\circ) \\ &= -1.45(0.866C_L + 0.5C_D) \end{aligned}$$

In addition, the pressure drop can be calculated with Equation 9.35:

$$\begin{aligned} p_3 - p_2 &= \frac{\rho(V_4^2 - V_1^2)}{2} \\ &= \frac{0.00236(60^2 - 70^2)}{2} \\ &= -1.53 \text{ psf} \end{aligned}$$

Equating the pressure drop equations gives

$$\begin{aligned} C_L + \frac{0.5}{0.866} C_D &= -\frac{-1.53}{1.45(0.866)} \\ C_L + 0.577C_D &= 1.22 \end{aligned} \tag{i}$$

The tangential velocity difference must be evaluated next. Using Equation 9.10a for the shaft work, written with the notation of Figure 9.13, we have

$$-\frac{dW_s}{dt} = \rho A V_a U_t (V_{t_3} - V_{t_2})$$

The shaft work is

$$-\frac{dW_s}{dt} = 130 \text{ kW} \left(\frac{1 \text{ ft} \cdot \text{lbf/s}}{1.355 \times 10^{-3} \text{ kW}} \right) = 9.59 \times 10^4 \text{ ft} \cdot \text{lbf/s}$$

The rotational speed of the blade at midpoint is

$$U_t = r\omega = 8.75 \left(400 \frac{2\pi}{60} \right) = 367 \text{ ft/s}$$

By substitution, we find

$$V_{t_3} - V_{t_2} = \frac{9.59 \times 10^4}{0.00236(962)(65)(367)} = 1.77 \text{ ft/s}$$

Combining with Equation 9.44 gives

$$C_L - C_D \tan \beta = \frac{(V_{t_3} - V_{t_2})4\pi r}{\bar{V}_{\text{rel}} c N}$$

$$C_L - C_D \tan 60^\circ = \frac{1.77(4\pi)(8.75)}{130(24/12)(2)}$$

or

$$C_L - 1.732C_D = 0.374 \quad (\text{ii})$$

Subtracting this equation from Equation i gives

$$0.577C_D + 1.732C_D = 1.22 - 0.374$$

or

$$C_D = 0.366$$

Using either Equation i or Equation ii, we find

$$C_L = 1.008$$

The blade has these characteristics at its midpoint, where $\bar{V}_{\text{rel}} = 130 \text{ ft/s}$ and $U_t = 367 \text{ ft/s}$.

If the values of C_L and C_D cannot be attained by any known airfoil, the designer must use more blades to meet the conditions. The preceding analysis was based on the assumption that the number of blades is large. More specifically, the analysis applies if

$$\frac{2\pi r}{cN} > 1$$

If this ratio is less than 1, the effects of the blades on the airflow are found to interfere with each other. The proximity of another airfoil reduces the lift coefficient. Thus, we would expect a multibladed windmill to have a slower rotational speed than a two-bladed type in the same airstream.

9.3 AXIAL-FLOW COMPRESSORS, PUMPS, AND FANS

The axial-flow compressor was first regarded as being the reverse of the axial-flow turbine. In early designs, efficiencies of these reversed turbines ran as high as 55%. This low value is attributed to blade stall and flow separation, or diffusion. In a turbine, the fluid pressure decreases through the machine. With a compressor, however, the pressure increases through the machine, setting up an adverse pressure gradient. If the pressure increases too abruptly, there is flow separation from the individual blades and a corresponding loss in performance. Because of this limitation, conventional designs have many stages, each contributing only a small portion of the total pressure rise. Multistage axial compressors can have as many as 20 stages. As a result, efficiencies of 90% are reported for axial-flow compressors that operate on a 6:1 or 7:1 pressure ratio (inlet to outlet).

Figure 9.18 is a schematic of an axial-flow compressor. A stage is defined as a rotor row followed by a stator row of blades. The rotor blades are attached to the rotating portion of the machine, whereas the stator blades are part of the casing. The inlet guide vanes are not considered to be part of the first stage; their function is to accelerate the flow away from the purely axial direction.

The study of axial-flow compressors requires the use of compressible flow equations. Since in this chapter we wish to examine only incompressible flow machines, we will not discuss axial-flow compressors in great detail. The preceding paragraphs were included to show that such machines do exist and to illustrate the use of axial-flow compressors in conventional gas turbines.

The next turbomachine that we will discuss is the axial-flow pump. In this case, the fluid medium is an incompressible fluid, and temperature changes are not as significant as pressure changes. Consequently, the descriptive equations can be written using static pressures. Figure 9.19 shows one design of an axial-flow pump. At the inlet or suction side are placed straightener vanes to ensure that the flow into the pump is purely axial. The impeller is made up of a hub and blades that act much like a propeller, adding energy to the liquid. The outlet guide vanes have the function of removing any tangential velocity component the liquid might have. The outflow is thus purely axial. The axial-flow pump has a high capacity and corresponding low head output.

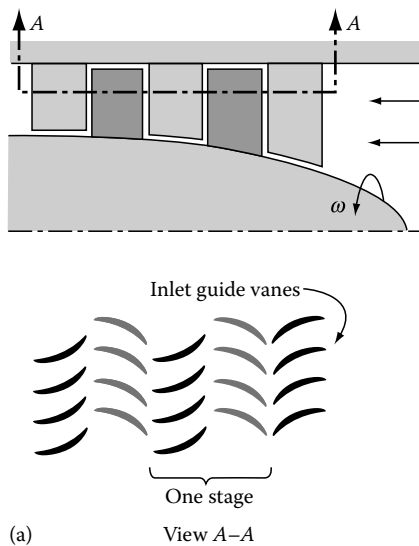


FIGURE 9.18 (a) An axial-flow compressor.

(continued)

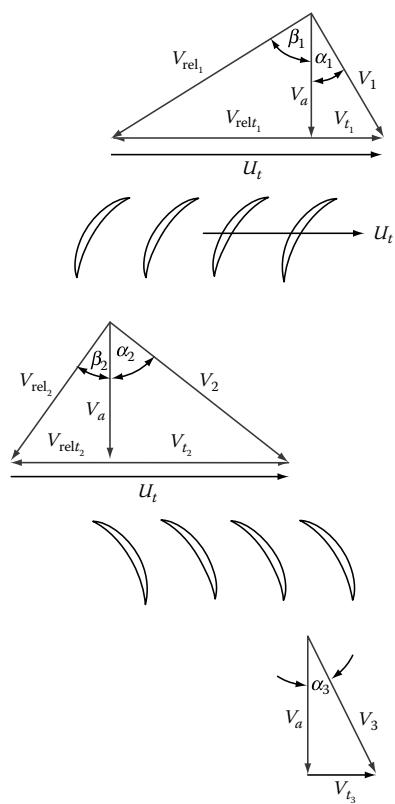
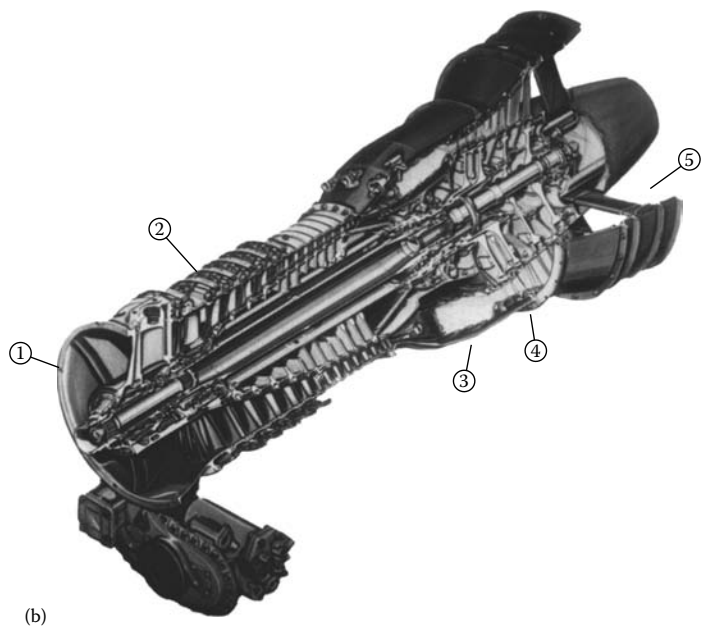


FIGURE 9.18 (continued) (b) Section view of a gas turbine. Air enters the gas turbine at 1. The axial-flow compressor (2) delivers high-pressure air to the combustion chamber (3). Hot exhaust gases travel through the axial turbine (4) to the outlet at 5. Turbine and compressor are on the same shaft. Compressor input power is from the turbine. Thrust is delivered by exhaust gases. (Courtesy Williams & Lane, Inc. With permission.) (c) Velocity diagrams for an axial-flow compressor stage.

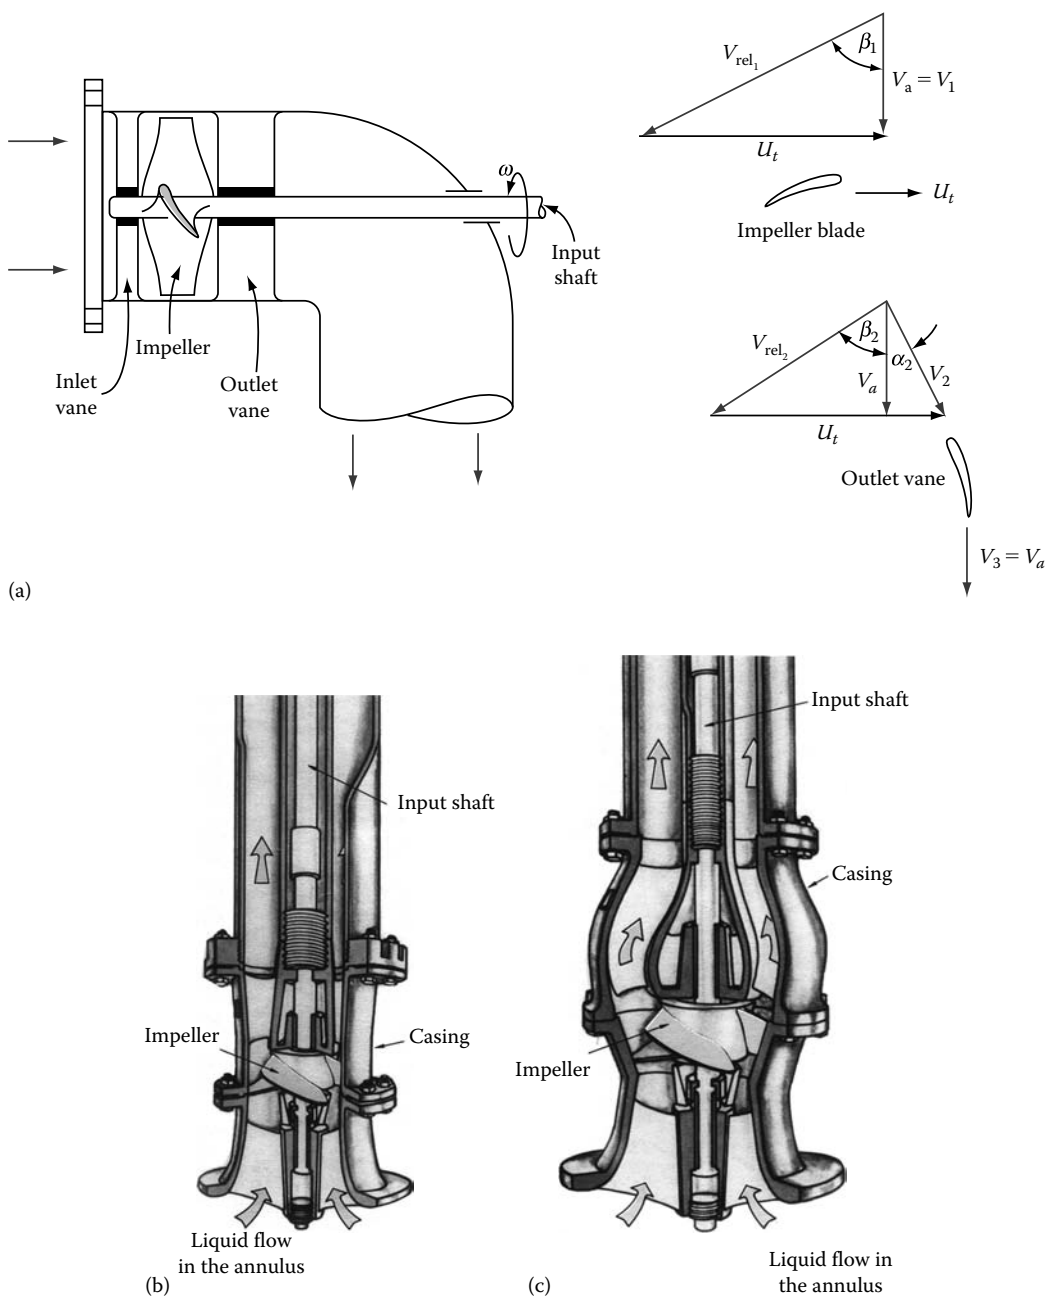


FIGURE 9.19 (a) Schematic of an axial-flow pump and the associated velocity diagram. (b) An axial-flow pump. (Courtesy of Fairbanks Morse Pump Division. With permission.) (c) A mixed-flow pump. (Courtesy of Fairbanks Morse Pump Division. With permission.)

A summary of the descriptive equations is helpful. Applying Equation 9.10a to the velocity diagram of Figure 9.19, with $V_{t_1} = 0$, gives the power as

$$\frac{dW_s}{dt} = T_s \omega = \rho Q U_t V_{t_2} \tag{9.47}$$

Equation 9.18*b* applied to this machine gives a second expression for the power in terms of the pressure rise:

$$\frac{dW_s}{dt} = Q(p_3 - p_1) \quad (9.18b)$$

Equating Equations 9.47 and 9.18*b* yields

$$p_3 - p_1 = \rho U_t V_{t2} \quad (9.48)$$

For the pressure rise across the impeller blade only, we apply Bernoulli's equation with relative velocities (Equation 9.25*b*):

$$p_2 - p_1 = \frac{\rho}{2} (V_{\text{rel}1}^2 - V_{\text{rel}2}^2)$$

The reaction ratio is given by rewriting Equation 9.28 for a pump as

$$\text{RR} = \frac{p_2 - p_1}{p_3 - p_1} = \frac{V_{\text{rel}1} + V_{\text{rel}2}}{2U_t} \quad (9.28)$$

In terms of blade angles, the reaction ratio can be written as Equation 9.30 with $\alpha_1 = 0$:

$$\text{RR} = \frac{1}{2} + \frac{V_a}{2U_t} \tan \beta_2 \quad (9.49)$$

Example 9.6

An axial-flow pump rotates at 600 rev/min and conveys water at $0.12 \text{ m}^3/\text{s}$. The hub radius is 5 cm, and the casing radius is 15 cm. The absolute velocity of the flow leaving the rotor blades makes an angle of 23° with the axial direction. Determine the angles at the leading edge of the blades (β_1 and β_2). Use the blade element procedure of dividing the blade into a number of finite widths and averaging the contributions to find the total torque and power.

SOLUTION

As we mentioned earlier, when the blade height is small in comparison to the mean pitch radius, the properties at the radius can be taken to represent the flow characteristics in the stage. For long blades, however, the radial distance variation must be accounted for. This is done by dividing the blade into small elements and adding the contribution to the torque of each element. Total shaft power becomes the sum of the individual contributions divided by the number of elements selected. The angular momentum equation must be applied to each element of the blade. In so doing, blade angles at each location can be ascertained, and the blade can then be constructed.

At the hub, $R_i = 0.05 \text{ m}$; at the tip, $R_o = 0.15 \text{ m}$. The flow area is then

$$A = \frac{\pi}{4} (D_o^2 - D_i^2) = \frac{\pi}{4} (0.3^2 - 0.1^2) = 0.0628 \text{ m}^2$$

With $Q = 0.12 \text{ m}^3/\text{s}$, we have

$$V_a = \frac{Q}{A} = \frac{0.12}{0.0628} = 1.91 \text{ m/s}$$

which is a constant across the cross section and throughout the machine.

We will now find the appropriate parameters in terms of the blade radius. The rotational speed is 600 rev/min, so the tangential blade speed in terms of the radius is

$$U_t - R\omega = R\left(600\frac{2\pi}{60}\right) = 62.8R$$

With the angle α_2 given as 23° , we find (referring to Figure 9.19)

$$V_{t_2} = V_a \tan \alpha_2 = 1.91 \tan 23^\circ = 0.811 \text{ m/s}$$

which is also a constant and not a function of the radius. The pressure gain across the pump at any location r is determined with Equation 9.48:

$$\begin{aligned}\Delta(p_3 - p_1) &= \rho U_t V_{t_2} \\ &= 1\,000(62.8R)(0.811) \\ &= 50\,957R\end{aligned}$$

where Δ has been added to denote the blade element value. The shaft torque at any location is calculated with

$$\begin{aligned}\Delta T_s &= \frac{Q}{\omega} \Delta(p_3 - p_1) = \frac{0.12}{62.8}(50\,957R) \\ &= 97.4R\end{aligned}$$

and the power input is

$$\Delta \frac{dW_s}{dt} = \Delta T_s \omega$$

Results of calculations made with these equations are displayed in Table 9.1. As shown in column 1, the blade is divided into five elements, each 2 cm long. The average radial value for each increment, R_{avg} , is determined and used in the expressions. The last two columns show the incremental contributions

TABLE 9.1
Solution for the Axial-Flow Pump of Example 9.6

ΔR (m)	R_{avg} (m)	$U_t = R_{\text{avg}}\omega$ (m/s)	$\beta_1 = \tan^{-1}\left(\frac{U_t}{V_a}\right)$ (°)	$\beta_2 = \tan^{-1}\left(\frac{U_t - V_{t_2}}{V_a}\right)$ (°)	$\Delta(p_3 - p_1) = \rho U_t V_{t_2}$ (Pa)	$\Delta T_s = \frac{Q}{\omega} \Delta(p_3 - p_1)$ (N · m)	$\Delta\left(\frac{dW_s}{dt}\right) = \Delta T_s \omega$ (W)
0.05–0.07	0.06	3.76	63	57.1	3 049	5.82	366
0.07–0.09	0.08	5.03	69.2	65.7	4 079	7.79	489
0.09–0.11	0.10	6.28	73.1	70.7	5 093	9.73	611
0.11–0.13	0.12	7.54	75.8	74.2	6 114	11.68	734
0.13–0.15	0.14	8.80	77.8	76.5	7 137	13.63	856
						$T_s = \frac{48.65}{5}$ = 9.73	$\frac{dW_s}{dt} = \frac{3056}{5}$ = 611

Conditions: $D_o = 0.3$ m, $D_i = 0.1$ m, $A = 0.062\,8$ m², $V_{t_2} = 0.811$ m/s, $V_a = 1.91$ m/s, $Q = 0.12$ m³/s, and $\omega = 600$ rev/min.

to torque and power. By summing values in these columns and then dividing by the number of elements, the total torque and total power are found to be

$$T_s = 9.73 \text{ N} \cdot \text{m}$$

and

$$\frac{dW_s}{dt} = 0.611 \text{ kW}$$

Note that these values are the same as those calculated at $R_{\text{avg}} = 0.10 \text{ m}$. Thus, $R_{\text{avg}} = 0.10 \text{ m}$ would be the mean flow radius if it were necessary to use it in our model.

Just as our discussion of axial-flow turbines involved airfoil theory, there is a corresponding development for axial-flow compressors, fans, and pumps. It is necessary to use airfoil theory when the one-dimensional flow assumption is no longer adequate—that is, when the number of blades in the machine is small and the distance between them is large. To examine this case, consider the airfoil depicted in Figure 9.20. The approach flow has an absolute velocity V_1 at an angle α_1 with the axial direction. The flow leaving has an absolute velocity V_2 . The velocity diagrams of Figure 9.20 can be combined into a single graph, as shown in Figure 9.21. Flow past the moving airfoil is represented as the average relative velocity $\bar{V}_{\text{rel}}$:

$$\bar{V}_{\text{rel}} = \frac{V_{\text{rel}1} + V_{\text{rel}2}}{2}$$

This velocity approaches the blade at an angle of incidence of δ .

From Chapter 6, we know that flow past an airfoil causes lift and drag forces to be exerted perpendicular and parallel to the flow direction. These forces must be resolved into components

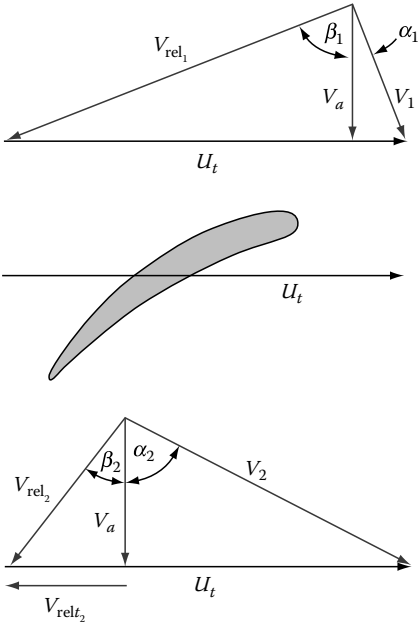


FIGURE 9.20 Flow past an isolated airfoil with associated velocity diagrams.

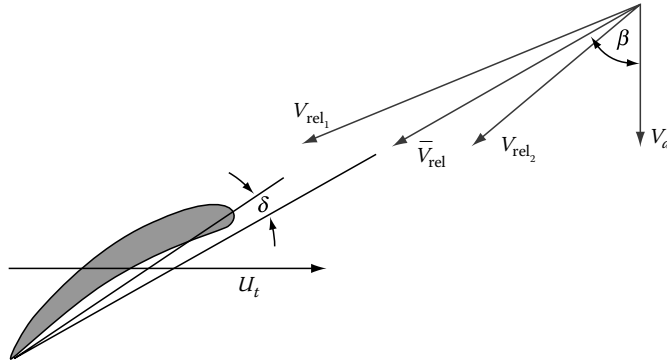


FIGURE 9.21 Combined velocity diagram.

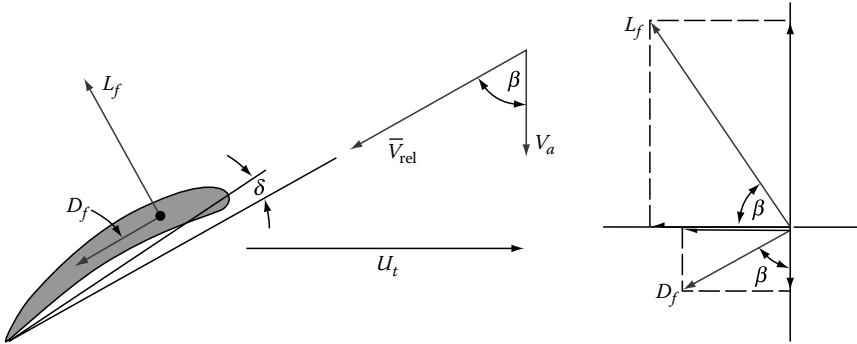


FIGURE 9.22 Forces of lift and drag resolved into axial and tangential components.

(as illustrated in Figure 9.22) in the axial and tangential direction—to calculate bearing forces, for example, and so that blade aerodynamic properties can be related to fluid properties. The tangential force acting in the direction opposite of U_t (considered negative) is

$$F_t = -(L_f \cos \beta + D_f \sin \beta) \quad (9.50)$$

Taking the direction of the axial velocity as being positive, we find the axial force to be

$$F_a = -L_f \sin \beta + D_f \cos \beta \quad (9.51)$$

Lift and drag forces are usually expressed in terms of lift and drag coefficients for an airfoil:

$$L_f = C_L \frac{\rho \bar{V}_{rel}^2 A_p}{2}$$

$$D_f = C_D \frac{\rho \bar{V}_{rel}^2 A_p}{2}$$

where A_p is the planform area of the airfoil (chord length times span). Before combining these equations, it is necessary to make provision for the variation of U_t with radial distance from the rotor. The blade is therefore divided into incremental elements Δz wide, as shown in Figure 9.23.

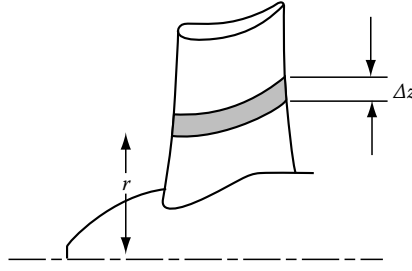


FIGURE 9.23 An incremental blade element.

The area of the element is $c \Delta z$, where c is the chord length. After combining the lift and drag expressions with Equations 9.50 and 9.51, we obtain the tangential and axial forces:

$$F_t = -(C_L \cos \beta + C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} \quad (9.52)$$

and

$$F_a = -(C_L \sin \beta - C_D \cos \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} \quad (9.53)$$

These forces can now be related to the properties of the flow before and after the blades. The momentum equation in the tangential direction is

$$\sum F_t = \iint_{\text{CS}} V_t \rho V_n dA$$

Evaluating each side of this equation, we obtain

$$NF_t = -N(C_L \cos \beta + C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2}$$

where N is the number of blades and

$$\iint_{\text{CS}} V_t \rho V_n dA = \rho V_a (V_{t_2} - V_{t_1}) 2\pi r \Delta z$$

Equating yields

$$N(C_L \cos \beta + C_D \sin \beta) \frac{\rho \bar{V}_{\text{rel}}^2 c \Delta z}{2} = \rho V_a (V_{t_1} - V_{t_2}) 2\pi r \Delta z$$

Substituting $V_a = \bar{V}_{\text{rel}} \cos \beta$ and simplifying yield

$$V_{t_1} - V_{t_2} = (C_L + C_D \tan \beta) \frac{\bar{V}_{\text{rel}} c N}{4\pi r} \quad (9.54)$$

The momentum equation in the axial direction is

$$\sum F_a = \iint_{CS} V_a \rho V_n dA$$

Evaluating each term, we get

$$\begin{aligned} NF_a &= (p_1 - p_2)2\pi r \Delta z \\ \iint_{CS} V_a \rho V_n dA &= (\rho 2\pi r \Delta z V_a)(V_{a2} - V_{a1}) \end{aligned} \quad (9.55)$$

Because V_a is a constant, the momentum equation reduces to Equation 9.55. By substitution from Equation 9.53, we get

$$-N(C_L \sin \beta - C_D \cos \beta) \frac{\rho \bar{V}_{rel}^2 c \Delta z}{2} = (p_1 - p_2)2\pi r \Delta z$$

Simplifying and rearranging give the pressure rise as

$$p_1 - p_2 = -\frac{\rho \bar{V}_{rel}^2 c N}{4\pi r} (C_L \sin \beta - C_D \sin \beta) \quad (9.56)$$

Equations 9.54 and 9.56 relate the change in properties across the fan to aerodynamic properties of the blades.

Example 9.7

A typical three-speed window fan is placed in a square housing $56 \times 56 \times 15$ cm wide. The fan itself has five identical evenly spaced blades, a hub diameter of 14.5 cm, and a blade tip-to-tip diameter of 48 cm. The chord length at the hub is 7.6 cm; the chord length at the tip is 17.8 cm. The inlet blade angle at the hub is 70° with respect to the axial direction. At high speed ($\omega = 3600$ rev/min), the fan motor runs on 115 V and uses 2 A. Only 50% of this power is transferred to the air. Assuming purely axial inflow to the fan and an air density of 1.2 kg/m³, determine the pressure rise across the blades. Also calculate the aerodynamic properties of the blades.

SOLUTION

At the hub, $R_i = 14.5/2 = 7.25$ cm = 0.072 5 m. So

$$U_{ti} = R_i \omega = 0.072 5 \left(3600 \frac{2\pi}{60} \right) = 27.3 \text{ m/s}$$

Now $\beta_{i1} = 70^\circ$; with $\alpha_1 = 0$ (purely axial inflow), the velocity diagram shows

$$V_a = \frac{U_{ti}}{\tan \beta_i}$$

As a first approximation, assume that $\beta_{i1} \approx \beta_i$; later, when β_{i2} is determined, we will return to this point if a second approximation is necessary. Thus,

$$V_a \approx \frac{U_{ti}}{\tan \beta_i} = \frac{27.3}{\tan 70^\circ} = 9.94 \text{ m/s}$$

which is a constant over the flow area. The area itself is

$$A = \frac{\pi}{4} (D_o^2 - D_i^2)$$

With $D_o = 0.48$ m and $D_i = 0.145$ m,

$$A = \frac{\pi}{4} (0.48^2 - 0.145^2) = 0.164 \text{ m}^2$$

The volume flow of air is then

$$Q = AV = 0.164(9.94) = 1.63 \text{ m}^3/\text{s}$$

The fluid is air, but there is no significant increase in stagnation temperature across the blades. Therefore, the incompressible form of the energy equation (Equation 9.12b) can be applied:

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho Q \left[\left(\frac{p_1}{\rho} + \frac{V_1^2}{2} \right) - \left(\frac{p_2}{\rho} + \frac{V_2^2}{2} \right) \right] = \rho g Q \Delta Z$$

where ΔZ is the head difference across the machine. The electrical power input is

$$\frac{dW_s}{dt} = (115 \text{ V})(2 \text{ A}) = 230 \text{ W}$$

Only 50% of this power is transferred to the fluid as the head difference. Therefore,

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = -0.5(230) = \rho g Q \Delta Z$$

or

$$\Delta Z = -\frac{115}{\rho Q g}$$

By substitution,

$$\Delta Z = \frac{-115}{1.2(1.63)(9.81)} = -5.98 \text{ m of air}$$

which is a constant over the flow area. With $V_1 = V_a$, then $V_{t_1} = 0$. Equation 9.9 for the power becomes

$$-\frac{dW_s}{dt} = T_s \omega = \rho Q \omega (-R V_{t_2}) = -\rho Q U_{ti} V_{t_2}$$

At the hub, $U_{ti} = 27.3$ m/s; therefore,

$$V_{t_2} \Big|_i = -\frac{(-dW_s/dt)}{\rho Q U_{ti}} = \frac{115}{1.2(1.63)(27.3)} = 2.15 \text{ m/s}$$

The increase in kinetic energy across the blades is

$$\frac{V_2^2 - V_1^2}{2} = \frac{(V_a^2 + V_{t_2}^2) - (V_a^2 + V_{t_1}^2)}{2} = \frac{V_{t_2}^2}{2}$$

By definition,

$$g\Delta Z = \frac{p_1 - p_2}{\rho} + \frac{V_1^2 - V_2^2}{2}$$

After rearranging, the pressure rise across the blades is found to be

$$p_2 - p_1 = \rho \left(-\frac{V_2^2}{2} - g\Delta Z \right)$$

At the hub,

$$(p_2 - p_1)|_i = 1.2 \left[-\frac{2.15^2}{2} - 9.81(-5.98) \right]$$

$$(p_2 - p_1)|_i = 67.6 \text{ Pa}$$

Calculations can be formulated for the tip, where $R_o = 0.48/2 = 0.24$ m. Thus,

$$U_{to} = R_o \omega = 0.24 \left(3600 \frac{2\pi}{60} \right) = 90.47 \text{ m/s}$$

Also,

$$\begin{aligned} V_{t2}|_o &= \frac{(-dW_s/dt)}{\rho Q U_{to}} = \frac{115}{1.2(1.63)(90.47)} \\ &= 0.649 \text{ m/s} \end{aligned}$$

By substitution into the expression for pressure rise,

$$p_2 - p_1 = \rho \left(-\frac{V_2^2}{2} - g\Delta Z \right)$$

we find at the tip

$$(p_2 - p_1)|_o = 1.2 \left[-\frac{0.649^2}{2} - 9.81(-5.98) \right]$$

$$(p_2 - p_1)|_o = 70.1 \text{ Pa}$$

The velocity diagrams at the hub and the tip are given in Figure 9.24.

To find the aerodynamic properties of the blades, we first determine the average blade angles. At the hub,

$$\begin{aligned} \beta_{i1} &= \tan^{-1} \frac{U_{ti}}{V_a} = \tan^{-1} \frac{27.3}{9.94} = 70^\circ \\ \beta_{i1} &= \tan^{-1} \frac{U_{ti} - V_{t2}|_i}{V_a} = \tan^{-1} \frac{27.3 - 2.15}{9.94} = 68.4^\circ \end{aligned}$$

Because β_{i1} and β_{i2} are nearly equal, a second approximation is not necessary. Now

$$V_{rel i1} = \frac{V_a}{\cos \beta_{i1}} = \frac{9.94}{\cos 70^\circ} = 29.1 \text{ m/s}$$

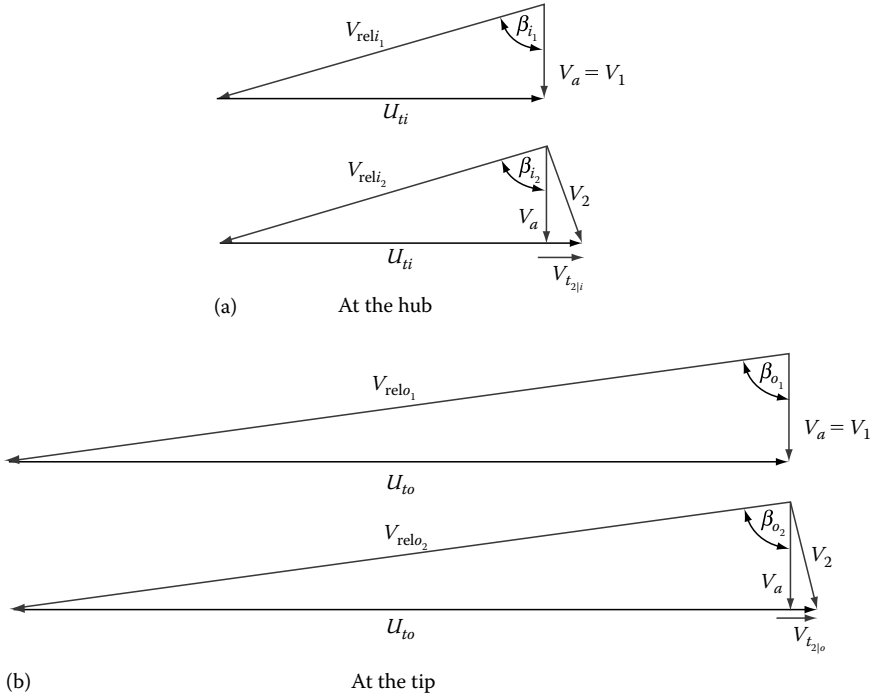


FIGURE 9.24 Velocity diagrams for the fan of Example 9.7.

and

$$V_{\text{rel}i_2} = \frac{V_a}{\cos \beta_{i_2}} = \frac{9.94}{\cos 68.4^\circ} = 27.0 \text{ m/s}$$

Therefore,

$$\bar{V}_{\text{rel}i} = \frac{29.1 + 27.0}{2} = 28.05 \text{ m/s}$$

which gives

$$\cos \beta_i = \frac{V_a}{V_{\text{rel}i}} = \frac{9.94}{28.05} = 0.354$$

The average blade angle at the hub is

$$\beta_i = 69.2^\circ$$

Similarly, at the tip,

$$\beta_{o1} = \tan^{-1} \frac{U_{to}}{V_a} = \tan^{-1} \frac{90.47}{9.94} = 83.7^\circ$$

$$\beta_{o2} = \tan^{-1} \frac{U_{to} - V_{t2|o}}{V_a} = \tan^{-1} \frac{90.47 - 0.649}{9.94} = 83.68^\circ$$

These values are close, a result that implies that the blade is almost perfectly flat at the tip. It is permissible to use an average angle of

$$\beta_o = 83.69^\circ$$

with which we obtain at the tip

$$\bar{V}_{\text{relo}} = \frac{V_a}{\cos \beta_o} = \frac{9.94}{\cos 83.69^\circ} = 90.43 \text{ m/s}$$

Equation 9.54 can now be used. At the hub,

$$(V_{t2} - V_{t1})|_i = \left[(C_L + C_D \tan \beta_i) \frac{\bar{V}_{\text{rel}} c N}{4\pi R} \right] \bigg|_i$$

$$2.15 = (C_L + C_D \tan 69.2^\circ) \frac{28.05(0.076)(5)}{4\pi(0.0725)}$$

or

$$C_L + 2.63C_D = 0.1838 \quad (i)$$

Also at the hub,

$$(p_1 - p_2)|_i = \left(-\frac{\rho \bar{V}_{\text{rel}}^2 c N}{4\pi R} \right) \bigg|_i (C_L \sin \beta_i - C_D \cos \beta_i)$$

and, by substitution,

$$-67.6 = -\frac{1.2(28.05)^2(0.076)(5)}{4\pi(0.0725)} (C_L \sin 69.2^\circ - C_D \cos 69.2^\circ)$$

or

$$C_L - 0.379C_D = 0.1836$$

Subtracting from Equation i yields

$$2.63C_D + 0.379C_D = 0.1838 - 0.1836$$

or

$$C_D \approx 0$$

We also find

$$C_L \approx 0.18$$

Similarly, at the tip,

$$(p_1 - p_2)|_o = \left(-\frac{\rho \bar{V}_{\text{rel}}^2 c N}{4\pi R} \right) \bigg|_o (C_L \sin \beta_o - C_D \cos \beta_o)$$

$$-70.1 = -\frac{1.2(90.43)^2(0.178)(5)}{4\pi(0.24)} (C_L \sin 83.69^\circ - C_D \cos 83.69^\circ)$$

or

$$C_L - 0.111C_D = 0.024 \text{ 35} \tag{ii}$$

Also

$$(V_{t_2} - V_{t_1})|_o = \left[(C_L + C_D \tan \beta_o) \frac{\bar{V}_{rel} c N}{4\pi R} \right]_o$$
$$0.649 = (C_L + C_D \tan 83.69^\circ) \frac{(90.43)(0.178)(5)}{4\pi(0.24)}$$

from which we obtain

$$C_L + 9.04C_D = 0.024$$

Subtracting from Equation ii, we find the following at the tip:

$$-0.111C_D - 9.04C_D = 0.024 \text{ 35} - 0.024$$

$$C_D \approx 0$$

$$C_L \approx 0.024$$

Because the drag coefficient is quite small, C_D can usually be neglected in the equations. This is true especially if the average blade angle is greater than 45° . The implication is not that there is no drag exerted but that the drag contribution to axial and tangential forces is negligible in comparison to the lift (see Figure 9.22).

9.4 RADIAL-FLOW TURBINES

Figure 9.25a depicts a radial-flow or Francis turbine. It consists of stationary guide vanes, rotor blades that take in and discharge water in the radial direction, and a draft tube, which is a diverging


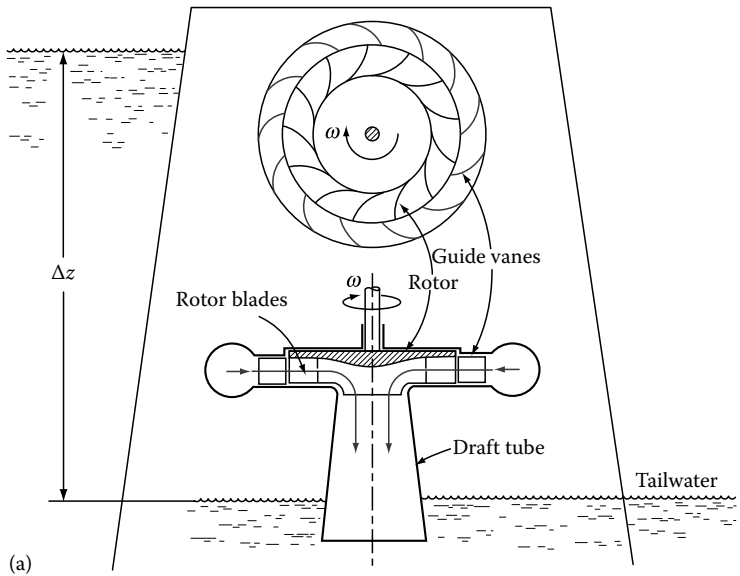


FIGURE 9.25 (a) A radial-flow turbine.

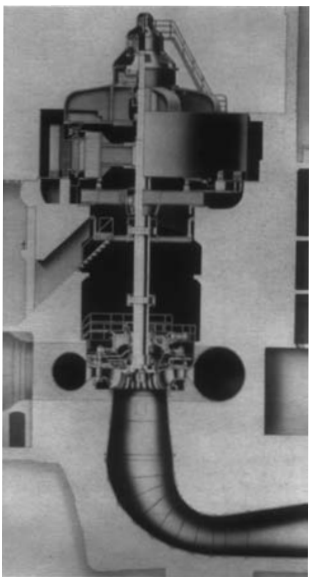

(b)



(c)

FIGURE 9.25 (continued) (b) Francis turbine runner during installation. (Courtesy of Allis-Chalmers Hydro Turbine Division. With permission.) (c) A Francis turbine installation. (Courtesy of Allis-Chalmers Hydro Turbine Division.)

circular passage on the discharge side leading to the tailwater. The guide vanes can adjust to account for variations in available water head or local power requirements. The diverging tube allows the pressure at the rotor exit to be less than atmospheric pressure, thereby increasing the total head across the turbine and thus inducing more flow to pass through. The velocity diagrams shown in Figure 9.26 correspond to flow leaving the guide vanes or gates (subscript 1) and flow leaving the turbine blades (subscript 2). In many conventional designs, the exit flow is in the axial direction. However, in this discussion, we will take inlet and outlet flows through the turbine blades to be in the radial direction.

For this turbine, the shaft torque exerted by the fluid is found with Equation 9.8:

$$T_s = \rho Q(R_2 V_{t2} - R_1 V_{t1})$$

From the continuity equation,

$$Q = A_1 V_{r1} = A_2 V_{r2}$$

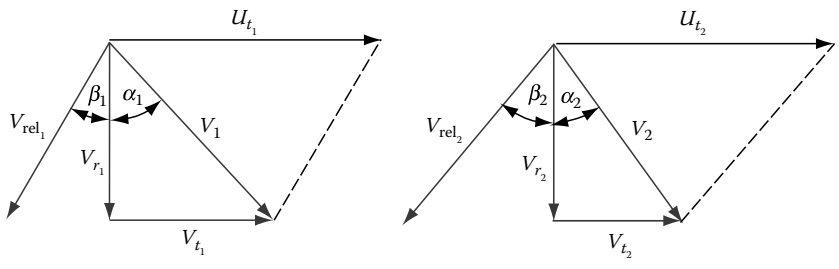


FIGURE 9.26 Velocity diagrams for a radial-flow turbine.

or

$$Q = 2\pi R_1 b V_{r_1} = 2\pi R_2 b V_{r_2}$$

where: b = height of the blades or gates

V_r = radial velocity

A = peripheral area about the rotor open to the flow and normal to V_r

By simplifying, the continuity equation becomes

$$R_1 V_{r_1} = R_2 V_{r_2} \quad (9.57)$$

From the velocity diagram,

$$\frac{V_t}{V_r} = \tan \alpha$$

Combining this result with Equation 9.57 and substituting into Equation 9.8 yield

$$\begin{aligned} T_s &= \rho Q (R_2 V_{r_2} \tan \alpha_2 - R_1 V_{r_1} \tan \alpha_1) \\ &= \rho Q (R_2 V_{r_2} \tan \alpha_2 - \tan \alpha_1) \end{aligned}$$

which is similar to the expression for axial-flow turbines except that the radial velocity is used instead of the axial velocity.

In the radial-flow turbine, the vanes are designed such that the angle α_2 is 0° ; the absolute flow velocity out of the turbine is in the radial direction. Thus, $V_{t_2} = 0$, and the expression for torque becomes

$$T_s = \rho Q R_1 V_{r_1} \tan \alpha_1 \quad (9.58)$$

From the velocity diagram

$$V_1 \cos \alpha_1 = V_{r_1}$$

and in terms of V_1 , the shaft torque becomes

$$T_s = -\rho Q R_1 V_1 \sin \alpha_1 \quad (9.59)$$

Alternatively, from the velocity diagram, we get

$$V_{t_1} = U_{t_1} - V_{r_1} \tan \beta_1$$

and the expression for shaft torque in terms of exit blade angle is

$$T_s = \rho Q R_1 U_{t_1} \left(1 - \frac{V_{r_1}}{U_{t_1}} \tan \beta_1 \right) \quad (9.60)$$

The power or rate of doing work is found with

$$-\frac{dW_s}{dt} = T_s \omega = \rho Q \omega R_1 U_{t_1} \left(1 - \frac{V_{r_1}}{U_{t_1}} \tan \beta_1 \right) \quad (9.61)$$

Equation 9.12b gives the total power available as

$$-\frac{dW_s}{dt} - \frac{dW_f}{dt} = \rho g Q \Delta z$$

where Δz is the total head available. From Equation 9.16, we have the efficiency of the Francis turbine:

$$\eta = \frac{-dW_s/dt}{-dW_s/dt - dW_f/dt} = \frac{\omega R_1 U_{t_1}}{\Delta z g} \left(1 - \frac{V_{r_1}}{U_{t_1}} \tan \beta_1 \right) \quad (9.62)$$

Example 9.8

A Francis turbine is used in an installation to generate electricity. The generator requires an input rotational speed of 1260 rev/min. For a total head of 300 ft, the volume flow rate of water through the turbine is 15 ft³/s. The absolute water velocity leaving the gates and entering the rotor makes an angle of 70° with the radial direction. The radius of the turbine rotor is 2 ft, and the inlet gate height is 0.10 ft. The absolute velocity leaving the rotor is in the radial direction. Determine the torque and power exerted by the liquid. Calculate the efficiency of the turbine.

SOLUTION

For purely radial outflow, Equation 9.58 applies:

$$T_s = -\rho Q R_1 V_{r_1} \tan \alpha_1$$

For water, $\rho = 1.94$ slug/ft³. The inlet area is

$$A = 2\pi R_1 b = 2\pi(2)(0.10) = 1.26 \text{ ft}^2$$

Because this area is perpendicular to the inlet radial velocity,

$$V_{r_1} = \frac{Q}{A} = \frac{15}{1.26} = 11.9 \text{ ft/s}$$

By substitution into the expression for torque, we obtain

$$T_s = -1.94(15)(2)(11.9) \tan 70^\circ$$

$$T_s = -1900 \text{ ft} \cdot \text{lbf}$$

The power is found with

$$\begin{aligned} \frac{dW_s}{dt} &= -T_s \omega = -(-1900) \left(1260 \frac{2\pi}{60} \right) \\ &= 250,700 \text{ ft} \cdot \text{lbf/s} \end{aligned}$$

or

$$\frac{dW_s}{dt} = 455 \text{ hp} = 340 \text{ kW}$$

where conversion factors were obtained from Table A.2. Efficiency for a hydraulic turbine is

$$\eta = \frac{T_s \omega}{\rho g Q \Delta z} = \frac{250,700}{[1.94(32.2)](15)(300)}$$

or

$$\eta = 0.892 = 89.2\%$$

Note that the total head for the radial turbine is from inlet water surface to tailwater surface.

9.5 RADIAL-FLOW COMPRESSORS AND PUMPS

Radial-flow machines are those that impart centrifugal energy to the fluid. These machines consist essentially of a rotating impeller within a housing. Fluid enters the housing at the inlet to the center or eye of the impeller. As the impeller itself rotates, it adds to the energy of the fluid while it is being spun outward. The angular momentum, the static pressure, and the fluid velocity are all increased within the impeller. As the fluid leaves the impeller, it enters a volute or scroll, where it is delivered to an outlet channel. The term *compressor* refers to a device that gives a substantial pressure increase to a flowing gas. The term *fan* refers to a machine that imparts a small pressure increase to a flowing gas. (The term *blower* is often used in place of fan.) The term *pump* refers to a machine that increases the pressure of a flowing liquid.

Figure 9.27a is a schematic of a centrifugal compressor showing an impeller followed by diffuser vanes and a volute. The diffuser vanes convert some of the kinetic energy of the gas into pressure energy. Depending on the desired result, the diffusion process can be accomplished with or

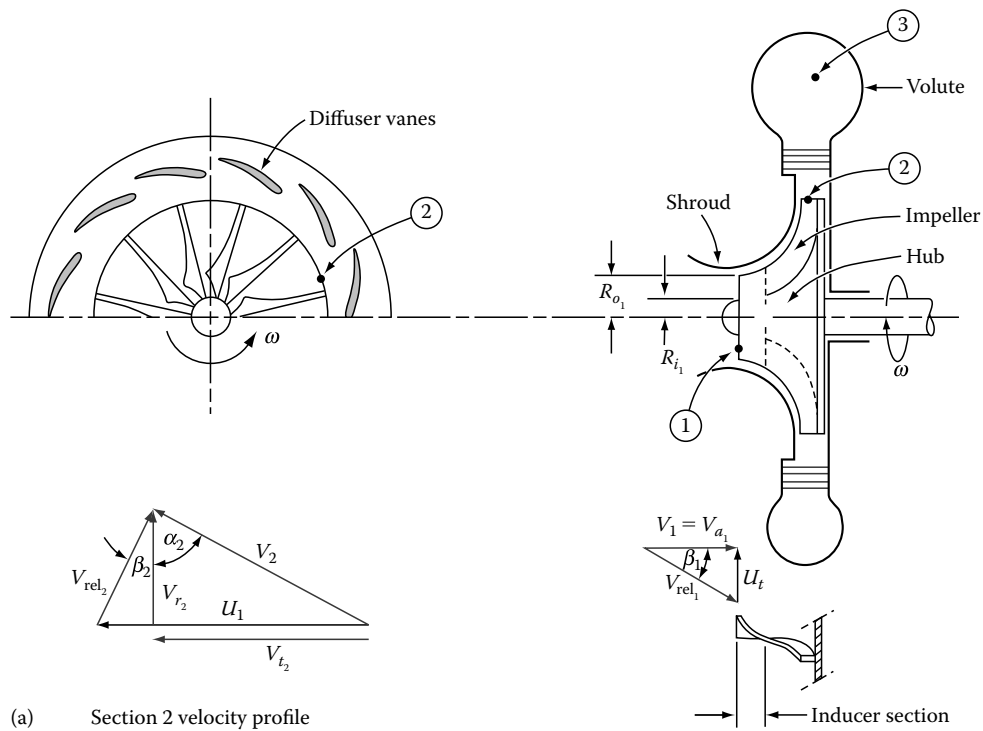


FIGURE 9.27 (a) Schematic of a centrifugal compressor and associated velocity diagrams.

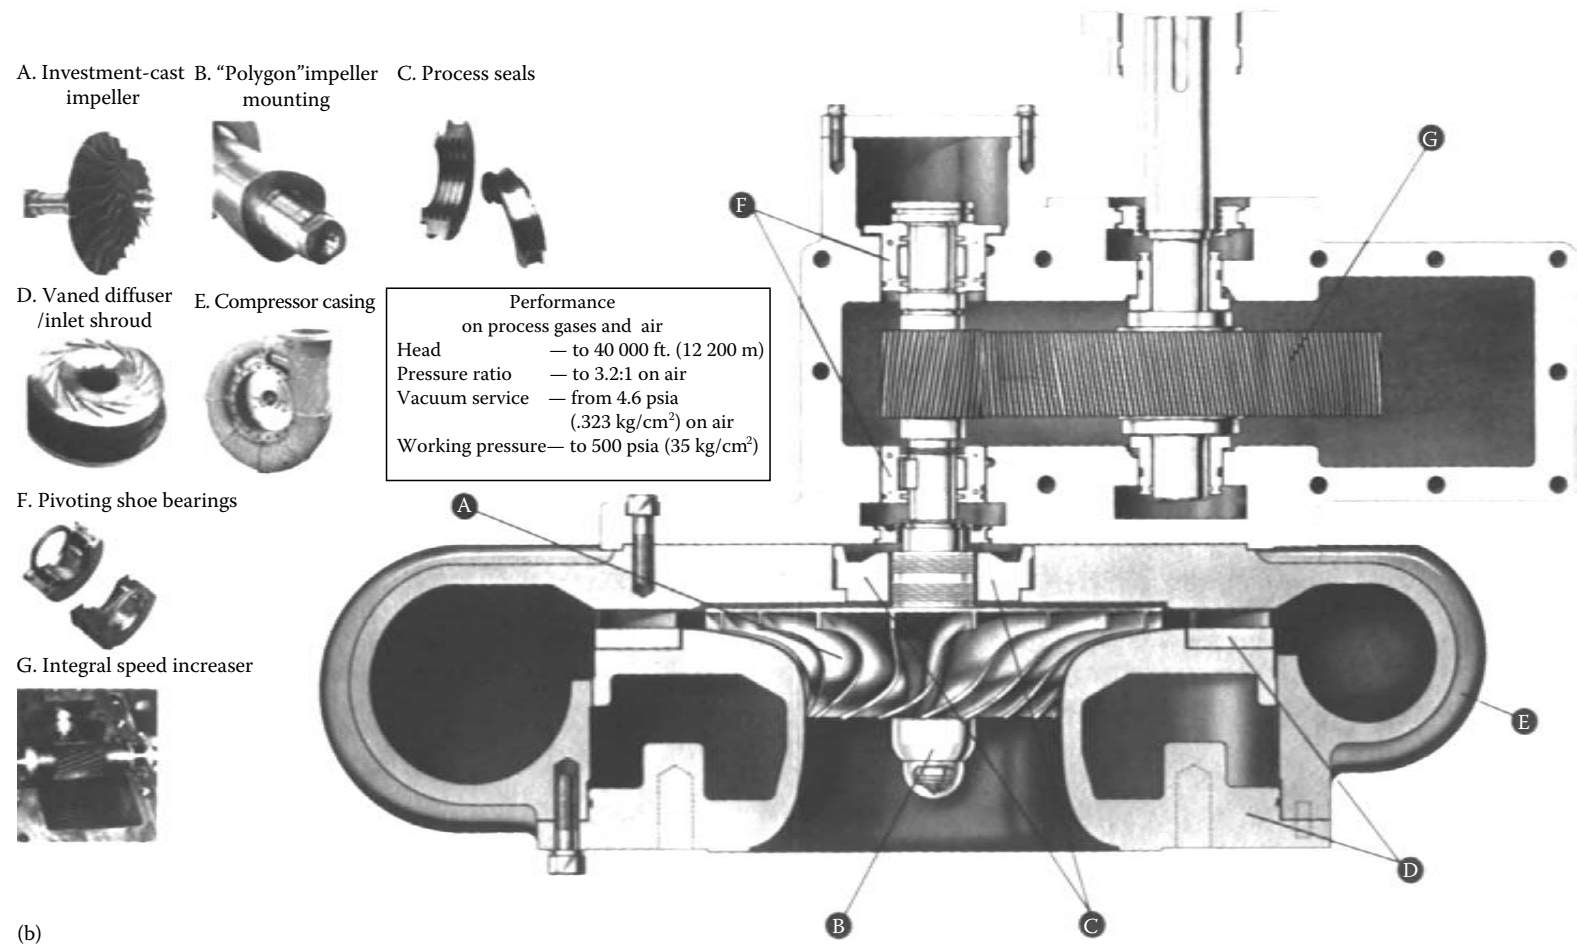


FIGURE 9.27 (continued) (b) A centrifugal compressor. (Courtesy of Atlas Copco Turbonetics Inc., Latham, NY.)

without diffuser vanes. At the flow entrance (section 1), the relative velocity is V_{rel_1} at an angle β_1 with respect to the axial direction. The flow velocity is turned into the purely axial direction by the inducer section, sometimes referred to as rotating guide vanes. At the exit (section 2), the absolute velocity is V_2 inclined at an angle of α_2 with the radial direction. The flow is now directed toward the diffuser vanes. An accurate description of flow through a centrifugal compressor is a three-dimensional problem beyond the range of what we wish to cover. The preceding discussion is included here merely to introduce the machine and its principle components.

The next radial-flow machine that we will consider is the centrifugal pump. Equations for a centrifugal fan are identical to those for the pump. In a fan or blower, the pressure and temperature changes are not as significant as those in a compressor. Thus, for analysis of a fan, the incompressible equations are adequate.

Figure 9.28a is a schematic of a centrifugal pump and associated velocity diagrams. A pump consists of an impeller that rotates within a housing. Fluid enters the housing in the axial direction at the eye of the impeller. The fluid then turns so that its principal direction is radial both before and after the impeller vanes. At the vane inlet, the flow is purely radial; the relative velocity is at an angle β_1 with the radial direction. At the outlet, the absolute velocity is V_2 , and the relative velocity is V_{rel_2} . The continuity equation for the impeller is

$$Q = A_1 V_{r_1} = A_2 V_{r_2}$$

where A is the peripheral area of flow. For thin vanes,

$$Q = 2\pi R_1 b V_{r_1} = 2\pi R_2 b V_{r_2}$$

or

$$R_1 V_{r_1} = R_2 V_{r_2} \tag{9.63}$$

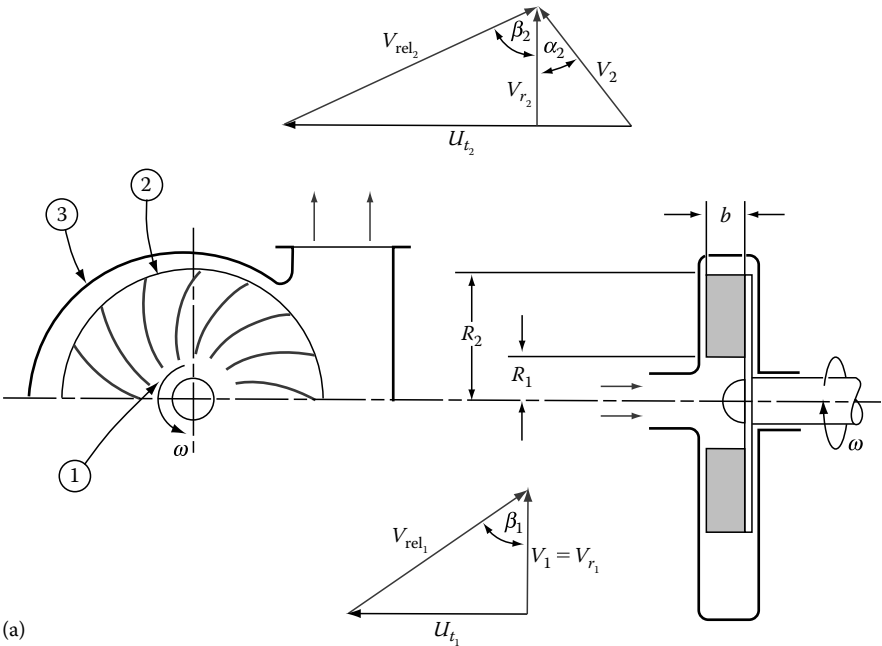


FIGURE 9.28 (a) Schematic of a centrifugal pump and associated velocity diagrams.

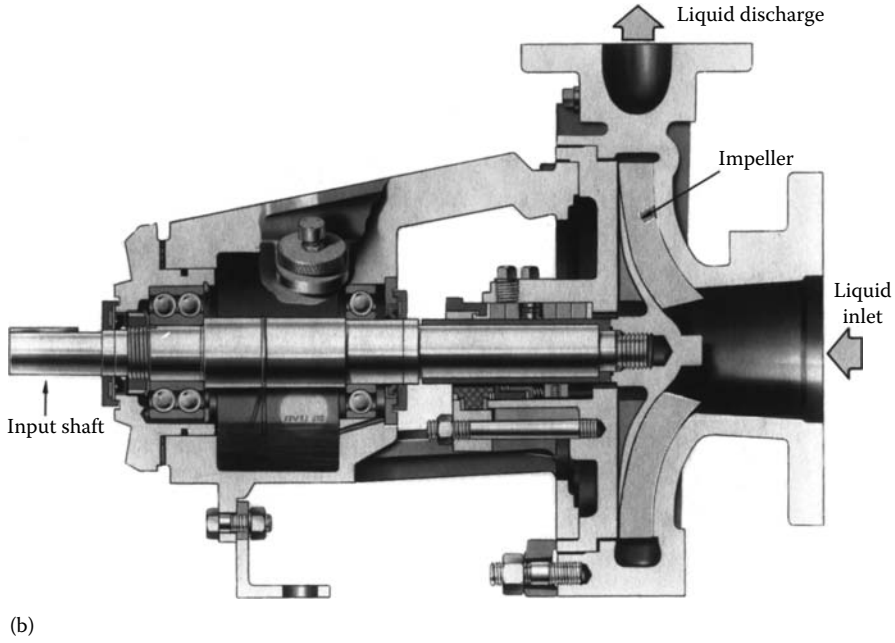


FIGURE 9.28 (continued) (b) Section view of a centrifugal pump and support housing (Courtesy of Allis-Chalmers Corp. With permission.)

In the following development, our objective is to express the pressure rise in terms of conditions at the impeller exit, specifically including the blade angle β_2 . Equation 9.10a with $V_{t1} = 0$ applied to the impeller gives the power delivered to the liquid:

$$\frac{dW_s}{dt} = T_s \omega = \rho Q U_{t2} V_{t2}$$

From the velocity diagram,

$$\begin{aligned} V_{t2} + V_{rel2} &= U_{t2} \\ V_{t2} &= U_{t2} - V_{r2} \tan \beta_2 = U_{t2} \left(1 - \frac{V_{r2}}{U_{t2}} \tan \beta_2 \right) \end{aligned}$$

The power thus becomes

$$\frac{dW_s}{dt} = T_s \omega = \rho Q U_{t2}^2 \left(1 - \frac{V_{r2}}{U_{t2}} \tan \beta_2 \right) \quad (9.64)$$

Equation 9.12b gives the power in terms of liquid properties for frictionless flow as

$$-\frac{dW_a}{dt} = \rho Q \left[\left(\frac{p_1}{\rho} + \frac{V_1^2}{2} \right) - \left(\frac{p_2}{\rho} + \frac{V_2^2}{2} \right) \right] \quad (9.65a)$$

or in terms of stagnation pressures,

$$\frac{dW_a}{dt} = Q(p_{t2} - p_{t1}) \quad (9.65b)$$

Introducing the efficiency and equating Equation 9.64 to Equation 9.65b, we obtain the stagnation pressure rise across the impeller:

$$p_{t2} - p_{t1} = \Delta p_t = \rho U_{t2}^2 \eta \left(1 - \frac{V_{r2}}{U_{r2}} \tan \beta_2 \right) \quad (9.66)$$

For pumps and compressors, impeller blade designs require that $\beta_2 \geq \pi/2$. If $\beta_2 < \pi/2$, the blades would be curved forward with respect to the direction of U_t , and the flow of fluid would be inward toward the axis of rotation. This is the case for the Francis turbine of the preceding section. Equation 9.66 gives the pressure rise across the impeller in terms of conditions at the impeller exit. Note that for frictionless flow, $\eta = 1.0$.

Example 9.9

The impeller of a centrifugal water pump rotates at 900 rev/min. The impeller has an eye radius (R_1) of 2 in. and an outside diameter of 16 in. The impeller vane height is $2\frac{1}{2}$ in., and measurements indicate that the vane angles are $\beta_1 = 75^\circ$ and $\beta_2 = 83^\circ$. Assuming radial inflow and an efficiency of 89%, determine

- Volume flow rate through the impeller
- Rise in stagnation pressure and increase in static pressure across the impeller
- Pumping power transferred to the fluid
- Input shaft power

SOLUTION

- Using the notation of Figure 9.28a, we have $R_1 = 2$ in., $R_2 = 8$ in., and $b = 2\frac{1}{2}$ in. The tangential impeller velocity at inlet is

$$U_{t1} = \omega R_1 = \left(900 \times \frac{2\pi}{60} \right) \left(\frac{2}{12} \right) = 15.7 \text{ ft/s}$$

From the velocity diagram (Figure 9.28a),

$$\frac{U_{t1}}{V_1} = \frac{U_{t1}}{V_{r1}} = \tan \beta_1$$

$$V_1 = V_{r1} = \frac{15.7}{\tan 75^\circ} = 4.2 \text{ ft/s}$$

The volume flow through the pump is

$$Q = A_1 V_1 = 2\pi R_1 b V_{r1} = 2\pi \left(\frac{2}{12} \right) \left(\frac{2.5}{12} \right) (4.2) \quad (4.2)$$

$$Q = 0.916 \text{ ft}^3/\text{s}$$

- The continuity equation (Equation 9.63) is used to calculate V_{r2} :

$$R_1 V_{r1} = R_2 V_{r2}$$

$$V_{r2} = \frac{(2/12)(4.2)}{(8/12)} = 1.1 \text{ ft/s}$$

The tangential velocity at impeller outlet is

$$U_{t_2} = \omega R_2 = \left(900 \times \frac{2\pi}{60}\right) \left(\frac{8}{12}\right) = 62.8 \text{ ft/s}$$

The stagnation pressure rise is given by Equation 9.66:

$$\begin{aligned} p_{t_2} - p_{t_1} &= \rho U_{t_2}^2 \eta \left(1 - \frac{V_{r_2}}{U_{t_2}} \tan \beta_2\right) \\ &= 1.94(62.8)^2(0.89) \left(1 - \frac{1.1}{62.8} \tan 83^\circ\right) \end{aligned}$$

$$p_{t_2} - p_{t_1} = 5831.7 \text{ lbf/ft}^2 = 40.5 \text{ psi}$$

From the velocity diagram of Figure 9.28a at impeller exit,

$$\begin{aligned} V_{t_2} &= U_{t_2} - V_{r_2} \tan \beta_2 \\ &= 62.8 - 1.1 \tan 83^\circ \\ &= 53.8 \text{ ft/s} \end{aligned}$$

The absolute velocity at exit is

$$\begin{aligned} V_2 &= \sqrt{V_{r_2}^2 + V_{t_2}^2} \\ &= \sqrt{1.1^2 + 53.8^2} \\ &= 53.8 \text{ ft/s} \end{aligned}$$

Also,

$$\begin{aligned} \tan \alpha_2 &= \frac{V_{t_2}}{V_{r_2}} = \frac{53.8}{1.1} = 48.9 \\ \alpha_2 &= 88.8^\circ \end{aligned}$$

By definition,

$$\frac{p_{t_2} - p_{t_1}}{\rho} = \frac{p_2}{\rho} + \frac{V_2^2}{2} - \frac{p_1}{\rho} - \frac{V_1^2}{2}$$

Solving for the static pressure rise, we obtain

$$\begin{aligned} p_2 - p_1 &= p_{t_2} - p_{t_1} + \frac{\rho(V_1^2 - V_2^2)}{2} \\ &= 5831.7 + \frac{1.94(4.2^2 - 53.8^2)}{2} \end{aligned}$$

$$p_2 - p_1 = 3044 \text{ lbf/ft}^2 = 21.1 \text{ psi}$$

- c. The power received by the fluid is calculated with Equation 9.65b:

$$\frac{dW_a}{dt} = Q(p_{t_2} - p_{t_1}) = 0.916(5831.7)$$

$$\frac{dW_a}{dt} = 5342 \text{ ft} \cdot \text{lbf/s}$$

Converting with $1 \text{ hp} = 550 \text{ ft} \cdot \text{lbf/s}$, we get

$$\frac{dW_a}{dt} = 9.71 \text{ hp}$$

- d. This power is transferred directly to the water. For an efficiency of 89%, the input shaft power must be

$$\frac{dW_a}{dt} = \frac{dW_a/dt}{\eta} = \frac{9.71}{0.89}$$

$$\frac{dW_a}{dt} = 10.9 \text{ hp}$$

9.6 POWER-ABSORBING VERSUS POWER-PRODUCING MACHINES

In this section, we will compare fluid behavior in two machines that can be considered opposites: the axial-flow turbine and the axial-flow compressor. Figure 9.6 gives the velocity diagrams for a fluid flowing through a normal stage in a turbine. Flow enters the stage with an absolute velocity V_0 and constant axial velocity V_a . The stator blades turn the flow into the V_1 direction at an angle α_1 with respect to V_a . After passing through the rotor row, the flow is turned into the $V_2 (= V_0)$ direction at an angle α_2 .

Figure 9.18c shows the velocity diagrams for flow through a normal axial-flow compressor stage. The flow enters the stage at an absolute velocity V_1 at an angle α_1 with respect to the axial velocity V_a . The moving rows of blades turns the flow into the V_2 direction at an angle α_2 . The stator blades then redirect the flow into the V_3 direction at an angle α_3 .

Comparison of these figures shows several features of note. For the turbine, $V_1 > V_2$, whereas for the compressor, $V_2 > V_1$. In addition, the turbine has $\alpha_1 > \alpha_2$ in contrast to the compressor, where $\alpha_2 > \alpha_1$. The comparison can be continued for other corresponding velocities and angles and is summarized in Table 9.2.

It is also of interest to examine the expression for torque for axial-flow machines. Equation 9.9 is a general expression applicable to either turbines or pumps. This equation relates shaft torque to flow velocities:

$$T_s = \rho Q R (V_{t_2} - V_{t_1}) \quad (9.67)$$

From the velocity diagrams for the pump (or the turbine), we can write

$$V_{t_2} = U_t - V_{\text{rel}t_2} = U_t - V_a \tan \beta_2$$

$$V_{t_1} = V_a \tan \alpha_1$$

The tangential velocity difference in terms of blade angles thus becomes

$$V_{t_2} - V_{t_1} = U_t - V_a \tan \beta_2 - V_a \tan \alpha_1 \quad (9.68)$$

TABLE 9.2
Comparison of Corresponding Turbine
and Compressor Velocity Diagrams

	Turbine	Compressor
1.	$V_1 > V_2$ $\alpha_1 > \alpha_2$ $V_a = \text{a constant}$ $V_{t_1} > V_{t_2}$	$V_1 < V_2$ $\alpha_1 < \alpha_2$ $V_a = \text{a constant}$ $V_{t_1} < V_{t_2}$
2.	$V_{\text{rel}1} < V_{\text{rel}2}$ $B_1 < B_2$ $V_{\text{rel}1} < V_{\text{rel}2}$	$V_{\text{rel}1} > V_{\text{rel}2}$ $\beta_1 > \beta_2$ $V_{\text{rel}1} > V_{\text{rel}2}$
3.	$V_{\text{rel}1} = V_{t_1} - U_t$	$V_{\text{rel}1} = U_t - V_{t_1}$
4.	$V_{\text{rel}2} = U_t + V_{t_2}$	$V_{\text{rel}2} = U_t - V_{t_2}$

Combining with Equation 9.67 yields

$$\begin{aligned} T_s &= \rho Q R (U_t - V_a \tan \beta_2 - V_a \tan \alpha_1) \\ &= \rho Q R V_a \left[\frac{U_t}{V_a} - (\tan \beta_2 + \tan \alpha_1) \right] \end{aligned}$$

or

$$\frac{T_s}{\rho Q R V_a} = \frac{U_t}{V_a} - (\tan \beta_2 + \tan \alpha_1) \tag{9.69}$$

The angles α_1 and β_2 are determined by blade settings and are not a function of flow through the machine. Thus, the parenthetical term in the preceding equation is a constant.

Equation 9.69 can be plotted as shown in Figure 9.29. The line is slanted upward and to the right at a slope of unity. The intercept is where the shaft torque is zero. To the left of the zero shaft torque point is the region describing flows through turbines; to the right is the region describing compressors.

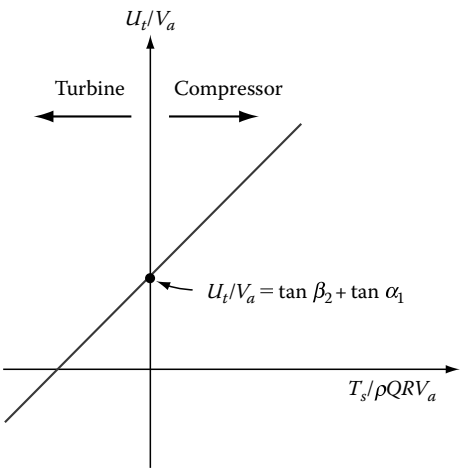


FIGURE 9.29 Dimensionless plot of shaft torque versus flow velocity.

In this section, we have qualitatively compared flow through turbines and flow through compressors. Similar comparisons for other pairs of opposite machines can be formulated.

9.7 DIMENSIONAL ANALYSIS OF TURBOMACHINERY

In the preceding sections, we derived expressions to relate power and torque to velocities through the machine, to blade angles, and to blade properties. Such equations are useful for designing the machines, but an alternative representation is required for determining the applicability of a particular machine to a specific task. The alternative is provided by methods outlined in Chapter 4 on dimensional analysis. However, it is necessary to distinguish between an incompressible flow and a compressible flow. Because our interest here is only with incompressible flows, we restrict our attention to them.

Consider an incompressible flow through a turbomachine such as a propeller turbine, Francis turbine, axial-flow pump, or centrifugal pump. For any of these machines, a dimensional analysis could be performed to express the performance parameters in terms of the geometry and the fluid properties. It is convenient to select three different dependent variables and perform a dimensional analysis three times to relate each variable to the flow quantities. The energy transfer $g\Delta Z$, the efficiency of the machine η , and the power dW/dt can all be written as functions of the flow parameters:

$$g\Delta Z = f_1(\rho, \mu, Q, \omega, D) \quad (9.70a)$$

$$\eta = f_2(\rho, \mu, Q, \omega, D) \quad (9.70b)$$

$$\frac{dW}{dt} = f_3(\rho, \mu, Q, \omega, D) \quad (9.70c)$$

We select the density ρ and viscosity μ because they are liquid properties. The volume flow rate Q affects each independent variable, as was shown earlier. Each hydraulic machine described contains a rotating component whose rotational speed ω must be considered as an independent variable. Finally, each machine has a characteristic dimension D that differentiates it from another.

It should be mentioned that flow rate Q and rotational speed ω have special significance. Let us consider them specifically in regard to pump operation. The input rotational speed to a pump can be controlled by varying the power to the motor. The output flow of the pump can be controlled by a valve in the line. Thus, the quantities Q and ω are independently operated and, as such, are referred to as control variables.

Performing a dimensional analysis yields the following:

$$\frac{g\Delta Z}{\omega^2 D^2} = f_1\left(\frac{Q}{\omega D^3}, \frac{\rho \omega D^2}{\mu}\right) \quad (9.71a)$$

$$\eta = f_2\left(\frac{Q}{\omega D^3}, \frac{\rho \omega D^2}{\mu}\right) \quad (9.71b)$$

$$\frac{(dW/dt)}{\rho \omega^3 D^5} = \tilde{P} = f_3\left(\frac{Q}{\omega D^3}, \frac{\rho \omega D^2}{\mu}\right) \quad (9.71c)$$

where: $\frac{g\Delta Z}{\omega^2 D^2}$ = energy transfer or head coefficient

$\frac{Q}{\omega D^3}$ = volumetric flow coefficient or flow coefficient

$\frac{\rho \omega D^2}{\mu}$ = rotational Reynolds number

$\frac{(dW/dt)}{\rho \omega^3 D^5} = \tilde{P}$ = power coefficient

Experiments with turbomachines have shown that the rotational Reynolds number does not affect the dependent variables as significantly as does the flow coefficient. Thus, for incompressible flow through a turbomachine, Equations 9.71 become

$$\frac{g\Delta Z}{\omega^2 D^2} = f_1 \left(\frac{Q}{\omega D^3} \right) \quad (9.72a)$$

$$\eta = f_2 \left(\frac{Q}{\omega D^3} \right) \quad (9.72b)$$

$$\tilde{P} = f_3 \left(\frac{Q}{\omega D^3} \right) \quad (9.72c)$$

9.8 PERFORMANCE CHARACTERISTICS OF CENTRIFUGAL PUMPS

Performance of pumps requires a lengthy discussion if each type is covered in great detail. Consequently, for the purpose of illustration, we will examine the specific characteristics of only centrifugal pumps and draw general conclusions regarding the performance of other machines.

The user of a centrifugal pump is concerned about how the device will operate in the intended application. Thus, standardized tests of performance have been devised that can be translated into a form suitable for making design calculations. Consider the test setup of Figure 9.30. A centrifugal pump circulates water from a sump tank, through a discharge line containing a flow meter and valve, then back to the sump. The pump impeller is rotated by an electric motor that is free to pivot (within limits) about its axis of rotation. The motor rotates the impeller within the stationary pump housing. Owing to the reaction experienced by the motor, it tends to rotate in the opposite direction but can be brought to its original position by means of hanging weights. The product of weight and arm length to axis of rotation yields the input torque to the impeller. The product of torque and rotational speed is the power input from the motor:

$$\frac{dW_s}{dt} = T_s \omega \quad (9.73)$$

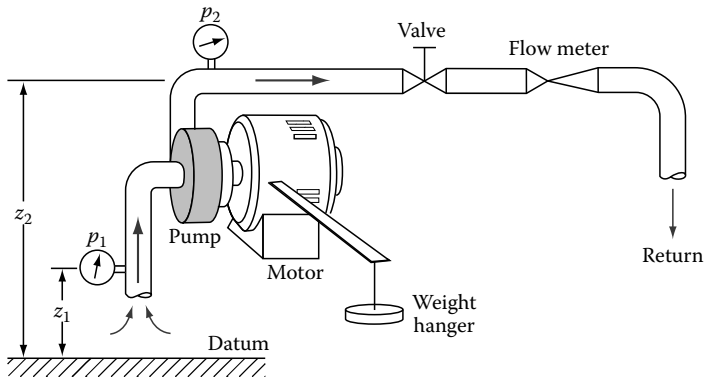


FIGURE 9.30 Schematic of a test setup for a centrifugal pump.

The flow meter provides data for calculating volume rate flow through the pump. The pressure rise across the impeller is another quantity to be measured—by pressure gauges, for example. The output power absorbed by the liquid is found with the energy equation

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 + \frac{1}{g\dot{m}} \frac{dW_a}{dt} \tag{9.74a}$$

If elevation differences are neglected ($z_1 = z_2$) and the inlet and discharge pipes are the same diameter ($V_1 = V_2$), the energy equation reduces to

$$\frac{p_1}{\rho g} + \frac{p_2}{\rho g} = \frac{1}{g\rho Q} \frac{dW_a}{dt}$$

For this special case, the power thus becomes

$$\frac{dW_a}{dt} = Q(p_1 - p_2) \tag{9.74b}$$

Data can be taken by varying the input electrical power (and hence rev/min) to the motor. Data are then collected and reduced to the form illustrated in Figure 9.31.

Figure 9.31 is referred to as a **performance map** of a centrifugal pump. Pressure head (as defined in Equation 9.70a) is on the vertical axis plotted as a function of flow rate on the

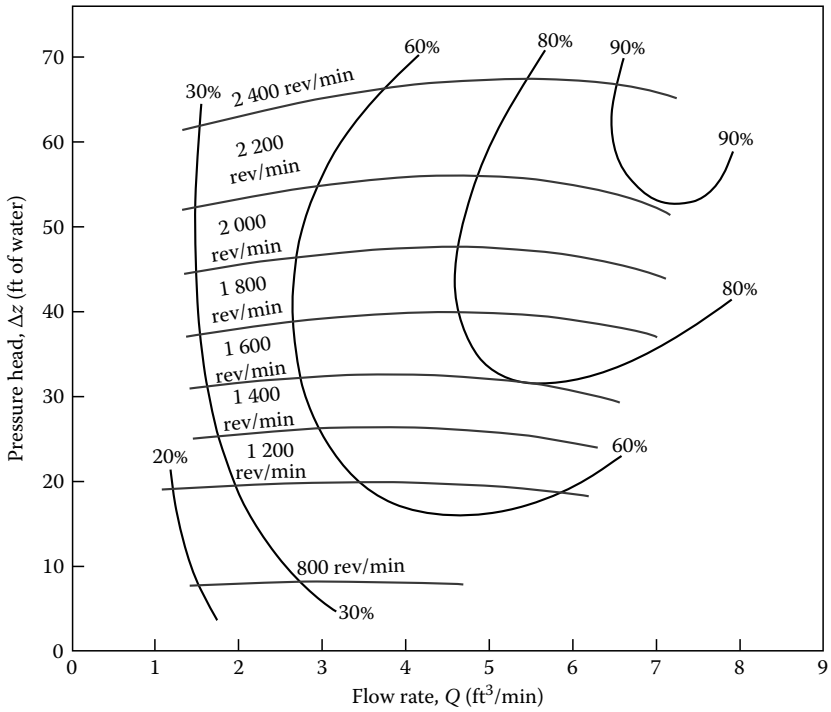


FIGURE 9.31 Centrifugal pump performance characteristics. (Data from Fluid Mechanics Laboratory, University of New Orleans, New Orleans, LA.)

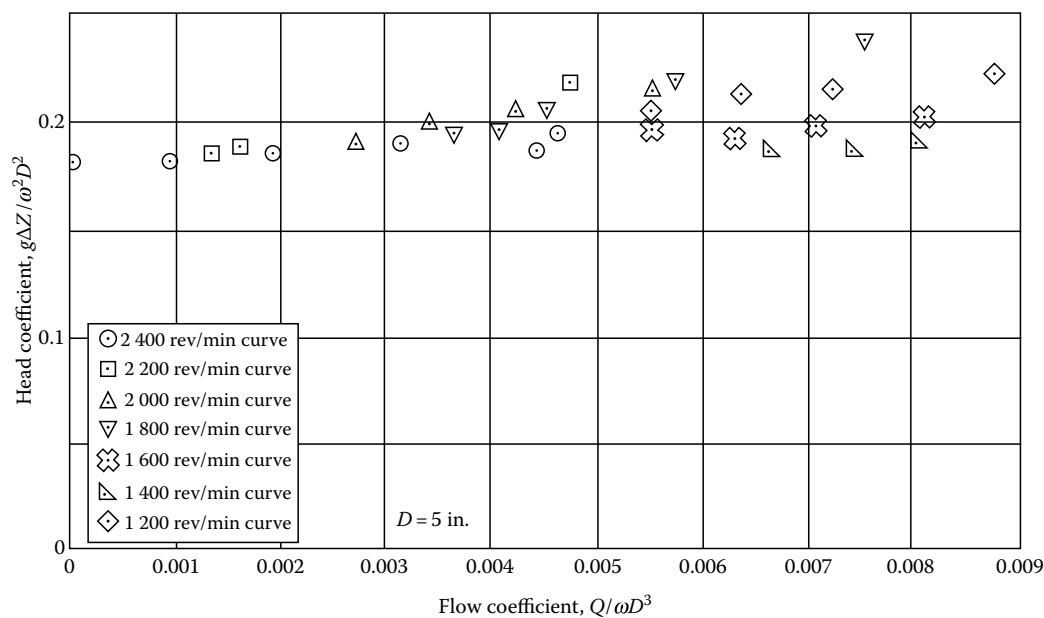


FIGURE 9.32 Dimensionless plot of the centrifugal pump data.

horizontal axis. Next, lines of constant rotational speed are graphed. For selected points on each of these lines, efficiency is then calculated with

$$\eta = \frac{dW_a/dt \text{ (from Equation 9.74a)}}{dW_s/dt \text{ (from Equation 9.73)}} \tag{9.75}$$

Points of equal efficiency are connected to obtain the isoefficiency lines that appear in the figure. The optimum operating region for the pump is in the 80% or higher efficiency portion of the graph, a cutoff point selected arbitrarily.

According to the dimensional analysis performed for incompressible flow, the data can also be reduced by plotting $g \Delta Z/\omega^2 D^2$ versus $Q/\omega D^3$. This plot is given in Figure 9.32. For low values of the flow coefficient, the data converge onto a single line. As the flow coefficient increases, the data points diverge from a linear profile (presumably owing to the Reynolds number dependence, which was assumed to be negligible).

Because the data can be represented as shown in Figure 9.32, it is apparent that the dimensionless ratios can be used to simulate the performance of geometrically and dynamically similar pumps. Hence, data obtained on one pump provide sufficient information for predicting the performance of a similar pump.

Example 9.10

The pump of Figure 9.31 delivers 6 ft³/min of water and rotates at 2000 rev/min. The impeller on the pump is 5 in. in diameter. Determine the volume flow rate delivered if a 4 in. diameter impeller is used and the rotational speed is increased to 2200 rev/min. Calculate the new pressure head.

SOLUTION

Assuming that similarity exists between the first and the modified pump, we can write

$$\left. \frac{Q}{\omega D^3} \right|_1 = \left. \frac{Q}{\omega D^3} \right|_2$$

For case 1, $Q = 6 \text{ ft}^3/\text{min}$, $D = 5 \text{ in.}$, and $\omega = 2000 \text{ rev/min}$. Thus,

$$\left. \frac{Q}{\omega D^3} \right|_1 = \frac{6/60}{2000(2\pi/60)(5/12)^3} = 0.0066$$

For case 2, $D = 4 \text{ in.}$ and $\omega = 2200 \text{ rev/min}$. So

$$\left. \frac{Q}{\omega D^3} \right|_2 \frac{Q_2}{2000(2\pi/60)(4/12)^3} = 0.0066$$

Solving, we get

$$Q_2 = 0.056 \text{ ft}^3/\text{s} = 3.38 \text{ ft}^3/\text{min}$$

From Figure 9.31 at $Q = 6 \text{ ft}^3/\text{min}$ and $\omega = 2000 \text{ rev/min}$, we find $\Delta Z = 46 \text{ ft}$ of water. The head coefficient written for both cases is

$$\left. \frac{g\Delta Z}{\omega^3 D^2} \right|_1 = \left. \frac{g\Delta Z}{\omega^3 D^2} \right|_2$$

By substitution,

$$\frac{32.2(46)}{(2000)^2(5)^2} = \frac{32.2(\Delta Z_2)}{(2200)^2(4)^2}$$

where conversion factors cancel. Solving, we get

$$\Delta Z_2 = 35.6 \text{ ft of water}$$

For centrifugal fans, axial-flow fans, and compressors, performance maps similar to that of Figure 9.31 for a pump can be developed from experimental data.

An important consideration in the design of a pump installation is the elevation of the pump itself over the level in the reservoir from which liquid is taken. The suction line contains liquid at less than atmospheric pressure. At the eye of the impeller, where the flow area is smaller, the liquid pressure is even lower. If this pressure is sufficiently low, the liquid being pumped begins to boil at the local temperature. Water, for example, boils at 92°F (33.3°C) if its pressure is 0.735 psia (5.065 kPa). This phenomenon of forming vapor bubbles through the pump is called **cavitation**. Bubbles may form near the eye of the impeller and then move outward with the surrounding liquid through the impeller vanes to a higher pressure region. The high pressure causes the bubbles to collapse, thus sending waves outward that have an erosive effect on the impeller called *cavitation erosion*. The pump's efficiency falls drastically once it starts cavitating, and subsequent failure occurs because of metal erosion and fatigue failure of seals on the shaft itself. Thus, it is important to have data on boiling or vapor pressure of various liquids as a function of temperature. These data are provided in Figure 9.33.

It is relatively simple to predict the inception of cavitation. Let the sum of pump elevation above the reservoir surface, kinetic energy head, and friction losses in the suction pipe be the total suction

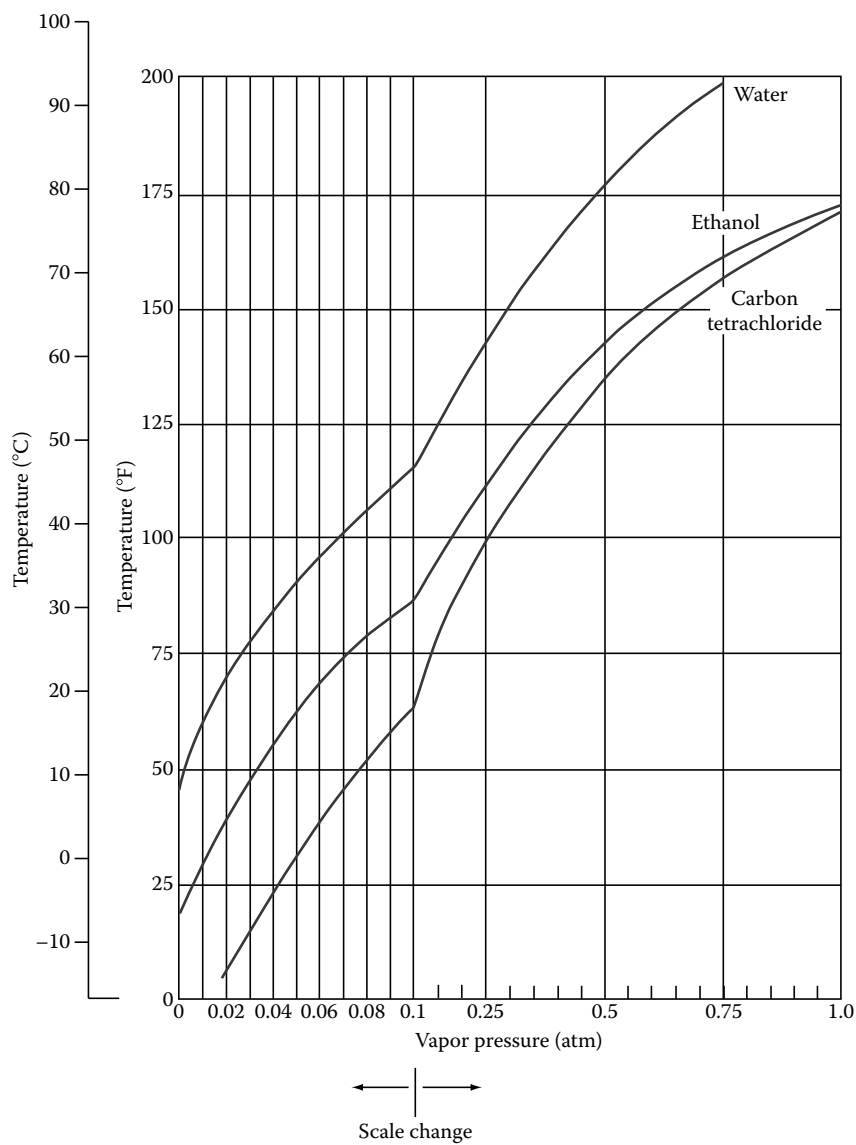


FIGURE 9.33 Vapor pressure of various liquids. (Data from Bolz, R.E. and Tuve, G.L., *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973, pp. 54–55. With permission.)

head Z_s . If Z_s is less than the difference between atmospheric pressure and the vapor pressure of the liquid, the pump will cavitate. The condition is commonly described by the **cavitation parameter**:

$$CP = \frac{(p_a/\rho g - p_v/\rho g) - Z_s}{\Delta Z} \tag{9.76}$$

where: p_a = local atmospheric pressure
 p_v = vapor pressure of the liquid
 ΔZ = total dynamic head of the pump

The numerator of this expression is called the **net positive suction head (NPSH)**. The cavitation parameter varies from 0.05 to 1.0 and is usually supplied by the pump manufacturer on the basis of tests performed on the pump itself. Alternatively, some manufacturers supply the net positive suction head required rather than a cavitation parameter. For pumps that produce high-volume flow rates at low heads, it is possible that $\text{NPSH} < 0$. This head value requires that the pump be installed below the reservoir level to eliminate cavitation.

Example 9.11

The pump represented by Figure 9.31 delivers a volume flow rate of water of $7 \text{ ft}^3/\text{min}$ at 1800 rev/min . If the cavitation parameter at that point is 0.75, determine the maximum allowable suction head of the pump. Take the water temperature to be 150°F .

SOLUTION

Equation 9.76 applies:

$$\text{CP} = \frac{[(p_a - p_v)/\rho g] - Z_s}{\Delta Z}$$

From Figure 9.31 at $Q = 7 \text{ ft}^3/\text{min}$ and $\omega = 1800 \text{ rev/min}$, we find $\Delta Z = 34 \text{ ft}$ of water. From Figure 9.33 at $T = 150^\circ\text{F}$,

$$p_v = 0.31 \text{ atm} \times \frac{14.7 \text{ psia}}{\text{atm}} = 4.56 \text{ psia}$$

By substitution into the cavitation equation, we get

$$0.75 = \frac{(14.7 - 4.56)[144/1.94(32.2)] - Z_s}{34}$$

Solving, we get

$$-Z_s = 34(0.75) - 23.4$$

$$Z_s = -2.1 \text{ ft}$$

The inlet at the eye of the impeller must therefore be 2.1 ft below the water surface.

The engineer must usually decide what type of pump is appropriate for a given application. Preliminary data such as head required and volume flow rate are usually all that is known. A dimensionless number referred to as the **specific speed** can be used as an aid in the decision-making process. This ratio is developed from the ratios in Equation 9.72 such that the characteristic diameter D is eliminated. Specific speed (also called shape number) ensures that a machine operating in its high-efficiency range is selected. The specific speed ω_{ss} is found by combining head coefficient and flow coefficient to eliminate D :

$$\omega_{\text{ss}} = \left(\frac{\omega^2 D^2}{g \Delta Z} \right)^{3/4} \left(\frac{Q}{\omega D^3} \right)^{1/2} = \frac{\omega Q^{1/2}}{(g \Delta Z)^{3/4}} \quad (9.77a)$$

It is possible to select exponents other than $\frac{3}{4}$ and $\frac{1}{2}$, but these are customarily chosen for pumps. An alternative expression that is used more widely in industry is of the same form but is not dimensionally consistent. Specifically,

$$\omega_s = \frac{\omega Q^{1/2}}{\Delta Z^{3/4}} \quad (9.77b)$$

where ω is rotational speed in rev/min, Q is volume flow rate in gal/min, and ΔZ is in feet of liquid. The specific speed found with Equation 9.77b is different by orders of magnitude from that calculated with 9.77a; ω_s is assigned the unit of rev/min.

Pumps with identical proportions but of different size have the same specific speed. The specific speed for pumps (ω_s) can vary from 500 to 2000 rev/min for low-flow–high-pressure machines. Specific speed varies from 5000 to 15,000 rev/min for high-flow–low-pressure pumps. To attach further significance to this ratio, it is assigned a value only at the point of maximum efficiency for the pump. For the performance map of Figure 9.31, the point of maximum efficiency is at approximately

$$Q = 7.25 \text{ ft}^3/\text{min} = 0.121 \text{ ft}^3/\text{s} = 54.2 \text{ gal/min}$$

$$\Delta Z = 65 \text{ ft}$$

$$\omega = 2400 \text{ rev/min} = 251.3 \text{ rad/s}$$

Equation 9.77a gives

$$\begin{aligned} \omega_{ss} &= \frac{\omega Q^{1/2}}{(g\Delta Z)^{3/4}} = \frac{(251.3)(0.121)^{1/2}}{[(32.2)(65)]^{3/4}} \\ &= 0.282 \end{aligned}$$

Equation 9.77b gives

$$\begin{aligned} \omega_s &= \frac{\omega Q^{1/2}}{\Delta Z^{3/4}} = \frac{2400(54.2)^{1/2}}{65^{3/4}} \\ &= 772 \text{ rev/min} \end{aligned}$$

On the basis of tests performed with all types of pumps, the results of Figure 9.34 have been developed. This figure is a plot of efficiency versus specific speed over a range $500 > \omega_s > 15,000$ rev/min. The graph relates specific speed to impeller shape and discharge, simultaneously predicting pump efficiency.

Example 9.12

Determine the type of pump suited for moving 2000 gal/min ($= 4.456 \text{ ft}^3/\text{s}$) of water while overcoming a 6-ft head. The available engine for the pump rotates at 800 rev/min. Calculate the power required.

SOLUTION

Figure 9.34 is used with Equation 9.77b:

$$\omega_s = \frac{\omega Q^{1/2}}{\Delta Z^{3/4}}$$

By substitution, we get

$$\omega_s = \frac{800(2000)^{1/2}}{6^{3/4}} = 9332 \text{ rev/min}$$

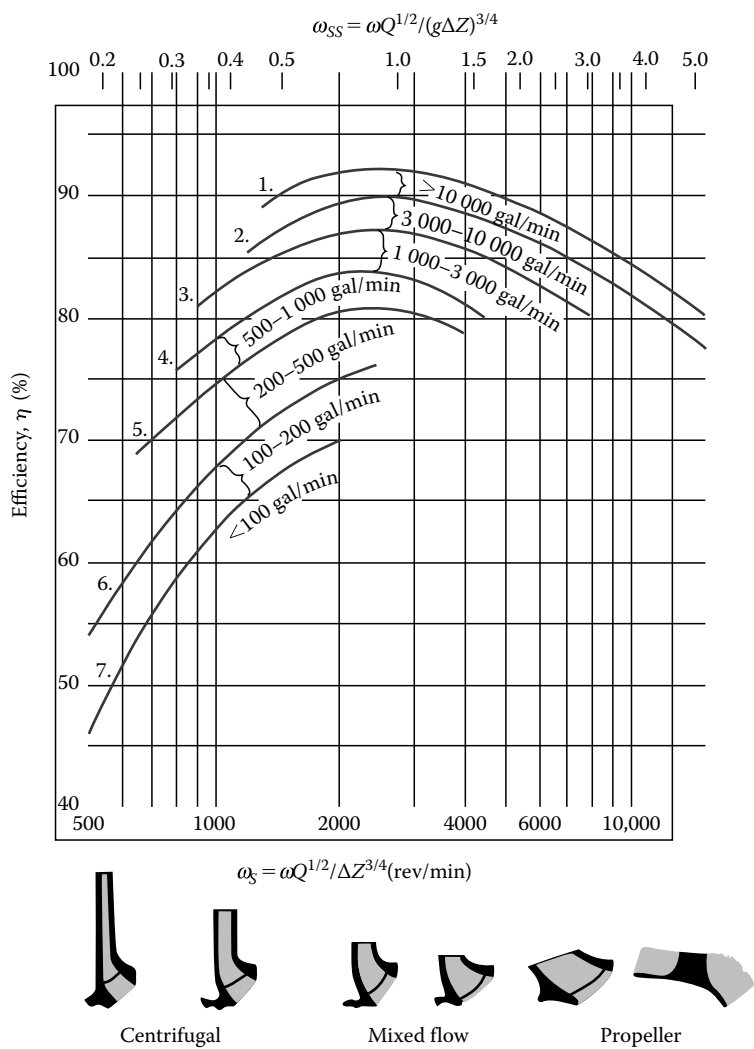


FIGURE 9.34 Relation of specific speed to impeller shape and pump efficiency. (Courtesy of Worthington Group, McGraw-Edison Company. With permission.)

At this specific speed, Figure 9.34 indicates that a propeller or axial-flow pump is a suitable choice. The efficiency is about 75%. The power required is

$$\begin{aligned} \frac{dW_a}{dt} &= \rho g Q \Delta Z = 1.94(32.2)(4.456)(6) \\ &= 1668 \text{ ft} \cdot \text{lbf/s} \end{aligned}$$

This is the power that must be delivered to the water. The power required at the shaft is

$$\frac{dW_s}{dt} = \frac{dW_a/dt}{\eta} = \frac{1668}{0.75}$$

$$\frac{dW_s}{dt} = 2224 \text{ ft} \cdot \text{lbf/s}$$

With $550 \text{ ft} \cdot \text{lbf/s} = 1 \text{ hp}$,

$$\frac{dW_s}{dt} = 4.04 \text{ hp}$$

9.9 PERFORMANCE CHARACTERISTICS OF HYDRAULIC TURBINES

Turbines, both hydraulic and compressible flow types, can be analyzed in much the same way as pumps (described in the last section). A test setup can be devised and a performance map generated. In addition, dimensionless ratios can be used as illustrated in Example 9.10 to relate performance characteristics of similar devices. One significant difference, however, is in how specific speed is defined for a turbine. In this case, the power specific speed ω_{PS} is more useful. It is obtained customarily by appropriately combining Equations 9.72a and 9.72c:

$$\begin{aligned}\omega_{PS} &= \frac{\tilde{p}^{1/2}}{\left(\frac{g\Delta Z}{\omega^2 D^2}\right)^{5/4}} = \left[\frac{(dW/dt)}{\rho \omega^3 D^5}\right]^{1/2} \left(\frac{\omega^2 D^2}{g\Delta Z}\right)^{5/4} \\ &= \frac{\omega(dW/dt)^{1/2}}{\rho^{1/2}(g\Delta Z)^{5/4}}\end{aligned}\quad (9.78a)$$

To attach further significance to this parameter, it is assigned a value only at the point of maximum efficiency of the machine. Moreover, it is common practice to modify this equation slightly to obtain an alternative expression for power specific speed:

$$\omega_P = \frac{\omega(dW/dt)^{1/2}}{\Delta Z^{5/4}}\quad (9.78b)$$

where: ω_P = power specific speed of the hydraulic turbine in rev/min

ω = actual rotational speed in rev/min

dW/dt = power in terms of hp

ΔZ = head difference in ft of liquid

Equation 9.78b is not dimensionally consistent.

Figure 9.35 is a graph of efficiency versus power specific speed ω_P for two hydraulic turbines. Because specific speed has significance only at the point of maximum efficiency, Figure 9.35 can be used to obtain information on which turbine is best for a given application.

Example 9.13

A turbine is to be installed in a dam where the available head varies over the course of a year; the average is 130 ft of water. The volume flow rate through the channel upstream is $1200 \text{ ft}^3/\text{s}$. Determine the type of turbine most appropriate, assuming a rotational speed of 150 rev/min.

SOLUTION

The power is found with Equation 9.74:

$$\frac{dW_a}{dt} = \rho g Q \Delta Z = 1.94(32.2)(1200)(130) = 9,734,400 \text{ ft} \cdot \text{lbf/s}$$

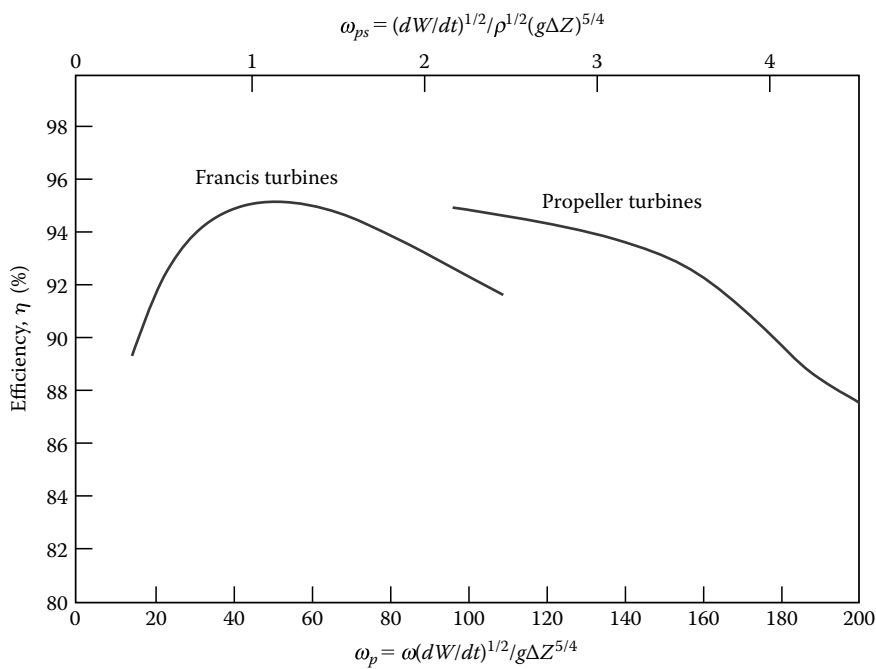


FIGURE 9.35 Hydraulic turbine efficiency ranges. (From Daugherty, R.L. and Franzini, J.B., *Fluid Mechanics with Engineering Applications*, 8th ed., McGraw-Hill Book Co., New York, 1977. With permission.)

The power specific speed is found with Equation 9.78b:

$$\omega_p = \frac{\omega(dW_a/dt)^{1/2}}{\Delta Z^{5/4}} = \frac{150(9,734,400/550)^{1/2}}{(130)^{5/4}} = 45.46 \text{ rev/min}$$

According to Figure 9.35, a Francis turbine would be most appropriate for the application.

9.10 SUMMARY

In this chapter, we developed equations that are applicable to turbomachines. The angular momentum equation was derived and used to analyze a water sprinkler. Next we wrote general equations of turbomachinery that apply to the turbines, fans, and the like.

Equations for common types of turbines were also presented. Axial-flow turbines, radial-flow turbines, axial-flow compressors, fans, axial-flow pumps, centrifugal compressors, and centrifugal pumps were all discussed. It is unfortunate that in turbomachinery the material presentation seems to consist of a barrage of equations. The reader is reminded that the objective is to develop equations that relate the shaft torque or work to the change in fluid properties. This theme underlies the derivations. Thus, the equations are meant to lead to an understanding of the concepts behind the design and analysis of turbomachines.

We concluded the study of turbomachinery with a brief overview of performance characteristics of selected turbomachines. Centrifugal pump characteristics were presented in some detail because these machines are very common. Characteristics of other types of machines are usually supplied by manufacturers. Finally, we formulated a dimensional analysis for the incompressible case. The results are useful for modeling purposes.

PROBLEMS

General Equations

- 9.1** Rework Example 9.1 for a sprinkler with three discharge nozzles.
- 9.2** In a typical two-nozzle lawn sprinkler (as described in Example 9.1), the radius $R = 6$ in. and the volume flow rate through the sprinkler is $1 \text{ ft}^3/\text{min}$. For a rotational speed of 2 rev/s , determine the shaft torque exerted on the bearings. Take the nozzle angle setting to be 30° with respect to the radial direction; take the exit diameter to be 0.3 in. Calculate also the rate of shaft work being done.

Axial-Flow Machines

- 9.3** A single-stage axial-flow turbine uses compressed air as the working fluid. The inlet pressure and temperature are $2\,000 \text{ kPa}$ and 25°C . The absolute velocity of the flow leaving the stator (pitch line is at a radius of 1.8 m) is 7.0 m/s . The angle between this velocity and the axial direction is 30° . The volume flow rate is $18 \text{ m}^3/\text{s}$, and the rotor rotates at 360 rev/min . Determine the torque exerted on the rotor and the average axial velocity. Assume that the flow leaves the rotor in the purely axial direction.
- 9.4** Show the equivalence for reaction ratio of the two equations labeled 9.30.
- 9.5** Sketch the velocity diagram for the case in which the reaction ratio for an axial-flow turbine is 1.0 . Determine which blade angles are equal.
- 9.6** Measurements on the first stage of a multistage gas turbine indicate that pressure and temperature at stage entry are $1\,000 \text{ kPa}$ and 400 K . At stage exit, the pressure is 960 kPa . The rotational speed is 360 rev/min , and the corresponding shaft torque is $825 \text{ N} \cdot \text{m}$. The rotor diameter is 1 m , and the blade height is 8 cm . The mean pitch line is at two-thirds the blade height as measured from the rotor. The mass flow of gas is 25 kg/s , and the gas constant is $300 \text{ J}/(\text{kg} \cdot \text{K})$. Assume ideal gas behavior and assume that the stage is normal. The inlet flow angle between absolute and axial velocities is 40° . Determine the velocity diagrams, the stage efficiency, and the reaction ratio.
- 9.7** A single-stage gas turbine operates at inlet conditions of 50 psia and 600°R . The mass flow through the stage is 0.776 slug/s , while the rotor blade speed is 490 ft/s . The axial-flow velocity at rotor exit is 250 ft/s . The gas constant is $1610 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot ^\circ\text{R})$. The angle between the absolute inlet flow velocity and the axial direction is 15° . The shaft power is 400 hp . If the stage is normal, determine all other blade angles and draw the velocity diagrams. Calculate the reaction ratio.
- 9.8** Show that the reaction ratio for a normal stage can be written as

$$RR = \frac{1}{2U_t} \left(\frac{2\dot{m}}{\rho A} \tan \alpha_0 + 2U_t - \frac{T_s \omega}{\dot{m} U_t} \right)$$

- 9.9** Rework the calculations of Example 9.3 for turbine blade radii of $0.2, 0.3, 0.4, 0.5, 0.6$, and 0.7 m .
- 9.10** An axial-flow propeller turbine while in operation has guide vanes set at an angle of 35° with respect to the radial direction. The inner radius of the vanes is 15 ft ; the vane height is 3 ft . The absolute inlet velocity at the vanes is 12 ft/s . The turbine blades have a tip radius of 13 ft and a hub radius of 3 ft . The rotor speed is 72 rev/min . Determine the blade angles for the leading edge of the blade at the hub and at the tip.
- 9.11** The inner radius of the guide vanes of a propeller turbine is 2.2 m , and the gate height is 0.8 m . The turbine itself is designed to produce power at a flow rate of $180 \text{ m}^3/\text{s}$ and a rotational speed of 270 rev/min . The tip radius of the blades is 2 m ; the inlet tangential fluid velocity at the tip is 14 m/s . Calculate the power output of the turbine. Determine the angle that the guide vanes make with the radial direction. Assume that the tangential velocity leaving the turbine blades at the tip is zero.

- 9.12** Examples 9.4 and 9.5 deal with a two-bladed windmill. If the number of blades is changed to three and all other conditions remain the same, determine the characteristics of the required airfoil.
- 9.13** Calculate the maximum power that can be developed by a windmill in a 60 km/h wind. Assume a disk radius of 25 m and ambient conditions of 110 kPa and 25°C.
- 9.14** A 90 ft diameter windmill operates in a wind of 60 mi/h. Assuming ideal conditions and that the windmill efficiency is 48%, determine (a) the velocity through the disk, (b) the thrust on the windmill, and (c) the pressure drop across the disk.
- 9.15** A single-stage axial-flow air turbine has blade angles of 50° (α_1) and 55° (β_2). The airflow through the turbine is 4 kg/s. The reaction ratio is 0.65. The inside casing diameter is 0.8 m, and the blade height is 4 cm. The mean pitch line is at three-fourths of the blade height measured from the rotor. The inlet pressure is 650 kPa, and the rotational speed is 120 rev/min. Determine the inlet air temperature, the power, the shaft torque, and the pressure drop across the stage.
- 9.16** Consider one stage of a three-stage gas turbine. At stage entry, the pressure is 500 kPa, and the temperature is 600 K. The pressure drop across the stage is 1 kPa. Rotational speed of the rotor is 180 rev/min, at which the shaft torque is measured to be 520 N · m. Each stage contributes equally to the shaft torque. The rotor diameter is 1 m, and the blade height is 7 cm. Assume that the mean pitch line is located at the midpoint of the blades. The mass flow of gas is 10 kg/s, and its molecular mass is 40 kg/mol. The specific heats are the same as those for oxygen. Each stage is normal, and the inlet flow angle between the absolute velocity and the axial velocity is 40° . Determine the efficiency of the turbine, the reaction ratio, and the blade angles α_1 and β_2 .
- 9.17** An axial-flow propeller turbine installation produces 15,500 hp under a water head of 37 ft, with a rotational speed of 106 rev/min. The turbine blades have a tip radius of 8 ft and a hub radius of 2 ft. The guide vanes are 9 ft high and have an inner radius of 8.2 ft. The vanes are set at an angle of 35° with respect to the radial direction. Determine angles at the leading edge of the turbine blades for the tip and for the hub. Determine the shaft torque.
- 9.18** An axial-flow propeller turbine installation has a runner that rotates at 94.7 rev/min. The outer radius at the runner tip is 3.048 m; the hub radius is 0.762 m. The water head available is 24.7 m, and the shaft torque is 5.376×10^6 N · m. The guide vanes are 2.6 m tall and have an inner radius of 3.1 m. Determine the angle at the leading edge of the turbine blades for the tip if the angle at the leading edge for the hub is 130° . Determine the angle setting of the guide vanes with respect to the radial direction, the volume flow rate through the system, and the power output of the installation.
- 9.19** A two-bladed windmill, diameter 12 ft, in an airstream of velocity 30 mi/h, delivers 12.8 kW to the shaft. The air temperature is 72°F, and pressure is 14.7 psia. Downstream of uniform flow velocity is 25 mi/h. Calculate thrust and efficiency. If the rotational speed is 500 rev/min and the blade angle (β) is 50° , sketch the velocity diagram. Take the chord length to be 6 in. Determine aerodynamic properties of the blades. Use the midpoint of each blade for the calculations.
- 9.20** A Clark Y airfoil has a lift coefficient of 1.2 and a drag coefficient of 0.1 at an angle of attack of 10.8° . If it is used as a windmill propeller, determine the rotational speed of the blade in a wind of 30 mi/h assumed to be at the disk. The chord length is 10 in., and the blade length is 15 ft (tip to tip). The blade is set at an angle of 61.6° ($=\beta + \delta$) from the axial direction. Calculate also the pressure drop across the blades. Perform all calculations at the blade midpoint for $N=2$ and for a shaft power of 6918 ft · lbf/s.
- 9.21** An axial-flow propeller turbine installation has a turbine runner with a tip radius of 3.71 m and a hub radius of 1.62 m. The rotational speed is 85.7 rev/min under a water head of 13.11 m. The guide vanes are 2.75 m tall, and the radius to the guide vanes is 3.8 m. The vanes are set at an angle of 50° with respect to the radial direction. Determine the angles at the leading edge of the blades for radial locations of 2, 2.5, 3.0, and 3.5 m as well as at the hub and at the tip. If at each of these locations the tangential water velocity leaving the blades is zero, calculate the shaft power at each radial distance. (These should all be approximately equal.)

- 9.22** If the tangential velocity leaving the runner of an axial-flow turbine installation is zero, the shaft power equation becomes

$$\frac{dW_s}{dt} = \rho Q U_t V_{t1}$$

where subscript 1 denotes an inlet condition, and the product of the tangential velocities can be taken at any radial location on a turbine blade. By substitution, show that this equation can be rewritten as

$$\frac{dW_s}{dt} = 4\pi\rho R_g^2 b \omega \Delta z g \cos \alpha \sin \alpha$$

- 9.23** An axial-flow propeller turbine installation has a runner with a tip radius of 3.57 m and a hub radius of 1.52 m. The water head is 24.38 m. The guide vanes are 2.6 m high, and the radius to the guide vanes is 3.7 m. The blade angles at the leading edge of the turbine runner at the hub is 130° , which is fixed. Determine and graph the variation of rotational speed and flow rate with the angle at which the guide vanes are set. Determine also the power output variation, assuming that the outlet tangential fluid velocity at the hub of the turbine blades is zero.
- 9.24** In an axial-flow turbine installation, the tip radius of the turbine runner is 9.82 ft, and the hub radius is 3.77 ft. The water head is 45 ft. The guide vanes are located at a radius of 10 ft from the axis of rotation. The vanes themselves are 4.5 ft tall and set at an angle of 35° with respect to the radial direction. Determine the blade angle at the leading edge of the turbine blade tip if the power output is 136,000 hp. Take the outlet tangential fluid velocity at the tip to be zero. Determine also the rotational speed.
- 9.25** An axial-flow pump rotates at 450 rev/min and conveys $30 \text{ ft}^3/\text{s}$ of glycerine. The hub radius is 10 in., and the casing radius is 27 in. The absolute flow velocity leaving the rotor blades is 6 ft/s. Using the blade element procedure, determine the torque and power.
- 9.26** The three-speed fan of Example 9.7 is turned down at 1800 rev/min. If the flow angles are the same, determine the pressure rise across the fan at the hub. Calculate the power drawn, assuming the pressure rise at the hub is constant over the cross section.
- 9.27** An axial-flow water pump has a rotor with blade angles that are invariant with radial distance. The rotor blade angles are $\beta_1 = 60^\circ$ and $\beta_2 = 45^\circ$. An outlet vane downstream removes the tangential fluid velocity component. For an inflow velocity of 12 ft/s, determine the change in pressure across the pump and the angle between the axial direction and the absolute fluid velocity leaving the rotor.
- 9.28** An axial-flow fan has 12 blades and is in a circular housing with an inside diameter of 2 m. The hub diameter is 1.6 m. Each blade is straight, and all are identical with a chord length of 10 cm and a mean pitch diameter of 1.8 m. All blades are set at an angle of 62° with respect to the axial direction. The inflow is purely axial with static properties of 101.3 kPa and 20°C . The pressure rise across the blades is 0.3 m of water when the rotor speed is 1800 rev/min. Determine the aerodynamic properties of the blades and the power.

Radial-Flow Machines

- 9.29** A Francis turbine is used in an installation for the generation of electricity. The volume flow rate through the turbine is $45 \text{ m}^3/\text{s}$. The absolute water velocity leaving the gates makes an angle of 60° with the radial direction. The radius of the turbine rotor is 6 m, and the inlet gate height is 0.3 m. The absolute exit velocity is in the radial direction. The turbine efficiency is 94%. Calculate the required water head, the torque, and the power exerted by the water. Take the rotational speed to be 180 rev/min.

- 9.30** A Francis hydraulic turbine runs at a speed of 180 rev/min and has an efficiency of 90%. The absolute velocity leaving the gates makes an angle of 80° with the radial direction. The radius of the turbine rotor is 12 ft, and the inlet gate height is 1 ft. Calculate the volume flow rate through the turbine if the head under which it acts is 120 ft.
- 9.31** Derive Equation 9.25*b* in detail.
- 9.32** A Francis turbine is used in an installation to generate power. The power output is 115,000 hp under a head of 480 ft. The outer radius of the rotor blades is 6.75 ft; the inner radius is 5.75 ft. The rotational speed is 180 rev/min and the blade height is 1.5 ft. The turbine efficiency is 95%. The absolute velocity leaving the rotor is in the radial direction. Determine the angle the absolute velocity entering the rotor makes with the radial direction. Sketch the velocity diagram at the rotor inlet. The fluid medium is water.
- 9.33** A Francis turbine installation produces 111 MW. The blade height is 0.732 m; the outer radius at the inlet to the runner is 5.52 m. The rotational speed is 167 rev/min. The flow leaving the runner is purely radial. Determine the volume flow rate through the installation if the angle between the radial direction and the direction of the absolute velocity entering the rotor is 30° . Also find the water head to the gates.
- 9.34** A Francis turbine installation produces 172,000 hp under a water head of 162 ft from the reservoir surface to the tailwater. The blade height is 10 ft. The radius to the rotor blade at inlet is 18 ft. The rotational speed is 105.9 rev/min. For a volume flow through the installation of $9,851 \text{ ft}^3/\text{s}$, determine the angle between the absolute inlet velocity to the rotor and the axial direction. Determine also the angle between the inlet relative velocity to the rotor and the axial direction, and calculate the efficiency. Assume that the absolute exit velocity is in the radial direction.
- 9.35** The impeller of a centrifugal water pump rotates at 1 260 rev/min and has 2 cm high vanes. The inlet eye radius is 3 cm, and the outside radius is 7 cm. The vane angles are $\beta_1 = 60^\circ$ and $\beta_2 = 80^\circ$. Assuming radial inflow to the impeller vanes, determine the volume flow rate and the pumping power. Calculate also the stagnation pressure rise across the impeller.
- 9.36** The input power to a centrifugal water pump is 200 hp and the shaft torque is 1150 ft · lbf. The impeller has an outside diameter of 24 in. and a diameter at the eye of 5 in. Measurements on the impeller indicate that $\beta_1 = 65^\circ$ and $\beta_2 = 83^\circ$. For a blade height of 2 in., determine the volume flow rate through the pump, the expected static pressure rise, and the rotational speed.

Performance Analysis and Comparisons

- 9.37** Compare velocity diagrams for the axial-flow propeller turbine and the axial-flow pump. Prepare a summary similar to Table 9.2 and a plot like that in Figure 9.29.
- 9.38** Repeat Problem 9.37 for Francis turbines versus centrifugal-flow pumps.
- 9.39** Derive Equation 9.71*a*.
- 9.40** Derive Equation 9.71*b*.
- 9.41** Derive Equation 9.71*c*.
- 9.42** Verify that the head coefficient, the volumetric flow coefficient, the rotational Reynolds number, and the power coefficient are all dimensionless.
- 9.43** The inlet of a centrifugal pump is 8-nominal schedule 40 pipe. The discharge is 6-nominal schedule 40 pipe. The pressure gauge on the outlet reads 250 kPa, and the gauge at the inlet reads 30 kPa. If the volume flow rate of water through the pump is $0.1 \text{ m}^3/\text{s}$ and the efficiency is 85%, determine the power. Neglect elevation differences and derive an expression by applying the energy equation from inlet to outlet.
- 9.44** The inlet and discharge of a centrifugal pump are $1\frac{1}{2}$ -nominal and 1-nominal schedule 40 pipe, respectively. The pressure increase from inlet to outlet is 20 ft of water. The motor input

is $\frac{1}{2}$ hp, and the efficiency is 72%. Determine the volume flow rate through the pump. Neglect elevation differences.

- 9.45** A centrifugal water pump under test discharges $0.015 \text{ m}^3/\text{s}$ against a head of 18 m when the rotational speed is 1800 rev/min. The impeller diameter is 32 cm, and the power input is 4.5 kW. A geometrically and dynamically similar turpentine pump has an impeller diameter of 38 cm and will run at 2200 rev/min. Assuming equal efficiencies between the two pumps, determine the head developed, the volume flow rate, and the power required for the second pump.
- 9.46** A large pump is to be used in a glycerine-bottling plant. The glycerine pump is to be driven by a 10 hp motor at 800 rev/min. The system is modeled with a small $\frac{1}{4}$ hp motor–pump combination that runs at 1800 rev/min and pumps water. What should be the ratio of glycerine impeller diameter to water impeller diameter?

Cavitation and Specific Speed

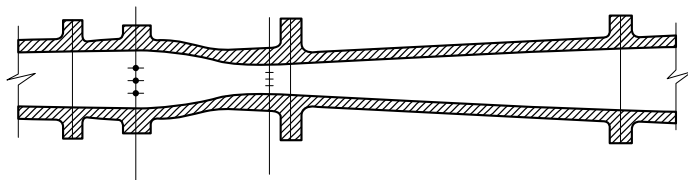
- 9.47** In a liquor-bottling plant, a centrifugal pump discharges $0.02 \text{ m}^3/\text{s}$ against a head of 28 m. The cavitation parameter for the pump is 0.5. Where should the pump inlet location be with respect to the surface of the ethanol? Take the ethanol temperature to be 10°C .
- 9.48** How do the results of Example 9.11 change if the liquid is carbon tetrachloride?
- 9.49** The inlet of a pump is level with the surface of a water reservoir. The pump draws 70°F water at a rate of 200 gal/min and delivers it against a head of 60 ft. If the cavitation parameter is 0.5, is the pump expected to cavitate?
- 9.50** Verify that Equation 9.77a is dimensionless.
- 9.51** What are the actual units of Equation 9.77b?
- 9.52** What type of pump is most suitable for moving 100 gal/min of water against a 20 ft head when the rotational speed is 2400 rev/min? Determine the input power required.
- 9.53** What type of pump is best suited for pumping $1 \text{ m}^3/\text{s}$ of water against a head of 12 m while rotating at 100 rev/min? Calculate the power required.

Performance of Hydraulic Turbines

- 9.54** What type of pump is most appropriate for pumping $6 \text{ ft}^3/\text{s}$ of water against a head of 15 ft while rotating at 600 rev/min? What is the required power?
- 9.55** Verify that Equation 9.78a is dimensionless.
- 9.56** What are the actual dimensions of Equation 9.78b?
- 9.57** A water turbine is to operate under a head of 100 m of water with a flow rate of $400 \text{ m}^3/\text{s}$. If the rotational speed is 120 rev/min, determine the most suitable type of turbine and the power output.
- 9.58** A turbine operates under a head of 36 ft at a location where the volume flow rate is $110 \text{ ft}^3/\text{s}$. A Francis turbine is installed. For efficiency greater than 94%, determine the allowable limits on rotational speed.
- 9.59** An axial-flow propeller turbine has the following characteristics: power output = 15,500 hp, water head = 37 ft, and rotational speed = 106 rev/min. Estimate the efficiency of the installation. While keeping other conditions the same, what should the rotational speed be changed to in order to obtain 95% efficiency?
- 9.60** An axial-flow propeller turbine has the following data: $\omega = 94.7 \text{ rev/min}$, $\Delta Z = 24.7 \text{ m}$, and $T_s = 5.376 \times 10^6 \text{ N} \cdot \text{m}$. Estimate the efficiency of the installation.
- 9.61** A Francis turbine has the following data: $\omega = 180 \text{ rev/min}$, $\Delta Z = 480 \text{ ft}$, and $\eta = 95\%$. Estimate the power output of the installation.
- 9.62** An axial-flow turbine installation produces 136,000 hp under a water head of 45 ft. For an efficiency of 90%, determine the required rotational speed.

- 9.63** A Francis turbine installation produces 111 MW at a runner rotational speed of 167 rev/min. The water head to the gates is calculated to be 53.3 m. Determine what the water head should be from headwater to tailwater under maximum efficiency conditions.
- 9.64** A Francis turbine installation produces 172,000 hp under a total head of 162 ft. The rotational speed of the runner is 105.9 rev/min. Estimate the efficiency of the installation. (*Note:* The data of this problem are from Problem 9.34; the efficiency calculated in that problem, for purposes of comparison, is 95%.)

10 Measurements in Fluid Mechanics



Fluid measurements—including the measurement of viscosity, pressure, velocity, and flow rate—are the subject of this chapter. Viscosity is a property related to how a fluid reacts under the action of an applied shear; two methods for measuring viscosity are presented. Pressure, as we will see, is measured with a pitot and pitot-static tube. Velocity of the flow can be determined by using a pitot-static tube. Flow rate in closed conduits can be measured with meters; for open-channel flow, weirs can be used.

Although it is not discussed in detail here, the accuracy of measurement is critical in fluid mechanics. Consider, for example, a soft drink-bottling company. One such operation might bottle 100,000 gal of liquid (approximately 800,000 16-oz bottles) per year. Say the company uses a meter in the main supply line that is usually accurate to within 2%. In that case, as much as 2000 gal of liquid a year may be sold without being paid for or paid for but never sold. Now multiply this amount by the number of soft drink- and liquor-bottling companies that use conventional in-line instrumentation. If we also include oil companies, gas stations, residential and industrial water meters, and so forth, we can conclude that a significant amount of liquid may go unaccounted for each day. Accuracy of instrumentation in fluid mechanics is indeed important.

10.1 MEASUREMENT OF VISCOSITY

Several devices are commercially available for measuring the viscosity of a fluid. These devices are commonly called **viscometers** or **viscosimeters**. Such meters contain the fluid and cause it to undergo a laminar motion by the imposition of a pressure drop or by the motion of a component. The laminar motion generated can usually be described by an analytic solution with which viscosity can be calculated.

The **rotating-cup viscometer**, a device used to measure viscosity, consists of two concentric cylinders. Liquid is placed in the annulus between the cylinders, and viscosity can be calculated with descriptive equations. A rotating-cup viscometer is illustrated in Figure 10.1. The outer cylinder or cup rotates at a constant rotational speed that is carefully controlled. The inner cylinder is held stationary. Torque is transmitted from the outer cylinder through the liquid to the inner cylinder. The torque required to hold this cylinder stationary is then measured. This measurement could be done by attaching a torsion wire to the inner cylinder and determining its deflection. The viscosity of the liquid is related to the torque exerted on the inner cylinder by Newton's law of viscosity:

$$\tau = \mu \frac{dV}{dr} = \mu \frac{V_\theta}{R_2 - R_1}$$

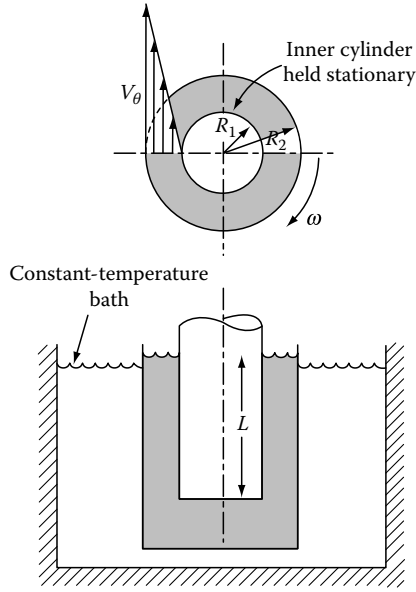


FIGURE 10.1 A rotating-cup viscometer.

With $V_\theta = R_2\omega$, we have

$$\tau = \mu \frac{R_2\omega}{R_2 - R_1}$$

The measured torque on the inner cylinder is related to the shear stress as:

$$T_s = F_s \cdot R_1 = \tau(2\pi R_1 L)R_1$$

or

$$\tau = \frac{T_s}{2\pi R_1^2 L}$$

By substitution,

$$\frac{T_s}{2\pi R_1^2 L} = \mu \frac{R_2\omega}{R_2 - R_1}$$

Solving, we get

$$\mu = \frac{T_s(R_2 - R_1)}{2\pi R_1^2 R_2 L \omega} \quad (10.1)$$

A second type of viscosity-measuring device is the **falling-sphere viscometer**. In this case, a sphere of known dimensions is dropped into a liquid medium. By determining the time required for the sphere to fall through a certain interval, its terminal velocity can be calculated. The concept is illustrated in Figure 10.2 along with a free-body diagram for a sphere falling at terminal velocity. The forces acting are weight W , buoyancy B , and drag D_f :

$$W = \rho_s g \frac{\pi D^3}{6} \quad (10.2a)$$

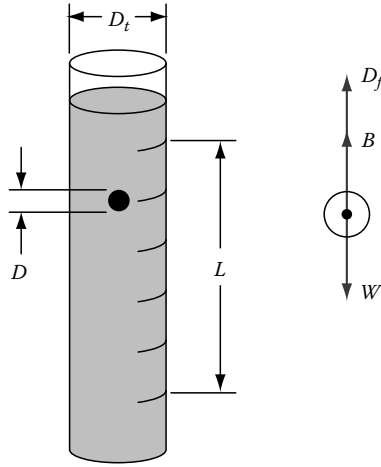


FIGURE 10.2 Falling-sphere viscometer and free-body diagram for the sphere.

$$B = \rho g \frac{\pi D^3}{6} \quad (10.2b)$$

$$D_f = C_D \frac{\rho V^2}{2} \frac{\pi D^2}{4} \quad (10.2c)$$

where: ρ_s = sphere density

D = sphere diameter

ρ = liquid density

$V (= L/t)$ is the terminal velocity of the sphere falling through the liquid

C_D = drag coefficient determined from Figure 6.15 for flow past a sphere

Applying Newton's second law for a nonaccelerating sphere, we get

$$\sum F = \rho_s g \frac{\pi D^3}{6} - \rho g \frac{\pi D^3}{6} - C_D \frac{\rho V^2}{2} \frac{\pi D^2}{4} = 0 \quad (10.3)$$

If the sphere is sufficiently small in diameter, or if its density is not much greater than that of the liquid, it falls at a very low velocity. From Chapter 6, we know that if the Reynolds number of the sphere is less than 1, then Stokes flow exists. For this case,

$$C_D = \frac{24}{\text{Re}} = \frac{24\mu}{\rho VD} \quad \text{for } \text{Re} < 1$$

Therefore, Equation 10.2c becomes

$$D_f = \frac{24\mu}{\rho VD} \frac{\rho V^2}{2} \frac{\pi D^2}{4} = 3\pi\mu VD$$

and Equation 10.3 becomes

$$\rho_s g \frac{\pi D^3}{6} - \rho g \frac{\pi D^3}{6} - 3\pi\mu VD = 0$$

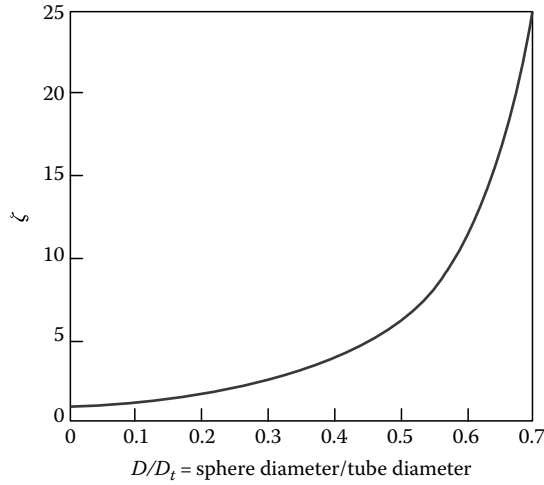


FIGURE 10.3 Wall correction factor for a falling-sphere viscometer.

Rearranging and solving for viscosity, we have

$$\mu = \frac{g}{18} \frac{D^2}{V} (\rho_s - \rho) \quad (10.4)$$

Once viscosity is determined with this equation, the Reynolds number should be calculated to verify that it is indeed less than 1.

Equation 10.4 applies only to the case in which the sphere diameter is much smaller than the cylinder diameter. If this is not the case, then interference will exist between the wall itself and the falling motion of the sphere. Thus, the drag will be affected. To account for this wall effect, we modify the drag equation:

$$D_f = 3\pi\mu V D \zeta$$

where ζ represents a multiplication factor for the wall effect. The factor ζ has been determined analytically, and the results have been confirmed with experimental data. They are plotted in Figure 10.3 as ζ versus the ratio of the sphere diameter to the tube diameter. Equation 10.4 then becomes

$$\mu = \frac{g}{18} \frac{D^2}{V \zeta} (\rho_s - \rho) \quad (10.5)$$

Example 10.1

A commercially available shampoo is brought into the lab for viscosity measurement. A stainless steel sphere of diameter $\frac{3}{32}$ in. falls through the shampoo at a terminal velocity of 1 in. per 24.95 s. The tube holding the liquid has an inside diameter of 4 in. Determine the viscosity of the shampoo if its specific gravity is 0.998.

SOLUTION

Equation 10.5 applies:

$$\mu = \frac{g}{18} \frac{D^2}{V \zeta} (\rho_s - \rho)$$

The sphere diameter is $D = \left(\frac{3}{32}\right)\left(\frac{1}{12}\right) = 0.00781$ ft. The ratio of the sphere to the tube diameter is

$$\frac{D}{D_t} = \frac{\frac{3}{32}}{4} = 0.023$$

Figure 10.3 gives $\zeta \approx 1$. The sphere density from Table A.8 is

$$\rho_s = 8.02(1.94) = 15.6 \text{ slug/ft}^3$$

The liquid density is

$$\rho = 0.998(1.94) = 1.94 \text{ slug/ft}^3$$

The terminal velocity is

$$V = \left(\frac{1}{24.95}\right)\left(\frac{1}{12}\right) = 0.00334 \text{ ft/s}$$

By substitution, then,

$$\mu = \frac{32.2}{18} \frac{(0.00781)^2}{0.00334(1)} (15.6 - 1.94)$$

$$\mu = 0.445 \text{ lbf} \cdot \text{s/ft}^2$$

As a check, the Reynolds number is calculated as

$$\begin{aligned} \text{Re} &= \frac{\rho V D}{\mu} = \frac{1.94(0.00334)(0.00781)}{0.445} \\ &= 0.0001 < 1 \end{aligned}$$

Thus, Equation 10.5 is valid for this problem.

Another way to measure viscosity involves moving the fluid through a tube under laminar flow conditions. For a Newtonian fluid, the velocity profile (from Chapter 5) for laminar flow through a circular tube is

$$V_z = \left(-\frac{dp}{dz}\right) \frac{R^2}{4\mu} \left[1 - \left(\frac{r}{R}\right)^2\right]$$

Integrating this equation over the tube cross-sectional area and dividing by the area gives the average velocity:

$$V = \left(-\frac{dp}{dz}\right) \frac{R^2}{4\mu} \simeq \frac{\Delta p}{L} \frac{R^2}{8\mu}$$

Solving for viscosity gives

$$\mu = \frac{\Delta p}{L} \frac{R^2}{8V} \quad (10.6)$$

The volume flow rate of the liquid through the tube is measured, and dividing by the area gives the average velocity V . The tube length L and inside radius R are easily measured. The pressure drop Δp over the distance L must also be measured. Once these quantities are known, the viscosity can be calculated with Equation 10.6.

10.2 MEASUREMENT OF STATIC AND STAGNATION PRESSURES

In fluid flow, there are two pressures of importance: static pressure and stagnation pressure. **Static pressure** is indicated by a measuring device that moves with the flow or by a device that causes no change in velocity within the stream. A conventional method for measuring static pressure is by means of a hole drilled through the flow conduit. The hole, which must be located normal to the wall surface, is then connected to a manometer or a pressure gauge. If it is not possible to use an existing wall, a probe that has a static pressure tap can be inserted into the flow to create an effective wall (Figure 10.4).

When measuring the static pressure in a pipe, it is often desirable or necessary to drill several static pressure taps and connect them with a tube that goes around the pipe. The tube is called a **piezometer ring**. This method will account for imperfections in the pipe wall (see Figure 10.5).

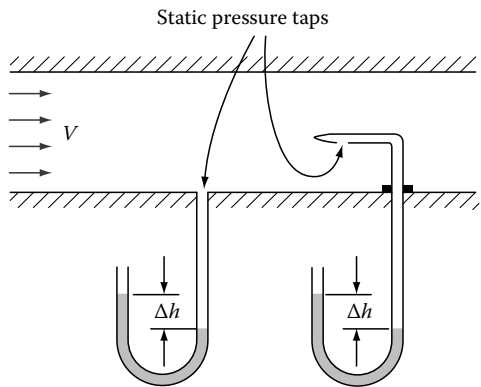


FIGURE 10.4 Methods for measuring static pressure of flow.

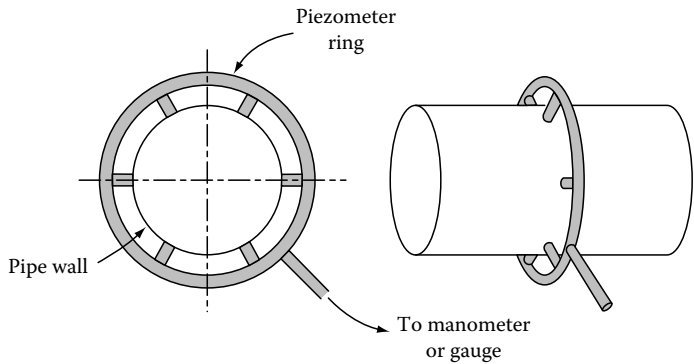


FIGURE 10.5 Piezometer ring connected to static pressure taps.

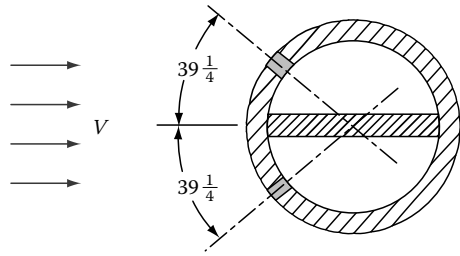


FIGURE 10.6 Direction-finding tube.

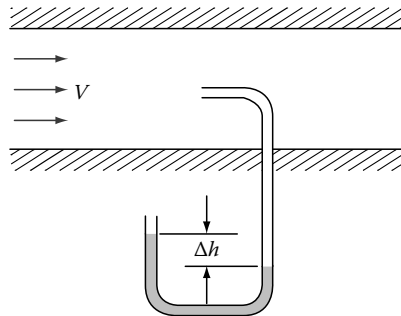


FIGURE 10.7 Measurement of stagnation pressure with a pitot tube.

An application of the method for measuring static pressure is used in a device called a **direction-finding tube** (Figure 10.6). In two-dimensional or three-dimensional flows, the actual flow direction may not be known; a direction-finding tube will indicate it. As shown in Figure 10.6, the tube consists of two piezometer holes located at equal angles from the center. Each hole is connected to a separate manometer or gauge. The tube is then rotated in the flow until the readings on both manometers or gauges are identical. If the angle between the centerline and the holes is $39\frac{1}{4}^\circ$, the indicated pressure is very close to that recorded by an instrument moving with the flow.

Stagnation pressure is the pressure indicated when bringing the flow to rest isentropically. A **pitot tube**, an open-ended tube facing the flow direction as shown in Figure 10.7, is used to measure stagnation pressure.

10.3 MEASUREMENT OF VELOCITY

Velocity in a flow of fluid can be measured in several ways. The first method that we will discuss involves use of a **pitot-static tube**. This device consists of a tube within a tube that combines static pressure measurement with stagnation pressure measurement. A cross section of a pitot-static tube is given in Figure 10.8. Applying the Bernoulli equation to the static and stagnation holes in the tube gives

$$\frac{p_t}{\rho g} = \frac{p}{\rho g} + \frac{V^2}{2g}$$

Solving for velocity, we get

$$V = \sqrt{\frac{p_t - p}{\rho}}$$

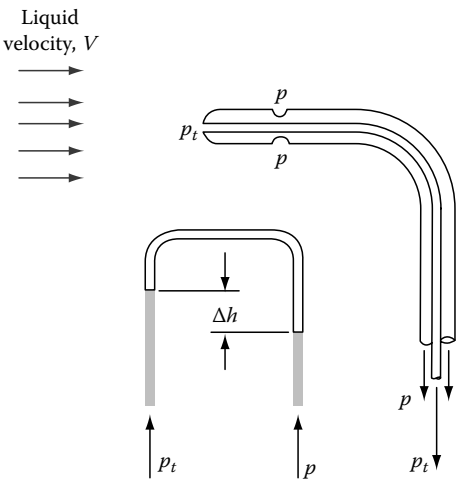


FIGURE 10.8 Cross section of a pitot-static tube and manometer connection.

The pressure difference thus gives the velocity of the flow. If the pitot-static tube is connected to opposing limbs of a differential manometer, then the reading Δh is

$$\Delta h = \frac{p_t - p}{\rho g}$$

In terms of the manometer reading (see Figure 10.8), the flow velocity is

$$V = \sqrt{2g \Delta h} \tag{10.7}$$

Example 10.2

Acetone flows through a pipe in which the velocity at the centerline is measured with a pitot-static tube. The attached manometer indicates a pressure drop of 5 cm of mercury, as shown in Figure 10.9. Calculate the velocity at the centerline.

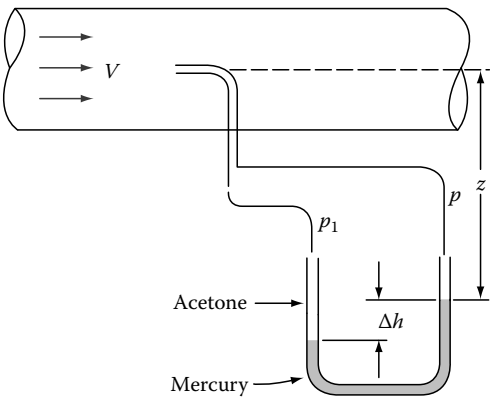


FIGURE 10.9 Measurement of velocity with a pitot-static tube (Example 10.2).

SOLUTION

The derivation of Equation 10.7 was for an inverted, air-over-liquid, U-tube manometer. In this example, however, we have a slightly different method for measuring pressure difference, and so Equation 10.7 does not apply. Here, we are using a two-liquid manometer in a U-tube configuration. As shown in the figure, we define z as the vertical distance from the pitot-static tube to the mercury–acetone interface in the right leg of the manometer. Applying the hydrostatic equation to the manometer gives

$$p_t + \rho_a g(z + \Delta h) = p + \rho_a g z + \rho_{\text{Hg}} g \Delta h$$

or

$$p_t - p = g \Delta h (\rho_{\text{Hg}} - \rho_a)$$

Next we write, for the pitot-static tube,

$$\frac{p_t}{\rho_a g} = \frac{p}{\rho_a g} + \frac{V^2}{2g}$$

which becomes

$$V = \sqrt{\frac{2(p_t - p)}{\rho_a}}$$

Substituting from the hydrostatic equation gives

$$V = \sqrt{2g \Delta h \frac{\rho_{\text{Hg}} - \rho_a}{\rho_a}} = \sqrt{2(9.81)(0.05) \frac{13.6(1\,000) - 0.787(1\,000)}{0.787(1\,000)}}$$

Solving,

$$V = 4.0 \text{ m/s}$$

Equation 10.7 is appropriate for velocity measurements in incompressible fluids. For a compressible fluid, a pitot tube can still be used, but consideration must be given to whether the flow is subsonic or supersonic. For subsonic flow, we apply the energy equation to a stagnation reading and to a static reading made independently. The energy equation written between the stagnation and static states for an adiabatic process with no work is

$$h_t = h + \frac{V^2}{2}$$

where h_t and h are the stagnation and static enthalpies, respectively. For an ideal gas with constant specific heats, this equation becomes

$$c_p T_t = c_p T + \frac{V^2}{2}$$

or

$$T_t = T \left(1 + \frac{V^2}{2c_p T} \right)$$

By definition,

$$c_p = \frac{\gamma R}{\gamma - 1}$$

where R is the gas constant and γ is the ratio of specific heats (c_p/c_v). Thus,

$$T_t = T \left[1 + \frac{V^2(\gamma - 1)}{2\gamma RT} \right]$$

Substituting from the definition of sonic velocity, $a^2 = \gamma RT$, we get

$$\frac{T_t}{T} = 1 + \frac{\gamma - 1}{2} \frac{V^2}{a^2} = 1 + \frac{\gamma - 1}{2} M^2 \quad (10.8)$$

where M is the Mach number of the flow, which in this case is less than 1. For an isentropic flow, we can write

$$\frac{p_t}{p} = \left(\frac{T_t}{T} \right)^{\gamma/(\gamma-1)}$$

Equation 10.8 now becomes

$$\frac{p_t}{p} = \left(1 + \frac{\gamma - 1}{2} M^2 \right)^{\gamma/(\gamma-1)} \quad (10.9)$$

As was stated in Chapter 8, the values of p/p_t versus M are tabulated in Table D.1 for $\gamma = 1.4$. Use of the table will make calculations easier. By measuring the stagnation and static pressures in the flow, and by measuring the static temperature, the subsonic flow velocity can therefore be calculated with

$$V = Ma = M\sqrt{\gamma RT} \quad (10.10)$$

Example 10.3

The velocity of a commercial airliner is measured by a pitot tube attached near the front of the plane. The plane travels at an altitude of 30,000 ft, where the ambient conditions are $T = -26.2^\circ\text{F}$ and $z = 9.38$ in. of mercury. The gauge attached to the pitot tube reads 7.0 psia. Determine the velocity.

SOLUTION

The equivalent static pressure is calculated with the hydrostatic equation

$$p = \rho g z_{\text{Hg}} = 13.6(1.94)(32.2) \frac{(9.38)}{12} = 663.4 \text{ psfa} = 4.61 \text{ psia}$$

where ρ for mercury is obtained from Table A.5. For the pressure ratio

$$\frac{p}{p_t} = \frac{4.61}{7.0} = 0.658$$

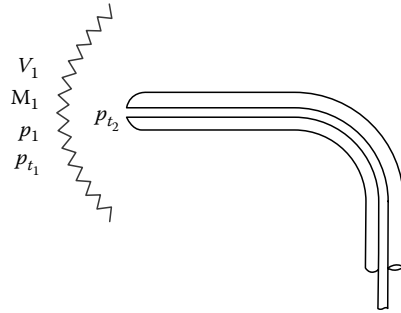


FIGURE 10.10 Pitot tube in a supersonic flow.

Table D.1 gives $M = 0.80$. Assuming air as an ideal gas with constant specific heats, Equation 10.10 yields

$$\begin{aligned} V &= M\sqrt{\gamma RT} = 0.8\sqrt{1.4(1710)(460 - 26.2)} \\ &= 0.8(1021) \end{aligned}$$

$$V = 816 \text{ ft/s} = 557 \text{ mi/h}$$

If the flow is supersonic, a shock wave will exist in front of the pitot probe, as in Figure 10.10. The flow velocity to be measured is upstream of the shock. Owing to the presence of the shock wave, the probe will exist in a subsonic flow, but because the shock is normal to the flow at the pitot tube, normal shock tables can be used. For the configuration of Figure 10.10, then, the pitot tube will indicate the stagnation pressure behind the shock, p_{t_2} . Additionally, upstream static measurements of p_1 and T_1 are necessary to provide sufficient information to determine velocity. Table D.2 gives a tabulation of p_1/p_{t_2} versus M_1 for a gas with $\gamma = 1.4$. The technique of measuring velocity thus involves using Table D.2 for convenience to determine M_1 and then substituting into Equation 10.10 to find V_1 .

Example 10.4

A supersonic transport plane has a pitot tube attached to allow the pilot to determine when supersonic speed is reached. When the plane is flying at an altitude of 12 200 m (temperature is -52.1°C and pressure is 20.25 kPa), the gauge to which the pitot tube is attached reads 42 kPa. Determine the Mach number and absolute velocity of the plane.

SOLUTION

For the ratio

$$\frac{p_1}{p_{t_2}} = \frac{20.25}{42} = 0.482$$

Table D.2 gives $M_1 = 1.08$. After substitution into Equation 10.10, we obtain

$$V = Ma = M\sqrt{\gamma RT} = 1.08\sqrt{1.4(286.8)(273 - 52.1)}$$

$$V = 322 \text{ m/s}$$

Another device used to measure velocity in a gas is the **hot-wire anemometer**. This apparatus consists of a wire, generally made of platinum or tungsten, connected to two prongs as shown in

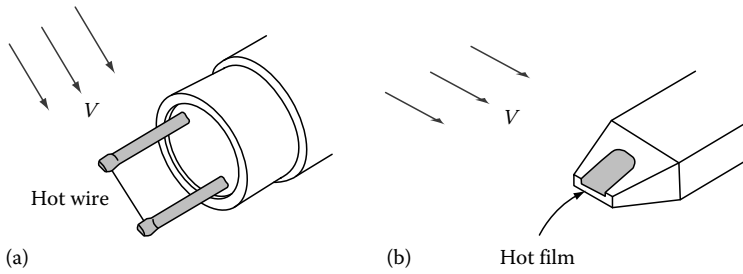


FIGURE 10.11 (a) A hot-wire anemometer used to measure flow velocity in a gas. (b) A hot-film anemometer used to measure flow velocity in a liquid.

Figure 10.11a. Electricity is passed through the wire and heats it. The heat in turn is transferred to the flowing fluid at a rate that is proportional to the flow velocity. If the current through the wire is maintained constant, the resistance of the wire can then be easily measured and the fluid velocity determined. If the wire temperature is maintained constant, the resistance will remain constant. In this case, the current is measured, and again the velocity can be determined. For either method of use, extensive calibration is required. One difference between a hot-wire anemometer and a pitot tube is the response time. Because the wire is thin (5×10^{-6} m characteristically), it transfers heat very quickly. Thus, sudden changes in velocity are sensed and displayed immediately by an appropriate electronic readout device; the velocity measured is the instantaneous velocity at a certain point. By comparison, a pitot-static tube is not as sensitive and indicates only a mean velocity.

A device used to measure velocity in a liquid is the **hot-film probe**. This apparatus (Figure 10.11b) works on the same principle as the hot-wire probe. (A hot wire is too delicate for use in a liquid.)

Another velocity-measuring device is the dual-beam **laser-Doppler anemometer (LDA)**. This device passes two laser beams through the flow field. When particles in the fluid (liquid or gas) scatter the light at the intersection of the beams, a shift in the frequency occurs. The magnitude of this so-called Doppler shift is proportional to the flow velocity. One advantage of the LDA is that no physical disturbance of the flow occurs as with a pitot tube. One disadvantage is that the fluid must be transparent and contain impurities or particles that scatter the light. If no particles are present, the fluid must be doped. Perhaps the biggest disadvantage of the LDA is its cost. There are other devices that are useful for measuring velocity, from floats or buoyant particles to rotating anemometers, depending on the application.

10.4 MEASUREMENT OF FLOW RATES IN CLOSED CONDUITS

Readings from a pitot-static tube can be used to calculate the volume flow rate in a closed conduit. Because the pitot-static tube gives a measurement of velocity at selected points, the velocity profile can then be plotted and graphically integrated over the cross-sectional area to obtain the volume flow rate through the conduit. The integration procedure might present some difficulty, however, so an alternative method has been devised. Consider the circular duct of Figure 10.12. It is divided into five circular concentric equal areas (A_1 through A_5):

$$A = A_1 + A_2 + A_3 + A_4 + A_5 = 5A_1 \quad (10.11)$$

The velocity within each concentric area is presumed to be constant in that area. The velocity in each area must be measured with any suitable device at the prescribed point, or the velocity at these locations can be scaled from the velocity profile. The flow rate through each area is then

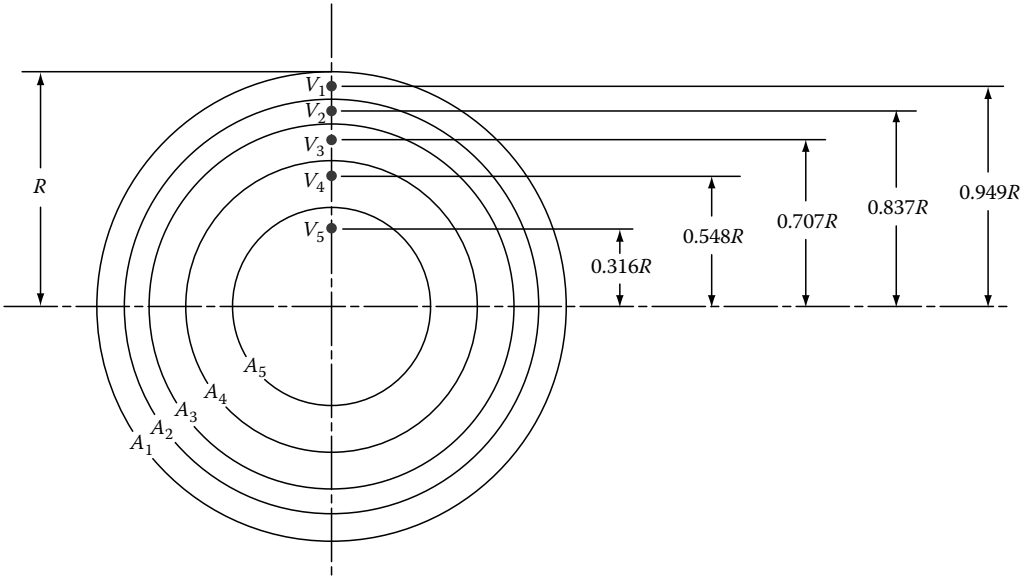


FIGURE 10.12 Circular cross section divided into five equal areas.

$$Q_1 = A_1 V_1$$

$$Q_2 = A_2 V_2$$

$$Q_3 = A_3 V_3$$

$$Q_4 = A_4 V_4$$

$$Q_5 = A_5 V_5$$

The total volume flow rate through the conduit is

$$\begin{aligned} Q &= Q_1 + Q_2 + Q_3 + Q_4 + Q_5 \\ &= A_1 V_1 + A_2 V_2 + A_3 V_3 + A_4 V_4 + A_5 V_5 \\ Q &= A_1 (V_1 + V_2 + V_3 + V_4 + V_5) \end{aligned}$$

By combining with Equation 10.11, the volume flow rate is

$$Q = \frac{A}{5} (V_1 + V_2 + V_3 + V_4 + V_5)$$

from which we conclude that the average velocity can be found by taking the arithmetic average of the five measured values:

$$V = \frac{Q}{A} = \frac{V_1 + V_2 + V_3 + V_4 + V_5}{5} \quad (10.12)$$

A similar analysis can be developed for flows through a rectangular or square ducts where the velocities must be known at selected points in the cross section. Such points are shown in Figure 10.13.

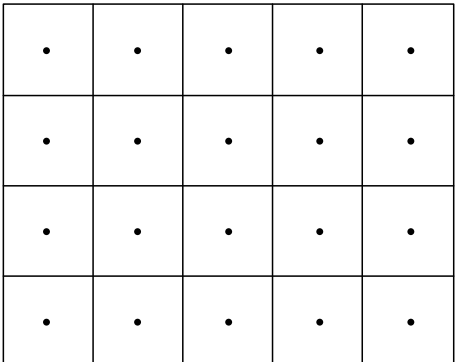


FIGURE 10.13 Division of a rectangular cross section into a number of equal areas.

The number of equal areas chosen for the cross section varies with its dimensions. Generally, the number of readings should be between 16 and 64 at the center of equal rectangular areas. The velocities are then averaged. The product of the average velocity and the cross-sectional area gives the flow rate.

Example 10.5

In a liquor-bottling plant, ethyl alcohol is piped to a mixing tank through a pipe. A pitot-static tube is used to measure a velocity profile in the pipe (24-nominal, schedule 20 stainless steel). The data are given in the following table.

Distance from Centerline (in.)	Pitot-Static Tube Reading (in. Ethyl Alcohol)
0	11.9
1	11.6
2	11.3
3	11.0
4	10.8
5	10.5
6	10.1
7	9.8
8	9.1
9	6.5
10	2.9
11	0.7

- a. Sketch the velocity profile to scale.
- b. Estimate the volume flow rate through the pipe.

SOLUTION

- a. Equation 10.7 applied to each reading gives the results in the following table. A sample calculation for 0 in. is

$$V = \sqrt{2g\Delta h} = \sqrt{2(32.2)(11.9/12)} = 8.0 \text{ ft/s}$$

Distance from Centerline (in.)	Velocity (ft/s)
0	8.0
1	7.9
2	7.8
3	7.7
4	7.6
5	7.5
6	7.4
7	7.25
8	7.0
9	5.9
10	3.9
11	1.9

From Table C1, for a 24-nominal, schedule 20 pipe,

$D = 1.938 \text{ ft}$ and $A = 2.948 \text{ ft}^2$

At the wall, $R = 1.938 \text{ ft}/2 = 11.63 \text{ in.}$, at which distance the velocity is zero. A plot of the data is given in Figure 10.14.

- b. To calculate the volume flow rate, we can use the velocity profile to estimate the average velocity. From Figure 10.12, the velocity must be known at the following locations ($R = 11.63 \text{ in.}$):

$0.316R = 3.68 \text{ in.} \rightarrow A_5$
 $0.548R = 6.37 \text{ in.} \rightarrow A_4$
 $0.707R = 8.22 \text{ in.} \rightarrow A_3$
 $0.837R = 9.73 \text{ in.} \rightarrow A_2$
 $0.949R = 11.03 \text{ in.} \rightarrow A_1$

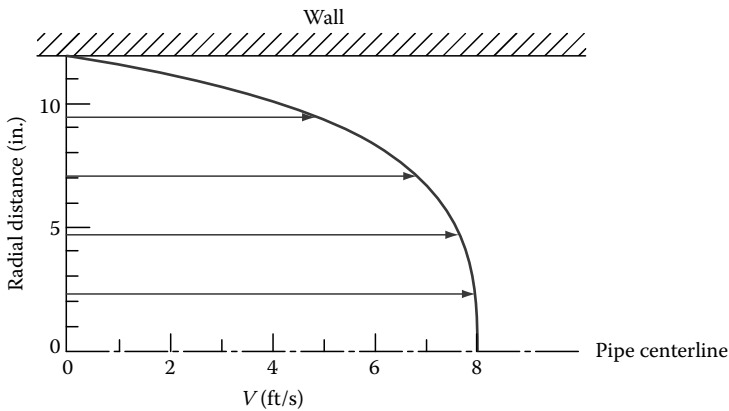


FIGURE 10.14 Velocity profile for ethyl alcohol in a pipe (Example 10.5).

From the velocity diagram, the corresponding velocities are

$$V_1 = 1.7 \text{ ft/s}$$

$$V_2 = 5 \text{ ft/s}$$

$$V_3 = 6.7 \text{ ft/s}$$

$$V_4 = 7.3 \text{ ft/s}$$

$$V_5 = 7.7 \text{ ft/s}$$

The average velocity is

$$V = \frac{\sum V}{5} = 5.68 \text{ ft/s}$$

The volume flow rate is

$$Q = AV = 2.948(5.68)$$

$$Q = 16.7 \text{ ft}^3/\text{s}$$

Using a pitot-static tube to measure velocity can be quite cumbersome and sometimes—in the case of small tubes, for example—impossible. Fortunately, alternatives exist. Fluid meters specifically made for measuring flow rate have been proposed, tested, and developed to a high degree. Flow meters are of two types: those that measure quantity and those that measure rate. Measurements of quantity (either volume or mass) are obtained by counting successive isolated portions of flow. Rate measurements, on the other hand, are determined from the effects on a measured physical property of the flow—for example, the pressure drop within a meter related to the flow rate through it. A quantity meter reading can be modified to obtain a flow rate.

One example of a quantity-measuring device is the **nutating disk meter** illustrated in Figure 10.15. This meter is used extensively for metering cold water in service lines, both domestic and commercial. The nutating disk meter contains a metering chamber with spherical sides, a conical roof, and a radial baffle. A disk that passes through a sphere inside divides the chamber in two. A shaft attached to the sphere extends upward. As liquid flows through the meter alternately above and below the disk, the disk wobbles or nutates, thus moving the sphere and causing the shaft to generate the shape of an inverted cone. This circular motion of the shaft drives a counter that registers the total quantity of flow passing through. For gases, a **bellows meter** is used for both domestic and commercial applications. The meter contains a bellows that alternately fills and empties. The bellows is mechanically linked to a counter.

The remainder of this section is devoted to a discussion of the common types of rate meters. **Rate meters** are devices used to measure flow rate as volume per unit time or as mass per unit time. One of the most accurate commercially available types is the **turbine-type flow meter**. As shown in Figure 10.16, it consists of a pipe or tube (brass or stainless steel is commonly used) with appropriate pipe fittings. Inside the tube are flow straighteners on either side of a small propeller or turbine. Flow through the tube rotates the propeller at an angular velocity that is proportional to the flow rate. A magnetic pickup registers blade passages and sends a signal to a readout device that totals the pulses. Turbine-type meters are usually accurate to within 1%.

A flow can be metered by what is known as a variable-area meter, or a **rotameter**. A rotameter contains a float that is free to move within a vertical tapered glass or transparent plastic tube. The tube is etched or marked with a scale. Flow enters the meter at the bottom, raising the float within the tube (see Figure 10.17). The higher the float position, the larger the annular flow area between

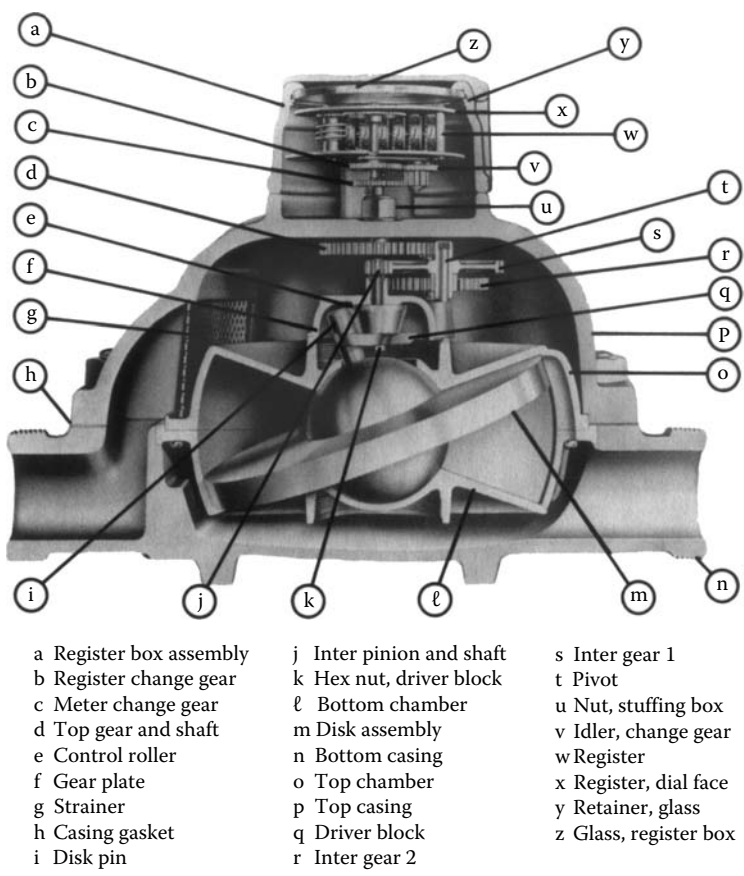


FIGURE 10.15 A nutating disk meter. (Courtesy of Hersey Products, Inc., Cleveland, NC.)

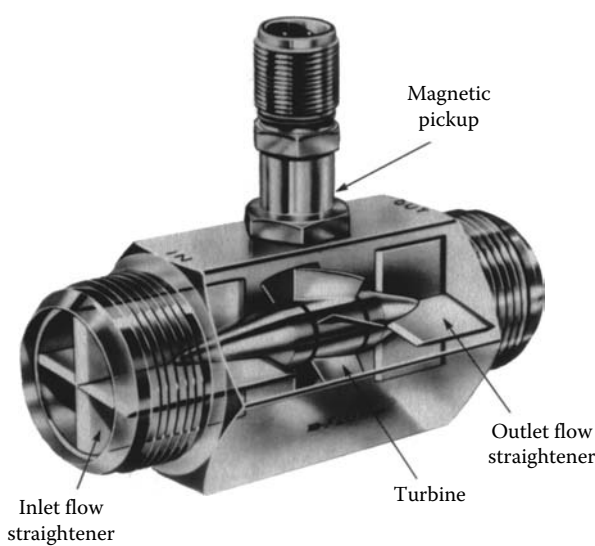


FIGURE 10.16 A turbine-type flow meter. (Courtesy of Flow Technology, Inc., Roscoe, IL.)

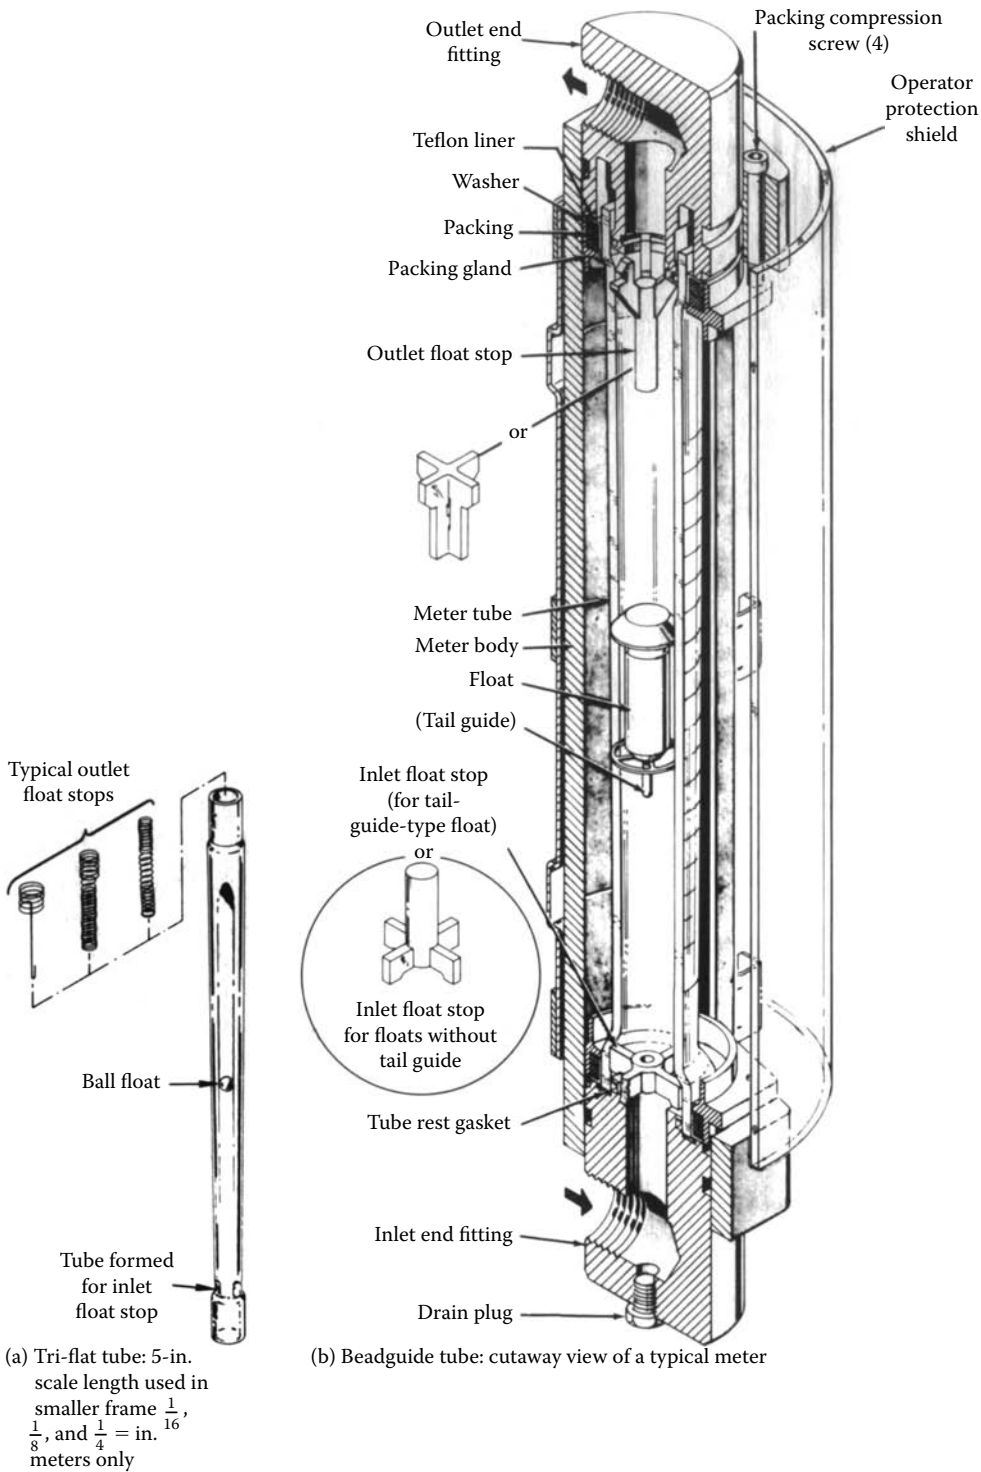


FIGURE 10.17 A rotameter. (Courtesy of ABB/Fischer and Porter Co., Warminster, PA.)

the float and the tube. The float reaches an equilibrium position where forces due to drag, buoyancy, and gravity are all balanced. The flow rate is determined by reading the scale at the float position. Alternatively, a sensing device can transmit a signal to a remote location. Of the direct reading types, scales are available for flow rate metering for a specific fluid and for determining the percentage of full scale; the latter requires calibration by the user. Floats are usually either spherical or cylindrical. Variable-area meters can be obtained for liquids or for gases. Accuracy is usually within 1% on expensive units and within 5% on less expensive rotameters.

Another type of rate meter introduces a flow constriction that affects a measurable property of the flow. The changed property is then related to the flow rate through the meter. The **venturi meter** is an example of this type (Figure 10.18). Basically a casting lined with a corrosion-resistant material such as bronze, this device is placed directly in the flow line. The meter consists of an upstream section that attaches to the pipeline and a convergent section that leads to a constriction or a smaller-diameter pipe. A divergent section is then connected downstream to the pipeline. Upstream and at the throat are attached static pressure taps or piezometer rings. These are connected to the two limbs of a differential manometer. It is considered good practice to provide at least 10 diameters of approach piping before the meter to ensure that a uniform, fully developed flow exists at the meter entrance. The size of a constriction meter such as a venturi is usually specified by the pipe and throat sizes. For example, an 8 × 4 venturi attaches to an 8-nominal pipe and has a throat diameter corresponding to a 4-nominal pipe.

The continuity equation can be applied to flow through the venturi meter at points 1 and 2, where the pressure change is measured. The objective here is to relate the affected property (pressure drop) to the flow through the meter. For an incompressible fluid, the continuity equation is

$$Q = A_1V_1 = A_2V_2 \tag{10.13}$$

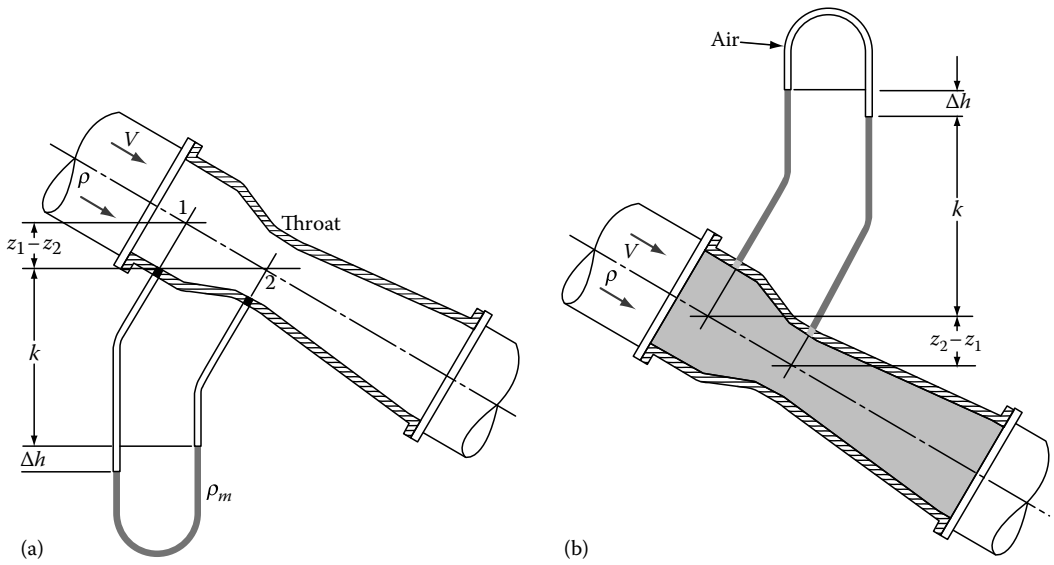


FIGURE 10.18 (a) A venturi meter with a two-liquid U-tube manometer. (b) A venturi meter with an inverted U-tube manometer.

Because the area A_2 is less than A_1 , the continuity equation predicts that $V_1 < V_2$. In other words, the flow velocity must increase at the throat. The Bernoulli equation for a frictionless flow through the meter is

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \quad (10.14)$$

Because $V_1 < V_2$, then $p_1 > p_2$; that is, a pressure drop exists in the meter from upstream to the throat. Substituting from Equation 10.13 for velocity, Equation 10.14 becomes, after rearranging,

$$\begin{aligned} \frac{p_1 - p_2}{\rho g} + z_1 - z_2 &= \frac{Q^2}{2g} \left(\frac{1}{A_2^2} - \frac{1}{A_1^2} \right) \\ &= \frac{Q^2}{2gA_2^2} \left(1 - \frac{A_2^2}{A_1^2} \right) \end{aligned}$$

Solving for flow rate, we get

$$Q = A_2 \sqrt{\frac{2g\{[(p_1 - p_2)/\rho g] + (z_1 - z_2)\}}{1 - (A_2^2/A_1^2)}}$$

This equation is the theoretical equation for the venturi meter written for a frictionless incompressible flow. Noting that $A_2/A_1 = D_2^2/D_1^2$ and introducing the subscript “th” to denote a theoretical flow, we have

$$Q_{th} = A_2 \sqrt{\frac{2g\{[(p_1 - p_2)/\rho g] + (z_1 - z_2)\}}{1 - (D_2^4/D_1^4)}} \quad (10.15)$$

The manometer reading provides the pressure drop required in the equation. From hydrostatics, we obtain the following for the manometer of Figure 10.18a:

$$p_1 + \rho g[(z_1 - z_2) + k + \Delta h] = p_2 + \rho gk + \rho_m g \Delta h$$

After rearrangement and simplification, we get

$$\frac{p_1 - p_2}{\rho g} + z_1 - z_2 = \Delta h \frac{\rho_m - \rho}{\rho} = \Delta h \left(\frac{\rho_m}{\rho} - 1 \right) \quad (10.16)$$

Substitution into Equation 10.15 yields

$$Q_{th} = A_2 \sqrt{\frac{2g\Delta h(\rho_m/\rho - 1)}{1 - (D_2^4/D_1^4)}} \quad [\text{Figure 10.18a}] \quad (10.17a)$$

Thus, the theoretical flow rate through the meter is related to the manometer reading in such a manner that the meter orientation is not important; the same equation results whether the meter is horizontal, inclined, or vertical.

For the manometer of Figure 10.18b, we write

$$p_1 + \rho g(k + \Delta h) = p_2 + \rho g[(z_2 - z_1) + k] + \rho_{air} g \Delta h$$

The density of air is very small in comparison to the liquid density, so the term containing ρ_{air} can be neglected. After rearrangement and simplification, we obtain

$$\frac{p_1 - p_2}{\rho g} + z_1 - z_2 = \Delta h$$

Substitution into Equation 10.15 yields

$$Q_{\text{th}} = A_2 \sqrt{\frac{2g\Delta h}{1 - (D_2^4/D_1^4)}} \quad [\text{Figure 10.18b}] \quad (10.17b)$$

This equation differs from Equation 10.17a in that Equation 10.17a contains the term $(\rho_m/\rho - 1)$ because there are two fluids in the manometer of Figure 10.18a.

For a given combination of meter (D_1 , D_2 , and A_2 known), liquid, and manometer fluid (ρ and ρ_m known), a curve of pressure drop Δh versus flow rate Q_{th} can be plotted by using Equation 10.17. Consider the line labeled Q_{th} in Figure 10.19 as such a curve. Next suppose that measurements are made on the meter over a wide range of flows and that the actual data (Q_{ac} versus Δh) are plotted again on Figure 10.19, yielding the line labeled Q_{ac} . Thus, for any pressure drop Δh_i , there correspond two flow rates: Q_{ac} and Q_{th} . The ratio of these rates is called the **venturi discharge coefficient**, C_V :

$$C_V = \frac{Q_{\text{ac}}}{Q_{\text{th}}} \quad \text{for any } \Delta h_i \quad (10.18)$$

The coefficient C_V can be calculated for many Δh 's on the plot and will vary over the range. The fact that Q_{ac} is different from Q_{th} is due to frictional effects that are not accounted for in the Bernoulli equation from which the expression for Q_{th} was obtained. For each C_V that can be determined, a corresponding upstream Reynolds number can be calculated:

$$\text{Re}_1 = \frac{V_1 D_1}{\nu} = \frac{4Q_{\text{ac}}}{\pi D_1^2} \frac{D_1}{\nu}$$

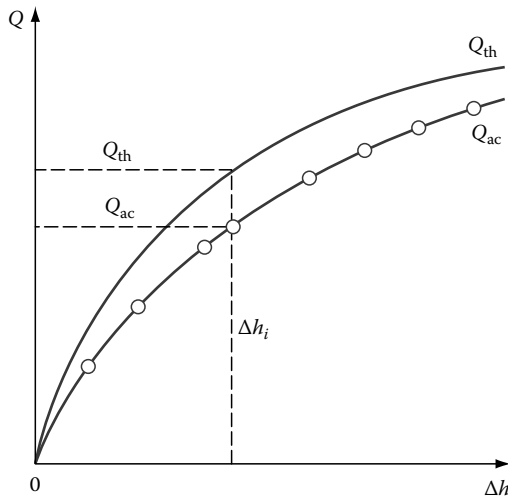


FIGURE 10.19 Flow rate versus pressure drop for a venturi meter.

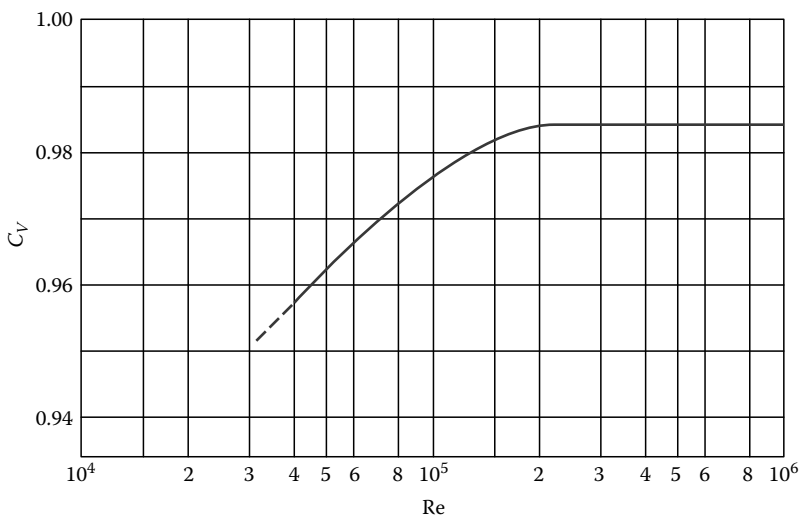


FIGURE 10.20 Discharge coefficient versus Reynolds number for venturi meters. (Reprinted from *Fluid Meters—Their Theory and Application*, 5th edn., The American Society of Mechanical Engineers, New York, 1959. With permission.)

or

$$\text{Re}_1 = \frac{4Q_{ac}}{\pi D_1 v} \tag{10.19}$$

A graph of discharge coefficient C_V versus Reynolds number Re_1 can now be constructed. For venturi meters, the plot of Figure 10.20 applies. Such plots are available in fluid meter handbooks along with design or configuration recommendations for venturi installations. The plot of Figure 10.20 can be used with an uncalibrated meter to generate a Q_{ac} versus Δh curve from a Q_{th} versus Δh curve.

Example 10.6

An oil pipeline company is responsible for pumping kerosene overland from a refinery to a wholesale distributor. The company wants to install a meter in the line to check on the meter already installed. A 10×6 venturi is available but without a calibration curve—that is, without a plot of Q_{ac} versus Δh . Furthermore, facilities are not available for calibrating it. A mercury manometer is also on hand. The installation of the meter requires that it be inclined at 30° . A sketch is given in Figure 10.21. Generate a calibration curve for the meter up to a flow rate of $6 \text{ ft}^3/\text{s}$.

SOLUTION

From Table A.5,

Kerosene: $\rho = 0.823(1.94) = 1.60 \text{ slug/ft}^3$

$$\mu = 3.42 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2$$

Mercury: $\rho_{Hg} = 13.6(1.94) = 26.4 \text{ slug/ft}^3$

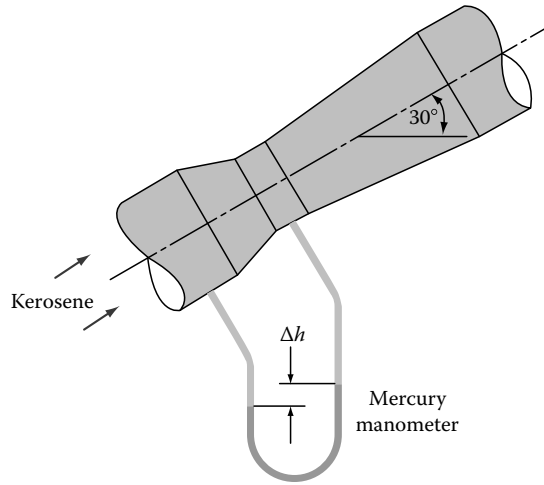


FIGURE 10.21 The venturi meter of Example 10.6.

For the manometer,

$$\begin{aligned}\frac{(p_1 - p_2)}{\rho g} + z_1 - z_2 &= \Delta h \left(\frac{\rho_{\text{Hg}}}{\rho} - 1 \right) \\ &= \Delta h \left(\frac{13.6}{0.823} - 1 \right) = 15.52 \Delta h\end{aligned}$$

From Table C.1,

$$\begin{aligned}D_1 &= 0.8350 \text{ ft} \quad A_1 = 0.5476 \text{ ft}^2 \text{ (10-nominal, schedule 40; standard assumed)} \\ D_2 &= 0.5054 \text{ ft} \quad A_2 = 0.2006 \text{ ft}^2 \text{ (6-nominal, schedule 40)}\end{aligned}$$

By substitution into Equation 10.17, we get

$$\begin{aligned}Q_{\text{th}} &= A_2 \sqrt{\frac{2g\Delta h \left(\rho_{\text{Hg}}/\rho - 1 \right)}{1 - (D_2^4/D_1^4)}} \\ &= 0.2006 \sqrt{\frac{2(32.2)(15.52)\Delta h}{1 - (0.5054^4/0.8350^4)}}\end{aligned}$$

or

$$Q_{\text{th}} = 6.82\sqrt{\Delta h} \tag{i}$$

Let the manometer deflection Δh vary from 0 to 1 ft of mercury in increments of 0.2 ft. A tabulation of Q_{th} versus Δh using Equation i is given in Table 10.1.

The Reynolds number for the flowing kerosene is found with Equation 10.19:

$$\begin{aligned}\text{Re}_1 &= \frac{4Q_{\text{ac}}}{\pi D_1 v} \\ &= \frac{4(C_v Q_{\text{th}})(1.60)}{\pi(0.8350)(3.42 \times 10^{-5})}\end{aligned}$$

TABLE 10.1
Summary of Calculations for Example 10.6

Δh (ft)	Q_{th} (Equation i) (ft ³ /s)	Re_1/C_V	C_V	$Q_{ac} = C_V Q_{th}$ (ft ³ /s)
0.0	0	0	—	0
0.2	3.04	2.16×10^5	0.984	2.99
0.4	4.31	3.06×10^5	0.984	4.24
0.6	5.28	3.75×10^5	0.984	5.19
0.8	6.10	4.34×10^5	0.984	6.00
1.0	6.82	4.85×10^5	0.984	6.71

or

$$\frac{Re_1}{C_V} = 7.13 \times 10^4 Q_{th}$$

Results of calculations made with this equation are given in the third column of Table 10.1.

To find C_V from Figure 10.20 for each Re_1/C_V value, it is necessary to resort to a trial-and-error procedure if the range of interest lies below a Reynolds number of 2×10^5 . But because the range over which our meter operates is greater than 2×10^5 , Figure 10.20 shows that C_V is a constant equal to 0.984. This value is listed in Table 10.1. A plot of Q_{th} and Q_{ac} as a function of Δh is given in Figure 10.22, and the calibration curve for the meter is known.

It can be concluded that the venturi meter is a well-designed instrument because frictional effects and losses in general are small.

Another type of constriction meter is called a flow nozzle (Figure 10.23). The flow nozzle can be installed easily by cutting the pipe, attaching flanges, and inserting the nozzle. As liquid passes through, a region of flow separation and reversal exists just downstream, and this adds to the losses

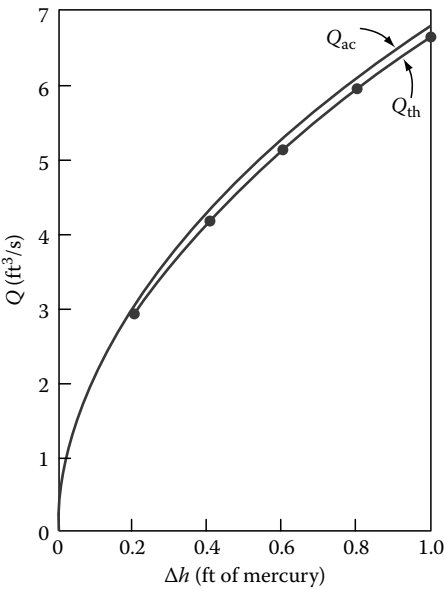


FIGURE 10.22 Calibration curve for the venturi meter of Example 10.6.

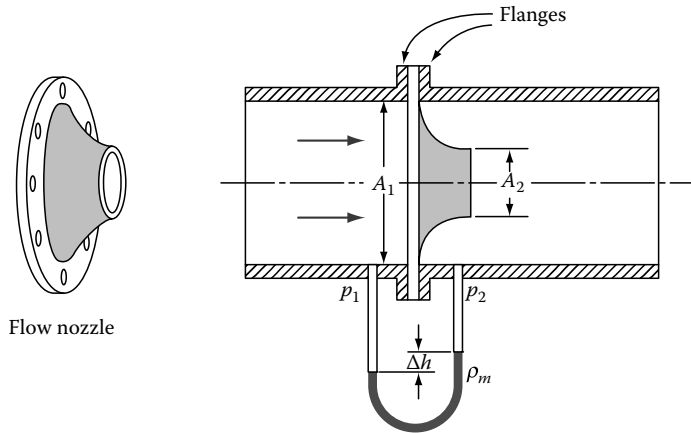


FIGURE 10.23 Flow nozzle and a conventional installation method.

encountered in a flow nozzle. The Bernoulli equation can be applied to the flow nozzle as was done for the venturi. The results are identical for the theoretical flow rate. For the flow nozzle, then, we get

$$Q_{th} = A_2 \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_2^4/D_1^4)}} = A_2 \sqrt{\frac{2g\Delta h(\rho_m/\rho - 1)}{1 - (D_2^4/D_1^4)}} \quad (10.20)$$

Elevation differences are usually negligible in this case because the flow nozzle is relatively short and a small distance thus exists between the static pressure taps. It is desirable in practice to provide an upstream approach length of 10 diameters to ensure uniform flow at the meter.

Equation 10.20 gives the theoretical flow rate through the meter. Owing to losses, however, the actual flow rate is less. We therefore introduce a discharge coefficient for the nozzle defined as

$$C_n = \frac{Q_{ac}}{Q_{th}} \quad (10.21)$$

As with the venturi meter, experimental data are collected; for each value of C_n , there corresponds one pressure drop. The reduced data can be plotted as C_n versus Re_1 , where $Re_1 = V_1 D_1 / \nu = 4Q_{ac} / \pi D_1 \nu$. Tests on a series of flow nozzles have yielded the results of Figure 10.24. The variable β is the ratio of the throat diameter to the pipe diameter.

Example 10.7

Ethylene glycol is sold in retail outlets as antifreeze. A flow nozzle is to be installed in an ethylene glycol–piping system (a 12-nominal pipeline). A 12 × 6 flow nozzle is available. When the nozzle is installed with an inverted U-tube manometer, the pressure drop is measured as 42 cm of ethylene glycol, as illustrated in Figure 10.25. Determine the actual flow rate through the line.

SOLUTION

From Table A.5, for ethylene glycol,

$$\rho = 1.1(1\,000) \text{ kg/m}^3$$

$$\mu = 16.2 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$$

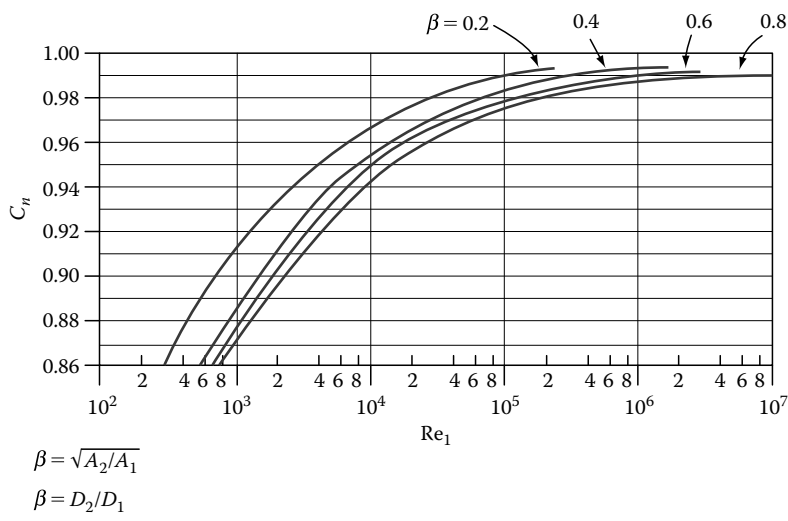


FIGURE 10.24 Discharge coefficient versus Reynolds number for flow nozzles. (Reprinted from *Fluid Meters—Their Theory and Application*, 5th edn., The American Society of Mechanical Engineers, New York, 1959. With permission.)

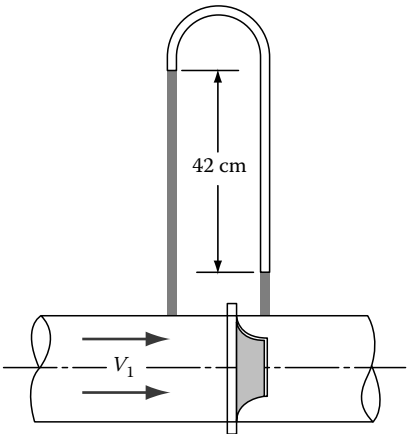


FIGURE 10.25 Flow nozzle installation of Example 10.7.

From Table C.1, for pipe,

$D_1 = 30.48 \text{ cm} \quad A_1 = 729.7 \text{ cm}^2$ (12-nominal standard schedule)

$D_2 = 15.41 \text{ cm} \quad A_2 = 186.5 \text{ cm}^2$ (6-nominal, schedule 40)

Equation 10.20 gives the theoretical flow rate through the nozzle as

$$Q_{th} = A_2 \sqrt{\frac{2g(p_1 - p_2)}{\rho g (1 - D_2^4/D_1^4)}}$$

With

$$\frac{p_1 - p_2}{\rho g} = \Delta h = 0.42 \text{ m}$$

we get the following after substitution:

$$Q_{th} = \frac{186.5}{10^4} \sqrt{\frac{2(9.81)(0.42)}{1 - (15.41^4/30.48^4)}} \\ = 0.0554 \text{ m}^3/\text{s}$$

The nozzle diameter ratio is

$$\beta = \frac{D_2}{D_1} = \frac{15.41}{30.48} = 0.506$$

The pipe Reynolds number is

$$Re_1 = \frac{4Q_{ac}}{\pi D_1 \nu} = \frac{4Q_{ac}(1.1)(1000)}{\pi(0.3048)(16.2 \times 10^{-3})} \\ = 2.83 \times 10^5 Q_{ac}$$

At this point, we must use Figure 10.24 to find a discharge coefficient. A trial-and-error procedure is required because Q_{ac} is unknown. If Q_{th} is substituted into the Reynolds number expression, we find

$$Re_1 = 2.83 \times 10^5 (0.0554) = 1.6 \times 10^4$$

This represents an upper limit. The corresponding C_n from Figure 10.24 is 0.96 for $\beta = 0.5$. To begin, assume a slightly lesser value:

$$C_n = 0.95$$

Then

$$Q_{ac} = C_n Q_{th} = 0.95(0.0554) = 0.0526 \text{ m}^3/\text{s}$$

and

$$Re_1 = 2.83 \times 10^5 Q_{ac} = 1.49 \times 10^4$$

From Figure 10.24, at this Reynolds number, the discharge coefficient is 0.955, which is our second trial value. Assume

$$C_n = 0.955$$

Then

$$Q_{ac} = C_n Q_{th} = 0.955(0.0554) = 0.0529 \text{ m}^3/\text{s}$$

and

$$Re = 2.83 \times 10^5 Q_{ac} = 1.49 \times 10^4$$

Figure 10.24 shows $C_n = 0.955$, which is the assumed value. Thus

$$Q_{ac} = 0.0529 \text{ m}^3/\text{s} \text{ of ethylene glycol}$$

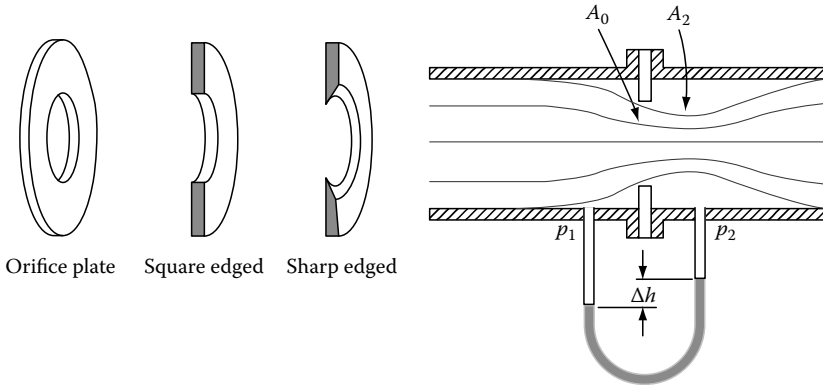


FIGURE 10.26 Orifice plates and a typical meter installation.

A third type of constriction meter is the **orifice meter**, shown in Figure 10.26. The **orifice plate**, merely a flat plate with a hole, is inserted into a pipeline, conventionally between flanges. The hole can be either sharp edged or square edged. As the flow goes through the plate, it follows a streamline pattern similar to that shown in Figure 10.26. Downstream of the plate, the flow reaches a point of minimum area called a *vena contracta*. The static pressure tap p_2 is located at this point, where the streamlines are uniform and parallel. The upstream pressure is measured at point 1.

The Bernoulli equation can be applied to points 1 and 2 to obtain an expression relating flow rate to pressure drop. Although the area at point 2 (the vena contracta) is unknown, it can be expressed in terms of the orifice area A_O :

$$A_2 = C_C A_O$$

where C_C is called a **contraction coefficient**. Applying Bernoulli's equation yields the same results as before except that $C_C A_O$ is substituted for A_2 in the theoretical equation:

$$Q_{th} = C_C A_O \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_2^4/D_1^4)}}$$

The actual flow rate through the meter is considerably less than the corresponding theoretical flow. By introducing an orifice discharge coefficient, defined as

$$C = \frac{Q_{ac}}{Q_{th}}$$

we obtain the following for the actual flow rate:

$$Q_{ac} = C C_C A_O \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_2^4/D_1^4)}}$$

To simplify the formulation for an orifice meter, we can rewrite the equations for Q_{th} and Q_{ac} as

$$Q_{th} \approx A_O \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_0^4/D_1^4)}} \quad (10.22)$$

$$Q_{ac} = C_O A_O \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_0^4/D_1^4)}} \quad (10.23)$$

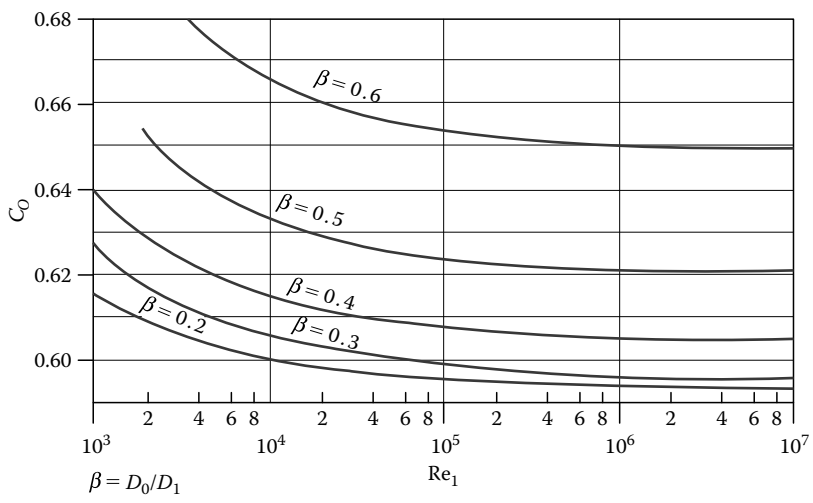


FIGURE 10.27 Orifice discharge coefficient as a function of pipe Reynolds number for circular concentric orifices. (Reprinted from *Fluid Meters—Their Theory and Application*, 5th edn., The American Society of Mechanical Engineers, New York, 1959. With permission.)

The area of significance in the equation is A_O , the orifice area. Furthermore, the orifice coefficient becomes

$$C_O = CC_C = \frac{Q_{ac}}{Q_{th}}$$

It should be remembered that the static pressure p_2 is not measured at the orifice area A_O , but this discrepancy and the losses encountered due to friction and separation are accounted for in the overall coefficient C_O for the meter. Tests on a series of orifice meters yield data that can be presented in a form of C_O versus Re_1 , where again

$$Re_1 = \frac{V_1 D_1}{\nu} = \frac{4Q_{ac}}{\pi D_1 \nu}$$

Such a plot is provided in Figure 10.27, where the ratio of orifice diameter to pipe diameter is an independent variable:

$$\beta = \frac{D_0}{D_1}$$

Because of the reliance on experimentally determined coefficients, it is good practice to allow at least a 10-diameter approach section before the orifice plate.

Example 10.8

An orifice meter is to be installed in a water main that supplies cooling water to a condensing unit. The water main is 24-nominal, schedule 160 pipe. The orifice hole should be drilled or turned in a lathe to make $\beta = 0.5$. The Bernoulli equation indicates that the theoretical flow rate through the line is 12,000 gpm.

- a. Calculate the actual flow rate.
 b. The only available manometer is 6 ft tall. Can it be used as an inverted U-tube for this installation?

SOLUTION

- a. From Table A.5, for water,

$$\rho = 1.94 \text{ slug/ft}^3$$

$$\mu = 1.9 \times 10^{-5} \text{ lbf} \cdot \text{s/ft}^2$$

From Table C.1, for a 24-nominal, schedule 160 pipe,

$$D_1 = 1.609 \text{ ft} \quad \text{and} \quad A_1 = 2.034 \text{ ft}^2$$

With $\beta = 0.5$,

$$D_0 = 0.805 \text{ ft} \quad \text{and} \quad A_0 = \frac{\pi D_0^2}{4} = 0.508 \text{ ft}^2$$

Using conversion factors from Table A.2, we get

$$Q_{\text{th}} = 12,000 \text{ gpm} = 26.7 \text{ ft}^3/\text{s}$$

The Reynolds number upstream is

$$\text{Re}_1 = \frac{4Q_{\text{ac}}}{\pi D_1 \nu} = \frac{4Q_{\text{ac}}(1.94)}{\pi(1.609)(1.9 \times 10^{-5})} = 8.08 \times 10^4 Q_{\text{ac}}$$

The maximum Reynolds number we have exists at

$$\text{Re}_1 = 8.08 \times 10^4 Q_{\text{th}} = 8.08 \times 10^4 (26.7) = 2.16 \times 10^6$$

The corresponding C_O from Figure 10.27 is 0.62, our starting value for the trial-and-error procedure. Assume

$$C_O = 0.62$$

Then

$$Q_{\text{ac}} = C_O Q_{\text{th}} = 0.62(26.7) = 16.6 \text{ ft}^3/\text{s}$$

and

$$\text{Re}_1 = 8.08 \times 10^4 Q_{\text{ac}} = 1.34 \times 10^6$$

At $\beta = 0.5$, Figure 10.24 gives $C_O \approx 0.62$, which agrees with our assumed value. Thus,

$$Q_{\text{ac}} = 16.6 \text{ ft}^3/\text{s} = 7440 \text{ gpm}$$

- b. The corresponding pressure drop is found with Equation 10.22:

$$Q_{\text{th}} = A_0 \sqrt{\frac{2g(p_1 - p_2)}{\rho g(1 - D_0^4/D_1^4)}} = A_0 \sqrt{\frac{2g\Delta h}{1 - (D_0^4/D_1^4)}}$$

By substitution, we get

$$26.7 = 0.508 \sqrt{\frac{2(32.2)\Delta h}{1 - (0.805/1.609)^4}}$$

$$\Delta h = 40.2 \text{ ft of water}$$

A 6-ft-tall water manometer will not suffice. A water-over-mercury manometer that is 6 ft tall will work, however.

The equation formulation for constriction meters has thus far been concerned only with incompressible flow. For compressible flows, however, gas density varies through the meter. We will, therefore, rewrite the descriptive equations to account for the change. Consider an isentropic, subsonic, steady flow of an ideal gas through a venturi meter. The continuity equation is

$$\rho_1 A_1 V_1 = \rho_2 A_2 V_2 = \dot{m}_{\text{isentropic}} = \dot{m}_s$$

If we neglect changes in potential energy, the energy equation is

$$h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2}$$

For an ideal gas with constant specific heats,

$$h_2 - h_1 = c_p(T_2 - T_1)$$

The energy equation becomes

$$c_p T_1 + \frac{V_1^2}{2} = c_p T_2 + \frac{V_2^2}{2}$$

Combining this equation with the continuity equation, we get

$$c_p T_1 + \frac{\dot{m}_s^2}{2\rho_1^2 A_1^2} = c_p T_2 + \frac{\dot{m}_s^2}{2\rho_2^2 A_2^2}$$

or

$$\dot{m}_s^2 \left(\frac{1}{\rho_2^2 A_2^2} - \frac{1}{\rho_1^2 A_1^2} \right) = 2c_p(T_1 - T_2) = 2c_p T_1 \left(1 - \frac{T_2}{T_1} \right) \quad (10.24)$$

For an isentropic compression from points 1 to 2,

$$\frac{p_2}{p_1} = \left(\frac{T_2}{T_1} \right)^{\gamma/(\gamma-1)}$$

Also, $c_p = R\gamma/(\gamma - 1)$. After substitution and rearrangement, Equation 10.24 becomes

$$\frac{\dot{m}_s^2}{\rho_2^2 A_2^2} \left(1 - \frac{\rho_2^2 A_2^2}{\rho_1^2 A_1^2} \right) = 2 \frac{R\gamma}{\gamma - 1} T_1 \left[1 - \left(\frac{p_2}{p_1} \right)^{(\gamma-1)/\gamma} \right]$$

For an ideal gas, $\rho = p/RT$; substituting and simplifying give

$$\frac{\dot{m}_s^2}{A_2^2} = \frac{\rho_2^2 2[\gamma/(\gamma-1)](p_1/\rho_1) \left[1 - (p_2/p_1)^{(\gamma-1)/\gamma}\right]}{1 - (\rho_2^2 A_2^2 / \rho_1^2 A_1^2)}$$

For an isentropic process,

$$\frac{p_1}{\rho_1^\gamma} = \frac{p_2}{\rho_2^\gamma}$$

Substitution yields

$$\frac{\dot{m}_s^2}{A_2^2} = \frac{\rho_1^2 (p_2/p_1)^{2/\gamma} 2[\gamma/(\gamma-1)](p_1/\rho_1) \left[1 - (p_2/p_1)^{(\gamma-1)/\gamma}\right]}{1 - (p_2/p_1)^{2/\gamma} (A_2/A_1)^2}$$

from which we finally obtain

$$\dot{m}_s = A_2 \sqrt{\frac{2(p_1 \rho_1) [\gamma/(\gamma-1)] \left[(p_2/p_1)^{2/\gamma} - (p_2/p_1)^{(\gamma-1)/\gamma} \right]}{1 - (p_2/p_1)^{2/\gamma} (D_2/D_1)^4}} \quad (10.25)$$

With this isentropic equation, it is apparent that the measurements needed on a venturi are p_1, p_2 (not necessarily $p_1 - p_2$), T_1 , the venturi dimensions, and the gas properties. The actual flow rate through the venturi meter is

$$\begin{aligned} \dot{m}_{ac} &= C_V \dot{m}_s \\ &= C_V A_2 \sqrt{\frac{2(p_1 \rho_1) [\gamma/(\gamma-1)] \left[(p_2/p_1)^{2/\gamma} - (p_2/p_1)^{(\gamma-1)/\gamma} \right]}{1 - (p_2/p_1)^{2/\gamma} (D_2/D_1)^4}} \end{aligned} \quad (10.26)$$

where C_V is the discharge coefficient given in Figure 10.20. It is convenient to rewrite Equation 10.26 in a form that is similar to the incompressible case by introducing another coefficient called the **compressibility factor** Y :

$$\dot{m}_{ac} = C_V Y \rho_1 A_2 \sqrt{\frac{2g(p_1 - p_2)}{\rho_1 g (1 - D_2^4/D_1^4)}} \quad (10.27)$$

By equating Equations 10.26 and 10.27, the compressibility factor is determined to be

$$Y = \sqrt{\frac{\gamma}{\gamma-1} \frac{\left[(p_2/p_1)^{2/\gamma} - (p_2/p_1)^{(\gamma+1)/\gamma} \right] (1 - D_2^4/D_1^4)}{\left[1 - (D_2^4/D_1^4) (p_2/p_1)^{2/\gamma} \right] (1 - p_2/p_1)}} \quad (10.28)$$

For a given gas, the ratio of specific heats γ is known. This equation could be plotted as the compressibility factor Y versus the pressure ratio p_2/p_1 for various values of D_2/D_1 . This plot is shown in Figure 10.28 for a venturi meter with $\gamma = 1.4$. The advantage of rewriting the mass flow

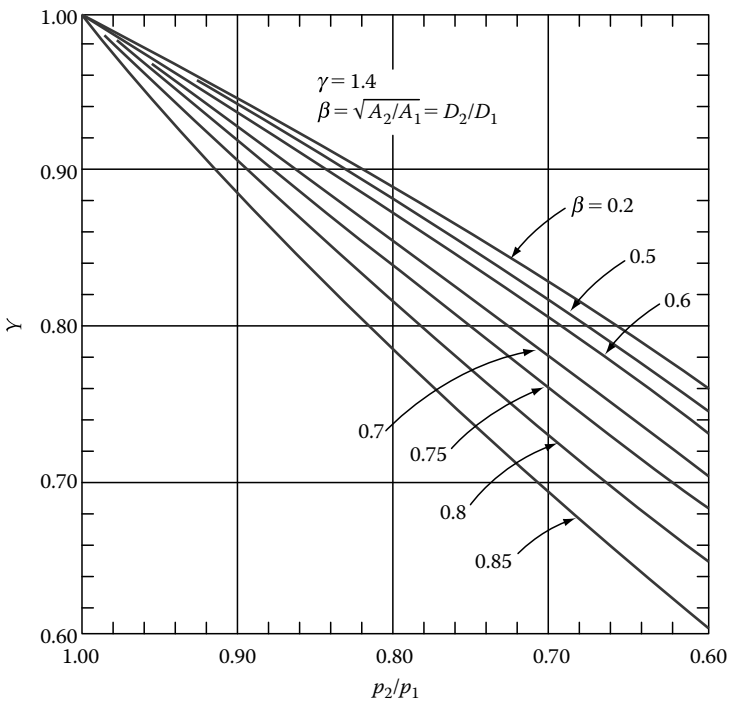


FIGURE 10.28 Compressibility factor Y versus pressure ratio p_2/p_1 for venturi meters and flow nozzles with a compressible fluid of $\gamma = 1.4$. (Reprinted from *Fluid Meters—Their Theory and Application*, 5th edn., The American Society of Mechanical Engineers, New York, 1959. With permission.)

rate equation like the incompressible case is that a pressure drop term appears in the equation, which is more convenient to use if a manometer is available for pressure measurements. Moreover, the compressibility effect is isolated into one factor, Y , that adds a measure of elegance and ease to the formulation. A similar analysis can be performed for a flow nozzle. The results are identical to those for the venturi meter including the compressibility factor of Equations 10.27 and 10.28 and Figure 10.28.

For the orifice meter, the area change is very abrupt, causing a flow configuration in which isentropic flow cannot be assumed. Further, the pressure p_2 is measured at A_2 , which is generally not known, so the orifice area A_o is used in the equations. Therefore, a formulation like that for the venturi and flow nozzle meters does not yield an acceptable model. Consequently, Equation 10.28 cannot be used to obtain the compressibility factor for orifices. Experimental means must be resorted to, and the results are presented in Figure 10.29 for squared-edge orifices. The compressibility factor Y for a series of orifice meters is plotted as a function of pressure ratio p_2/p_1 , where the fluid has $\gamma = 1.4$. For a compressible fluid with an orifice meter used to measure the flow rate,

$$\dot{m}_{ac} = C_o Y \rho_1 A_o \sqrt{\frac{2g(p_1 - p_2)}{\rho_1 g(1 - D_o^4/D_1^4)}} \tag{10.29}$$

where C_o is obtained from Figure 10.27 and Y is found in Figure 10.29.

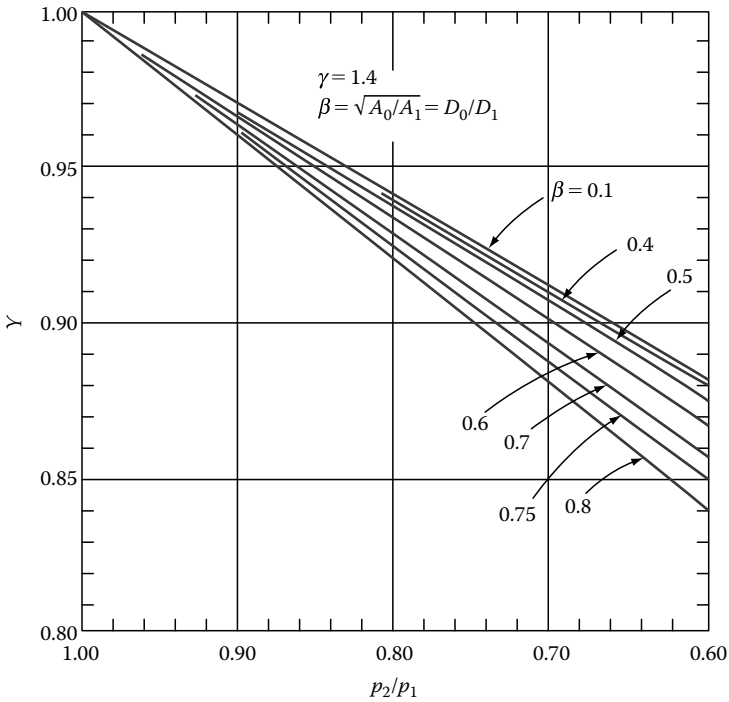


FIGURE 10.29 Compressibility factor Y as a function of pressure ratio p_2/p_1 , for square-edged orifices where the fluid has $\gamma = 1.4$. (Reprinted from *Fluid Meters—Their Theory and Application*, 5th ed., The American Society of Mechanical Engineers, New York, 1959. With permission.)

Example 10.9

In an oxygen-bottling plant, gaseous oxygen is fed from a tank through a 10-nominal pipe to a manifold assembly. The flow is monitored in the 10-nominal line with a 10×6 venturi meter. The mass flow rate of oxygen is a constant 4 kg/s. Owing to an accident in the plant, the venturi meter is rendered inoperative and must be replaced. It is desirable to continue operations, however, until another one can be obtained. An orifice plate made to the same dimensions of 10×6 can be installed temporarily between two flanges, static taps drilled, and gauges attached. For a line pressure of 150 kPa and an oxygen line temperature of 25°C, determine the expected reading on the pressure gauge downstream of the orifice if the flow rate of 4 kg/s can be maintained.

SOLUTION

From Table A.6, for oxygen,

$$\begin{aligned} R &= 260 \text{ J/(kg} \cdot ^\circ\text{C)} \\ \mu &= 20 \times 10^{-6} \text{ N} \cdot \text{s/m}^2 \\ \gamma &= 1.4 \end{aligned}$$

From Table C.1, for pipe,

$$\begin{aligned} D_1 &= 25.46 \text{ cm} \quad \text{and} \quad A_1 = 509.1 \text{ cm}^2 \text{ (10-nominal, schedule 40)} \\ D_o &= 15.41 \text{ cm} \quad \text{and} \quad A_o = 186.5 \text{ cm}^2 \text{ (6-nominal, schedule 40)} \end{aligned}$$

Equation 10.29 gives the actual mass flow rate through an orifice meter as

$$\dot{m}_{ac} = C_o Y \rho_1 A_o \sqrt{\frac{2(p_1 - p_2)}{\rho_1 (1 - D_o^4/D_1^4)}}$$

We now evaluate each term in this expression. The mass flow rate is given as

$$\dot{m}_{ac} = 4 \text{ kg/s of oxygen}$$

Assuming an ideal gas, the oxygen density in the line is

$$\rho_1 = \frac{p_1}{RT_1} = \frac{150\,000}{260(273 + 25)} = 1.936 \text{ kg/m}^3$$

The average velocity in the pipe is found with

$$V_1 = \frac{\dot{m}_{ac}}{\rho_1 A_1} = \frac{4}{1.936(0.050\,91)} = 40.6 \text{ m/s}$$

The Reynolds number is calculated to be

$$\text{Re}_1 = \frac{\rho_1 V_1 D_1}{\mu} = \frac{1.936(40.6)(0.254\,6)}{20 \times 10^{-6}} = 1 \times 10^6$$

For the orifice meter,

$$\beta = \frac{\text{orifice diameter}}{\text{pipe diameter}} = \frac{D_o}{D_1} = \frac{15.41}{25.46} = 0.605$$

At a Reynolds number of 1×10^6 and $\beta = 0.6$, Figure 10.27 shows

$$C_o = 0.65$$

We are now ready to substitute into the mass flow rate expression:

$$4 = 0.65 Y (1.936)(0.018\,65) \sqrt{\frac{2(150\,000 - p_2)}{1.936[1 - (0.605)^4]}}$$

This simplifies to

$$Y = \frac{156.05}{\sqrt{150\,000 - p_2}} \quad (i)$$

Because p_2 and Y are both unknown, a trial-and-error solution is required, using Figure 10.29. Arbitrarily assume that

$$Y = 0.95$$

Then at $\beta = 0.605$, from Figure 10.29,

$$\begin{aligned} \frac{p_2}{p_1} &= 0.84 \\ p_2 &= 0.84(150\,000) = 126\,000 \end{aligned}$$

The right-hand side of Equation i becomes 1.007. Next assume that

$$Y = 0.90$$

Then

$$\frac{p_2}{p_1} = 0.69$$

$$p_2 = 0.69(150\,000) = 103\,500$$

and

$$\text{RHS} = 0.723$$

Third trial:

$$Y = 0.92$$

$$\frac{p_2}{p_1} = 0.75$$

$$p_2 = 0.75(150\,000) = 112\,500$$

$$\text{RHS} = 0.805$$

Fourth trial:

$$Y = 0.93$$

$$\frac{p_2}{p_1} = 0.78$$

$$p_2 = 0.78(150\,000) = 117\,000$$

$$\text{RHS} = 0.859$$

Fifth trial:

$$Y = 0.94$$

$$\frac{p_2}{p_1} = 0.82$$

$$p_2 = 0.82(150\,000) = 123\,000$$

$$\text{RHS} = 0.95$$

The operating point is near $Y = 0.94$; it is difficult to use Figure 10.29 and obtain more accurate results. Thus

$$p_2 \approx 123\,000 \text{ Pa} = 123 \text{ kPa}$$

Another example of a rate meter is shown in Figure 10.30. The meter housing is made of metal and it can be attached to the piping system via flanges or threaded ends. The meter consists of a paddle and a mechanism to which the paddle is attached, as shown in Figure 10.30b. Flow through the meter causes the paddle (labeled 1) to deflect by an amount that is proportional to the flow rate. A greater flow rate causes a greater deflection. A return spring (2) acts to bring the paddle back to its equilibrium position. A bellows (3) made of metal acts as a fluid seal while allowing the paddle to deflect. The paddle (1) is attached to a lever arm, which in turn is attached to a pointer (4) such that the paddle motion is accompanied directly by the motion of the pointer. The pointer indicates the

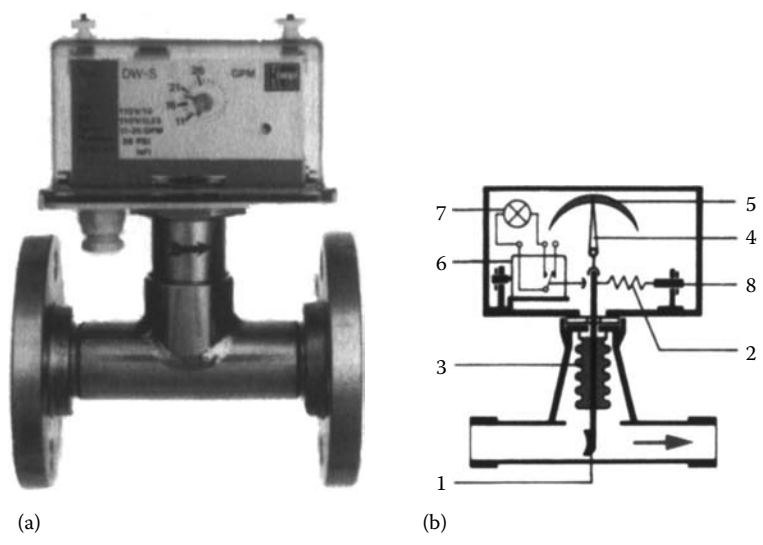


FIGURE 10.30 A paddle-bellows type of rate flow meter. (From Kobold Instruments Inc., Pittsburgh, PA. With permission.)

volume flow rate through the meter on a dial (5). An electrical circuit (6) can be added to operate an indicator light (7) when the flow rate exceeds a certain preset value. Such meters are typically accurate to $\pm 3\%$ and are used extensively for liquids.

10.5 MEASUREMENTS IN OPEN-CHANNEL FLOWS

Useful measurements in open-channel flows include velocity, flow rate, and depth. Velocity measurements are based on techniques that we have already discussed for determining flow velocity in closed conduits. Flow rate measurement in open channels usually involves introducing an obstruction in the flow and then relating a changed property to the flow rate.

A common method of measuring flow is to insert a vertical plate called a **weir** into the channel. The weir extends the entire width of the channel; it can be flat across its top edge or it may contain an opening. Flow over the weir is then related to the liquid height upstream. Consider, for example, the flow over a weir placed in a rectangular channel as in Figure 10.31. The weir in this figure is sharp crested and extends the entire width of the channel. Flow at the sides follows the walls and is not contracted. The end contractions are thus said to be *suppressed*. Upstream the channel sides

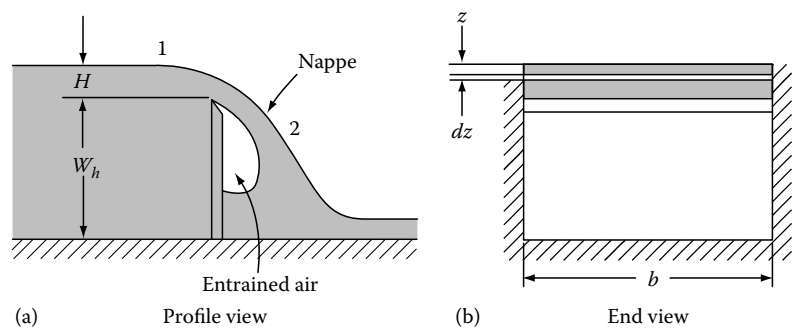


FIGURE 10.31 Flow over a suppressed sharp-crested rectangular weir placed in a rectangular channel.

must therefore be regular and smooth. Downstream it is necessary to extend the sides to keep the *nappe* (see Figure 10.31) laterally confined. The *nappe* entrains air downstream of the weir. Note that H is measured in relation to the liquid height above the crest of the weir.

To develop an equation that predicts flow rate, we begin by determining the flow through a differential area given by

$$dA = b \, dz \quad (10.30)$$

Bernoulli's equation applied to the elemental area dA is

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z = \frac{p_2}{\rho g} + \frac{V_2^2}{2g}$$

Bernoulli's equation as written assumes no friction. The pressures are both equal to atmospheric pressure, and the upstream velocity is negligible in comparison to V_2 . Bernoulli's equation simplifies to

$$V_2 = \sqrt{2gz}$$

The volume flow rate through the incremental area is then

$$dQ = V_2 \, dA = \sqrt{2gz} b \, dz$$

The total flow is found by integration; that is,

$$Q = \int_0^H \sqrt{2g} \, b z^{1/2} \, dz = b \sqrt{2g} \left. \frac{2z^{3/2}}{3} \right|_0^H \quad (10.31)$$

$$Q_{th} = \frac{2b}{3} \sqrt{2g} H^{3/2}$$

where the subscript “th” has been added to denote a theoretical flow rate. Directly over the crest of the weir, the liquid accelerates, and its height at this location is not exactly equal to H . Thus, Equation 10.31 must be modified slightly to account for this discrepancy by introducing a discharge coefficient, C_s ; this coefficient also takes into account the frictional effects that are not included in the Bernoulli equation:

$$Q_{ac} = \frac{2C_s b}{3} \sqrt{2g} H^{3/2} \quad (10.32a)$$

By experiment, the coefficient of discharge has been determined to be

$$C_s = 0.605 + \frac{0.08H}{W_h} \quad (10.32b)$$

where W_h is the height of the weir.

The suppressed rectangular weir in Figure 10.31 forms a *nappe* that extends the entire width of the channel. A variation of this style is illustrated in Figure 10.32, where a vertical plate extends the entire width of the channel. The plate has a rectangular cutout through which liquid flows. Because the sides of the *nappe* are not in contact with any solid surface, they are free to contract, and the weir

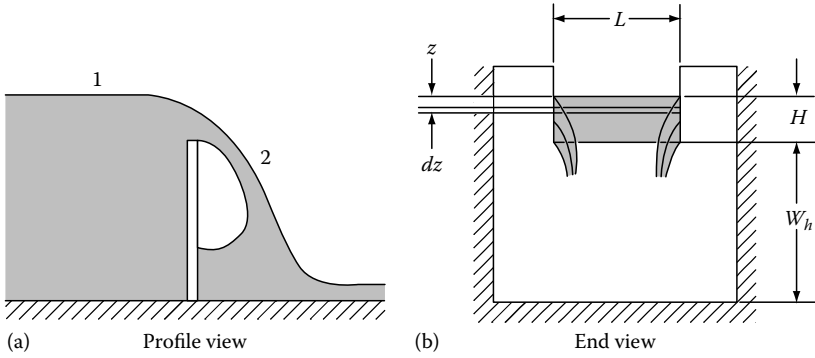


FIGURE 10.32 A contracted rectangular weir installed in a rectangular channel.

is thus called a *contracted rectangular weir*. The contraction effectively reduces the width of the nappe by about one-tenth of H , the height of the liquid above the crest.

To obtain an expression for flow rate, we first determine the incremental flow through an area of thickness dz and width L :

$$dA = L \, dz \quad (10.33)$$

Applying Bernoulli's equation to the incremental area gives the same expression as was obtained for the sharp-crested weir:

$$V_2 = \sqrt{2gz}$$

The incremental flow rate is

$$dQ = V_2 \, dA = \sqrt{2gz} \, L \, dz$$

Integrating from $z = 0$ to $z = H$ gives the total flow as

$$Q_{\text{th}} = \frac{2L}{3} \sqrt{2g} \, H^{3/2} \quad (10.34)$$

The contractions cause dA to be somewhat less than the ideal value given in Equation 10.33. Thus, Equation 10.34 must be modified slightly, to account for the discrepancy, by introducing a discharge coefficient, C_c :

$$Q_{\text{ac}} = \frac{2C_c L}{3} \sqrt{2g} \, H^{3/2} \quad (10.35)$$

By experiment, the coefficient C_c has been determined to have an average value of about 0.65.

The third type of weir that we will discuss is the *triangular*, or *V-notch*, *weir* illustrated in Figure 10.33. This weir allows liquid to flow only through the V-shaped cutout in the plate. The vertex angle θ varies in conventional designs from 10° to 90° . To obtain an expression for flow rate, we first write an equation for the incremental area dA :

$$dA = x \, dz$$

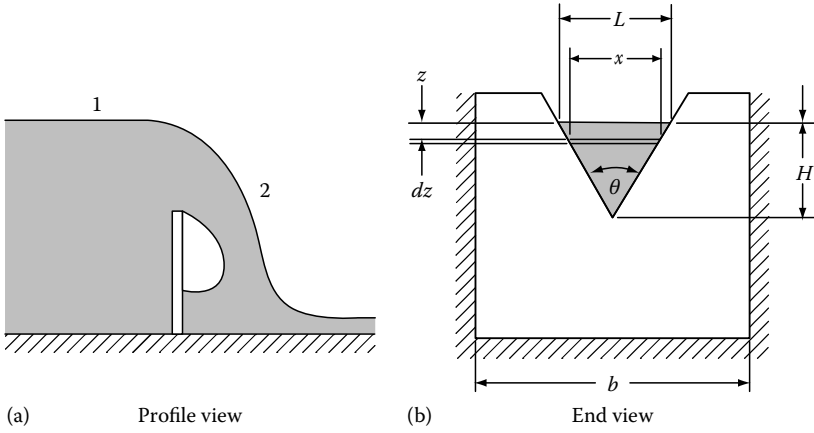


FIGURE 10.33 Flow over a triangular, or V-notch, weir placed in a rectangular channel.

The vertex half-angle is

$$\tan \frac{\theta}{2} = \frac{x/2}{H - z}$$

or

$$x = 2(H - z) \tan \frac{\theta}{2}$$

The incremental area now becomes

$$dA = 2(H - z) \tan \frac{\theta}{2} dz \quad (10.36)$$

The Bernoulli equation applied to flow through the weir gives

$$V_2 = \sqrt{2gz}$$

The incremental flow rate is

$$dQ = V_2 dA = \sqrt{2gz} 2(H - z) \tan \frac{\theta}{2} dz$$

The total flow rate is found by integration:

$$Q = 2\sqrt{2g} \tan \frac{\theta}{2} \int_0^H z^{1/2} (H - z) dz$$

or

$$Q_{th} = \frac{8H^{5/2}}{15} \sqrt{2g} \tan \frac{\theta}{2} \quad (10.37)$$

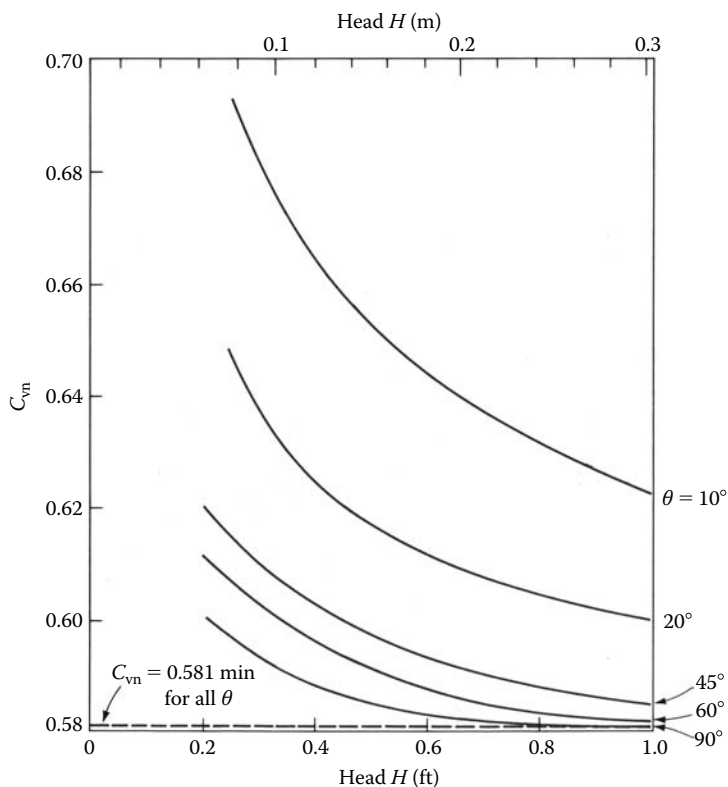


FIGURE 10.34 Discharge coefficient for V-notch weirs. (Reprinted from Lenz, A.T., *Trans. ASCE*, 108, 739, 1943. With permission.)

Owing to frictional and real fluid effects, the volume flow rate is somewhat smaller. Thus, Equation 10.37 must be modified by introducing a discharge coefficient, C_{vn} :

$$Q_{ac} = \frac{8C_{vn}H^{5/2}}{15} \sqrt{2g \tan \frac{\theta}{2}} \tag{10.38}$$

By experiment, the discharge coefficient has been found to vary with head H and with θ . Results of extensive tests with V-notch weirs have produced the results given in Figure 10.34 for C_{vn} versus H with θ as an independent variable.

It should be mentioned that at low flow rates the nappe clings to the weir downstream. In other words, there is no air entrainment. When this occurs, the equations just written for various weirs no longer give an accurate descriptions of the flow rates. Other devices that are useful for measuring flow rates in open channels are the sluice gate and the venturi flume; both were discussed in Chapter 7.

As we saw in the development of the equations for weirs, the flow rate depends on the measurement of the liquid height upstream. It is essential that the liquid height be measured accurately. This can be accomplished with two conventional devices—the *point gauge* and the *hook gauge* (Figure 10.35). The sharpened end of either gauge is positioned so that it just touches the liquid surface. The vernier scale then gives the measurement of depth.

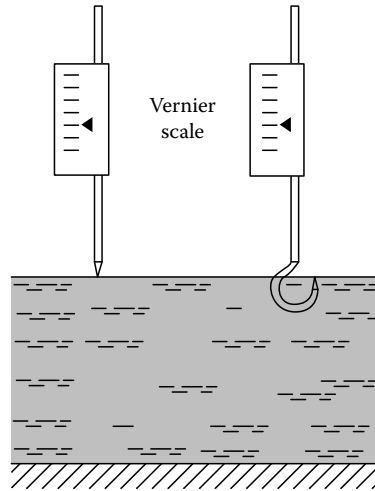


FIGURE 10.35 Point gauge and hook gauge used to measure liquid depth.

Example 10.10

A 45° V-notch weir is placed in an open channel that conveys water in an irrigation ditch. The height of the water above the vertex of the weir is 0.6 ft. Determine the volume flow rate in the channel.

SOLUTION

Equation 10.38 applies:

$$Q_{ac} = \frac{8C_{vn}H^{5/2}}{15} \sqrt{2g} \tan \frac{\theta}{2}$$

For $H = 0.6$ ft and $\theta = 45^\circ$, Figure 10.33 gives

$$C_{vn} = 0.592$$

By substitution, we get

$$Q_{ac} = \frac{8(0.592)(0.6)^{5/2}}{15} \sqrt{2(32.2)} \tan \frac{45}{2}$$

$$Q_{ac} = 0.293 \text{ ft}^3/\text{s}$$

10.6 SUMMARY

In this chapter, we examined the techniques and methods of measuring various parameters in fluids. A pitot tube and a pitot-static tube were used to measure pressure and velocity. Ways of measuring fluid viscosity were presented. For closed-conduit flow, a summary of flow rate meters was given. For open-channel flow, a discussion of weirs was presented. This presentation, then, has offered some insights into theories of measurement.

PROBLEMS

Viscosity Measurement

- 10.1** A rotating-cup viscometer has two cylinders of radii 1.000 and 1.250 in. The cylinder depth is 4.000 in. A liquid of unknown viscosity is placed in the annulus between the two cylinders, and the outer cylinder begins rotating. Under steady-state conditions, the rotational speed is 30 rev/min. The torque exerted on the inner cylinder is 1×10^{-4} ft · lbf. Calculate the viscosity of the liquid.
- 10.2** In a process by which glycerine is produced, its purity is measured at various times at one location in the flow line. To measure its viscosity, for example, a rotating-cup viscometer is used. This viscometer is 15 cm high and has cups with diameters of 4.00 and 7.00 cm. If the rotational speed of the outer cylinder is 20 rev/min, determine the expected torque reading on the inner cylinder.
- 10.3** A rotating-cup viscometer is used to measure the viscosity of an unknown liquid. The cylinders have radii of 3 and 4 cm. A liquid of unknown viscosity is placed in the annulus between the cylinders. The liquid is tested at two different rotational speeds of the outer cup. Under steady conditions, when the rotational speed is 30 rev/min, the torque is 1×10^{-6} N · m. When the rotational speed is 40 rev/min, determine the expected torque reading if the liquid is Newtonian. Take the inner cup length to be 4 cm.
- 10.4** Refer to Example 10.1. If an aluminum sphere of diameter $\frac{1}{2}$ in. is dropped into the shampoo, what is its expected terminal velocity?
- 10.5** A marble that is 1.5 mm in diameter falls through a jar of honey 15 cm tall. Approximately how long will it take the marble to reach the bottom? Assume the marble's properties to be the same as those of glass and the properties of honey to be equal to those of glycerine. The jar diameter is 7 cm.
- 10.6** A glass tube $1\frac{1}{2}$ in. in diameter contains a commercial automotive oil additive. A steel sphere $\frac{1}{8}$ in. in diameter falls through it at a rate of 1 in./4 s. Determine the viscosity of the additive if its specific gravity is 0.86.
- 10.7** A hard rubber sphere $\frac{1}{8}$ in. in diameter falls through linseed oil in a cylinder. The cylinder diameter is such that the drag coefficient on the sphere is expressed by $C_D = 24/\text{Re}$. Determine the maximum cylinder diameter that is permissible for this case.
- 10.8** The properties of pancake syrup are being measured in a lab. The syrup's density is found to be 868 kg/m³. A steel sphere 5 mm in diameter falls through the syrup at a rate of 3 cm/s. The tube used is 10 cm in diameter. As a check on the viscosity calculations, the syrup is placed in a rotating-cup viscometer. The cups have radii of 4 and 5 cm; the length is 12 cm. At rotational speeds of 5, 10, 20, and 30 rev/min, determine the expected torque readings.

Pressure and Velocity Measurements

- 10.9** If the pitot tube reading of Example 10.3 is treated as being incompressible, what is the percentage of error from the correct reading?
- 10.10** When making velocity measurements in a tube, it is possible to divide the tube cross section into five equal areas and calculate the volume flow rate from the data. Devise a scheme for dividing the cross section into six equal areas. Where must the velocity be known in the cross section? Rework Example 10.5 using the six-area formulation.
- 10.11** A huge axial-flow fan is used to force air into an underground mine shaft for ventilation. The fan is located in a circular length of ductwork 8 ft in diameter.

To measure flow rate through the fan, a traverse of the cross section is made with a pitot-static tube. The readings are given in Table P10.11.

Assuming a symmetric profile, sketch the velocity distribution and determine the mass flow rate of air if the temperature is 60°F and the static pressure is 14.8 psia.

TABLE P10.11

Distance below Centerline (ft)	Pitot-Static Tube Reading (in. Water)
0	0.7
1	0.6
2	0.42
3	0.2
4	0

10.12 A commercial air conditioning unit has a return air duct that is 3 m tall by 2 m wide. Air flow into the unit is to be measured with a pitot-static tube. The return air duct is thus divided into 20 equal rectangular areas as shown in Figure P10.12. The readings taken are summarized in the following table:

• 1	• 2	• 3	• 4
• 5	• 6	• 7	• 8
• 9	• 10	• 11	• 12
• 13	• 14	• 15	• 16
• 17	• 18	• 19	• 20

FIGURE P10.12

Position	Pressure Drop (mm Water)	Position	Pressure Drop (mm Water)
1	5	11	8.5
2	6.0	12	7.5
3	6.5	13	5.0
4	6.0	14	7.0
5	5.0	15	7.5
6	6.5	16	7.0
7	7.5	17	5.0
8	7.0	18	6.0
9	5.0	19	6.5
10	7.5	20	6.0

Determine the average flow velocity and the mass flow rate for an air temperature of 25°C and a static pressure of 100 kPa.

10.13 In Example 10.5, velocity data were used to calculate the volume flow rate through a pipe divided into five equal areas. Suppose instead that the cross section is divided into four equal areas, concentric rings with radii of 2.91 ($= 11.63/4$), 5.82, 8.72, and 11.63 in. Calculate the volume flow rate by taking velocities at radii of

- 1.45 in. (=2.91/2)
- 4.36 in. ([5.82 – 2.91]/2 + 2.91)
- 7.27 in.
- 10.18 in.

Compare your answer with the results of Example 10.5.

Volume Flow Rate Measurement

10.14 A venturi meter is calibrated in the laboratory. For a particular flow rate through the meter, the water is directed into a volume-measuring tank. Readings of pressure drops are also obtained. The data are as follows:

- Upstream diameter = 1.025 in.
- Throat diameter = 0.625 in.

Q_{ac} at Tank (gpm)	Δh at Meter (in. Water)
0.9	0.4
1.8	0.9
2.5	1.3
2.9	1.6
3.5	2.3
3.8	2.7
4.5	3.75
5.0	4.6
6.0	5.75

Source: Data from Fluid Mechanics Laboratory,
University of New Orleans, New Orleans, LA.

- a. Plot Q_{ac} versus Δh .
 - b. On the same graph, plot Q_{th} versus Δh .
 - c. Plot Re_1 versus C_V on semilog paper.
- 10.15** An orifice meter is calibrated in the laboratory. For a certain flow rate through the meter, water is directed into a volume-measuring tank yielding data of actual flow rate versus pressure drop in the meter. The results are as follows:

Flow Rate Measured (m^3/s)	Pressure (cm Water)
5.68×10^{-5}	0.762
1.14×10^{-4}	3.81
1.58×10^{-4}	5.72
1.83×10^{-4}	8.38
2.21×10^{-4}	11.4
2.40×10^{-4}	15.0
2.84×10^{-4}	20.3
3.15×10^{-4}	24.8
3.79×10^{-4}	29.5

Source: Data from Fluid Mechanics Laboratory,
University of New Orleans, New Orleans, LA.

Upstream diameter = 2.60 in.

Throat diameter = 1.59 in.

- a. Plot Q_{ac} versus Δh .
- b. On the same graph, plot Q_{th} versus Δh .
- c. Plot Re_1 versus C_O on semilog paper.

- 10.16** Water flows in an 8×4 venturi meter. The meter itself is in a vertical flow line with the flow direction downward. The difference in elevation between the static pressure taps is 45 cm. A mercury manometer attached to the meter reads 10 cm of mercury. Calculate the flow rate through the meter.
- 10.17** Repeat Problem 10.16 for a meter placed in a horizontal line. All other data and dimensions are the same.
- 10.18** Carbon tetrachloride flows through a 10×8 venturi meter inclined at an angle of 30° with the horizontal; flow is in the downward direction. A mercury manometer attached to the meter reads 5 in. Calculate the flow rate through the meter.
- 10.19** Linseed oil flows through a 12×10 venturi meter in a horizontal line. Determine the equivalent readings on a mercury manometer attached to the meter for the following flow rates: (a) $1 \text{ m}^3/\text{s}$, (b) $0.5 \text{ m}^3/\text{s}$, and (c) $2 \text{ m}^3/\text{s}$.
- 10.20** Octane is piped through a line into which a 10×8 venturi is installed. The line pressure is 220 kPa, and the volume flow through the meter is $0.6 \text{ m}^3/\text{s}$. The meter is inclined at 85° from the horizontal with flow in the downward direction. The distance between static pressure taps is 25 cm.
 - a. Determine the pressure at the throat.
 - b. If a mercury manometer is attached as in Figure 10.18a, determine Δh .
 - c. If an air-over-octane manometer is used in an inverted U-tube configuration, determine Δh .
- 10.21** Water is transported through a pipe into which a 12×8 flow nozzle has been installed with an inverted U-tube manometer. The pressure drop is measured as 12 cm of water. Determine the actual flow rate through the line.
- 10.22** Octane flows in a pipe into which a 4×3 flow nozzle has been installed. A water manometer attached to the static pressure taps of the nozzle reads 95 cm of water. Calculate the volume flow of octane.
- 10.23** Benzene flows in a pipe that has an 8×6 flow nozzle. A mercury manometer attached to the meter reads 4 in. Determine the volume flow rate through the meter.
- 10.24** Castor oil flows at $0.06 \text{ m}^3/\text{s}$ through a pipe. A 10×8 flow nozzle is installed. Determine the pressure drop in terms of meters of mercury.
- 10.25** A 12×10 venturi and a 12×10 flow nozzle are installed in a line that conveys $12 \text{ ft}^3/\text{s}$ of chloroform. Pressure gauges are attached to the meters. What are the expected pressure drops?
- 10.26** Using the charts developed for flow through constriction meters (C_V versus Re , for example) often requires a trial-and-error procedure. How can the same data be used to generate a plot that requires no trial-and-error method? Show results by equations and show logic. Assume that meter dimensions and pressure head loss are known.
- 10.27** In Example 10.8, the pressure drop calculated was 40.2 ft of water. Calculate the corresponding pressure drop if the following types of manometers are used in a U-tube: (a) water over mercury and (b) water over kerosene.
- 10.28** Glycerine flows through a 6-nominal, schedule 80 pipeline into which an orifice plate with a 4.00-cm hole has been installed. Pressure gauges are attached about the plate. What is the flow rate if the pressure drop is equivalent to 65 m of mercury?
- 10.29** Heptane flows through a 10-nominal, schedule 80 pipeline into which an orifice with a 6.0-in hole has been installed. A water manometer attached to the meter reads 6 ft of water. Determine the flow rate through the line.

- 10.30** Three different flow meters have been installed in a single pipeline: an orifice meter, a flow nozzle, and a venturi meter. All have dimensions of 16×8 . The flow rate through the line is $0.2 \text{ m}^3/\text{s}$ of propylene glycol. What will be the readings of a mercury manometer attached to the meters?
- 10.31** Derive Equation 10.28.
- 10.32** If the venturi meter of Example 10.9 is replaced with a 10×6 flow nozzle, what is the expected downstream pressure reading?
- 10.33** Hydrogen flows in a 1-nominal pipe. A $1 \times \frac{1}{2}$ venturi meter has been installed with pressure gauges. For readings of 10 and 8 psia from the meter, determine the mass flow rate. Take the line temperature to be 60°F .
- 10.34** An 8×6 venturi is placed in a line carrying air. The line temperature is 40°F ; the line pressure is 100 psia. Prepare a graph of mass flow rate as a function of throat pressure over the range of 60–90 psia.
- 10.35** An orifice plate with a hole diameter of 5.1 cm is placed in a 4-nominal line that conveys helium at a flow rate of 0.2 kg/s . The line pressure and temperature are 200 kPa and 25°C , respectively. Assuming that helium has a ratio of specific heats of 1.4, determine the pressure downstream of the orifice. (Note that γ for helium is not 1.4 but 1.66. Without a chart such as Figure 10.29 or an equation, the pressure found assuming $\gamma = 1.4$ is a best estimate.)

Flow over a Weir

- 10.36** A rectangular sharp-crested weir extends across a rectangular channel. The weir is 1 m high and 3 m wide. The upstream head measured from the channel bottom is 2.4 m. Determine the flow of water over the weir.
- 10.37** A rectangular sharp-crested weir is installed in an open channel that conveys water at $250 \text{ ft}^3/\text{s}$. The channel width is 6 ft, and the weir height is 4 ft. Determine the height of the liquid upstream.
- 10.38** A contracted rectangular weir is placed in a channel 12 m wide. The rectangular cutout is 6 m wide and 2 m deep. The weir height is 6.5 m. Determine the volume flow over the weir if the water head as measured from channel bottom is 5 m.
- 10.39** Derive Equation 10.37.
- 10.40** Repeat Example 10.10 if the weir has an included angle of 90° and all other conditions remain the same.
- 10.41** A 60° V-notch weir is placed in a channel that conveys water at a flow rate of $1 \text{ m}^3/\text{s}$. Determine the water head upstream.
- 10.42** How do the equations for flow over weirs change with fluid properties? Rewrite all affected equations.
- 10.43** A weir consists of a semicircular cutout in a vertical flat plate as shown in Figure P10.43. Derive an equation for Q_{th} versus H for the weir.

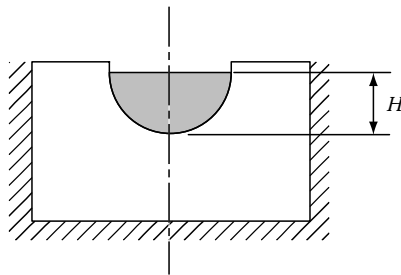


FIGURE P10.43

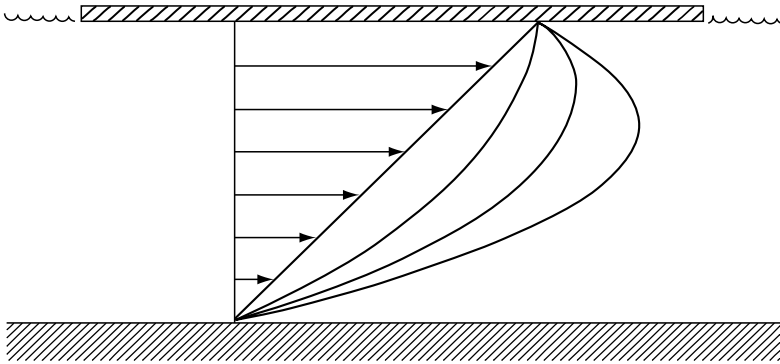
- 10.44** A V-notch weir is placed in a channel that conveys water at a flow rate of $0.006 \text{ m}^3/\text{s}$. Determine and graph the variation of upstream height with included angle—that is, H as a function of θ .
- 10.45** The flow rate in a rectangular open channel must be measured. A V-notch weir is to be placed in the channel, and it is necessary to determine which angle θ will provide the most convenient results. As the first step in the calculations, plot Q_{ac} versus H for V-notch weirs, using θ as an independent variable.
- 10.46** Construct a plot of the suppressed-weir equation:

$$C_s = 0.605 + \frac{0.08H}{W_h}$$

Place H on the horizontal axis, C_s on the vertical axis, and W_h as an independent variable. Let H vary from 0 to 1 ft, and let W_h take on values of 1, 2, 3, and 4 ft.

- 10.47** A suppressed rectangular weir is placed in a channel that conveys water at a flow rate of $0.5 \text{ ft}^3/\text{s}$. For a channel width of 4 ft and a weir height of 2 ft, determine the height H .
- 10.48** A contracted rectangular weir is placed in a rectangular channel. The liquid height H is 15 cm, and the volume flow rate is $0.03 \text{ m}^3/\text{s}$. Determine the width L of the rectangular cutout.
- 10.49** The flow rate of water over a suppressed rectangular weir is $100 \text{ ft}^3/\text{s}$. The channel width is 4 ft, and the liquid height H above the weir is 2 ft. Determine the weir height W_h .
- 10.50** A suppressed rectangular weir is placed in a 3-m-wide channel that conveys water at $3 \text{ m}^3/\text{s}$. The weir height is 1 m. Determine the liquid height H .

11 The Navier–Stokes Equations



Chapter 5 was concerned with flow in closed conduits. In Section 5.5, for example, we modeled laminar flow through circular, rectangular, and annular passages. For each case, a control volume was set up, and then the continuity and momentum equations were written. Solving the resulting differential equation and applying boundary conditions yielded a velocity distribution for the problem. We performed a similar analysis in Chapter 7 for laminar flow down an incline.

Can a control volume for a general fluid mechanics problem be set up to obtain a *comprehensive* set of differential equations from which we can obtain differential equations for the simpler problems like those described above? Such differential equations do exist and will be presented in this chapter.

Turbulence is an important area of study in fluid mechanics because most flows with which we are familiar (in a pipe or a channel, for example) are turbulent flows. The equations of motion for turbulent flow will be discussed in this chapter. To show how these equations can be applied to a simple problem, the velocity profile for turbulent flow in a circular tube will be formulated.

11.1 EQUATIONS OF MOTION

A set of differential equations to describe fluid motion can be derived for the general case. Consider the control volume of Figure 11.1. It is a differential element in a fluid continuum. Forces acting on it are to include gravitational, viscous or frictional, and pressure forces to encompass the majority of fluid problems. If the continuity and momentum equations are written for all three principal directions, and the fluid is Newtonian with constant properties of density and viscosity, a set of differential equations results. The momentum equation written for each principal direction gives what are called the **Navier–Stokes equations**. Their derivation is lengthy, involved, and beyond the scope of this text. The equations will be given without derivation here, but interested readers may refer to the specific references cited at the end of the book.

For the general problem in fluid mechanics, assuming that we have a Newtonian fluid with constant properties, the governing equations in Cartesian coordinates are the following.

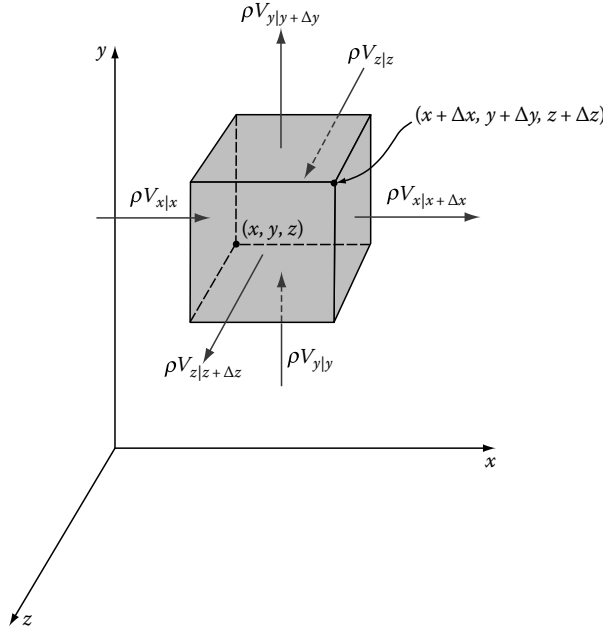


FIGURE 11.1 A differential fluid element.

Continuity equation:

$$\frac{\partial \rho}{\partial t} + \frac{\partial(\rho V_x)}{\partial x} + \frac{\partial(\rho V_y)}{\partial y} + \frac{\partial(\rho V_z)}{\partial z} = 0 \quad (11.1)$$

Navier–Stokes equations:

x-component:

$$\begin{aligned} & \rho \left(\frac{\partial V_x}{\partial t} + V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} + V_z \frac{\partial V_x}{\partial z} \right) \\ &= -\frac{\partial p}{\partial x} + \mu \left(\frac{\partial^2 V_x}{\partial x^2} + \frac{\partial^2 V_x}{\partial y^2} + \frac{\partial^2 V_x}{\partial z^2} \right) + \rho g_x \end{aligned} \quad (11.2a)$$

y-component:

$$\begin{aligned} & \rho \left(\frac{\partial V_y}{\partial t} + V_x \frac{\partial V_y}{\partial x} + V_y \frac{\partial V_y}{\partial y} + V_z \frac{\partial V_y}{\partial z} \right) \\ &= -\frac{\partial p}{\partial y} + \mu \left(\frac{\partial^2 V_y}{\partial x^2} + \frac{\partial^2 V_y}{\partial y^2} + \frac{\partial^2 V_y}{\partial z^2} \right) + \rho g_y \end{aligned} \quad (11.2b)$$

z-component:

$$\begin{aligned} & \rho \left(\frac{\partial V_z}{\partial t} + V_x \frac{\partial V_z}{\partial x} + V_y \frac{\partial V_z}{\partial y} + V_z \frac{\partial V_z}{\partial z} \right) \\ &= -\frac{\partial p}{\partial z} + \mu \left(\frac{\partial^2 V_z}{\partial x^2} + \frac{\partial^2 V_z}{\partial y^2} + \frac{\partial^2 V_z}{\partial z^2} \right) + \rho g_z \end{aligned} \quad (11.2c)$$

The left-hand sides of Equations 11.2 are acceleration terms. These terms are nonlinear and present difficulties in trying to solve the equations. Even though a variety of exact solutions for specific flows have been found, the equations have not been solved in general—owing primarily to the presence of the nonlinear terms. The right-hand side of the equations includes pressure, gravitational or body, and viscous forces. In polar cylindrical coordinates, these equations are the following.

Continuity equation:

$$\frac{\partial \rho}{\partial t} + \frac{1}{r} \frac{\partial(\rho r V_r)}{\partial r} + \frac{1}{r} \frac{\partial(\rho V_\theta)}{\partial \theta} + \frac{\partial(\rho V_z)}{\partial z} = 0 \quad (11.3)$$

Navier–Stokes equations:

r -component:

$$\begin{aligned} & \rho \left(\frac{\partial V_r}{\partial t} + V_r \frac{\partial V_r}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_r}{\partial \theta} + V_z \frac{\partial V_r}{\partial z} - \frac{V_\theta^2}{r} \right) \\ &= -\frac{\partial p}{\partial r} + \mu \left\{ \frac{\partial}{\partial r} \left[\frac{1}{r} \frac{\partial(r V_r)}{\partial r} \right] + \frac{1}{r^2} \frac{\partial^2 V_r}{\partial \theta^2} + \frac{\partial^2 V_r}{\partial z^2} - \frac{2}{r^2} \frac{\partial V_\theta}{\partial \theta} \right\} + \rho g_r \end{aligned} \quad (11.4a)$$

θ -component:

$$\begin{aligned} & \rho \left(\frac{\partial V_\theta}{\partial t} + V_r \frac{\partial V_\theta}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_\theta}{\partial \theta} + \frac{V_r V_\theta}{r} + V_z \frac{\partial V_\theta}{\partial z} \right) \\ &= -\frac{1}{r} \frac{\partial p}{\partial \theta} + \mu \left\{ \frac{\partial}{\partial r} \left[\frac{1}{r} \frac{\partial(r V_\theta)}{\partial r} \right] + \frac{1}{r^2} \frac{\partial^2 V_\theta}{\partial \theta^2} + \frac{2}{r^2} \frac{\partial V_r}{\partial \theta} + \frac{\partial^2 V_\theta}{\partial z^2} \right\} + \rho g_\theta \end{aligned} \quad (11.4b)$$

z -component:

$$\begin{aligned} & \rho \left(\frac{\partial V_z}{\partial t} + V_r \frac{\partial V_z}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_z}{\partial \theta} + V_z \frac{\partial V_z}{\partial z} \right) \\ &= -\frac{\partial p}{\partial z} + \mu \left[\frac{1}{r} \frac{\partial}{\partial r} \left(r \frac{\partial V_z}{\partial r} \right) + \frac{1}{r^2} \frac{\partial^2 V_z}{\partial \theta^2} + \frac{\partial^2 V_z}{\partial z^2} \right] + \rho g_z \end{aligned} \quad (11.4c)$$

In cylindrical coordinates, the term $\rho V_\theta^2/r$ is the centrifugal force that gives the effective r -directed force resulting from fluid motion in the θ -direction. When one is transforming equations from Cartesian to cylindrical coordinates, this term arises automatically. The term $\rho V_r V_\theta/r$ is the Coriolis force, which is the effective θ -directed force resulting from flow in both the r - and θ -directions. This term also arises automatically when one is transforming from Cartesian to cylindrical coordinates.

In vector notation, the equations are as follows:

$$\text{Continuity equation: } \frac{\partial \rho}{\partial t} + \nabla \cdot \rho \mathbf{V} = 0 \quad (11.5)$$

Navier–Stokes equations:

$$\frac{\partial \mathbf{V}}{\partial t} + (\mathbf{V} \cdot \nabla) \mathbf{V} = -\frac{1}{\rho} \nabla p - \nabla g + \nu \nabla^2 \mathbf{V} \quad (11.6)$$

where the vector operator del, ∇ , is defined in Cartesian coordinates—for example, as

$$\nabla() = \mathbf{i} \frac{\partial()}{\partial x} + \mathbf{j} \frac{\partial()}{\partial y} + \mathbf{k} \frac{\partial()}{\partial z} \quad (11.7)$$

$$\nabla^2() = \frac{\partial^2()}{\partial x^2} + \frac{\partial^2()}{\partial y^2} + \frac{\partial^2()}{\partial z^2} \quad (11.8)$$

11.2 APPLICATIONS TO LAMINAR FLOW

The equations that we have just written are easily applied to various laminar flow problems to obtain the descriptive differential equation. The types of problems that are encountered are classified in a number of ways. For example, a **steady-flow** problem is one in which there is no time dependence. A **parallel flow** problem is one in which only one velocity exists within the fluid. Regardless of problem type, if the Navier–Stokes equations can be solved for the geometry of interest, subject to the boundary conditions (and this is not always possible), the solution will yield a velocity profile. Once the velocity profile is known, all other parameters of the flow can be found. The volume flow rate is obtained by integrating the velocity profile over the cross-sectional area. The average velocity is obtained by dividing the volume flow rate by the cross-sectional area. The maximum velocity can be obtained either by inspection or by differentiation. The shear stress at the wall is found by differentiating the velocity according to Newton’s law of viscosity. The instantaneous velocity is thus an important parameter.

In this section, we will illustrate a number of cases that involve setting up the differential equation, solving it, and deriving the pertinent flow details, which vary from problem to problem. For all problems discussed, we will follow a solution format that includes several steps:

1. Discussion of conditions and assumptions.
2. Sketch of the problem with an expected velocity profile.
3. Derivation of the differential equation.
4. Solution for the instantaneous velocity.
5. Solution for the pertinent flow details.

11.2.1 FLOW IN A CIRCULAR DUCT

Consider steady laminar flow in a tube or pipe as shown in Figure 11.2, where the flow is in the z -direction and the effect of gravity is neglected. At most, we can have three velocity components; in cylindrical coordinates, these are

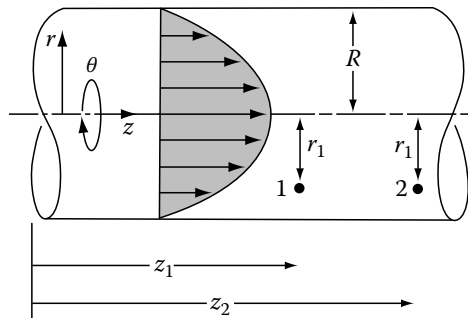


FIGURE 11.2 Laminar flow in a tube.

$$V_r \quad V_\theta \quad V_z$$

For laminar flow, V_r and V_θ are zero. Only the axial velocity V_z is nonzero. This velocity can be a function of three space variables and of time; that is,

$$V_z = V_z(r, \theta, z, t)$$

We can eliminate the time dependence because the flow is steady. Referring to Figure 11.2, we see that the velocity is independent of z . Specifically, for two different axial locations that have the same r and θ (points 1 and 2), the velocity is the same. Similar reasoning shows that V_z is also independent of θ .

For steady laminar flow in a tube, we thus have

$$V_z = V_z(r)$$

Equations 11.3 and 11.4 reduce to the following:

$$\text{Continuity: } \frac{\partial V_z}{\partial z} = 0 \quad (11.9a)$$

$$r\text{-component: } 0 = -\frac{\partial p}{\partial r} \quad (11.9b)$$

$$\theta\text{-component: } 0 = -\frac{1}{r} \frac{\partial p}{\partial \theta} \quad (11.9c)$$

$$z\text{-component: } 0 = -\frac{\partial p}{\partial z} + \frac{\mu}{r} \frac{\partial}{\partial r} \left(r \frac{\partial V_z}{\partial r} \right) \quad (11.9d)$$

The continuity equation states that V_z is not a function of z . The r - and θ -component equations state that pressure does not vary in the r - and θ -directions. The differential equation to be solved, then, is Equation 11.9d.

It is instructive to digress momentarily to consider steady laminar flow in an annulus as another example. Following the same lines of reasoning as for steady laminar flow in a tube, we can show that again Equation 11.9d is the equation to be solved. What differentiates these problems are the boundary conditions that must be written for each and used when solving the differential equation. For a complete statement of a problem, therefore, the differential equation and its boundary conditions must be given.

For flow in a tube, the boundary conditions are

$$r = R \quad V_z = 0 \quad (\text{condition 1})$$

$$r = 0 \quad \frac{\partial V_z}{\partial r} = 0 \quad (\text{condition 2})$$

The first of these is the nonslip condition at the wall. The second states that the slope at the centerline is zero, or that the velocity is finite at the centerline. Equation 11.9d can be solved by direct integration as in Chapter 5:

$$\frac{\mu}{r} \frac{d}{dr} \left(r \frac{dV_z}{dr} \right) = \frac{dp}{dz}$$

or

$$\frac{d}{dr} \left(r \frac{dV_z}{dr} \right) = \frac{r}{\mu} \frac{dp}{dz}$$

Integrating with respect to r gives

$$r \frac{dV_z}{dr} = \frac{r^2}{2\mu} \left(\frac{dp}{dz} \right) + C_1$$

where C_1 is a constant of integration. Applying boundary condition 2 yields

$$C_1 = 0$$

Thus, we are left with

$$\frac{dV_z}{dr} = \frac{r}{2\mu} \frac{dp}{dz}$$

Integrating, we get

$$V_z = \frac{r^2}{4\mu} \frac{dp}{dz} + C_2$$

Applying boundary condition 1 gives

$$0 = \frac{R^2}{4\mu} \frac{dp}{dz} + C_2$$

or

$$C_2 = -\frac{R^2}{4\mu} \frac{dp}{dz}$$

The velocity now becomes

$$\begin{aligned} V_z &= \frac{r^2}{4\mu} \frac{dp}{dz} - \frac{R^2}{4\mu} \frac{dp}{dz} \\ V_z &= \frac{R^2}{4\mu} \left(-\frac{dp}{dz} \right) \left[1 - \left(\frac{r}{R} \right)^2 \right] \end{aligned} \quad (11.10)$$

For steady laminar flow in a tube, the velocity distribution is therefore parabolic.

The volume flow rate is found by integrating the velocity profile over the cross-sectional area:

$$Q = \iiint V_z dA = \int_0^{2\pi} \int_0^R \frac{R^2}{4\mu} \left(-\frac{dp}{dz} \right) \left[1 - \left(\frac{r}{R} \right)^2 \right] r dr d\theta$$

Integrating and solving, we get

$$Q = \frac{\pi R^4}{8\mu} \left(-\frac{dp}{dz} \right) \quad (11.11)$$

The average velocity is

$$V = \frac{Q}{A} = \frac{R^2}{8\mu} \left(-\frac{dp}{dz} \right) \quad (11.12)$$

The shear stress in the circular duct is found with Newton's law of viscosity:

$$\tau_{rz} = -\mu \frac{dV_z}{dr} = -\frac{r}{2} \frac{dp}{dz}$$

This equation shows that for tube flow the shear stress varies linearly with the radial coordinate r . At the centerline, $\tau_{rz}|_{r=0} = 0$; at the wall,

$$\tau_{rz}|_{r=R} = \tau_w = -\frac{R}{2} \frac{dp}{dz} \quad (11.13)$$

where the notation τ_w denotes a wall shear stress.

11.2.2 FLOW DOWN AN INCLINED PLANE

Consider steady laminar flow down an inclined plane, as shown in Figure 11.3, which also shows the coordinate system that we will use in formulating the problem. The driving force for fluid motion is gravity, and the flow is in the z -direction. Thus, only V_z is nonzero. Moreover, V_z will depend only on x . Hence,

$$\begin{aligned} V_x &= 0 \\ V_y &= 0 \\ V_z &= V_z(x) \end{aligned}$$

Equations 11.1 and 11.2 become

$$\begin{aligned} \text{Continuity equation: } \frac{\partial V_z}{\partial z} &= 0 \\ x\text{-component: } 0 &= -\frac{\partial p}{\partial r} + \rho g_x \\ y\text{-component: } 0 &= -\frac{\partial p}{\partial y} \\ z\text{-component: } 0 &= -\frac{\partial p}{\partial z} + \mu \frac{\partial^2 V_z}{\partial x^2} + \rho g_z \end{aligned}$$

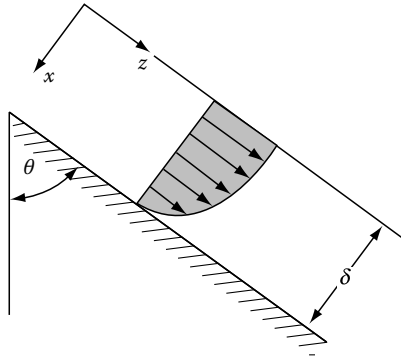


FIGURE 11.3 Laminar flow down an incline.

The boundary conditions are

$$\begin{aligned} x = 0 \quad \frac{\partial V_z}{\partial x} &= 0 \quad (\text{condition 1}) \\ x = \delta \quad V_z &= 0 \quad (\text{condition 2}) \end{aligned}$$

The solution to the equation, as obtained also in Chapter 7, is

$$V_z = \frac{\rho g \delta^2}{2\mu} \cos \theta \left[1 - \left(\frac{x}{\delta} \right)^2 \right] \quad (11.14)$$

The volume flow is found to be

$$Q = \iint V \, dA = \int_0^b \int_0^\delta \frac{\rho g \delta^2}{2\mu} \cos \theta \left[1 - \left(\frac{x}{\delta} \right)^2 \right] dx \, dy$$

where b is the width into the page. Integrating gives

$$Q = \frac{\rho g \delta^3 b}{3\mu} \cos \theta = \frac{g \delta^3 b}{3\nu} \cos \theta \quad (11.15)$$

Shear stress is found with

$$\tau_{xz} = \mu \frac{dV_z}{dx} = -\frac{\rho g \delta^2}{2} \cos \theta \left(-\frac{2x}{\delta^2} \right)$$

The maximum shear stress occurs when $x = \delta$ at the wall:

$$\tau_w = \rho g x \cos \theta \quad (11.16)$$

11.2.3 FLOW THROUGH A STRAIGHT CHANNEL

Consider steady laminar flow through a straight channel of width $2h$ and depth (into the page) b , as illustrated in Figure 11.4. With both walls fixed, the flow is in the z -direction, and gravity forces are neglected. We therefore write

$$\begin{aligned} V_x &= V_y = 0 \\ V_z &= V_z(x) \end{aligned}$$

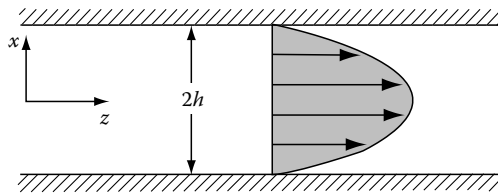


FIGURE 11.4 Steady parallel flow through a straight two-dimensional channel.

Equations 11.1 and 11.2 thus become

$$\begin{aligned}\frac{\partial V_z}{\partial z} &= 0 \\ 0 &= -\frac{\partial p}{\partial x} \\ 0 &= -\frac{\partial p}{\partial y} \\ 0 &= -\frac{\partial p}{\partial z} + \mu \left(\frac{\partial^2 V_z}{\partial x^2} \right)\end{aligned}$$

The boundary conditions are

$$\begin{aligned}x = h \quad V_z &= 0 \\ x = -h \quad V_z &= 0\end{aligned}$$

The solution to the equation (as obtained by direct integration) is

$$V_z = \frac{h^2}{2\mu} \left(-\frac{dp}{dz} \right) \left[1 - \left(\frac{x}{h} \right)^2 \right] \quad (11.17)$$

The volume flow rate through the channel is

$$Q = \iint V_z dA = \int_0^b \int_{-h}^h \frac{x^2}{2\mu} \left(-\frac{dp}{dz} \right) \left[1 - \left(\frac{x}{h} \right)^2 \right] dx dy$$

or

$$Q = \frac{2h^3 b}{3\mu} \left(-\frac{dp}{dz} \right) \quad (11.18)$$

The average velocity is

$$V = \frac{Q}{A} = \frac{h^3}{3\mu} \left(-\frac{dp}{dz} \right) \quad (11.19)$$

The shear stress is found with

$$\begin{aligned}\tau_{xz} &= \mu \frac{\partial V_z}{\partial x} = \mu \left(\frac{h^2}{2\mu} \right) \left(-\frac{dp}{dz} \right) \left(-\frac{2x}{h^2} \right) \\ \tau_{xz} &= \left(-\frac{dp}{dz} \right) x\end{aligned}$$

The wall shear stresses thus become

$$\begin{aligned}\tau_w|_{x=h} &= h \left(-\frac{dp}{dz} \right) \\ \tau_w|_{x=-h} &= -h \left(-\frac{dp}{dz} \right)\end{aligned} \quad (11.20)$$

11.2.4 PLANE COUETTE FLOW

Plane Couette flow is flow through a two-dimensional channel that has one wall moving. As illustrated in Figure 11.5, the z -directed flow is steady, and gravity forces are neglected. A pressure gradient is imposed on the fluid, and the upper wall is moving at a velocity equal to U . The channel height is h , and the origin is at the lower wall (different from Figure 11.4). According to the assumptions, we have

$$V_x = V_y = 0$$

$$V_z = V_z(y)$$

Equations 11.1 and 11.2 become

$$\frac{\partial V_z}{\partial z} = 0$$

$$0 = -\frac{\partial p}{\partial x}$$

$$0 = -\frac{\partial p}{\partial y}$$

$$0 = -\frac{\partial p}{\partial z} + \mu \left(\frac{\partial^2 V_z}{\partial y^2} \right)$$

These equations are exactly what was obtained for the straight-channel problem in which both walls were stationary. The difference between the two problems will be in the boundary conditions. For plane Couette flow,

$$y = h \quad V_z = U$$

$$y = 0 \quad V_z = 0$$

By direct integration, the solution is easily found to be

$$\frac{V_z}{U} = \frac{y}{h} + \left(-\frac{dp}{dz} \right) \left(\frac{h^2}{2\mu U} \right) \left(\frac{y}{h} \right) \left(1 - \frac{y}{h} \right) \quad (11.21)$$

The terms on the right-hand side of Equation 11.21 represent two separate effects. The y/h term is the simple shear solution. This solution indicates a linear profile extending from $V_z = 0$ at the fixed wall to $V_z = U$ at the moving wall. The second term represents the effect of the pressure gradient. Within that term, $h^2/2\mu U$, y/h , and $(1 - y/h)$ are all positive terms. The quantity $(-dp/dz)$ tells

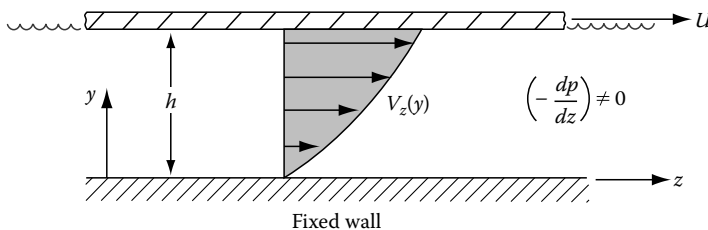


FIGURE 11.5 Plane Couette flow.

how pressure varies with the z -direction. In other words, as z increases, p can increase or decrease. If p increases with increasing z , then $(-dp/dz)$ is actually a negative quantity; and if p decreases with increasing z , then $(-dp/dz)$ is positive. If $(-dp/dz)$ is zero, then the simple shear solution results. The effect that $(-dp/dz)$ has on the velocity profile is significant. To illustrate this effect, let us examine Equation 11.21 in detail. For purposes of simplifying the notation, define the constant C as

$$C = \left(-\frac{dp}{dz}\right) \left(\frac{h^2}{2\mu U}\right)$$

and let $Y = y/h$. The velocity profile thus becomes

$$\frac{V_z}{U} = \frac{y}{h} + C \left(\frac{y}{h} - \frac{y^2}{h^2}\right) = Y + C(Y - Y^2) \quad (11.22)$$

or

$$\frac{V_z}{U} = (1 + C)Y - CY^2 \quad (11.23)$$

Our objective is to graph V_z/U (the dimensionless velocity) on a horizontal axis as a function of Y (dimensionless position) on the vertical axis. We now examine three separate cases defined by the value (or sign) of the pressure gradient and represented by C .

Case 1: $(-dp/dz) = 0$ or $C = 0$

The velocity becomes (from Equation 11.22)

$$\frac{V_z}{U} = \frac{y}{h}$$

which is graphed in Figure 11.6.

Case 2: $(-dp/dz) > 0$ or $C > 0$

For calculation purposes, assign C the value of $+1$. The velocity becomes

$$\frac{V_z}{U} = 2Y - Y^2$$

This quadratic equation is graphed in Figure 11.7.

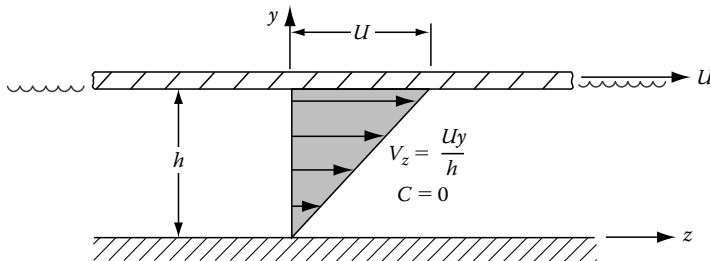


FIGURE 11.6 Velocity profile for plane Couette flow without a pressure gradient.

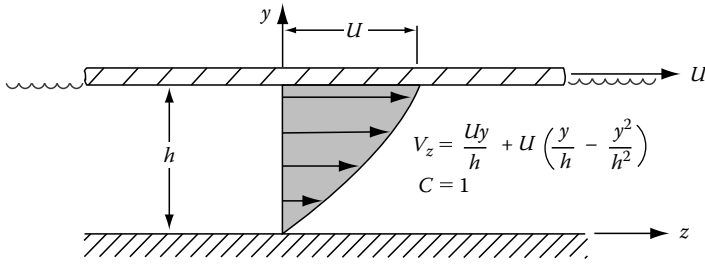


FIGURE 11.7 Velocity profile for plane Couette flow with a favorable pressure gradient.

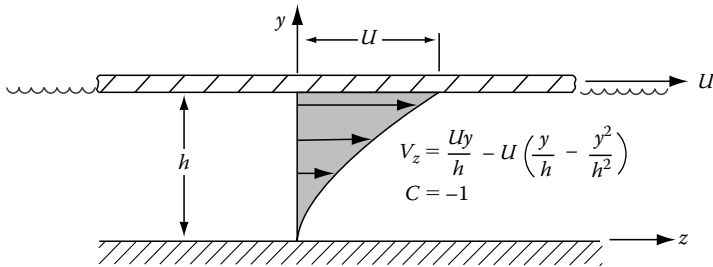


FIGURE 11.8 Velocity profile for plane Couette flow with an adverse pressure gradient.

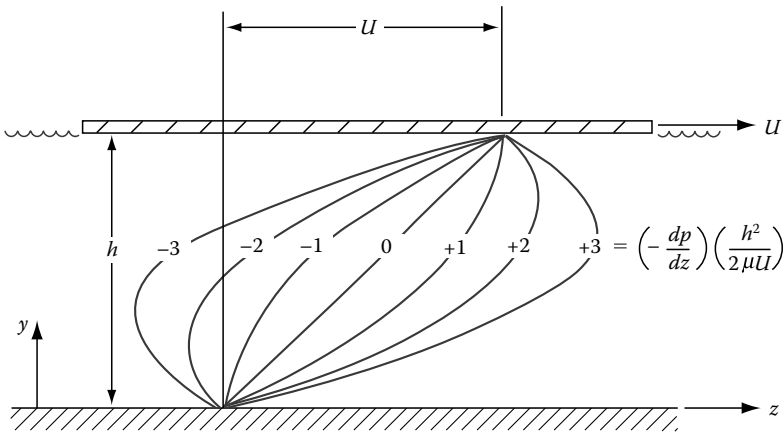


FIGURE 11.9 Family of velocity profiles for plane Couette flow.

Case 3: $(-dp/dz) < 0$ or $C < 0$

For calculation purposes, assign C the value of -1 . The velocity becomes

$$\frac{V_z}{U} = -2Y + Y^2$$

which is graphed in Figure 11.8.

To represent a family of velocity profiles, we use a composite graph, as shown in Figure 11.9. Each velocity profile has an associated volume flow rate, average velocity, maximum velocity, and wall shear stress. The flow details are reserved for the exercises.

11.2.5 FLOW BETWEEN TWO ROTATING CONCENTRIC CYLINDERS

Figure 11.10 shows the plan view of two concentric cylinders. The annular space between the cylinders contains a fluid. Both cylinders are rotating, and the rotation causes the fluid to flow. Assuming steady, laminar flow in the tangential direction only, with no gravity forces and no pressure gradients in the θ -direction, we conclude that

$$V_r = V_z = 0$$

$$V_\theta = V_\theta(r)$$

Equations 11.3 and 11.4 become

$$\begin{aligned} \frac{1}{r} \frac{\partial}{\partial \theta} (\rho V_\theta) &= 0 \\ -\frac{\rho V_\theta^2}{r} &= -\frac{\partial p}{\partial r} \end{aligned} \quad (11.24)$$

$$\begin{aligned} 0 &= \mu \left\{ \frac{\partial}{\partial r} \left[\frac{1}{r} \frac{\partial}{\partial r} (r V_\theta) \right] \right\} \\ 0 &= -\frac{\partial p}{\partial z} \end{aligned} \quad (11.25)$$

The boundary conditions are

$$r = R_2 \quad V_\theta = R_2 \omega_2$$

$$r = R_1 \quad V_\theta = R_1 \omega_1$$

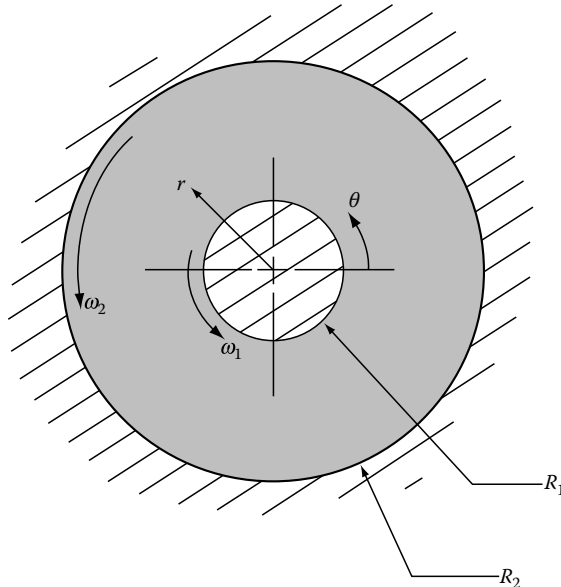


FIGURE 11.10 Flow between two rotating concentric cylinders.

Solving Equation 11.25 subject to the boundary conditions gives

$$V_0 = \left(\frac{\omega_2 - \omega_1 K^2}{1 - K^2} \right) r + \left[\frac{(\omega_1 - \omega_2) R_1^2}{1 - K^2} \right] \frac{1}{r} \quad (11.26)$$

where $K = R_1/R_2$. Several features of importance can be investigated. For example, consider that the outer cylinder is very large, such that $R_2 \rightarrow \infty$; or that the inner cylinder is very small, $R_1 \rightarrow 0$; or that one of the cylinders is fixed. These problems are easily solved by using Equation 11.26.

Equation 11.24 is the r -component of the Navier–Stokes equations applied to Figure 11.10. As is indicated, there is a pressure gradient in the radial direction that depends on the tangential velocity V_θ . If Equation 11.24 is solved subject to the boundary condition

$$r = R_1 \quad p = p_1$$

the solution becomes

$$\begin{aligned} p - p_1 = \frac{\rho}{(R_1^2 - R_2^2)^2} & \left[\frac{(R_1^2 \omega_1 - R_2^2 \omega_2)^2 (r^2 - R_1^2)}{2} \right. \\ & + 2R_1^2 R_2^2 (\omega_2 - \omega_1) (R_1^2 \omega_1 - R_2^2 \omega_2) \ln \frac{r}{R_1} \\ & \left. + R_1^4 R_2^4 (\omega_2 - \omega_1)^2 \left(\frac{1}{r^2} - \frac{1}{R_1^2} \right) \right] \end{aligned} \quad (11.27)$$

The shear stress is determined with

$$\begin{aligned} \tau_{r\theta} &= \mu \left[r \frac{\partial(V_\theta/r)}{\partial r} \right] \\ \tau_{r\theta} &= - \frac{2\mu(\omega_1 - \omega_2)VR_1^2 R_2^2}{(R_2^2 - R_1^2)r^2} \end{aligned} \quad (11.28)$$

and we see that the shear stress is independent of θ .

There is a moment exerted on the cylinders by the fluid. On the inner cylinder, we have

$$M_1 = \text{tangential force} \times R_1 = [(\tau_{r\theta})|_{r=R_1}] A_1 R_1$$

where A_1 is the surface area over which the shear stress acts. For a cylinder of length L , we have $A_1 = 2\pi R_1 L$, and the moment becomes

$$M_1 = - \frac{4\pi\mu(\omega_1 - \omega_2)R_1^2 R_2^2 L}{R_2^2 - R_1^2} \quad (11.29)$$

Under steady conditions, the magnitude of the moment exerted on the outer cylinder M_2 equals that exerted on the inner cylinder; that is, at steady state,

$$M_1 = -M_2 \quad (11.30)$$

There are many exact solutions to a number of problems described by the Navier–Stokes equations. Several more are given in the section that follows and in the exercises at the end of this chapter. We hope that this sampling has served as an inspiring introduction to the field of viscous fluid flow.

11.3 GRAPHICAL SOLUTION METHODS FOR UNSTEADY LAMINAR FLOW PROBLEMS

To this point, we have examined a number of problems, all of which were for steady laminar flow. That is, the instantaneous velocity did not vary with time. In this section, we formulate several unsteady-flow problems. The analytical solution techniques for the problems we consider are beyond the scope of this text. Alternatively, we can solve such problems using graphical solution methods.

Graphical solution methods allow a quick and easy determination of instantaneous time-dependent velocity profiles. Graphical techniques have traditionally played an important role in engineering. At one time, before numerical methods could be implemented easily with a computer, graphical solutions were the only practical means of obtaining a solution. The emphasis today is on numerical methods, and so the need for graphical methods has been diminished. It is a mistake, however, to discard graphical solution methods as they have a place in fluid mechanics. Graphical methods can be used to solidify understanding and build confidence with only a minor expenditure of effort. They can be applied to certain more advanced (than we have heretofore considered) problems, which can be solved only by using more sophisticated mathematical techniques. Advanced problems can be discussed with graphical methods at a much earlier time during the education process.

Consider a viscous flow problem in which the velocity is a function of time and of only one space variable. Suppose that the Navier–Stokes equations for such a problem reduce to

$$\frac{\partial V_z}{\partial t} = \nu \frac{\partial^2 V_z}{\partial y^2} \quad (11.31)$$

where V_z is the instantaneous velocity in the z -direction and the kinematic viscosity is $\nu = \mu/\rho$. The graphical method (as well as the numerical method, by the way) relies on our ability to rewrite the differential equation in terms of an algebraic expression. This can be done in a number of ways, but here we rely on the **Saul'ev method**. Equation 11.31 thus becomes

$$\frac{\partial V_z}{\partial t} = \nu \frac{\partial}{\partial y} \left(\frac{\partial V_z}{\partial y} \right)$$

or

$$\frac{V_z|_j^{k+1} - V_z|_j^k}{\Delta t} = \nu \frac{\left(\frac{V_z|_{j+1}^k - V_z|_j^k}{\Delta y} \right) - \left(\frac{V_z|_j^{k+1} - V_z|_{j-1}^k}{\Delta y} \right)}{\Delta y}$$

where the superscript k denotes a particular time and the subscript j indicates a position in the fluid. Rearranging gives

$$V_z|_j^{k+1} = \left(\frac{\Delta y^2/\nu t - 1}{\Delta y^2/\nu t + 1} \right) V_z|_j^k + \left(\frac{1}{\Delta y^2/\nu t + 1} \right) V_z|_{j+1}^k + V_z|_{j-1}^{k+1} \quad (11.32)$$

The quantity $\Delta y^2/\nu t$ is defined as the **cell Reynolds number**, Re_c , the value of which influences what is known as the **stability** of the solution method. When calculations are performed using this equation, as time increases to infinity, the solution should approach the steady-state solution (if there is one). The value of the cell Reynolds number influences whether this occurs and how quickly. In the Saul'ev equation formulation, the preceding equation is unconditionally stable. So, any value of the cell Reynolds number can be assumed. If we assume arbitrarily that

$$\text{Re}_c = \frac{\Delta y^2}{\nu t} = 1$$

then Equation 11.32 simplifies somewhat to yield:

$$V_{z|j}^{k+1} = \frac{1}{2} V_{z|j+1}^k + V_{z|j+1}^{k+1}$$

or

$$V_{z|j}^{k+1} = \frac{V_{z|j+1}^k + V_{z|j-1}^{k+1}}{2} \quad (11.33)$$

Equation 11.33 has a very useful graphical interpretation, which is illustrated in Figure 11.11. As indicated, the flow field is divided into segments that are Δy wide. Lines in the field (identified as **nodes**) are labeled from 0 and extend to $j+2$ (as needed). We expect our solution to give us the value of the velocity V_z at all nodes from 0 to $j+2$ for any time k . Shown in the diagram is the velocity in the $j-2$ to $j+2$ region at the time denoted by k . At the time $k+1$, we will know $V_{z|j-1}^{k+1}$ from a boundary condition or a time condition. To apply Equation 11.33, we align $V_{z|j-1}^{k+1}$ with $V_{z|j-1}^k$ and draw a straight line from $V_{z|j-1}^{k+1}$ to the j line to obtain $V_{z|j}^{k+1}$. Next, we align the newfound point with $V_{z|j-2}^k$ and draw to the $j+1$ line to obtain $V_{z|j+1}^{k+1}$. The drawing process is continued until the boundary conditions are met or the problem requirements are satisfied. Note that the grid spacing Δy , when selected, automatically determines the time interval because these quantities are related through the cell Reynolds number ($\text{Re}_c = \Delta y^2/\nu t$).

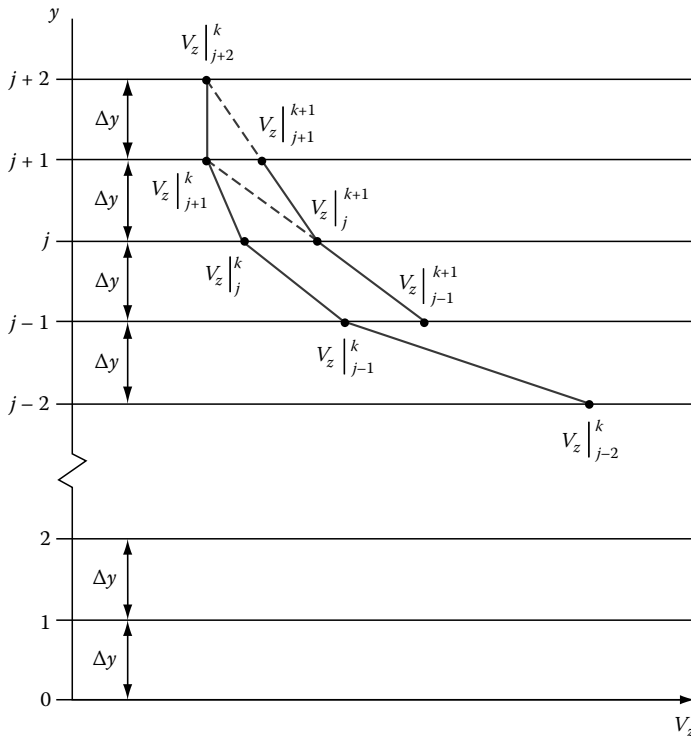


FIGURE 11.11 Graphical construction of Equation 11.33.

11.3.1 SUDDENLY ACCELERATED FLAT PLATE

Consider a semi-infinite region of fluid initially at rest, as shown in Figure 11.12a. As shown, the fluid extends to infinity in the y -direction and the plate lies along the x -axis. At some time that we define as $t = 0$, the plate is suddenly accelerated to a velocity U in the x -direction. It is our objective to determine graphically the velocity within the fluid.

This problem is a classic diffusion problem. Assuming unsteady laminar flow of a Newtonian fluid with no gravity forces or pressure gradients, we conclude that

$$V_y = V_x = 0$$

$$V_z = V_z(y, t)$$

The continuity and momentum equations (Equations 11.1 and 11.2, respectively) become

$$\begin{aligned} \frac{\partial V_z}{\partial z} &= 0 \\ \rho \frac{\partial V_z}{\partial t} &= \mu \frac{\partial^2 V_z}{\partial y^2} \end{aligned} \quad (11.34)$$

with the following boundary conditions:

1. $t \geq 0$ $y = 0$ $V_z = U$ (nonslip condition)
2. $t \geq 0$ $y = \infty$ $V_z = 0$

The solution to the differential equation subject to the boundary conditions is

$$\frac{V_z}{U} = 1 - \operatorname{erf}(\eta) \quad (11.35)$$

where U is the velocity of the boundary, $\eta = y/(2\sqrt{\nu t})$, and the **error function** is

$$\operatorname{erf}(\eta) = \frac{2}{\sqrt{\pi}} \int_0^\eta e^{-\xi^2} d\xi \quad (11.36)$$

The graphical solution method begins as shown in Figure 11.13. The region is divided up by a number of lines separated by a distance Δy . The drawing process is as follows:

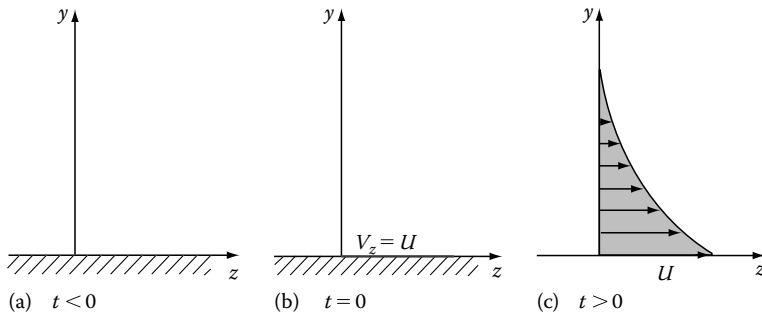


FIGURE 11.12 Semi-infinite fluid in contact with a suddenly accelerated flat plate.

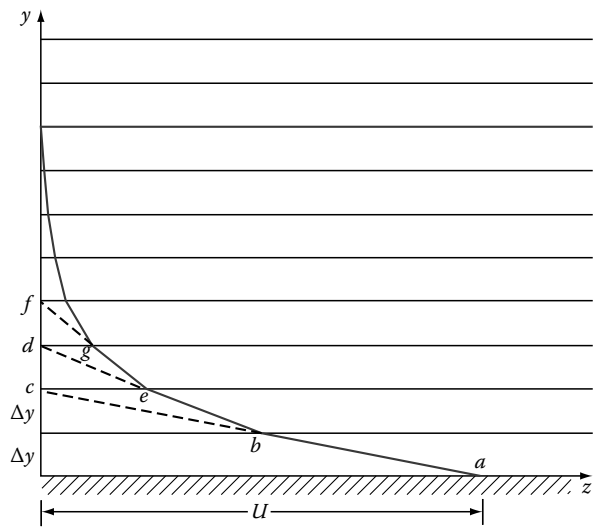


FIGURE 11.13 Graphical solution for the velocity after one time interval for the suddenly accelerated flat plate.

- 1. Align point *a* and point *c*; draw line *ba*.
- 2. Align point *b* and point *d*; draw line *eb*.
- 3. Align point *e* and point *f*; draw line *ge*.

The process is continued until the desired height is reached. The result shown in Figure 11.13 is a velocity profile that exists after one time interval has passed. The time interval is easily calculated. Suppose that in Figure 11.13, the distance Δy is selected as 0.5 cm, and the fluid we are analyzing is glycerine ($\rho = 1\,263\text{ kg/m}^3$ and $\mu = 950 \times 10^{-3}\text{ N}\cdot\text{s/m}^2$ from Table A.5). The cell Reynolds number is 1. So

$$\text{Re}_c = \frac{\Delta y^2}{\nu t} = \frac{\rho \Delta y^2}{\mu t}$$

Substituting,

$$1 = \frac{1\,263(0.005)^2}{950 \times 10^{-3}t}$$

or

$$t = 30.1\text{ s}$$

The velocity profile of Figure 11.13 will exist in the fluid at $t = 30.1\text{ s}$.

To obtain the velocity profile in the fluid after 60.2 s, we proceed in the same manner as before, beginning with the preceding profile. Referring to Figure 11.14, the procedure is as follows:

- 1. Align *a* and *c*; draw line *ga*.
- 2. Align *g* and *d*; draw line *hg*.
- 3. Align *h* and *e*; draw line *ih*.

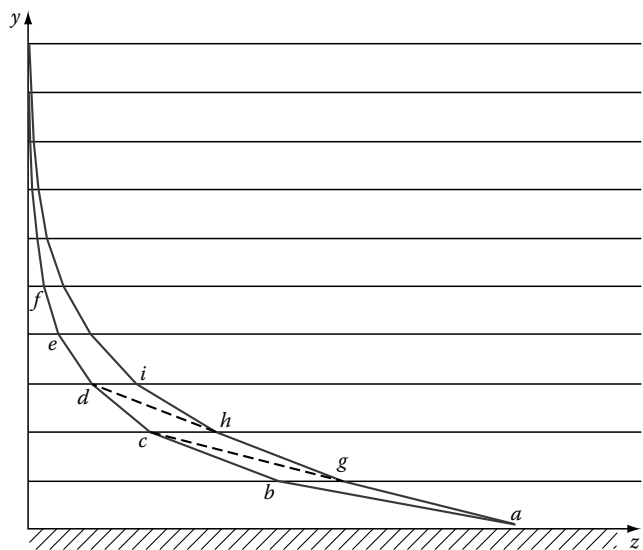


FIGURE 11.14 Graphical solution for the velocity after the first and second time intervals for the suddenly accelerated flat plate.

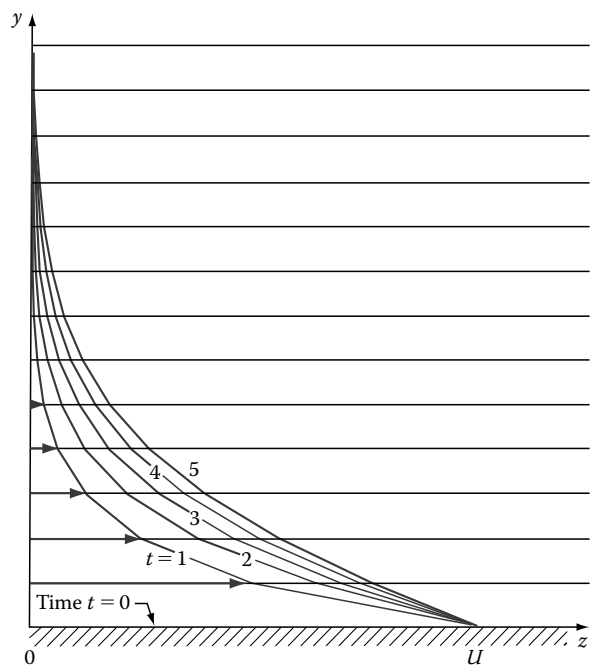


FIGURE 11.15 Solution for the velocity for the first five time intervals for the suddenly accelerated flat plate.

The procedure is continued until the desired height is reached. Figure 11.15 shows the solution for the first five time intervals.

Note that if this problem were solved with a numerical calculation technique, the results would be in the form of numbers for the velocities at the nodes; that is, the results would give a numerical value of the velocity at the points in Figure 11.14 labeled a, b, c, d, e, f , and so on.

11.3.2 UNSTEADY PLANE COUETTE FLOW

As stated in the previous section, plane Couette flow is flow through a two-dimensional channel that has one wall moving. In this instance, however, we examine the case where there is no pressure gradient. The channel height is h and one of the walls is given a sudden acceleration from rest to a uniform velocity U . The fluid is Newtonian with constant properties. Figure 11.16 is a sketch of the problem statement.

The formulation here is the same as in the last problem:

$$V_y = V_x = 0$$

$$V_z = V_z(y, t)$$

The continuity and momentum equations (Equations 11.1 and 11.2, respectively) become

$$\begin{aligned} \frac{\partial V_z}{\partial z} &= 0 \\ \rho \frac{\partial V_z}{\partial t} &= \mu \frac{\partial^2 V_z}{\partial y^2} \end{aligned} \quad (11.37)$$

with boundary conditions (both nonslip conditions):

$$\begin{aligned} 1. \quad t &\geq 0 & y &= 0 & V_z &= U \\ 2. \quad t &\geq 0 & y &= h & V_z &= 0 \end{aligned}$$

The analytical solution to this problem is usually expressed as an infinite series of error functions. Alternatively, Figure 11.17 is the graphical solution using the Saul'ev method. The channel width is divided arbitrarily into 10 Δy 's. With this value, we use the cell Reynolds number and find the time interval to be

$$\text{Re}_c = \frac{\rho \Delta y^2}{\mu t} = \frac{\Delta y^2}{\nu t} = 1$$

and so

$$t = \frac{\Delta y^2}{\nu}$$

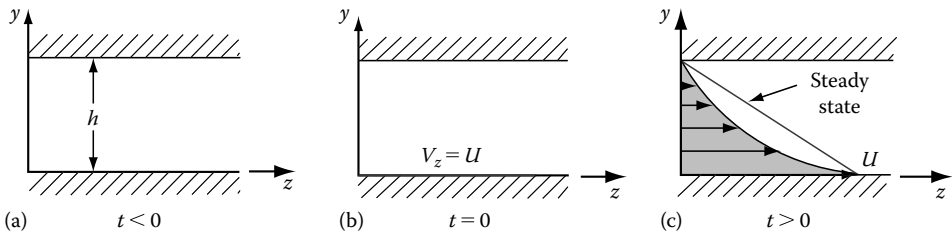


FIGURE 11.16 Unsteady plane Couette flow (unsteady flow in a two-dimensional channel).

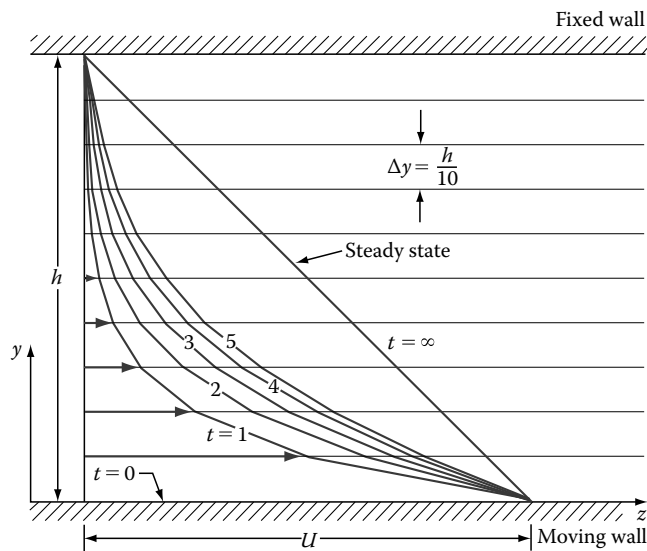


FIGURE 11.17 Graphical solution to the unsteady plane Couette flow problem.

With $h = 10 \Delta y$, we find

$$t = \frac{h^2}{100\nu}$$

11.3.3 UNSTEADY FLOW BETWEEN CONCENTRIC CIRCULAR CYLINDERS

Figure 11.18 shows the plan view of two concentric cylinders. At time = 0, the inner cylinder rotates at a fixed angular velocity. The outer cylinder remains stationary. Assuming unsteady laminar flow of a Newtonian fluid with no gravity forces or pressure gradients, we conclude that

$$V_r = V_z = 0$$

$$V_\theta = V_\theta(y, t)$$

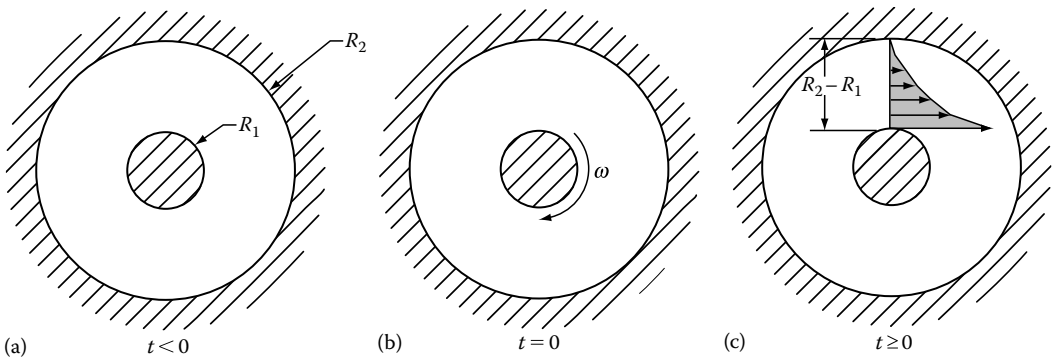


FIGURE 11.18 Unsteady flow between concentric cylinders with only the inner cylinder rotating.

The continuity and momentum equations become

$$\begin{aligned} \frac{1}{r} \frac{\partial}{\partial \theta} (\rho V_\theta) &= 0 \\ \rho \frac{\partial V_\theta}{\partial t} &= \mu \left(\frac{\partial}{\partial r} \left[\frac{1}{r} \frac{\partial}{\partial r} (r V_\theta) \right] \right) \end{aligned} \quad (11.38)$$

with the following conditions:

1. $r = R_2 \quad V_\theta = 0$
2. $r = R_1 \quad V_\theta = R_1 \omega = U$

When the right-hand side of Equation 11.38 is differentiated, according to the chain rule, we get

$$\mu \left(\frac{\partial}{\partial r} \left[\frac{1}{r} \frac{\partial}{\partial r} (r V_\theta) \right] \right) = \mu \left(\frac{\partial^2 V_\theta}{\partial r^2} + \frac{1}{r} \frac{\partial V_\theta}{\partial r} \right)$$

The second term in parentheses on the right-hand side is known as a **curvature term**. It is this term that makes the differential equation in its present form unsuitable to solve graphically. So, further analysis is required. We introduce a new independent variable ζ , defined as

$$\zeta = \ln(r) \quad (11.39a)$$

or

$$r = e^\zeta \quad (11.39b)$$

The derivative with respect to r , as found in the differential equation (Equation 11.38), is evaluated as

$$\frac{\partial}{\partial r} = \frac{\partial}{\partial \zeta} \frac{\partial \zeta}{\partial r} = \frac{\partial}{\partial \zeta} \frac{1}{r} = \frac{\partial}{\partial \zeta} \frac{1}{e^\zeta}$$

Substituting into the differential equation gives, after simplification,

$$\rho \frac{\partial V_\theta}{\partial t} = \frac{\mu}{r^2} \frac{\partial^2 V_\theta}{\partial \zeta^2} \quad (11.40)$$

This form is suitable for graphical solution.

The cell Reynolds number for the preceding equation becomes

$$\text{Re}_c = \frac{\rho (r \Delta \zeta)^2}{\mu \Delta t} = 1$$

In order to solve this problem, it is necessary to perform graphically the transformation given in Equation 11.39. This transformation is illustrated in Figure 11.19. Shown are two grids that are aligned vertically. The top grid is logarithmic, with the widest mesh located near the inner cylinder. The bottom mesh is linearly graded. Both meshes have 10 lines, which divide the flow field into nine spaces. The number of Δy 's is fixed by the logarithmic grid. Given the line AB in the log mesh, we project each nodal point downward to the linear mesh to obtain the corresponding line $A'B'$.

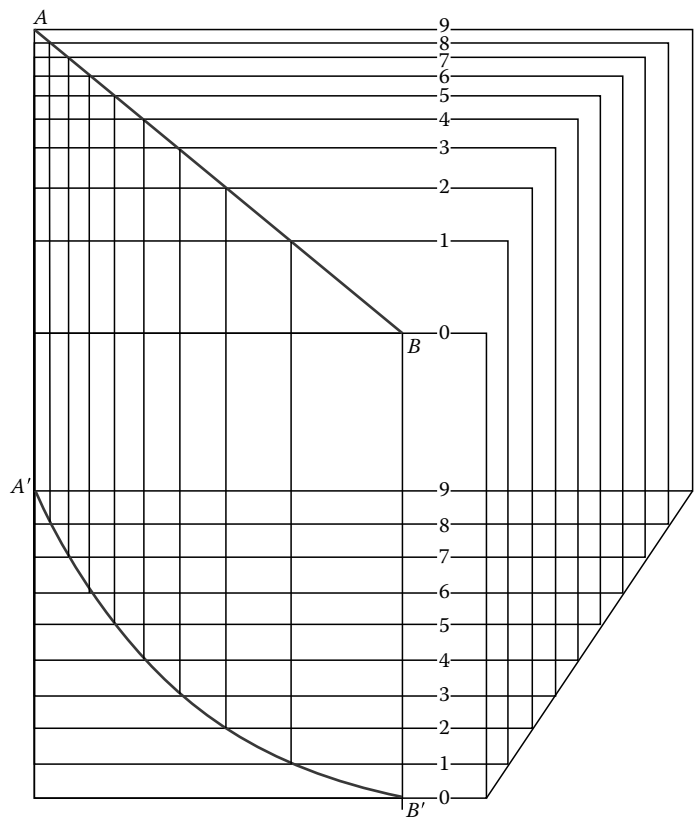


FIGURE 11.19 Effects of the logarithmic transformation function.

With regard to the viscous flow problem at hand, unsteady flow between concentric cylinders, the transformation allows us to perform the solution by drawing straight lines on the log mesh. Projecting the resulting points down the linear mesh gives us the solution in the radial plane. The solution for several times is given in Figure 11.20. With the cell Reynolds number equal to 1, the time increment is found as

$$t = \frac{\rho(R_2 - R_1)^2}{81\mu}$$

11.3.4 UNSTEADY FLOW IN A PLANE CHANNEL (START-UP FLOW)

Consider a plane channel of width $2h$ that contains a fluid. At time $=0$, a pressure drop Δp is suddenly imposed on the system, and the fluid begins to flow in the direction of decreasing pressure. Figure 11.21 is a sketch of the problem statement.

The pressure gradient is given by

$$-\frac{dp}{dz} = \left(-\frac{\Delta p}{L} \right)$$

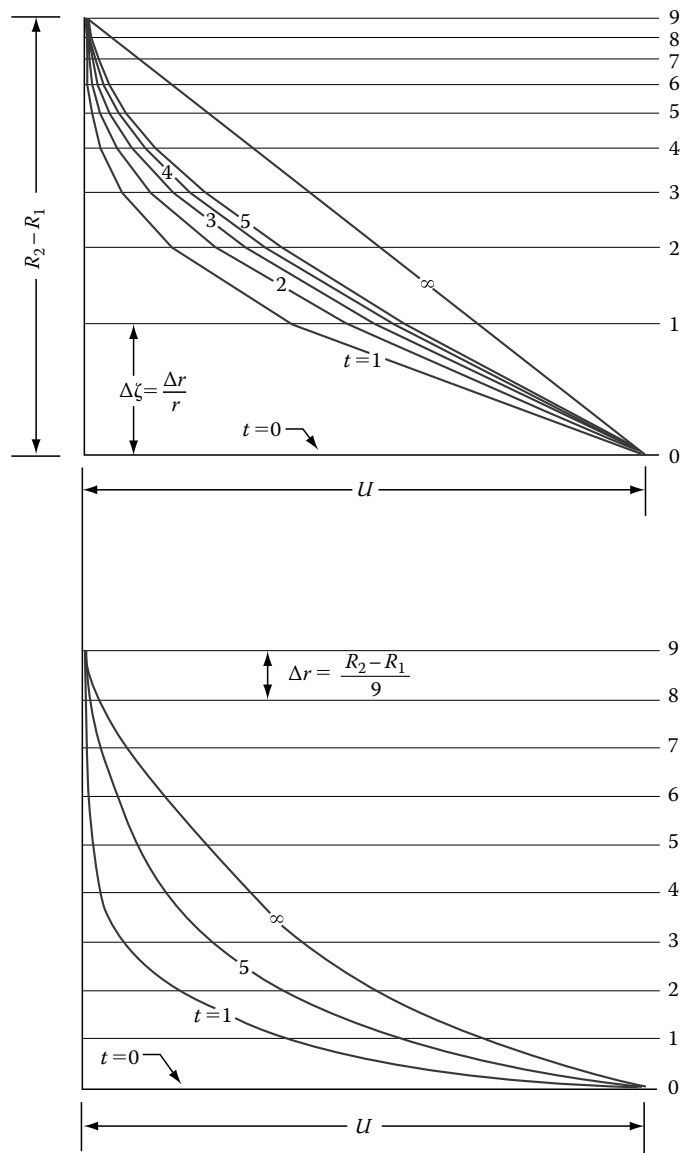


FIGURE 11.20 Solution to the problem of unsteady flow between two concentric cylinders.

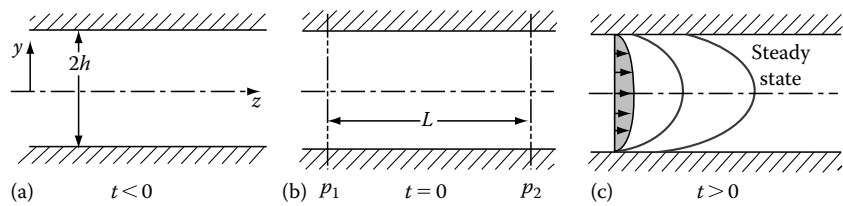


FIGURE 11.21 Unsteady start-up flow in a plane channel.

As before, we assume unsteady laminar flow of a Newtonian fluid with no gravity forces; we conclude that

$$V_y = V_x = 0$$

$$V_z = V_z(y, t)$$

The continuity and momentum equations (Equations 11.1 and 11.2, respectively) become

$$\begin{aligned} \frac{\partial V_z}{\partial z} &= 0 \\ \rho \frac{\partial V_z}{\partial t} &= \mu \frac{\partial^2 V_z}{\partial y^2} - \frac{\Delta p}{L} \end{aligned} \quad (11.41)$$

with the following boundary conditions:

1. $t \geq 0 \quad y = h \quad V_z = 0$ (nonslip condition)
2. $t \geq 0 \quad y = 0 \quad \frac{\partial V_z}{\partial y} = 0$ (finite velocity at centerline)

The pressure gradient added to the equation in this fashion means, graphically, that we add $\Delta pt/\rho L$ to each velocity profile in order to determine the succeeding one. To illustrate, consider the grid of Figure 11.22. The field (which is half the channel width) is divided into five regions Δy wide. The line labeled OO' is the initial velocity. To this initial velocity, we add $\Delta pt/\rho L$ at every node to obtain points labeled a through f . We draw the $t = 1$ line in the usual way, beginning at point O and using the points c through f . The profile is drawn perpendicular to the topmost line (the centerline of the channel), which represents the second boundary condition $dV_z/dy = 0$. Next we add $\Delta pt/\rho L$ to every node of the $t = 1$ profile to obtain the points labeled g through k . This profile, as before, should meet the centerline at a right angle.

Figure 11.23 shows the solution for the first seven time intervals for the problem at hand—unsteady (start-up) flow in a plane channel of width $2h$. The channel half-width is divided into 10 Δy sections. At the centerline, each profile intersects the line at a 90° angle.

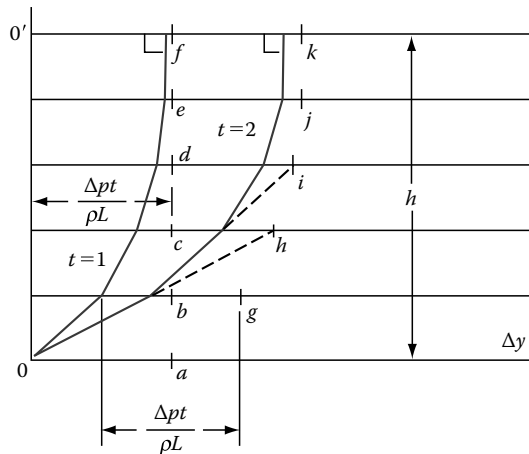


FIGURE 11.22 Illustration of the imposition of a pressure drop on a flow field.

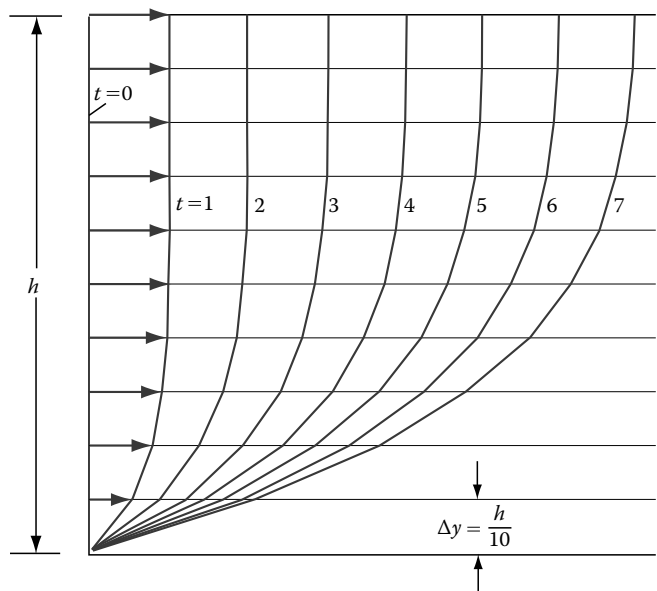


FIGURE 11.23 Solution for the first seven time intervals for unsteady start-up in a plane channel.

11.4 INTRODUCTION TO TURBULENT FLOW

In the preceding sections, we discussed only laminar flow problems and derived the differential equations for laminar flow situations from general equations. In many cases, the nonlinear terms vanish, and the remaining expression, if not too complex, can be solved. Although there is no correspondingly simple methodology for turbulent flow, the Navier–Stokes equations apply. None of the velocities in the Navier–Stokes equations vanish. Solving them, if possible, yields instantaneous values of velocity and pressure. In turbulent flow, as was indicated briefly in Chapter 5, velocity and pressure fluctuate wildly about mean values. To illustrate, consider turbulent flow in a circular tube, as shown in Figure 11.24. If the velocity at each point in the cross section were measured with a pitot-static tube, the resultant distribution would be that of Figure 11.24a. If a more sensitive instrument, such as a hot-wire anemometer, were used, a distribution such as that in Figure 11.24b would result. The instantaneous velocity at any point oscillates randomly about a mean value.

Laminar flow exists in a pipe when the Reynolds number ($\rho VD/\mu$) is less than about 2 100. Above 2 100, laminar flow can be maintained if the pipe wall is smooth and no vibrations are present. Any slight disturbance would probably induce the random motion recognized as turbulent flow.

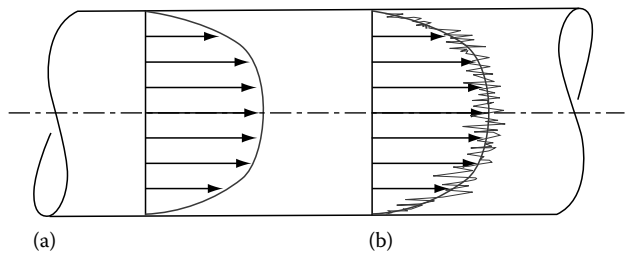


FIGURE 11.24 Turbulent flow in a tube.

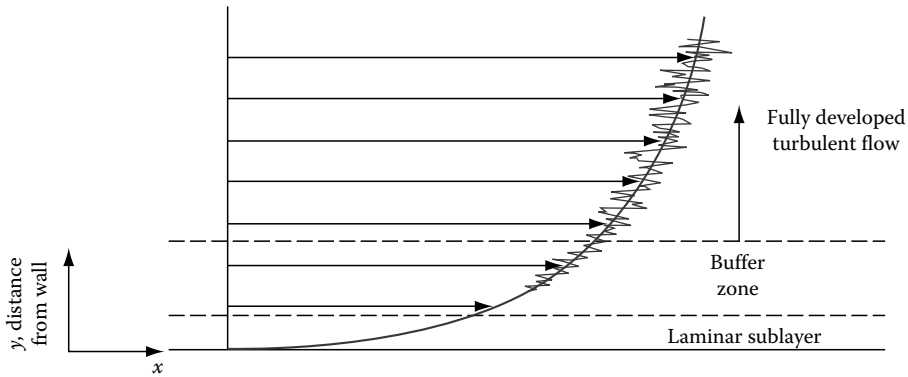


FIGURE 11.25 Flow near a pipe wall.

It should be mentioned that for turbulent flow, a region exists near the wall where the flow is not random. A change in the flow exists near the wall where velocity is zero. It is customary to define three arbitrary zones within a tube as shown in Figure 11.25. In the central region of the tube, a fully developed turbulent flow exists. Near the wall, a laminar sublayer forms within which Newton’s law of viscosity describes the flow. Between the two is the buffer zone, within which both laminar and turbulent effects are considered to be important.

Now we examine in detail the velocity fluctuations introduced in Figure 11.24b. Suppose we are using a sensitive instrument to measure velocity at a point in a tube in which turbulent flow exists. The results that we would obtain are shown schematically in Figure 11.26. Two velocities can be identified: the mean velocity $\bar{V}_z$, which is an average or mean value, and the instantaneous velocity V_z , which fluctuates randomly about the mean. The instantaneous velocity can be time-smoothed to obtain the mean; that is, if the instantaneous velocity is averaged over a finite time interval, the mean value results. By definition, then,

$$\bar{V}_z = \frac{1}{t} \int_0^t V_z dt \tag{11.42}$$

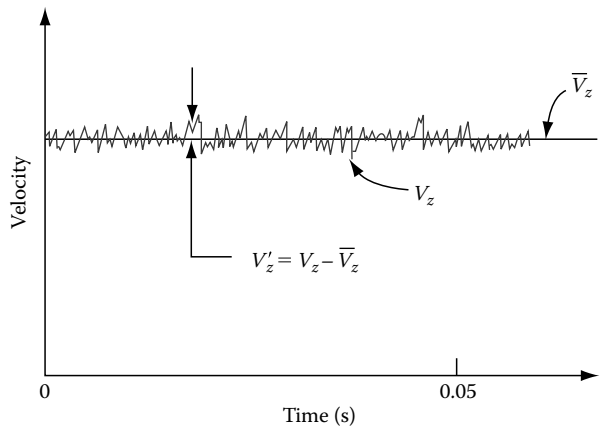


FIGURE 11.26 Velocity at a point in a turbulent flow.

The instantaneous velocity is a function of all three space variables and time. By using Equation 11.42, we have integrated out the dependence on time. The mean velocity and the instantaneous velocity differ by a velocity fluctuation V'_z . In equation form,

$$V_z = \bar{V}_z + V'_z \quad (11.43)$$

By substitution into Equation 11.42, we find

$$\begin{aligned} \bar{V}_z &= \frac{1}{t} \int_0^t \bar{V}_z dt + \frac{1}{t} \int_0^t V'_z dt \\ &= \frac{\bar{V}_z}{t} \int_0^t dt + \frac{1}{t} \int_0^t V'_z dt \end{aligned}$$

or

$$\bar{V}_z = \bar{V}_z + \frac{1}{t} \int_0^t V'_z dt$$

We therefore conclude that the time average of the fluctuations is zero; that is,

$$\frac{1}{t} \int_0^t V'_z dt = \bar{V}'_z = 0 \quad (11.44)$$

Further manipulation, however, will show that $\overline{V_z'^2} \neq 0$. In fact, a measure of the magnitude of turbulence is given as

$$\text{Intensity of turbulence} = \frac{\sqrt{\overline{V_z'^2}}}{\bar{V}} \quad (11.45)$$

where $\bar{V}$ is the time-smoothed average velocity. The intensity of turbulence varies in tube flow from about 1% to 10%. A similar time-smoothing operation can be performed for pressure at a point that also fluctuates in turbulent flow.

We are now in a position to time-smooth the equations of motion—namely, the continuity and Navier–Stokes equations. To perform this task, we substitute $\bar{V}_i + V'_i$ for V_i and $\bar{p} + p'$ for p everywhere in Equations 11.1 and 11.2 in Cartesian coordinates. By integrating as indicated in Equation 11.42, the results for steady incompressible turbulent flow become the following.

Continuity equation:

$$\frac{\partial(\bar{V}_x)}{\partial x} + \frac{\partial(\bar{V}_y)}{\partial y} + \frac{\partial(\bar{V}_z)}{\partial z} = 0 \quad (11.46)$$

Equations of motion:

x-component:

$$\begin{aligned} & \rho \left(\bar{V}_x \frac{\partial \bar{V}_x}{\partial x} + \bar{V}_y \frac{\partial \bar{V}_x}{\partial y} + \bar{V}_z \frac{\partial \bar{V}_x}{\partial z} \right) \\ &= -\frac{\partial(\bar{p})}{\partial x} + \mu \left(\frac{\partial^2 \bar{V}_x}{\partial x^2} + \frac{\partial^2 \bar{V}_x}{\partial y^2} + \frac{\partial^2 \bar{V}_x}{\partial z^2} \right) \\ & \quad - \frac{\partial}{\partial x} (\rho \overline{V'_x V'_x}) - \frac{\partial}{\partial y} (\rho \overline{V'_x V'_y}) - \frac{\partial}{\partial z} (\rho \overline{V'_x V'_z}) + \rho g_x \end{aligned} \quad (11.47)$$

y-component:

$$\begin{aligned} & \rho \left(\bar{V}_x \frac{\partial \bar{V}_y}{\partial x} + \bar{V}_y \frac{\partial \bar{V}_y}{\partial y} + \bar{V}_z \frac{\partial \bar{V}_y}{\partial z} \right) \\ &= -\frac{\partial(\bar{p})}{\partial y} + \mu \left(\frac{\partial^2 \bar{V}_y}{\partial x^2} + \frac{\partial^2 \bar{V}_y}{\partial y^2} + \frac{\partial^2 \bar{V}_y}{\partial z^2} \right) \\ & \quad - \frac{\partial}{\partial x} (\rho \overline{V'_x V'_y}) - \frac{\partial}{\partial y} (\rho \overline{V'_y V'_y}) - \frac{\partial}{\partial z} (\rho \overline{V'_y V'_z}) + \rho g_y \end{aligned} \quad (11.48)$$

z-component:

$$\begin{aligned} & \rho \left(\bar{V}_x \frac{\partial \bar{V}_z}{\partial x} + \bar{V}_y \frac{\partial \bar{V}_z}{\partial y} + \bar{V}_z \frac{\partial \bar{V}_z}{\partial z} \right) \\ &= -\frac{\partial(\bar{p})}{\partial z} + \mu \left(\frac{\partial^2 \bar{V}_z}{\partial x^2} + \frac{\partial^2 \bar{V}_z}{\partial y^2} + \frac{\partial^2 \bar{V}_z}{\partial z^2} \right) \\ & \quad - \frac{\partial}{\partial x} (\rho \overline{V'_x V'_z}) - \frac{\partial}{\partial y} (\rho \overline{V'_y V'_z}) - \frac{\partial}{\partial z} (\rho \overline{V'_z V'_z}) + \rho g_z \end{aligned} \quad (11.49)$$

These equations are similar to the Navier–Stokes equations except that the time-smoothed velocities replace the instantaneous velocities. Moreover, these equations of motion have the time-smoothed pressure. Finally, new terms have appeared. These new terms (underscored) are related to the turbulent velocity fluctuations. The dimension of the product ρVV is force per unit area. It is therefore convenient to introduce the notation

$$\begin{aligned} \bar{\tau}_{xx}^{(t)} &= \rho \overline{V'_x V'_x} \\ \bar{\tau}_{xy}^{(t)} &= \rho \overline{V'_x V'_y} \\ \bar{\tau}_{xz}^{(t)} &= \rho \overline{V'_x V'_z} \end{aligned} \quad (11.50)$$

and so on. These terms make up what is referred to as the **turbulent momentum flux** and are usually called **Reynolds stresses**.

In vector notation, the continuity equation and the equations of motion become the following.

$$\text{Continuity: } \nabla \cdot \mathbf{V} = 0 \quad (11.51)$$

Equation of motion:

$$\frac{\partial \mathbf{V}}{\partial t} + (\mathbf{V} \cdot \nabla) \mathbf{V} = -\frac{\nabla p}{\rho} - \nabla g + \nu \nabla^2 \mathbf{V} + \underline{\nabla \cdot \rho \mathbf{V}' \mathbf{V}'}} \quad (11.52)$$

where it is understood that the terms $\mathbf{V}$ are mean velocity vectors and $\mathbf{V}'\mathbf{V}'$ are the turbulent velocity fluctuations.

To apply Equations 11.46 through 11.49 to various flows and obtain velocity distributions, it is necessary to relate the Reynolds stresses to a strain rate in the fluid. For laminar flow, shear stresses are related to strain rate by Newton's law of viscosity: $\tau_{yx} = -\mu(dV_x/dy)$. For turbulent flow, we use an analogous formulation to write

$$\bar{\tau}_{yx}^{(t)} = -\mu^{(t)} \frac{d\bar{V}_x}{dy} \quad (11.53)$$

where $\mu^{(t)}$ is the turbulent coefficient of viscosity, also called the **eddy viscosity**. The total mean shear stress is then

$$\begin{aligned} \bar{\tau}_{yx} &= \bar{\tau}_{yx}^{(\ell)} + \bar{\tau}_{yx}^{(t)} \\ \bar{\tau}_{yx} &= -\mu \frac{d\bar{V}_x}{dy} - \mu^{(t)} \frac{d\bar{V}_x}{dy} \end{aligned}$$

where μ is a viscosity that results from molecular motions, whereas $\mu^{(t)}$ is the eddy viscosity that results from eddying motions in turbulent flow. Physically, this motion implies that the molecular action that is responsible for viscous shear is analogous to the eddies that cause turbulent stress. This implication is a semiempirical result that was proposed early in the study of turbulent flow.

A second empirical relationship can be written by assuming that eddies move about in a fluid in the same way that molecules move about in a gas. This **mixing-length hypothesis** is illustrated in Figure 11.27. Two points, y_1 and y_2 , are selected from the boundary such that they extend well into the turbulent portion of the flow. These points are separated by a distance ℓ that equals the average size of the eddies:

$$y_1 - y_2 = \ell$$

The time-smoothed velocities corresponding to y_1 and y_2 are $\bar{V}_{x_1}$ and $\bar{V}_{x_2}$. It is theorized that a positive turbulent fluctuation in the vertical direction at $y_2 (V'_{y_2})$ causes a corresponding reduction in the x -directed component of V_{x_1} , the instantaneous velocity at y_1 . The reduction V'_{x_1} is approximately equal to the differences in mean velocities. So at y_1 ,

$$V'_{x_1} \approx \bar{V}_1 - \bar{V}_2 \approx \ell \frac{d\bar{V}_x}{dy}$$

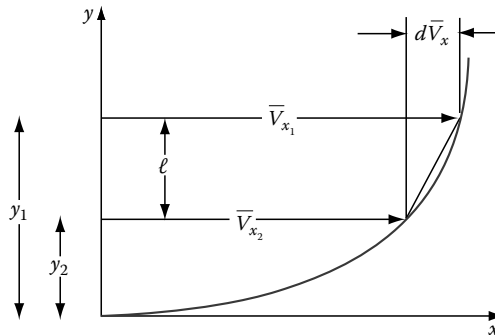


FIGURE 11.27 Illustration of mixing length ℓ .

The shear stress $\bar{\tau}_{yx}^{(t)}$ becomes (from Equation 11.50)

$$\bar{\tau}_{yx}^{(t)} = \rho \overline{V'_x V'_y} \approx \rho V'_y \ell \frac{d\bar{V}_x}{dy} \quad (11.54)$$

If it is further assumed that the turbulent fluctuation V'_y is approximately equal to the horizontal fluctuation V'_x , then Equation 11.54 becomes

$$\bar{\tau}_{yx}^{(t)} \approx \rho \ell^2 \frac{d\bar{V}_x}{dy} \left| \frac{d\bar{V}_x}{dy} \right| \quad (11.55)$$

where absolute value signs are placed to ensure that the sign on the shear stress properly reflects the sign of the gradient.

A third expression for the Reynolds stresses has resulted from the performance of many experiments. This empirical expression is intended for use in the vicinity of solid surfaces:

$$\bar{\tau}_{yx}^{(t)} = -\rho n^2 \bar{V}_{xy} \left(1 - \exp \left\{ -\frac{n^2 \bar{V}_{xy}}{\nu} \right\} \right) \frac{d\bar{V}_x}{dy} \quad (11.56)$$

The parameter n is a constant that has been determined to be 0.124 from measurements in turbulent flow in tubes.

The mixing-length expression can be used to derive an equation for velocity distribution for turbulent flow in a circular duct. The tube radius is R , and we will take the variable y to be

$$y = R - r$$

Thus, the independent variable y is measured from the wall as opposed to r , which is measured from the centerline.

For flow in tubes, a formulation similar to that in laminar flow can be performed by using the time-smoothed equations. The only velocity that we consider is $\bar{V}_z$, the mean axial flow velocity. Moreover, this velocity is a function of only the radial coordinate r . In terms of shear stress, the equation of motion in cylindrical coordinates is

$$0 = -\frac{dp}{dz} - \frac{1}{r} \frac{d(r\bar{\tau}_{rz})}{dr}$$

where $\bar{\tau}_{rz} = \bar{\tau}_{rz}^{(\ell)} + \bar{\tau}_{rz}^{(t)}$. Integrating the preceding equation gives

$$\begin{aligned} \frac{d(r\bar{\tau}_{rz})}{dr} &= -r \frac{dp}{dz} \\ r\bar{\tau}_{rz} &= -\frac{r^2}{2} \frac{dp}{dz} + C_1 \end{aligned}$$

At the centerline, the velocity must be finite. Therefore, one boundary condition is

$$r = 0 \quad \bar{\tau}_{rz} = 0$$

This gives $C_1 = 0$. The equation now becomes

$$\bar{\tau}_{rz} = -\frac{r}{2} \frac{dp}{dz} = -\frac{r}{R} \frac{R}{2} \frac{dp}{dz} \quad (11.57)$$

Equation 11.13 gives the wall shear stress for flow in a tube as

$$\tau_w = -\frac{R}{2} \frac{dp}{dz}$$

Combining with Equation 11.57 gives

$$\bar{\tau}_{rz} = \frac{r}{R} \tau_w$$

With $y = R - r$, this becomes

$$\bar{\tau}_{rz} = \tau_w \left(1 - \frac{y}{R}\right)$$

Therefore,

$$\bar{\tau}_{rz}^{(\ell)} + \bar{\tau}_{rz}^{(t)} = \tau_w \left(1 - \frac{y}{R}\right) \quad (11.58)$$

Two simplifying assumptions can now be made. The first is that molecular motions in the turbulent core are negligible in comparison to eddying motion. Thus,

$$\bar{\tau}_{rz}^{(\ell)} \ll \bar{\tau}_{rz}^{(t)}$$

The second is that

$$\tau_w \left(1 - \frac{y}{R}\right) \approx \tau_w$$

which is introduced to make the mathematics easier. Equation 11.58 now reduces to

$$\bar{\tau}_{rz}^{(t)} = \tau_w$$

At this point, it is necessary to introduce Equation 11.55 written in cylindrical coordinates to relate $\bar{\tau}_{rz}$ to a strain rate. For axial tube flow,

$$\bar{\tau}_{rz}^{(t)} = \rho \ell^2 \left(\frac{dV_z}{dr} \right)^2 \quad (11.59)$$

We must have a relationship between the mixing length and the independent variable. A suitable relationship results if it is assumed that the mixing length is proportional to ℓ :

$$\ell = ky$$

where k is a proportionality constant. In terms of y , Equation 11.59 becomes

$$\bar{\tau}_{rz}^{(t)} = \rho k^2 y^2 \left(\frac{dV_z}{dy} \right)^2 = \tau_w$$

Rearranging to solve for the velocity gradient, we get

$$\frac{d\bar{V}_z}{dy} = \pm \sqrt{\frac{\tau_w}{\rho}} \frac{1}{ky}$$

where the negative sign will have to be rejected. The square root term has the dimensions of a velocity and may for convenience be rewritten as V^* . The differential equation now becomes

$$\frac{d\bar{V}_z}{dy} = \frac{V^*}{ky}$$

Integrating this expression gives

$$\bar{V}_z = \frac{V^*}{k} \ln(y) + C_1 \quad (11.60)$$

At the edge of the buffer layer, at y_b , the velocity is $\bar{V}_{zb}$. Applying this boundary condition, we obtain

$$\bar{V}_{zb} = \frac{V^*}{k} \ln(y_b) + C_1$$

$$C_1 = \bar{V}_{zb} - \frac{V^*}{k} \ln(y_b)$$

Substitution into Equation 11.60 gives

$$\bar{V}_z = \frac{V^*}{k} \ln(y) + \bar{V}_{zb} - \frac{V^*}{k} \ln(y_b)$$

or

$$\frac{\bar{V}_z}{V^*} = \frac{1}{k} \ln\left(\frac{y}{y_b}\right) + \frac{\bar{V}_{zb}}{V^*}$$

Now let $s = \rho V^* y / \mu$ and $s_b = \rho V^* y_b / \mu$, both dimensionless Reynolds numbers. The velocity distribution now becomes

$$\frac{\bar{V}_z}{V^*} = \frac{1}{k} \ln\left(\frac{s}{s_b}\right) + \frac{\bar{V}_{zb}}{V^*}$$

Experiment has shown that the best value of k is 0.36. Moreover, the outer edge of the buffer zone can be selected at $s_b = 26$, where correspondingly $\bar{V}_{zb}/V^* = 12.85$. After substitution and simplification, we finally obtain

$$\frac{\bar{V}_z}{V^*} = \frac{1}{0.36} \ln(s) + 3.8 \quad s \geq 26 \quad (11.61)$$

This is the well-known logarithmic distribution. It has been found that for Reynolds numbers greater than 20 000, Equation 11.61 gives a good description in the turbulent core. Near the wall, Equation 11.56 can be used with success. We will not derive an expression for velocity, however,

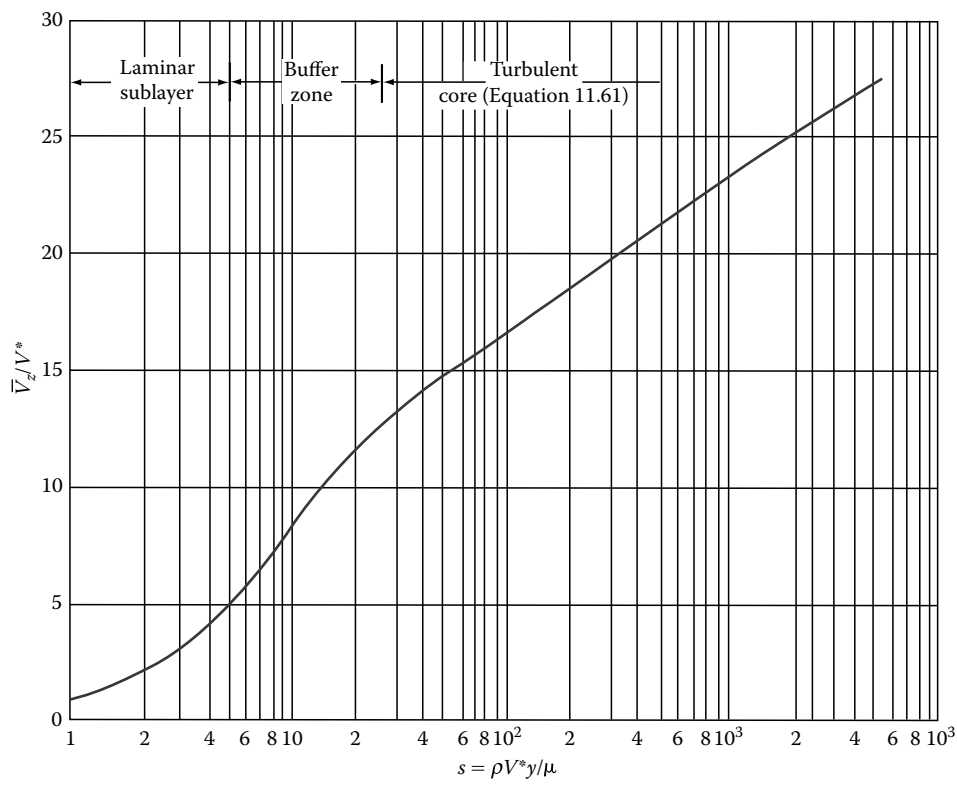


FIGURE 11.28 Velocity distribution for turbulent, incompressible flow in a tube. (Adapted from Deissler, R.G., *NACA Report*, 1210, 1955.)

because iterative integration procedures are required, and these are beyond the scope of our study. Nevertheless, a comparison between the results given here and experiment has shown good agreement. A plot of the turbulent profile is given in Figure 11.28.

11.5 SUMMARY

The Navier–Stokes equations for a general fluid mechanics problem were stated in this chapter. Descriptive equations were derived for various laminar flow problems. Graphical solution techniques for unsteady laminar flow problems were also presented. Next we obtained the equations of motion for turbulent flow. These equations were then simplified and applied to the problem of turbulent flow in a tube.

PROBLEMS

Steady Laminar Flow Problems

- 11.1** Write the boundary conditions for steady laminar flow of a Newtonian fluid in an annulus.
- 11.2** Show that for steady laminar flow of a Newtonian fluid in an annulus, the velocity is

$$V_z = \left(-\frac{dp}{dz} \right) \frac{R^2}{4\mu} \left[1 - \left(\frac{r}{R} \right)^2 + \frac{1 - k^2}{\ln(1/k)} \ln \left(\frac{r}{R} \right) \right]$$

- 11.3** Verify the derivation of Equation 11.11.
- 11.4** a. Determine the maximum velocity $V_{z\max}$ for flow in a circular duct.
 b. Express the instantaneous velocity V_z in terms of $V_{z\max}$.
 c. Write the equation for volume flow rate (Equation 11.11) in terms of $V_{z\max}$.
- 11.5** Verify the derivation of Equation 11.15.
- 11.6** a. Determine the maximum velocity $V_{z\max}$ for flow down an incline.
 b. Express the instantaneous velocity V_z in terms of $V_{z\max}$.
 c. Write the equation for volume flow rate (Equation 11.15) in terms of $V_{z\max}$.
- 11.7** Solve the differential equation for flow through a straight channel and derive Equation 11.17.
- 11.8** Integrate the equation for instantaneous velocity V_z through a straight channel over the cross-sectional area and derive Equation 11.18.
- 11.9** Derive the velocity profile of Equation 11.21.
- 11.10** For plane Couette flow, the velocity profile is

$$\frac{V_z}{U} = \frac{y}{h} + \left(-\frac{dp}{dz}\right) \left(\frac{h^2}{2\mu U}\right) \left(\frac{y}{h}\right) \left(1 - \frac{y}{h}\right)$$

Integrate this equation over the cross-sectional area and show that the volume flow rate is given by

$$Q = \frac{Ubh}{2} + \frac{bh^3}{12\mu} \left(-\frac{dp}{dz}\right)$$

where b is the width of the flow area.

- 11.11** For plane Couette flow, the volume flow rate is given by

$$Q = \frac{Ubh}{2} + \frac{bh^3}{12\mu} \left(-\frac{dp}{dz}\right)$$

- a. Show that the required relationship between the velocity of the upper plate and the pressure drop such that the volume flow rate is zero is given by

$$U = -\frac{h^2}{6\mu} \left(-\frac{dp}{dz}\right)$$

- b. Substitute this relationship into the instantaneous velocity profile and show that for $Q = 0$,

$$\frac{V_z}{U} = \frac{y}{h} - 3\left(\frac{y}{h}\right) \left(1 - \frac{y}{h}\right)$$

- 11.12** Verify that Figure 11.9 is a correct representation.
- 11.13** Derive Equation 11.26 for flow between two rotating concentric cylinders.
- 11.14** Consider a cylinder moving axially within a tube, as illustrated in Figure P11.14. Write the differential equation and boundary conditions for steady laminar axial flow through the annulus.

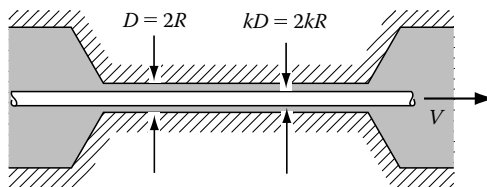


FIGURE P11.14

11.15 Show that for the system of Problem 11.14, the fluid velocity is given as

$$V_z = V \frac{\ln(r/R)}{\ln(k)}$$

11.16 Consider the flow of two immiscible fluids between two flat plates as shown in Figure P11.16. A pressure gradient imposed from inlet to outlet causes flow.

Write the differential equation and boundary conditions for the system if the flow is steady and laminar.

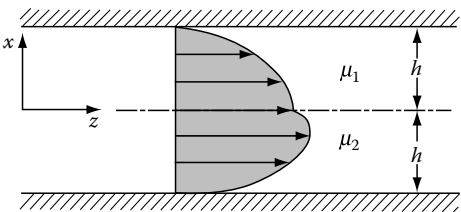


FIGURE P11.16

11.17 Consider two coaxial cylinders with fluid in the space between them, as shown in Figure P11.17. The outer cylinder is rotating at an angular velocity of ω_0 . Write the differential equation and boundary conditions for the system if the flow is steady and laminar.

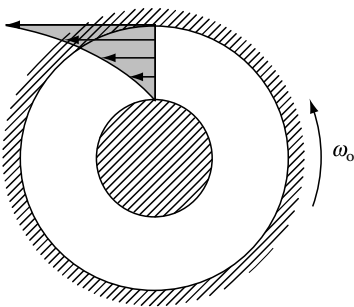


FIGURE P11.17

11.18 Repeat Problem 11.17 for the case in which only the inner cylinder is rotating at ω_i .

11.19 A Newtonian liquid is being rotated in a cylindrical container of radius R as shown in Figure P11.19. Write the differential equation and boundary conditions if the angular velocity is ω .

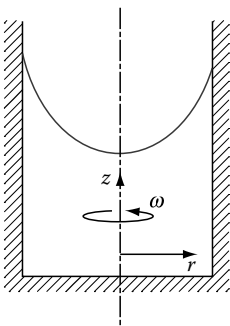


FIGURE P11.19

11.20 Starting with the continuity equation in Cartesian conditions, use the definitions

$$x = r \cos \theta$$

$$y = r \sin \theta$$

$$z = z$$

to obtain the continuity equation in cylindrical coordinates.

11.21 A wall is in contact with a fluid. Suddenly the wall is set in motion as illustrated in Figure P11.21. Verify that the differential equation is

$$\frac{\partial V_z}{\partial t} = \frac{\mu}{\rho} \frac{\partial^2 V_z}{\partial y^2}$$

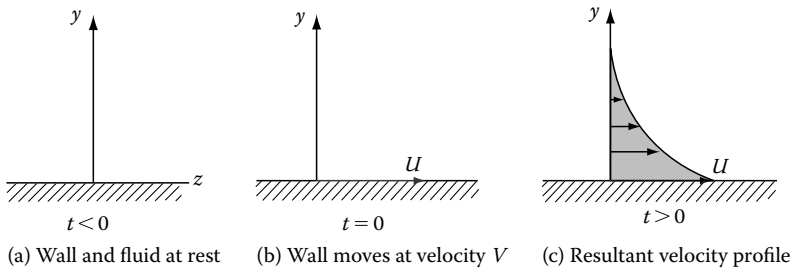


FIGURE P11.21

and that the initial and boundary conditions are

$$\text{IC: } t \leq 0, \quad V_z = 0$$

$$\text{BC 1: } y = 0, \quad V_z = U, \quad t > 0$$

$$\text{BC 2: } y = \infty, \quad V_z = 0, \quad t > 0$$

11.22 A Newtonian fluid in a pipe is initially at rest. Suddenly a pressure drop dp/dz is imposed on the fluid (in the axial direction). Show that the differential equation, the initial condition, and the boundary conditions are

$$\rho \frac{\partial V_z}{\partial t} = -\frac{dp}{dz} + \mu \left[\frac{1}{r} \frac{\partial}{\partial r} \left(r \frac{\partial V_z}{\partial r} \right) \right]$$

$$\text{IC: } t = 0, \quad V_z = 0$$

$$\text{BC 1: } r = 0, \quad \partial V_z / \partial r = 0 \quad (V \text{ is finite})$$

$$\text{BC 2: } r = R, \quad V_z = 0$$

11.23 A Newtonian fluid in a narrow slit is initially at rest. Suddenly, a pressure drop in the longitudinal direction is imposed on the fluid. For unsteady laminar flow, determine the differential equation and boundary conditions for the system. (See Problem 11.22.)

Graphical Solution Methods for Unsteady Problems

11.24 Obtain a table of values for the error function (usually found in heat transfer textbooks or math handbooks) as given in Equation 11.36. Generate a graphical solution to the suddenly accelerated flat problem for the first four time intervals. Use the error function table to obtain the solution for the velocity at the fourth time interval. Plot the error function results on your

solution graph and determine how well the graphical method works for this problem. (Some error is expected due to the finite Δy distance selected.) If it is necessary to specify a fluid, use glycerine. Also, select a Δy that is different from the one used in the text. Note that

$$\text{Re}_c = \frac{\Delta y^2}{\nu t} = \frac{\Delta y^2}{\nu(4\Delta t)} = 1$$

where the 4 is inserted to represent the fourth Δt or the fourth time interval. Continuing,

$$\nu \Delta t = \frac{\Delta y^2}{4}$$

From the exact solution, we have defined the independent variable η as

$$\eta = \frac{y}{2\sqrt{\nu t}}$$

Combining with the previous equation gives

$$\eta = \frac{y}{4 \Delta y}$$

where y is position and Δy is the increment you are to select. Thus there is a relationship between the graphical solution variables and the error function variable η .

- 11.25** Generate two graphical solutions to the unsteady plane Couette flow problem using two different Δy values. Compare the results obtained in the solutions by evaluating profiles at equal times.
- 11.26** In the problem of unsteady flow between concentric circular cylinders, the solution given was for the inner cylinder rotating. Generate a solution for when the outer cylinder rotates at a fixed angular velocity and the inner cylinder is stationary.
- 11.27** Verify that the time increment for unsteady flow between concentric cylinders is given by

$$t = \frac{\rho(R_2 - R_1)^2}{81\mu}$$

- 11.28** Using the graphical method, generate velocity profiles for the first five time intervals for unsteady start-up in a plane channel. Solve the problem using a Δy that is different from that in the text. Plot also the steady-state solution (Equation 11.17) on the same axes. Note that when this is done, the relationship between $\Delta pt/\rho L$ and $V_{z \max}$ is automatically fixed. To develop such a relationship, rewrite Equation 11.17 as

$$\frac{V_z}{V_{z \max}} = \left[1 - \left(\frac{y}{h} \right)^2 \right]$$

Let the graph vary from 0 to 1 for velocity and from 0 (at the centerline) to 1 (at the wall) for position. Using the definition of $V_{z \max}$ and $\text{Re}_c = 1$ solve for $\Delta pt/\rho L$ in terms of $V_{z \max}$ and construct the graphical solution.

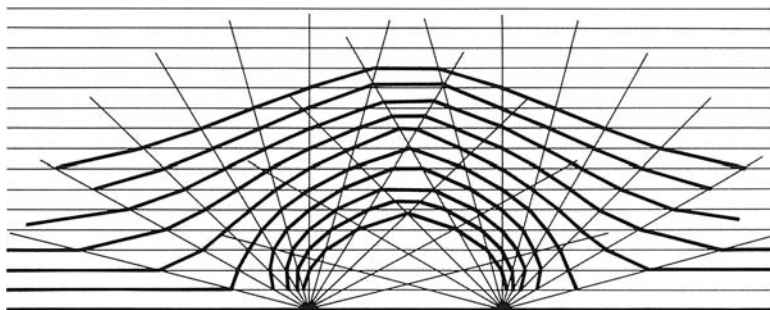
Turbulent Flow Problems

- 11.29** Ethyl alcohol flows in a $\frac{1}{2}$ -nominal, schedule 40 pipe. Determine the pressure drop (in Pa/m) at transition.
- 11.30** Repeat Problem 11.29 for glycerine.

- 11.31** Repeat Problem 11.29 for air.
- 11.32** Repeat Problem 11.29 for hydrogen.
- 11.33** Benzene flows in a long 6-nominal, schedule 40 tube. The pressure drop in the pipe is 0.03 lbf/ft^2 per foot of length. Calculate the wall shear stress and plot the velocity profile in the pipe. Use Figure 11.28 if appropriate.
- 11.34** Water flows in a long tube made of 10-nominal, schedule 40 wrought iron. The pressure drop in the pipe is 3.0 kPa per meter of length. Plot the velocity profile. Use Figure 11.28 if appropriate.
- 11.35** Examine Equations 11.5 through 11.8 and determine the dimension of the ∇ operator.

This page intentionally left blank

12 Inviscid Flow



In real-life situations, most flow is turbulent. In pipe flow, in open-channel flow, and in flow over immersed bodies, laminar conditions exist only rarely. To analyze problems in these areas of study, it is most beneficial to be able to obtain a velocity or a velocity distribution for the problem at hand. As we saw in the last chapter, however, solution of the Navier–Stokes equations for turbulent flow problems is no easy task. Exact solutions were obtainable only for simplified laminar flow cases. Consequently, it is often necessary to make approximations so that the engineer can formulate a working solution to a number of important problems.

Let us for the moment consider flow past an object, as illustrated in Figure 12.1. Streamlines of flow about the object also appear in the diagram. Upstream the flow is uniform. In the vicinity of the object, the flow pattern is altered from the uniform incoming flow—the object displaces the flow. Far from the surface, however, the fluid is not affected by the presence of an object. In the regions labeled A in Figure 12.1, the streamlines are therefore uniform and parallel. At the surface, the fluid adheres because of friction. Regardless of how small the viscosity of the fluid is, velocity at the wall is zero. We therefore conclude that viscous effects can be neglected in a flow field except in the vicinity of a surface. It is thus possible to divide the flow into two regions. The first of these is a nonviscous region where viscosity need not be included in the equations of motion. The second is a viscous region for the fluid in the immediate vicinity of the object.

A study of flow of a nonviscous or inviscid fluid is the topic of interest in this chapter. Flow in the vicinity of an immersed object or near a surface is often referred to as *boundary-layer flow*, the topic of the following chapter. In this chapter, we will develop equations for steady, incompressible, inviscid flow. The continuity and Euler equations will be derived from the Navier–Stokes equations of Chapter 11. Stream and potential functions will be introduced and used to describe a multitude of flow fields. We will then use superposition to combine simpler flow fields and form more complex ones. Finally, we will discuss irrotationality of an inviscid flow and write the Laplace equation for stream and potential functions.

12.1 EQUATIONS OF TWO-DIMENSIONAL INVISCID FLOWS

The continuity and momentum (Navier–Stokes) equations were presented in the last chapter for a general three-dimensional flow of a Newtonian fluid. Now, we will reduce those equations to describe the flow of a nonviscous fluid, restricting our study to a two-dimensional, inviscid, incompressible flow. Solutions to the inviscid equations for several problems will be presented.

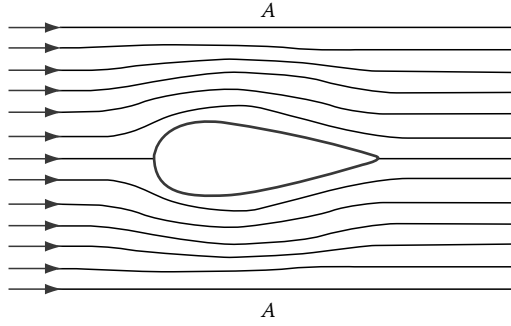


FIGURE 12.1 Streamlines of flow past an object.

12.1.1 CONTINUITY EQUATION

For two-dimensional flow in Cartesian coordinates, we eliminate the velocity in the z -direction, V_z , from the continuity equation of Chapter 11 (Equation 11.1). For steady, incompressible, inviscid, two-dimensional flow, Equation 11.1 becomes

$$\frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0 \quad (12.1)$$

Correspondingly, in polar cylindrical coordinates, the continuity equation (Equation 11.3) becomes

$$\frac{\partial(rV_r)}{\partial r} + \frac{\partial(V_\theta)}{\partial \theta} = 0 \quad (12.2)$$

12.1.2 MOMENTUM EQUATION

Again we refer to Chapter 11. Equations 11.2a through 11.2c are the Navier–Stokes equations. For an inviscid flow, the viscosity μ in those equations is set equal to zero. For two-dimensional flow, $V_z = 0$; and for the steady case, all differentiation with respect to time is zero. The equations of motion become in Cartesian coordinates

$$x\text{-component: } \rho \left(V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} \right) = -\frac{\partial p}{\partial x} + \rho g_x \quad (12.3)$$

$$y\text{-component: } \rho \left(V_x \frac{\partial V_y}{\partial x} + V_y \frac{\partial V_y}{\partial y} \right) = -\frac{\partial p}{\partial y} + \rho g_y \quad (12.4)$$

The z -component equation vanishes. Performing similar operations for the Navier–Stokes equations in polar cylindrical coordinates (Equation 11.4a through 11.4c) yields

$$r\text{-component: } \rho \left(V_r \frac{\partial V_r}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_r}{\partial \theta} - \frac{V_\theta^2}{r} \right) = -\frac{\partial p}{\partial r} + \rho g_r \quad (12.5)$$

$$\theta\text{-component: } \rho \left(V_r \frac{\partial V_\theta}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_\theta}{\partial \theta} + \frac{V_r V_\theta}{r} \right) = -\frac{1}{r} \frac{\partial p}{\partial \theta} + \rho g_\theta \quad (12.6)$$

Equations 12.3 through 12.6 in differential form for frictionless flow are called the **Euler equations**. The continuity and Euler equations are the equations of two-dimensional, steady, inviscid flow.

12.2 STREAM FUNCTION AND VELOCITY POTENTIAL

For two-dimensional inviscid flow problems, the continuity and Euler equations must be solved subject to boundary conditions. For viscous flow, the tangential and normal velocity at a boundary is zero owing to friction; for inviscid flow, the tangential fluid velocity at a boundary is nonzero because the fluid has no viscosity. The normal fluid velocity is zero, however. These, in general, are the boundary conditions in inviscid flow.

The continuity and Euler equations contain three unknowns— V_x , V_y , and p . The equations must be solved simultaneously; and because they are nonlinear, it is difficult to apply direct solution methods successfully. This complexity can be reduced, however, by the introduction of two functions, both capable of describing the velocity components of the flow field. These are the **stream function** ψ and the **potential function** ϕ .

The stream function ψ is a function of x and y . It is defined in terms of the flow velocities as

$$\begin{aligned} V_x &= \frac{\partial \psi}{\partial y} \\ V_y &= -\frac{\partial \psi}{\partial x} \end{aligned} \quad (12.7)$$

The stream function defined here satisfies the two-dimensional continuity equation. Thus, if $\psi(x, y)$ is known and is a continuously differentiable function, the velocity components V_x and V_y can be determined. The reason for defining the stream function in this manner is that the velocity vector $V (= \sqrt{V_x^2 + V_y^2})$ is in the direction of the tangent of the streamline at any point (x, y) in the flow field. From calculus, the total differential of the stream function can be written as

$$d\psi = \frac{\partial \psi}{\partial x} dx + \frac{\partial \psi}{\partial y} dy$$

Combining this equation with Equation 12.7, we get

$$d\psi = -V_y dx + V_x dy \quad (12.8)$$

On a line of constant ψ , $d\psi = 0$, and Equation 12.8 can be rearranged to solve for the slope as

$$\left. \frac{dy}{dx} \right|_{\psi} = \frac{V_y}{V_x} \quad (12.9)$$

which is the differential equation of the streamlines. This concept is illustrated in Figure 12.2. The streamline is denoted as a “ $d\psi = 0$ ” or a “ $\psi = \text{a constant}$ ” line. The velocity vector and components are drawn at the point of interest (x, y) . The slope of the tangent to the streamline at (x, y) is $dy/dx = V_y/V_x$.

The potential function ϕ is a function of x and y . It is defined in terms of the flow velocities as

$$\begin{aligned} V_x &= \frac{\partial \phi}{\partial x} \\ V_y &= \frac{\partial \phi}{\partial y} \end{aligned} \quad (12.10)$$

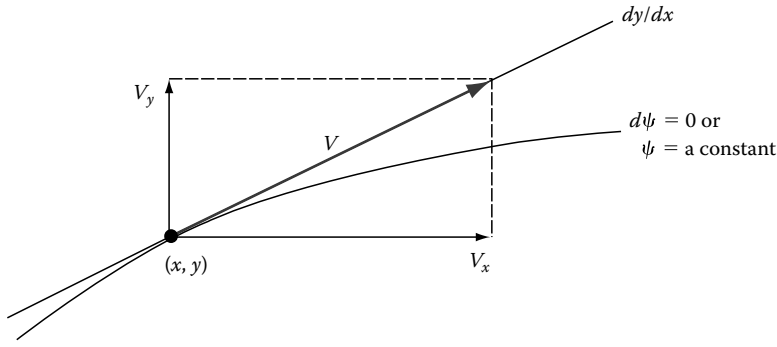


FIGURE 12.2 Streamline and velocity through a point.

Thus, if the velocity potential ϕ is known and is continuously differentiable, the velocity components V_x and V_y can be found. The differential of ϕ is written as

$$d\phi = \frac{\partial\phi}{\partial x} dx + \frac{\partial\phi}{\partial y} dy$$

Combining this equation with Equations 12.10, we get

$$d\phi = V_x dx + V_y dy \quad (12.11)$$

On a line of constant ϕ , $d\phi = 0$, and Equation 12.11 can be rearranged to solve for the slope as

$$\left. \frac{dy}{dx} \right|_{\phi} = -\frac{V_x}{V_y} \quad (12.12)$$

This is the differential equation of the potential lines. Equation 12.9 multiplied by Equation 12.12 yields

$$\left(\left. \frac{dy}{dx} \right|_{\psi} \right) \left(\left. \frac{dy}{dx} \right|_{\phi} \right) = \frac{V_y}{V_x} \cdot \frac{-V_x}{V_y} = -1$$

Therefore, at any point (x, y) in a flow field, the streamline is normal to the potential line (see Figure 12.3).

Similar definitions for ψ and ϕ can be stated for velocity components in polar cylindrical coordinates:

$$\begin{aligned} V_r &= \frac{1}{r} \frac{\partial\psi}{\partial\theta} = \frac{\partial\phi}{\partial r} \\ V_{\theta} &= -\frac{\partial\psi}{\partial r} = \frac{1}{r} \frac{\partial\phi}{\partial\theta} \end{aligned} \quad (12.13)$$

It can be shown in this coordinate system that streamlines and potential lines are normal to each other.

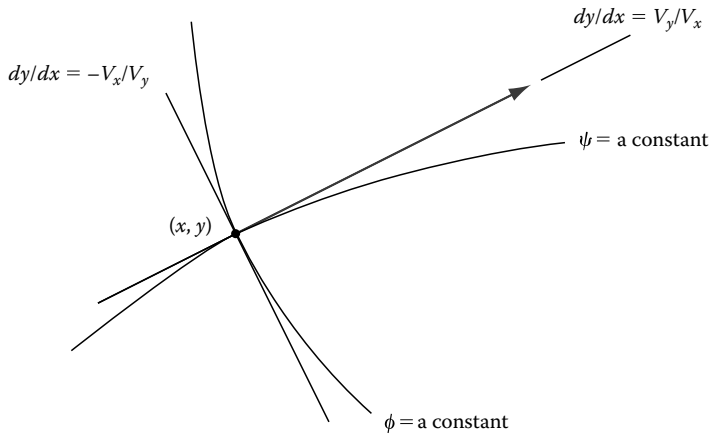


FIGURE 12.3 Orthogonality of streamlines and potential lines.

Example 12.1

A flow field is described by the streamline equation

$$\psi = xy$$

- Determine the velocity field.
- Determine the velocity potential function.
- Determine whether the flow satisfies the continuity equation.
- Plot the streamlines and potential lines on the same set of axes.

SOLUTION

- a.** The potential function is found by applying Equations 12.7 and 12.10. By definition,

$$V_x = \frac{\partial \psi}{\partial y} = x$$

$$V_y = -\frac{\partial \psi}{\partial x} = -y$$

Also,

$$\frac{\partial \phi}{\partial x} = V_x = x$$

from which we obtain by integration

$$\phi = \frac{x^2}{2} + f_1(y) + C_1$$

where: $f_1(y)$ is an unknown function of y
 C_1 is a constant

Moreover,

$$\frac{\partial \phi}{\partial y} = V_y = -y$$

which gives

$$\phi = -\frac{y^2}{2} + f_2(x) + C_2$$

where: $f_2(x)$ is an unknown function of x
 C_2 is a constant

Equating both expressions for ϕ yields

$$\frac{x^2}{2} + f_1(y) + C_1 = -\frac{y^2}{2} + f_2(x) + C_2$$

We thus conclude that

$$f_1(y) = -\frac{y^2}{2}$$

$$f_2(x) = \frac{x^2}{2}$$

$$C_1 = C_2$$

- b.** Because determining velocity involves only derivatives of ϕ or ψ , constants are generally not important and arbitrarily can be set equal to zero. The potential function, then, is

$$\phi = \frac{1}{2}(x^2 - y^2)$$

- c.** The continuity equation is

$$\frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0$$

By substitution, we get

$$+1 - 1 = 0$$

Thus, continuity is satisfied.

- d.** For simplicity, we will restrict the plot to the first quadrant, where $x \geq 0$ and $y \geq 0$. The stream function is

$$\psi = xy$$

Selecting constants for ψ gives various equations, each of which must be graphed:

$$\psi = 0 \quad xy = 0 \quad x = 0, \quad y = 0$$

$\psi = 8 \quad xy = 8$

<i>y</i>	<i>x</i>
8	1
4	2
2	4
1	8

$\psi = 16 \quad xy = 16$

<i>y</i>	<i>x</i>
10	1.6
8	2
4	4
2	8
1.6	10

$\psi = 24 \quad xy = 24$

<i>y</i>	<i>x</i>
10	2.4
8	3
6	4
4	6
3	8
2.4	10

$\psi = 32 \quad xy = 32$

<i>y</i>	<i>x</i>
10	3.2
8	4
4	8
3.2	10

Similarly, for the velocity potential

$\phi = \frac{1}{2}(x^2 - y^2)$

we have

$\phi = 0 \quad y = x \quad y = -x$

$\phi = 8 \quad y^2 = x^2 - 16$

<i>y</i>	<i>x</i>
0	4
4.47	6
6.9	8

$\phi = -8 \quad x^2 = y^2 - 16$

<i>y</i>	<i>x</i>
4	0
6	4.47
8	6.90
10	9.17

$\phi = 16 \quad y^2 = x^2 - 32$

<i>y</i>	<i>x</i>
0	5.65
2	6
5.65	8

$\phi = -16 \quad x^2 = y^2 - 32$

<i>y</i>	<i>x</i>
5.65	0
6	2
8	5.65

$\phi = 24 \quad y^2 = x^2 - 48$

<i>y</i>	<i>x</i>
0	6.92
4	8
5.74	9

$\phi = -24 \quad x^2 = y^2 - 48$

<i>y</i>	<i>x</i>
6.92	0
8	4
9	5.74

A plot of these equations is given in Figure 12.4. This type of graph is called a **flow net**. The field represents flow into a corner. If the corresponding plot for the second quadrant were also drawn (it is symmetric about the *y*- and *x*-axis), we would have a model of inviscid flow striking a flat surface.

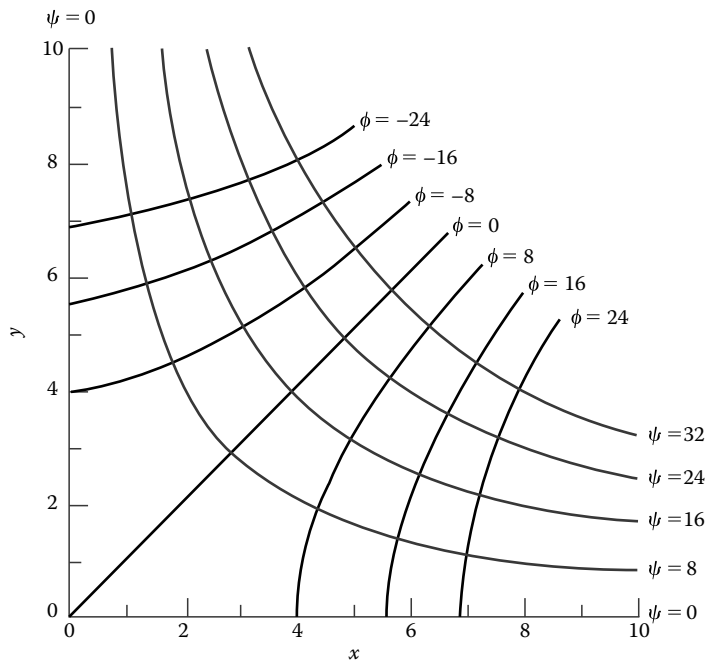


FIGURE 12.4 Graph of stream and potential functions for Example 12.1.

12.3 IRROTATIONAL FLOW

Rotation is a characteristic of flow. Rotational flow occurs if a fluid element rotates while the fluid is flowing. Consider, for example, Figure 12.5a for a viscous fluid and Figure 12.5b for an inviscid fluid; in both cases the flow is between parallel boundaries. In Figure 12.5a, a fluid element at position 1 will deform as it moves to position 2. The lower horizontal line is carried downstream faster than the upper line. The upper line is nearer the wall, where the velocity is zero. Because the sides of the element have rotated, we use the name **rotational flow**. Figure 12.5b shows a fluid element at positions 1 and 2, but the sides of the element have not rotated because the fluid is inviscid. The velocity at the wall in the main flow direction is not zero; the shape of the element has been preserved. This is called **irrotational flow**.

As a second example, consider briefly circular or vortex flow, as illustrated in Figure 12.6. In Figure 12.6a (for a viscous fluid), the flow is rotational as compared to Figure 12.6b for irrotational flow. A final example of irrotational flow is illustrated in Figure 12.7 for flow through a converging duct. As the flow accelerates, the fluid element elongates. The diagonals of the element rotate in

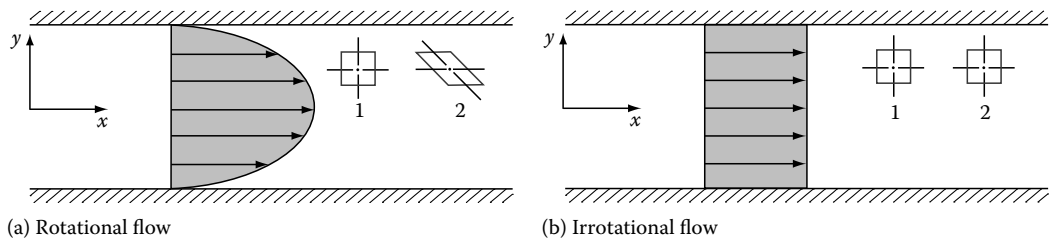


FIGURE 12.5 Rotational and irrotational flow in a duct.

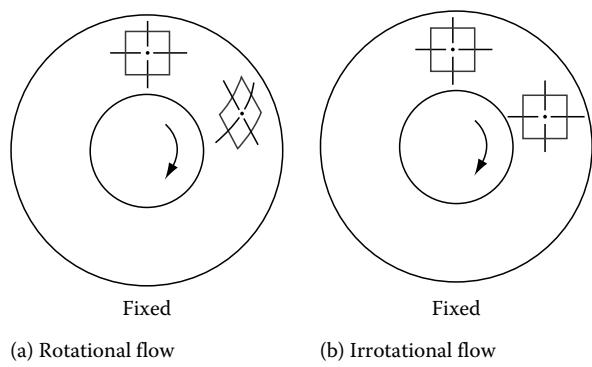


FIGURE 12.6 Rotational and irrotational flow.

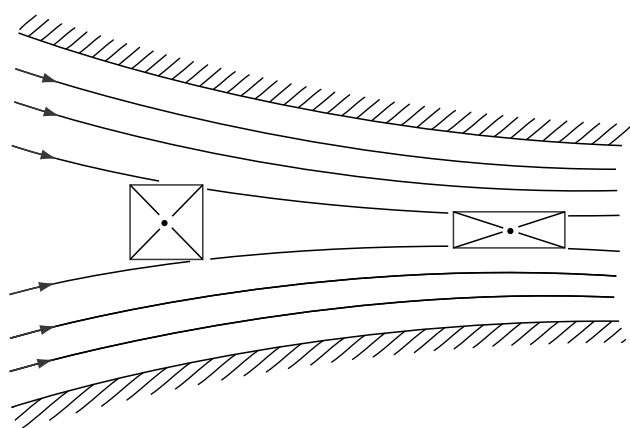


FIGURE 12.7 Irrotational flow through a converging duct.

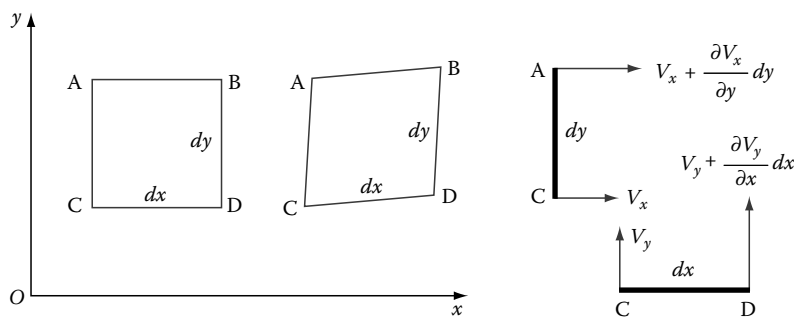


FIGURE 12.8 Rotation of a fluid element.

equal amounts but in opposite directions, thus balancing each other and preserving the direction of each side of the element.

Now let us develop an expression for the rotation in a flow field. Figure 12.8 shows a fluid element in the xy plane. The element dimensions are dx by dy , and two of the sides are drawn

separately to indicate the velocity at each corner. The rotation of each of the sides about point C is determined by dividing the difference in endpoint velocities by the length of the appropriate side. Taking the counterclockwise direction as positive, we obtain

Rotation of CA about point C :

$$\frac{V_x - [V_x + (\partial V_x / \partial y)dy]}{dy} = -\frac{\partial V_x}{\partial y}$$

Rotation of CD about point C :

$$\frac{[V_y + (\partial V_y / \partial x)dx] - V_y}{dx} = \frac{\partial V_y}{\partial x}$$

These equations are written with the assumption that the element is not translating. The average of these two angular velocities in the plane normal to the z -axis is called the rotation. Thus

$$\omega_z = \frac{1}{2} \left(\frac{\partial V_y}{\partial x} - \frac{\partial V_x}{\partial y} \right) \quad (12.14)$$

Similarly, for the general three-dimensional case, we also have

$$\omega_x = \frac{1}{2} \left(\frac{\partial V_z}{\partial y} - \frac{\partial V_y}{\partial z} \right)$$

and

$$\omega_y = \frac{1}{2} \left(\frac{\partial V_x}{\partial z} - \frac{\partial V_z}{\partial x} \right)$$

For our study of potential flow, we will be concerned only with ω_z . In polar cylindrical coordinates, there results

$$\omega_z = \frac{1}{2} \left[\frac{1}{r} \frac{\partial(rV_\theta)}{\partial r} - \frac{1}{r} \frac{\partial(V_r)}{\partial \theta} \right] \quad (12.15)$$

For irrotational flow, Equation 12.14 gives another useful relationship between the velocities:

$$\frac{\partial V_y}{\partial x} - \frac{\partial V_x}{\partial y} = 0 \quad (12.16)$$

Example 12.2

Determine whether the flow of Example 12.1 is rotational. That flow was described by

$$\psi = xy \quad \text{and} \quad \phi = \frac{1}{2}(x^2 - y^2)$$

SOLUTION

For irrotational flow, Equation 12.16 applies:

$$\frac{\partial V_y}{\partial x} - \frac{\partial V_x}{\partial y} = 0$$

By definition,

$$V_x = \frac{\partial \psi}{\partial y} = x$$

and

$$V_y = \frac{\partial \psi}{\partial x} = -y$$

From these definitions, we obtain

$$\frac{\partial V_y}{\partial x} = 0 \quad \text{and} \quad \frac{\partial V_x}{\partial y} = 0$$

The flow velocities thus satisfy the condition of irrotationality.

The stream function is applicable in both rotational and irrotational flows because the stream function satisfies the continuity equation. The potential function applies only to irrotational flows.

For irrotational flow, it is possible to integrate the Euler equations to obtain another relationship between the velocity and pressure in the flow. If we work in Cartesian coordinates and let gravity be nonzero only in the vertical direction, the Euler Equations 12.3 and 12.4 are

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial x} \quad (12.3)$$

$$V_x \frac{\partial V_y}{\partial x} + V_y \frac{\partial V_y}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial y} - g \quad (12.4)$$

Gravity is thus positive downward. By using the irrotational flow condition, namely,

$$\frac{\partial V_x}{\partial y} = \frac{\partial V_y}{\partial x}$$

the preceding equations become

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_y}{\partial x} = -\frac{1}{\rho} \frac{\partial p}{\partial x}$$

and

$$V_x \frac{\partial V_x}{\partial y} + V_y \frac{\partial V_y}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial y} - g$$

These two equations can be simplified to obtain

$$\frac{1}{2} \frac{\partial(V_x^2)}{\partial x} + \frac{1}{2} \frac{\partial(V_y^2)}{\partial x} = -\frac{1}{\rho} \frac{\partial p}{\partial x}$$

and

$$\frac{1}{2} \frac{\partial(V_x^2)}{\partial y} + \frac{1}{2} \frac{\partial(V_y^2)}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial y} - g$$

For constant density, both equations can now be integrated to give

$$\begin{aligned} \frac{1}{2} (V_x^2 + V_y^2) &= -\frac{p}{\rho} + f_1(y) \\ \frac{1}{2} (V_x^2 + V_y^2) &= -\frac{p}{\rho} - gy + f_2(x) \end{aligned} \quad (12.17)$$

where

f_1 is an unknown function of y

f_2 is an unknown function of x

Equating gives

$$f_1(y) = -gy + f_2(x)$$

or

$$f_2(x) = f_1(y) + gy$$

The left-hand side is a function of only x , whereas the right-hand side is a function of only y . For this to occur, both sides must equal a constant. Combining the last equation with Equation 12.17 gives

$$\begin{aligned} \frac{1}{2} (V_x^2 + V_y^2) &= -\frac{p}{\rho} - gy + \text{a constant} \\ \frac{p}{\rho} + \frac{V^2}{2} + gy &= \text{a constant} = C \end{aligned} \quad \text{(Bernoulli's equation)} \quad (12.18)$$

This equation is recognized as Bernoulli's equation derived by assuming inviscid, irrotational flow in two dimensions. By knowing the equation of the streamlines or the velocity potential, we can determine the total velocity V . Bernoulli's equation then allows for finding the pressure in the flow.

12.4 LAPLACE'S EQUATION AND VARIOUS FLOW FIELDS

The velocity potential and the stream function can be used to solve simple problems in two-dimensional, inviscid, irrotational flow. The differential equation that ϕ and ψ must satisfy is the Laplace equation. It can be obtained by combining the continuity equation and the irrotationality relation with the definition of velocity in terms of these functions:

$$\text{Continuity: } \frac{\partial V_x}{\partial x} = \frac{\partial V_y}{\partial y} = 0 \quad (12.1)$$

$$\begin{aligned} \text{Potential function: } V_x &= \frac{\partial \phi}{\partial x} \\ V_y &= \frac{\partial \phi}{\partial y} \end{aligned} \quad (12.10)$$

Combining equations, we obtain

$$\frac{\partial}{\partial x} \left(\frac{\partial \phi}{\partial x} \right) + \frac{\partial}{\partial y} \left(\frac{\partial \phi}{\partial y} \right) = 0$$

or

$$\frac{\partial^2 \phi}{\partial x^2} + \frac{\partial^2 \phi}{\partial y^2} = 0 \quad (12.19)$$

This is Laplace's equation for the velocity potential; it can be rewritten as

$$\nabla^2 \phi = 0$$

A similar development can be performed for the stream function:

$$\text{Irrotationality relation: } \frac{\partial V_y}{\partial x} - \frac{\partial V_x}{\partial y} = 0 \quad (12.16)$$

$$\begin{aligned} \text{Stream function: } V_x &= \frac{\partial \psi}{\partial y} \\ V_y &= -\frac{\partial \psi}{\partial x} \end{aligned} \quad (12.17)$$

Combining equations, we obtain

$$\frac{\partial}{\partial x} \left(-\frac{\partial \psi}{\partial x} \right) - \frac{\partial}{\partial y} \left(\frac{\partial \psi}{\partial y} \right) = 0$$

or

$$\frac{\partial^2 \psi}{\partial x^2} + \frac{\partial^2 \psi}{\partial y^2} = 0 \quad (12.20)$$

which is Laplace's equation for the streamlines. In del operator notation,

$$\nabla^2 \psi = 0$$

In polar cylindrical coordinates, Laplace's equation for the velocity potential is

$$\frac{\partial^2 \phi}{\partial r^2} + \frac{1}{r} \frac{\partial \phi}{\partial r} + \frac{1}{r^2} \frac{\partial^2 \phi}{\partial \theta^2} = 0 \quad (12.21)$$

which is easily derivable from Equation 12.19. We will now examine several solutions to the equations for some simple flows.

12.4.1 UNIFORM FLOW

Uniform flow can be described as flow parallel to, say, the x -axis moving in the positive direction at a constant velocity U . Thus,

$$V_x = U$$

and

$$V_y = 0$$

By definition,

$$V_x = \frac{\partial \phi}{\partial x} = U$$

from which we obtain

$$\phi = Ux + f_1(y)$$

Also,

$$V_y = \frac{\partial \phi}{\partial y} = 0$$

$$\phi = f_2(x)$$

Equating both expressions for ϕ gives

$$Ux + f_1(y) = f_2(x)$$

or

$$f_1(y) = Ux + f_2(x)$$

We therefore conclude that

$$\phi = Ux \quad (\text{uniform flow}) \quad (12.22a)$$

Following a similar procedure for the stream function, we obtain

$$\psi = Uy \quad (\text{uniform flow}) \quad (12.22b)$$

A plot of uniform flow is provided in Figure 12.9 for values of 0, U , $2U$, $3U$, and $4U$.

12.4.2 SOURCE FLOW

Source flow can be described as a radially outward flow emanating from a point. The velocity in the xy plane is radial at any location, as is illustrated in Figure 12.10. At any location along a circle of radius r , the radial velocity V_r is a constant. The flow rate per unit length into the page is a constant that is equal to the product of radial velocity and circumferential distance:

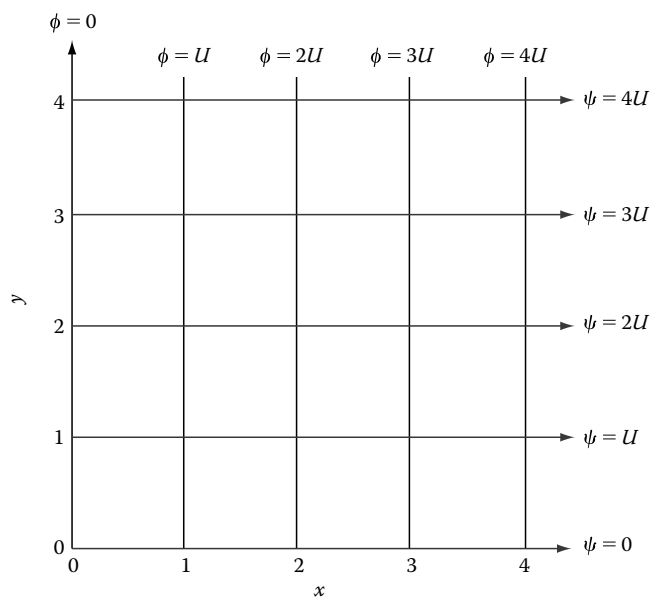


FIGURE 12.9 Streamlines and potential lines for uniform flow.

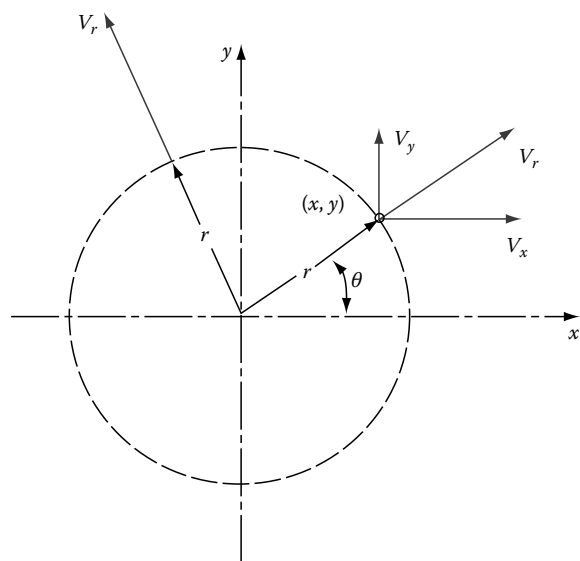


FIGURE 12.10 Flow emanating from a point or source flow.

$$\frac{Q}{L} = q = 2\pi r V_r$$

Because q is a constant, the flow is steady. At the origin, where $r = 0$, the radial velocity V_r must be infinite. Mathematically, a point source is known as a singular point and does not exist in nature. From the preceding equation and discussion,

$$V_r = \frac{q}{2\pi r}$$

$$V_\theta = 0$$

By definition,

$$V_r = \frac{\partial \phi}{\partial r} = \frac{q}{2\pi r}$$

Integrating gives

$$\phi = \frac{q}{2\pi} \ln(r) + f_1(\theta)$$

Moreover,

$$V_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = 0$$

Integrating yields

$$\phi = f_2(r)$$

Equating both expressions for ϕ , we obtain

$$\frac{q}{2\pi} \ln(r) + f_1(\theta) = f_2(r)$$

It is concluded, then, that for source flow

$$\phi = \frac{q}{2\pi} \ln(r) \quad (\text{source flow}) \quad (12.23a)$$

Following a similar procedure for the stream function, we find

$$\psi = \frac{q\theta}{2\pi} \quad (\text{source flow}) \quad (12.23b)$$

For source flow, it is seen that potential lines are concentric circles and streamlines are radial lines from the origin. Potential lines and streamlines are illustrated in Figure 12.11 for various values of ϕ and ψ .

12.4.3 SINK FLOW

Sink flow is radially inward flow directed at a point; it is the opposite of source flow. At any location along a circle of radius r , the radial velocity V_r is a constant. The flow rate per unit length into the page is a constant that is equal to the product of radial velocity and circumferential distance:

$$\frac{Q}{L} = q = -2\pi r V_r$$

Again we take q as a constant and assume the flow to be steady. At the origin, where $r=0$, V_r must therefore be infinite. This is a singular point that has no counterpart in nature. From the preceding, we have

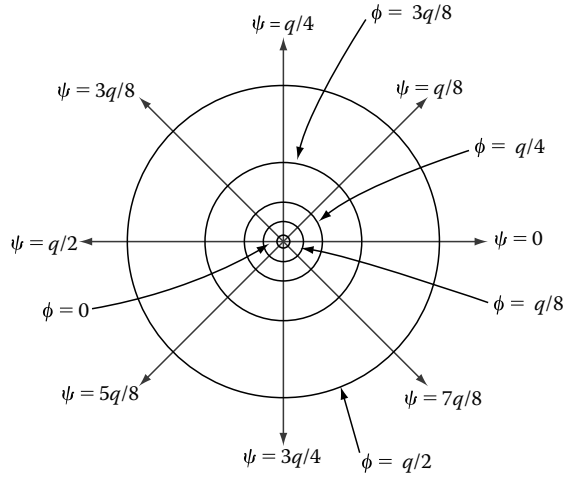


FIGURE 12.11 Potential lines and streamlines for source flow.

$$V_r = -\frac{q}{2\pi r}$$

$$V_\theta = 0$$

By definition,

$$V_r = \frac{\partial \phi}{\partial r} = -\frac{q}{2\pi r}$$

Integrating gives

$$\phi = -\frac{q}{2\pi} \ln(r) + f_1(\theta)$$

Further, with

$$V_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = 0$$

we obtain

$$\phi = f_2(r)$$

Equating both expressions for ϕ , we find

$$-\frac{q}{2\pi} \ln(r) + f_1(\theta) = f_2(r)$$

Thus, for radial flow into a sink, we get

$$\phi = -\frac{q}{2\pi} \ln(r) \quad (\text{sink flow}) \quad (12.24a)$$

Similarly, it can be shown that for a sink,

$$\psi = -\frac{q\theta}{2\pi} \quad (\text{sink flow}) \quad (12.24b)$$

12.4.4 IRROTATIONAL VORTEX FLOW

A counterclockwise **irrotational vortex** (Figure 12.12) is characterized by the following velocity components:

$$V_r = 0$$

$$V_\theta = \frac{C}{r}$$

where C is a constant. By definition,

$$V_r = \frac{\partial \phi}{\partial r} = 0$$

which leads to

$$\phi = f_1(\theta)$$

Also,

$$V_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = \frac{C}{r}$$

Integrating yields

$$\phi = C\theta + f_2(r)$$

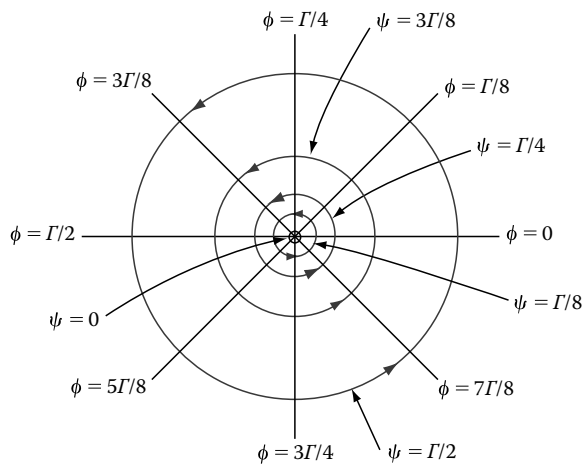


FIGURE 12.12 Potential lines and streamlines for vortex flow.

Equating both expressions for ϕ , we find

$$\phi = C\theta$$

Similarly, it can be shown that for free vortex flow,

$$\psi = -C \ln(r)$$

It is convenient when dealing with vortex flow to introduce the term **circulation**, denoted as Γ . The circulation is defined as the result obtained by integrating the tangential velocity around any closed contour. A simple contour that we can select is that of a circle of radius r . Thus,

$$\Gamma = \int V_{\theta} ds$$

where the arc length for a circle is $ds = r d\theta$, to be integrated from 0 to 2π . Thus,

$$\Gamma = \int_0^{2\pi} V_{\theta} r d\theta = \int_0^{2\pi} \left(\frac{C}{r}\right) r d\theta$$

or

$$\Gamma = 2\pi C$$

In terms of the circulation, then, we have for vortex flow

$$\phi = \frac{\Gamma\theta}{2\pi} \quad (\text{vortex flow}) \quad (12.25a)$$

$$\psi = \frac{\Gamma}{2\pi} \ln(r) \quad (\text{vortex flow}) \quad (12.25b)$$

Streamlines and potential lines for a vortex are illustrated in Figure 12.12. Flow nets for a free vortex and for a source (or sink) have the same form; the difference is that streamlines and potential lines are exchanged. (See Equations 12.24 and 12.25.) Note that at $r = 0$, the tangential velocity V_{θ} becomes infinite, so the origin is a singular point in vortex flow.

Example 12.3

The eye of a tornado has a diameter of 40 m. In the eye, the tornado flow field is approximated as solid body rotation. Outside the eye, the flow is a free vortex. Determine the tangential velocity distribution in the tornado if the maximum wind velocity is 50 m/s. Neglect translational motion. Determine also the pressure variation in the tornado and calculate the minimum pressure.

SOLUTION

The streamlines of the tornado are circular as shown in Figure 12.13, and we have for the eye

$$V_{\theta_1} = r\omega \quad (r \leq R)$$

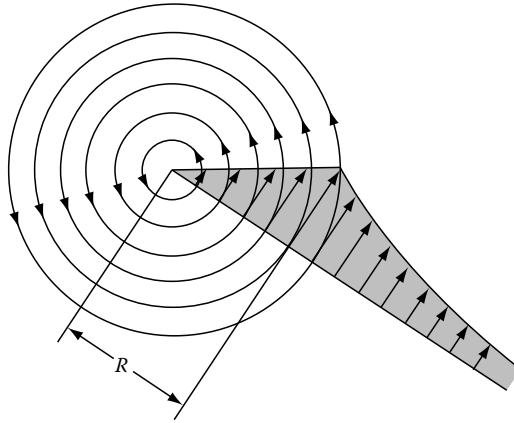


FIGURE 12.13 Streamlines and velocity distribution for flow in a tornado.

Outside the eye,

$$V_{\theta_2} = \frac{C}{r} \quad (r \geq R)$$

The maximum wind velocity occurs where $r = R$, at the edge of the eye. Given R as 20 m and $V_{\theta_{\max}}$ as 50 m/s, we calculate

$$\omega = \frac{V_{\theta_{\max}}}{R} = \frac{50}{20} = 2.5 \text{ rad/s}$$

Moreover, at the edge of the eye the two velocities must be equal. Hence,

$$R\omega = \frac{C}{R}$$

Solving for the constant C , we obtain

$$C = \omega R^2 = 2.5(400) = 1\,000 \text{ m}^2/\text{s}$$

The expressions for velocity thus become

$$V_{\theta_1} = 2.5r \text{ (m/s)} \quad (r < 20 \text{ m})$$

$$V_{\theta_2} = \frac{1\,000}{r} \text{ (m/s)} \quad (r < 20 \text{ m})$$

The pressure distribution within the eye is found by applying Euler's equations because flow is rotational in the eye. Outside the eye, the flow is irrotational; consequently, Bernoulli's equation can be used. Within the eye, $V_r = 0$, and V_θ is a function of only r ; therefore, partial derivatives of V_θ with respect to θ vanish. The Euler equations in polar cylindrical coordinates (Equations 12.5 and 12.6) reduce to

$$\rho \frac{V_\theta^2}{r} = \frac{\partial p}{\partial r}$$

and

$$\frac{1}{r} \frac{\partial p}{\partial \theta} = 0$$

The second of these equations indicates that pressure is not a function of θ . The first equation, then, can be rewritten as an ordinary differential equation with V_{θ_1} inserted for V_θ because we are concerned with the center of the eye:

$$\frac{dp}{dr} = \frac{\rho V_{\theta_1}^2}{r} = \frac{\rho r^2 \omega^2}{r} = \rho r \omega^2$$

We now obtain

$$p = \frac{\rho r^2 \omega^2}{2} + C_1 \quad (r \leq R) \quad (i)$$

where C_1 is a constant of integration.

Outside the eye, Bernoulli's equation is applied to the region near R and to a location far from the tornado, where the pressure is atmospheric and the velocity is zero. We get

$$\frac{p}{\rho} + \frac{V_{\theta_2}^2}{2} = \frac{p_a}{\rho}$$

from which we obtain

$$p = p_a - \frac{\rho V_{\theta_2}^2}{2} = p_a - \frac{\rho C^2}{2r^2}$$

or

$$p = p_a - \frac{\rho \omega^2 R^4}{2r^2} \quad (r \geq R) \quad (ii)$$

At the edge of the eye, $r = R$; Equations i and ii must be equal at this point. Thus

$$\frac{\rho R^2 \omega^2}{2} + C_1 = p_a - \rho \omega^2 R^2$$

The constant of integration becomes

$$C_1 = p_a - \rho \omega^2 R^2$$

Substitution into Equation i gives

$$p = \frac{\rho r^2 \omega^2}{2} + p_a - \frac{\rho \omega^2 R^2}{2}$$

or

$$\frac{(p_a - p)}{\rho} = R^2 \omega^2 - \frac{r^2 \omega^2}{2}$$

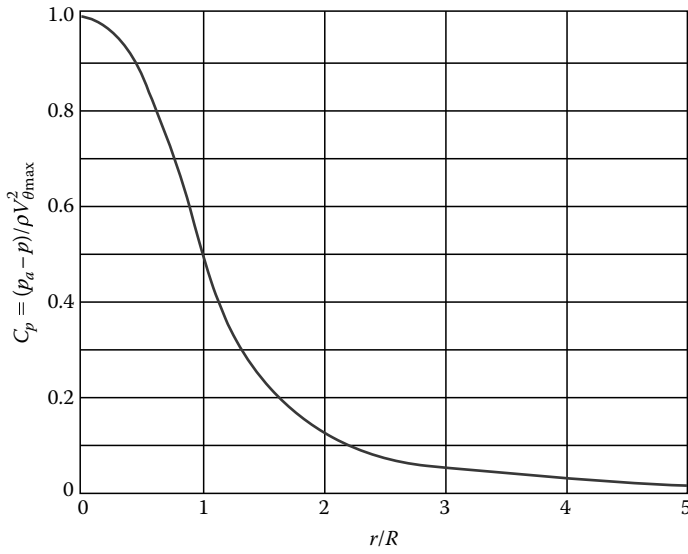


FIGURE 12.14 Pressure profile in the tornado of Example 12.3.

Recalling that $V_{\theta \max} = R\omega$, we find the following after substitution and simplification:

$$\frac{(p_a - p)}{\rho V_{\theta \max}^2} = 1 - \frac{r^2}{2R^2} \quad (r \leq R)$$

Rewriting Equation ii, we get

$$\frac{(p_a - p)}{\rho V_{\theta \max}^2} = \frac{R^2}{2r^2} \quad (r \geq R)$$

The pressure distribution is plotted in Figure 12.14. As we see in the figure, the minimum pressure occurs at the center of the eye. Moreover, the entire pressure profile is less than atmospheric in the region about the tornado. For this example, the minimum pressure is calculated, with $r=0$, as

$$\frac{(p_a - p)}{\rho V_{\theta \max}^2} = 1$$

After substitution, we get

$$\frac{101\,300 - p}{1.19(50)^2} = 1$$

where ρ for air was obtained from Table A.6. Solving, we get the minimum pressure in the eye:

$$p = 98.3 \text{ kPa}$$

One of the damaging effects of a passing tornado on a dwelling is on windows. Pressure inside may still be near atmospheric while the pressure drops outside; in many cases, this pressure difference is sufficient to blow windows out.

12.5 COMBINED FLOWS AND SUPERPOSITIONS

In each of the inviscid flows of the preceding section, the potential function satisfied Laplace's equation. It is possible to add the potential functions of various flows to obtain more complex potential flows. The prime requirement of a newly created flow is that its potential function must also satisfy Laplace's equation. It is possible to do this because Laplace's equation is linear and adding potential flows is a linear operation. To illustrate, consider two potential functions ϕ_1 and ϕ_2 ; both satisfy Laplace's equation:

$$\frac{\partial^2 \phi_1}{\partial x^2} + \frac{\partial^2 \phi_1}{\partial y^2} = 0 \quad (12.26a)$$

and

$$\frac{\partial^2 \phi_2}{\partial x^2} + \frac{\partial^2 \phi_2}{\partial y^2} = 0 \quad (12.26b)$$

The test for linearity is this: if ϕ_1 and ϕ_2 are solutions, then $\phi_1 + \phi_2$ must also be a solution:

$$\frac{\partial^2 (\phi_1 + \phi_2)}{\partial x^2} + \frac{\partial^2 (\phi_1 + \phi_2)}{\partial y^2} = 0$$

Because this equation equals Equations 12.26a and 12.26b added together, the Laplace equation is said to be linear. Examples of nonlinear equations are the Euler equations and the Navier–Stokes equations.

12.5.1 FLOW ABOUT A HALF-BODY

The flow field that results from combining a source and uniform flow is known as **flow about a half-body**. The potential function is found by adding Equations 12.22a and 12.23a:

$$\begin{aligned} \phi &= Ux + \frac{q}{2\pi} \ln(r) \\ \phi &= Ur \cos \theta + \frac{q}{2\pi} \ln(r) \quad (\text{flow about a half-body}) \end{aligned} \quad (12.27a)$$

$$\begin{aligned} \psi &= Uy + \frac{q\theta}{2\pi} \\ \psi &= Ur \sin \theta + \frac{q\theta}{2\pi} \quad (\text{flow about a half-body}) \end{aligned} \quad (12.27b)$$

The resulting flow pattern is illustrated in Figure 12.15. The source is placed at the origin, and uniform flow is from left to right. At the front of the body is a stagnation point. The velocity at any point is determined by differentiation of the stream or potential function:

$$V_r = \frac{1}{r} \frac{\partial \psi}{\partial \theta} = U \cos \theta + \frac{q}{2\pi r}$$

and

$$V_\theta = -\frac{\partial \psi}{\partial r} = -U \sin \theta$$

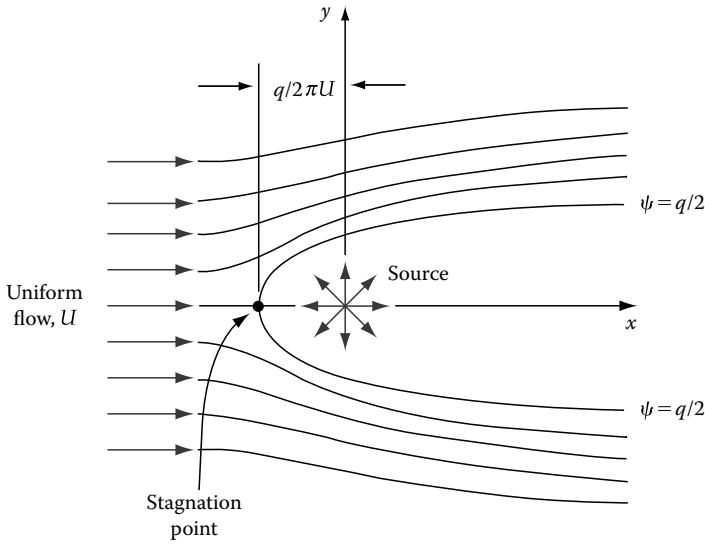


FIGURE 12.15 Flow about a half-body.

The stagnation point exists where the velocity is zero. Thus

$$V_{\theta} = 0 = -U \sin \theta$$

$$\theta = 0 \text{ or } \pi$$

Moreover,

$$V_r = 0 = U \cos \theta + \frac{q}{2\pi r}$$

If $\theta = 0$, then this equation indicates a negative r , which has no meaning. Therefore, $\theta = \pi$ and

$$0 = -U + \frac{q}{2\pi r}$$

The location of the stagnation point, then, is

$$r = \frac{q}{2\pi U} \quad \theta = \pi$$

The streamline that passes through the stagnation point is determined by substituting these values for r and θ into Equation 12.27b:

$$\psi = Ur \sin \theta + \frac{q\theta}{2\pi} = \frac{q}{2}$$

The constant $q/2$ when substituted for ψ in Equation 12.27b is the equation of the stagnation streamline that approaches from the left and divides in two to form the outline of the half-body:

$$\frac{q}{2} = Ur \sin \theta + \frac{q\theta}{2\pi}$$

The body extends to infinity on the right.

12.5.2 SOURCE AND SINK OF EQUAL STRENGTHS

Consider a source and sink both of strength $q/2\pi$ and located at (x, y) coordinates of $(-a, 0)$ and $(a, 0)$, respectively, as sketched in Figure 12.16a. The potential for this combined flow is obtained by adding Equations 12.23a and 12.24a:

$$\phi = \frac{q}{2\pi} \ln(r_1) - \frac{q}{2\pi} \ln(r_2)$$

The equations for these flows were originally written assuming the origin to be the location of the sink and the source. To accomplish an appropriate phase shift and to transform from polar to Cartesian coordinates, we use

$$\begin{aligned} r_1^2 &= (x + a)^2 + y^2 \\ r_2^2 &= (x - a)^2 + y^2 \end{aligned}$$

The potential function becomes

$$\phi = \frac{q}{2\pi} \ln \left[\frac{(x + a)^2 + y^2}{(x - a)^2 + y^2} \right]^{1/2} \quad (\text{source and sink}) \quad (12.28a)$$

The stream function for the combined source and sink is obtained by adding Equations 12.23b and 12.24b, giving

$$\psi = \frac{q\theta_1}{2\pi} - \frac{q\theta_2}{2\pi}$$

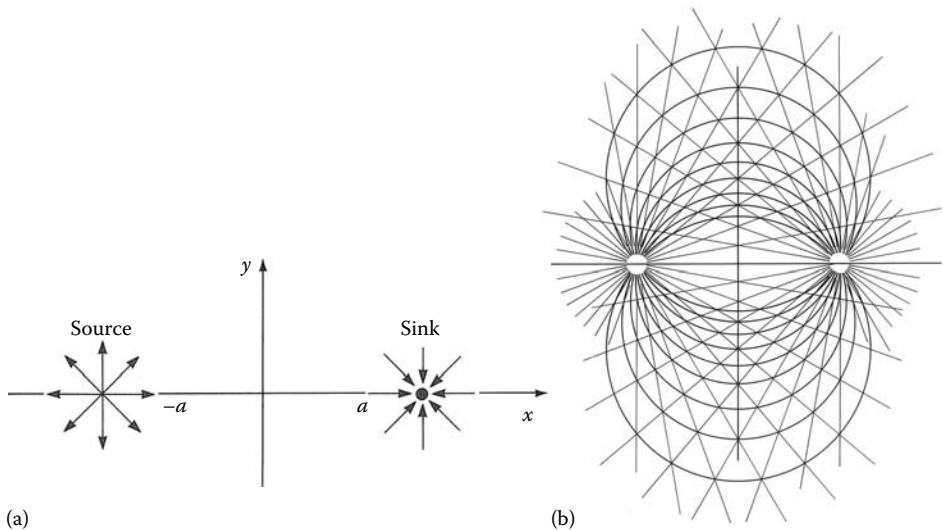


FIGURE 12.16 Streamlines of flow for a source and sink of equal strength. Centers of circles are located at the intersection of corresponding radial lines from source and sink. Each circle passes through both singularities.

For a source or a sink at the origin, $\tan \theta = y/x$. Similar expressions can be written for the angles of the preceding equation; after substitution, the stream function would become

$$\psi = \frac{q}{2\pi} \left(\tan^{-1} \frac{y}{x+a} - \tan^{-1} \frac{y}{x-a} \right)$$

We now use the trigonometric identity

$$\tan^{-1} \alpha_1 - \tan^{-1} \alpha_2 = \tan^{-1} \frac{\alpha_1 - \alpha_2}{1 + \alpha_1 \alpha_2}$$

and rewrite the stream function as

$$\psi = \frac{q}{2\pi} \tan^{-1} \frac{[y/(x+a)] - [y/(x-a)]}{1 - [y^2/(x^2 - a^2)]}$$

Simplifying leads to

$$\psi = -\frac{q}{2\pi} \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2} \quad (\text{source and sink}) \quad (12.28b)$$

The streamline pattern, diagrammed in Figure 12.16b, consists of circles with each center falling on the y -axis. All circles pass through the source and the sink at $(\pm a, 0)$. The potential lines are also all circles; their centers fall on the x -axis.

12.5.3 FLOW ABOUT A DOUBLET

The flow pattern for a source and sink of equal strength was given in the preceding paragraphs. The source was located at $(-a, 0)$ and the sink at $(a, 0)$. If the distance between them is allowed to shrink to zero (that is, as $a \rightarrow 0$) and the product of qa is held constant, the resulting flow pattern is known as a **doublet**. To obtain a potential and stream function for a doublet, consider Figure 12.17. The source is denoted as point B , the sink is point C , point P is any arbitrary location in the flow field,

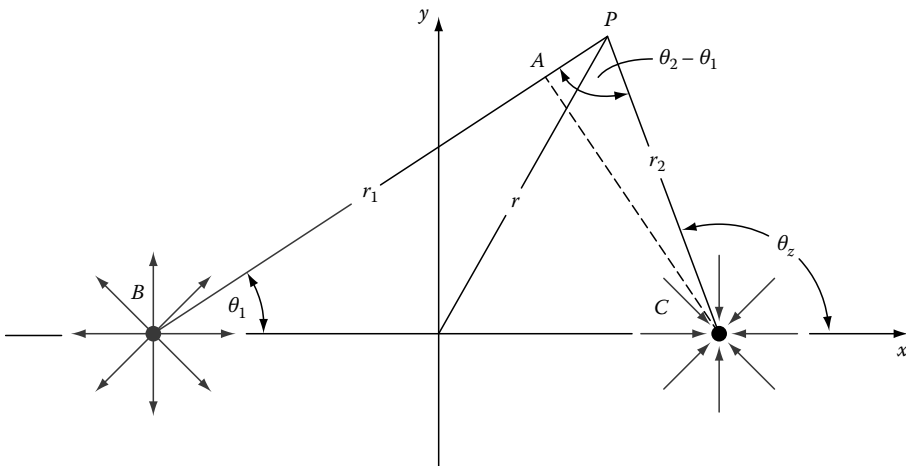


FIGURE 12.17 Source and sink flow.

and A is located such that CA is perpendicular to PB . The potential function is found by adding Equations 12.23a and 12.24a:

$$\phi = \frac{q}{2\pi} [\ln(r_1) - \ln(r_2)] = \frac{q}{2\pi} \ln \frac{r_1}{r_2}$$

Referring to Figure 12.17, we see that the length r_1 is

$$r_1 = BA + AP = 2a \cos \theta_1 + r_2 \cos(\theta_2 - \theta_1)$$

By substitution, the potential function becomes

$$\phi = \frac{q}{2\pi} \ln \left[\frac{2a \cos \theta_1}{r_2} + \cos(\theta_2 - \theta_1) \right]$$

As $a \rightarrow 0$, then,

$$r_2 \rightarrow r$$

$$\theta_2 \rightarrow \theta$$

and

$$\cos(\theta_2 - \theta_1) \rightarrow 1$$

The potential function becomes in the limit

$$\phi = \frac{q}{2\pi} \ln \left(\frac{2a \cos \theta}{r} + 1 \right)$$

For any quantity δ ,

$$\ln(\delta + 1) \approx \delta \quad \text{if } \delta \ll 1$$

The velocity potential then reduces to

$$\phi = \frac{qa \cos \theta}{\pi r} \quad (\text{doublet flow}) \quad (12.29a)$$

The stream function for a doublet is obtained by adding Equations 12.23b and 12.24b:

$$\psi = \frac{q}{2\pi} (\theta_1 - \theta_2)$$

Referring to Figure 12.17, we see the length AC is

$$AC = r_2 \sin(\theta_2 - \theta_1) = 2a \sin \theta$$

Now as $a \rightarrow 0$, $r_2 \rightarrow r$, and $\sin(\theta_2 - \theta_1) \rightarrow \theta_2 - \theta_1$. The preceding equation then becomes

$$\theta_2 - \theta_1 = \frac{2a}{r} \sin \theta$$

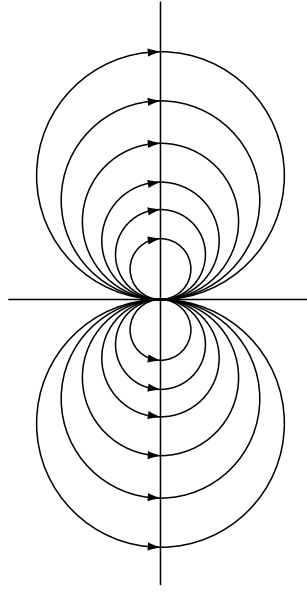


FIGURE 12.18 Streamlines of flow for a doublet.

and the stream function is

$$\psi = -\frac{qa}{\pi r} \sin \theta \quad (\text{doublet flow}) \quad (12.29b)$$

The streamline pattern is provided in Figure 12.18.

12.5.4 FLOW ABOUT A RANKINE BODY

The flow field that results from combining a source and a sink of equal strength with a uniform flow gives what is known as **flow about a Rankine body**. The potential function is found by adding Equations 12.22a and 12.28a:

$$\phi = Ux + \frac{q}{2\pi} \ln \left[\frac{(x+a)^2 + y^2}{(x-a)^2 + y^2} \right]^{1/2} \quad (\text{Rankine body}) \quad (12.30a)$$

The stream function plotted in Figure 12.19 is obtained by adding Equations 12.22b and 12.28b:

$$\psi = Uy - \frac{q}{2\pi} \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2} \quad (\text{Rankine body}) \quad (12.30b)$$

The velocity components are determined by differentiating the potential function

$$V_x = \frac{\partial \phi}{\partial x} = U + \frac{q}{2\pi} \left[\frac{x+a}{(x+a)^2 + y^2} - \frac{x-a}{(x-a)^2 + y^2} \right] \quad (12.31a)$$

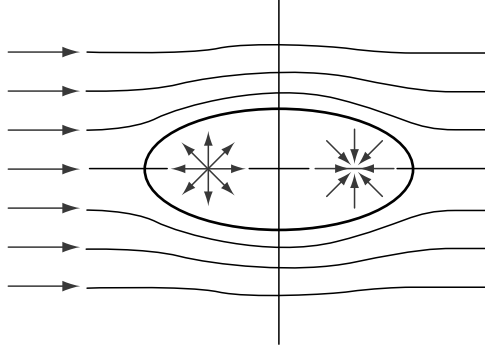


FIGURE 12.19 Streamlines of flow about a Rankine body.

This simplifies to

$$V_x = U - \frac{qa}{2\pi} \frac{x^2 - y^2 - a^2}{[(x+a)^2 + y^2][(x-a)^2 + y^2]} \quad (12.31b)$$

Also,

$$V_y = \frac{\partial \phi}{\partial y} = \frac{q}{2\pi} \left[\frac{y}{(x+a)^2 + y^2} - \frac{y}{(x-a)^2 + y^2} \right]$$

or

$$V_y = -\frac{2qaxy}{\pi} \left\{ \frac{1}{[(x+a)^2 + y^2][(x-a)^2 + y^2]} \right\} \quad (12.32)$$

The stagnation points along the body are located where the velocity components are zero:

$$V_x = 0$$

and

$$V_y = 0$$

The second of these conditions, when combined with Equation 12.32, leads to the conclusion that $y=0$. The stagnation points are expected to fall on the x -axis; the flow is symmetric about the x -axis. Setting $V_x=0$ and $y=0$ in Equation 12.31a gives

$$\begin{aligned} U &= -\frac{q}{2\pi} \left[\frac{x+a}{(x+a)^2} - \frac{x-a}{(x-a)^2} \right] \\ &= -\frac{q}{2\pi} \left(\frac{1}{x+a} - \frac{1}{x-a} \right) \\ &= \frac{qa}{\pi(x^2 - a^2)} \end{aligned}$$

Solving for x , we obtain

$$x = \pm \sqrt{a^2 + \frac{qa}{\pi U}} \quad (12.33a)$$

Thus, there are two stagnation points located at the x -axis. The stream function can now be evaluated to determine the value of the stagnation streamline. Substituting $y=0$ into Equation 12.30b gives

$$\psi = 0 - \frac{q}{2\pi} \tan^{-1} \frac{0}{x^2 - a^2} = 0$$

The stagnation and body streamline result when ψ is set equal to zero in Equation 12.30b:

$$0 = Uy - \frac{q}{2\pi} \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2}$$

or

$$\tan \frac{2U\pi y}{q} = \frac{2ay}{x^2 + y^2 - a^2} \quad (12.33b)$$

12.5.5 FLOW ABOUT A CIRCULAR CYLINDER

Flow about a Rankine body results when we combine uniform flow with a source and a sink. As the distance between the source and sink decreases, approaching a doublet, the length of the Rankine body approaches its width. When we combine uniform flow with a doublet, therefore, **flow about a circular cylinder** results. The potential function is obtained by adding Equations 12.22a and 12.29a:

$$\begin{aligned} \phi &= Ux + \frac{qa \cos \theta}{\pi r} \\ \phi &= Ur \cos \theta + \frac{qa \cos \theta}{\pi r} \end{aligned} \quad (12.34a) \quad (\text{circular cylinder})$$

Similarly, by adding Equations 12.23a and 12.29b, the stream function becomes

$$\begin{aligned} \psi &= Uy - \frac{qa}{\pi r} \sin \theta \\ \psi &= Ur \sin \theta - \frac{qa}{\pi r} \sin \theta \end{aligned} \quad (12.34b) \quad (\text{circular cylinder})$$

The streamline pattern is shown in Figure 12.20. As with the Rankine body, the stagnation streamline occurs at $\psi=0$:

$$0 = Ur \sin \theta - \frac{qa}{\pi r} \sin \theta$$

Solving, we get

$$r|_{\psi=0} = \pm \sqrt{\frac{qa}{U\pi}} = R$$

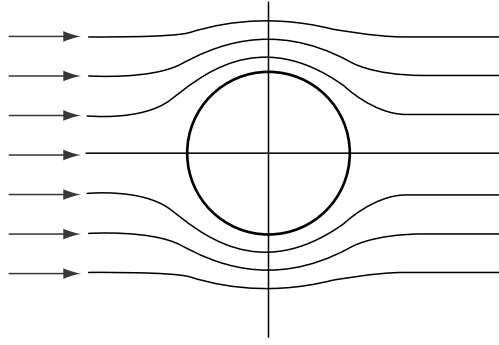


FIGURE 12.20 Flow about a circular cylinder.

which is a constant and equal to the radius of the circle. Rewriting the potential and stream functions in terms of the radius gives

$$\phi = U \left(r + \frac{R^2}{r} \right) \cos \theta \quad (12.35a)$$

and

$$\psi = U \left(r - \frac{R^2}{r} \right) \sin \theta \quad (12.35b)$$

The velocity components can be determined by differentiation:

$$V_r = \frac{\partial \phi}{\partial r} = U \left(1 - \frac{R^2}{r^2} \right) \cos \theta \quad (12.36a)$$

$$V_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = -U \left(1 + \frac{R^2}{r^2} \right) \sin \theta \quad (12.36b)$$

The stagnation points exist where $V_r = 0$ and $V_\theta = 0$ and are given by Equation 12.33. On the surface of the cylinder, where $r = R$, the velocity components are

$$\begin{aligned} V_r(R) &= 0 \\ V_\theta(R) &= -2U \sin \theta \end{aligned} \quad (12.37)$$

Thus, there is no radial flow through the cylinder surface (or through any other streamline). Moreover, V_θ varies from zero at $\theta = 0$ to a maximum of $-2U$ at $\theta = \pi/2$ and back to zero at $\theta = \pi$.

In Chapter 6, results of experiments performed with flow past a circular cylinder were presented. A drag coefficient versus Reynolds number curve was also given. It was stated that part of the drag exerted on a cylinder in a uniform flow is due to a pressure difference between the front of its surface and the rear. For purposes of comparison, let us examine the forces exerted on a cylinder in an inviscid flow. Using Bernoulli's equation, we can first determine the pressure distribution along the surface of the cylinder and then integrate the distribution to obtain the forces of interest—lift and drag. Bernoulli's equation (Equation 12.18) is written for any point on the surface of the cylinder and any other point far from the cylinder in the uniform-flow stream:

$$\frac{p}{\rho} + \frac{V^2}{2} + gy = \frac{p_\infty}{\rho} + \frac{U^2}{2} + gy$$

where: p = pressure on the cylinder surface
 V = velocity along the surface made up of $V_r(R)$ and $V_\theta(R)$
 p_∞ = free-stream pressure
 U (corresponding to U_∞ of Chapter 6) = free-stream velocity

Rearranging and substituting, we get

$$\frac{p}{\rho} = \frac{p_\infty}{\rho} + \frac{U^2}{2} - \frac{[V_r(R)]^2 + [V_\theta(R)]^2}{2}$$

Using Equations 12.36, we obtain

$$p = p_\infty + \frac{\rho}{2} (U^2 - 4U^2 \sin^2 \theta) = p_\infty + \frac{\rho U^2}{2} (1 - 4 \sin^2 \theta) \quad (12.38a)$$

The pressure difference in dimensionless terms is

$$\frac{2(p - p_\infty)}{\rho U^2} = 1 - 4 \sin^2 \theta \quad (12.38b)$$

where the left-hand side was first introduced in Chapter 4 as the pressure coefficient. This equation is plotted on polar and Cartesian coordinates in Figure 12.21. Note that the pressure on the cylinder surface equals the free-stream pressure at angles of 30° with respect to the flow direction.

To determine the lift and drag forces exerted on the cylinder, it is necessary to integrate the y - and x -components, respectively, of Equation 12.38a, the pressure distribution, about the surface. Figure 12.22 illustrates the forces of interest. The drag force is found as

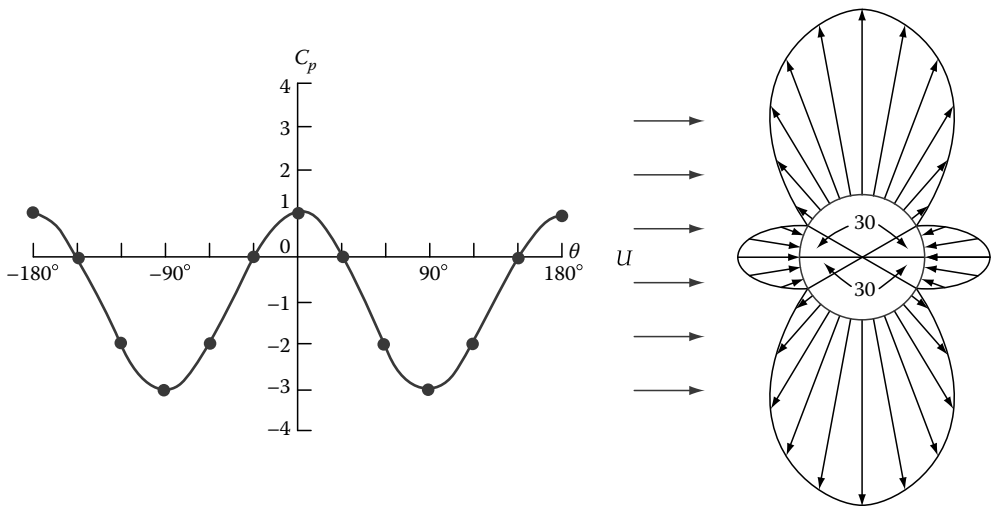


FIGURE 12.21 Pressure coefficient versus angle for flow about a circular cylinder.

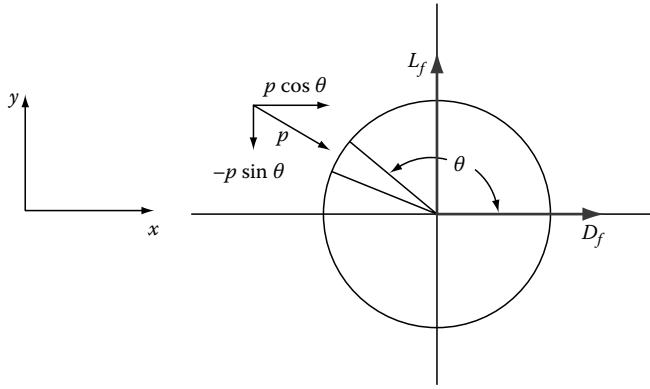


FIGURE 12.22 Pressure on the surface of a cylinder.

$$D_f = \iint p \cos \theta \, dA_s$$

where the surface area $dA_s = L(R \, d\theta)$ and p is given by Equation 12.38b.

We obtain

$$D_f = RL \int_0^{2\pi} (p_\infty + \rho U^2 - 2\rho U^2 \sin^2 \theta) \cos \theta \, d\theta$$

where L is the cylinder length. Simplifying, we get

$$\frac{D_f}{RL} = \left(p_\infty + \frac{\rho U^2}{2} \right) \int_0^{2\pi} \cos \theta \, d\theta - 2\rho U^2 \int_0^{2\pi} \sin^2 \theta \cos \theta \, d\theta$$

The values of both integrals are zero. Thus

$$D_f = 0 \quad (12.39)$$

Similarly, for the lift force per unit length,

$$L_f = \iint -p \sin \theta \, dA_s$$

$$\frac{L_f}{RL} = \left(p_\infty + \frac{\rho U^2}{2} \right) \int_0^{2\pi} \sin \theta \, d\theta - 2\rho U^2 \int_0^{2\pi} \sin^3 \theta \, d\theta$$

Again the values of both integrals are zero. Thus

$$L_f = 0$$

Thus, the total force exerted on a cylinder immersed in a uniform flow of an inviscid fluid is zero. We might expect this result because the pressure distribution is symmetric about both the x and y axes.

This result is typical for potential flow about a body. One exception, however, is for the flow field considered next.

12.5.6 FLOW ABOUT A CIRCULAR CYLINDER WITH CIRCULATION

Uniform flow with a doublet, as we have seen, results in flow past a cylinder. We can further combine a circulatory flow with flow past a cylinder to obtain a new flow field. Streamlines for the combined flow can take on one of three configurations, as illustrated in Figure 12.23. The pattern depends on the strength of the circulation Γ in comparison with the free-stream velocity. The potential function is obtained by adding Equations 12.35a and 12.25a (modified to reflect a clockwise rotation):

$$\phi = U \left(r + \frac{R^2}{r} \right) \cos \theta - \frac{\Gamma \theta}{2\pi} \quad (\text{circular cylinder with circulation}) \quad (12.40a)$$

The stream function can be determined by adding Equations 12.35a and 12.25b:

$$\psi = U \left(r - \frac{R^2}{r} \right) \sin \theta + \frac{\Gamma}{2\pi} \ln(r) \quad (\text{circular cylinder with circulation}) \quad (12.40b)$$

The velocity components are found by differentiation:

$$V_r = \frac{\partial \phi}{\partial r} = U \left(1 - \frac{R^2}{r^2} \right) \cos \theta$$

and

$$V_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = -U \left(1 + \frac{R^2}{r^2} \right) \sin \theta - \frac{\Gamma}{2\pi r}$$

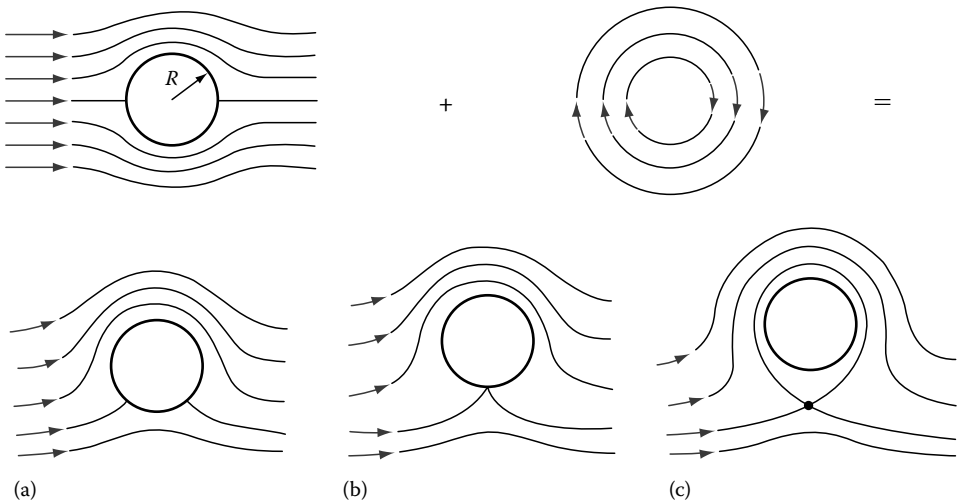


FIGURE 12.23 Flow about a circular cylinder with circulation.

Along the cylinder surface,

$$V_r(R) = 0$$

and

$$V_\theta(R) = -2U \sin \theta - \frac{\Gamma}{2\pi R}$$

For purposes of comparison, let us calculate lift and drag for this case to determine how the circulation affects these forces. Applying the Bernoulli equation to the cylinder surface and to a point far from the cylinder, we get

$$\frac{p}{\rho} + \frac{V^2}{2} + gy = \frac{p_\infty}{\rho} + \frac{U^2}{2} + gy$$

Simplifying and substituting for V , we obtain

$$p = p_\infty + \frac{\rho U^2}{2} - \frac{\rho V_\theta^2}{2} \quad (12.41)$$

or

$$\frac{2(p - p_\infty)}{\rho} = U^2 - \left(2U \sin \theta + \frac{\Gamma}{2\pi R} \right)^2$$

In dimensionless terms,

$$\frac{2(p - p_\infty)}{\rho U^2} = 1 - \left(2 \sin \theta + \frac{\Gamma}{2\pi R U} \right)^2$$

The drag force per unit length is found by integration:

$$\begin{aligned} D_f &= \iint p \cos \theta \, dA_s \\ \frac{D_f}{RL} &= \int_0^{2\pi} \left[p_\infty + \frac{\rho U^2}{2} - \frac{\rho}{2} \left(2U \sin \theta + \frac{\Gamma}{2\pi R} \right)^2 \right] \cos \theta \, d\theta \end{aligned}$$

Expanding, we get

$$\begin{aligned} \frac{D_f}{RL} &= p_\infty \int_0^{2\pi} \cos \theta \, d\theta + \frac{\rho U^2}{2} \int_0^{2\pi} \cos \theta \, d\theta \\ &\quad - 2\rho U^2 \int_0^{2\pi} \sin^2 \theta \cos \theta \, d\theta \\ &\quad - \frac{\rho U \Gamma}{\pi R} \int_0^{2\pi} \sin \theta \cos \theta \, d\theta - \frac{\rho \Gamma^2}{4\pi^2 R^2} \int_0^{2\pi} \cos \theta \, d\theta \end{aligned}$$

Each integral is zero. Therefore,

$$D_f = 0 \quad (12.42)$$

The lift force per unit length is found also by integration:

$$\begin{aligned} \frac{L_f}{RL} &= - \int_0^{2\pi} p \sin \theta \, d\theta \\ &= - \int_0^{2\pi} \left[p_\infty + \frac{\rho U^2}{2} - \frac{\rho}{2} \left(2U \sin \theta + \frac{\Gamma}{2\pi R} \right)^2 \right] \sin \theta \, d\theta \end{aligned}$$

Expanding, we get

$$\begin{aligned} \frac{L_f}{RL} &= -p_\infty \int_0^{2\pi} \sin \theta \, d\theta - \frac{\rho U^2}{2} \int_0^{2\pi} \sin \theta \, d\theta + 2\rho U^2 \int_0^{2\pi} \sin^3 \theta \, d\theta \\ &\quad + \frac{\rho U \Gamma}{\pi R} \int_0^{2\pi} \sin^2 \theta \, d\theta + \frac{\rho \Gamma^2}{4\pi^2 R^2} \int_0^{2\pi} \sin \theta \, d\theta \end{aligned}$$

This equation reduces to

$$\begin{aligned} \frac{L_f}{RL} &= \frac{\rho U \Gamma}{\pi R} \int_0^{2\pi} \sin^2 \theta \, d\theta = \frac{\rho U \Gamma}{\pi R} \left(\frac{\theta}{2} - \frac{\sin 2\theta}{4} \right) \Big|_0^{2\pi} \\ &= \frac{\rho U \Gamma}{\pi R} (\pi) \end{aligned}$$

The lift force, then, is

$$\frac{L_f}{L} = \rho U \Gamma \quad (12.43)$$

Circulation is related to rotational speed. The tangential velocity in terms of circulation is

$$V_\theta = \frac{\Gamma}{2\pi R}$$

Also, $V_\theta = R\omega$, and by combining with the preceding equation, we get

$$\omega = \frac{\Gamma}{2\pi R^2}$$

The dimension of Γ is L^2/T .

The circulation can be varied independently from the free-stream velocity. The relative magnitudes of these parameters will determine whether the resulting flow pattern is represented by

Figure 12.23a through 12.23c. To evaluate this feature quantitatively, we will next determine the location of the stagnation points indicated in the figure. The velocity is zero at a stagnation point. Because V_r is already zero on the surface of the cylinder, we need work only with V_θ .

$$V_\theta(R) = -2U \sin \theta - \frac{\Gamma}{2\pi R} = 0$$

$$\sin \theta = -\frac{\Gamma}{4\pi UR}$$

Three cases can be described. If $\Gamma = 4\pi UR$, then $\sin \theta = -1$, and θ becomes $3\pi/2$. The resulting flow pattern is illustrated in Figure 12.23b. If $\Gamma < 4\pi UR$, then $\sin \theta < -1$, and two stagnation points occur on the cylinder surface, as shown in Figure 12.23a. If $\Gamma > 4\pi UR$, then $\sin \theta > -1$, an imaginary solution that means there are no stagnation points on the cylinder surface; this is seen in Figure 12.23c, where the cylinder is entirely within the circulatory flow.

For a three-dimensional example of the effect of circulation on uniform flow, imagine a pitcher throwing a baseball. As the sphere rotates and translates, it tends to curve. The amount of curve depends on the magnitude of the spin given by the pitcher and the speed of the ball with respect to the air. A wind blowing from the outfield, for instance, would reduce the relative velocity and the tendency for the ball to curve.

Another example of the effect of circulation on uniform flow is the design and construction of the Flettner rotor ship. This vessel used rotating cylinders that developed a lift or thrust if wind blew past them. The original ship displaced about 300 tons and was 100 ft long. It had two cylinders or rotors that extended 50 ft above the ship's deck. Each rotor was 9 ft in diameter and rotated at 750 rev/min. The ship was built in Germany in 1924 but never gained popularity. (See Problem 12.41.)

12.6 INVISCID FLOW PAST AN AIRFOIL

As we saw in the last part of the preceding section, a lift force is generated when a circulatory flow is added to flow past a cylinder. Two practical examples of this phenomenon were cited: the flight of a baseball and the design of the Flettner rotor ship. In this section, we will use those results to examine potential flow past an airfoil.

Figure 12.24 illustrates the streamlines of two-dimensional flow about an airfoil. The mathematics involved in determining a functional form for the streamlines will not be discussed here. We simply accept this configuration as being correct. The airfoil has a rounded front and a sharp trailing edge. Two stagnation points exist—one at the front and one on the upper surface upstream of the trailing edge (points 1 and 2 in the figure). Because the airfoil is completely immersed in the flow of an inviscid fluid, forces of lift and drag are zero.

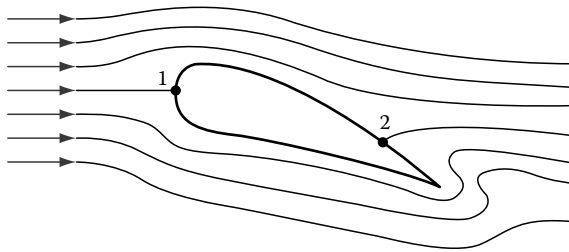


FIGURE 12.24 Streamlines of flow about an airfoil.

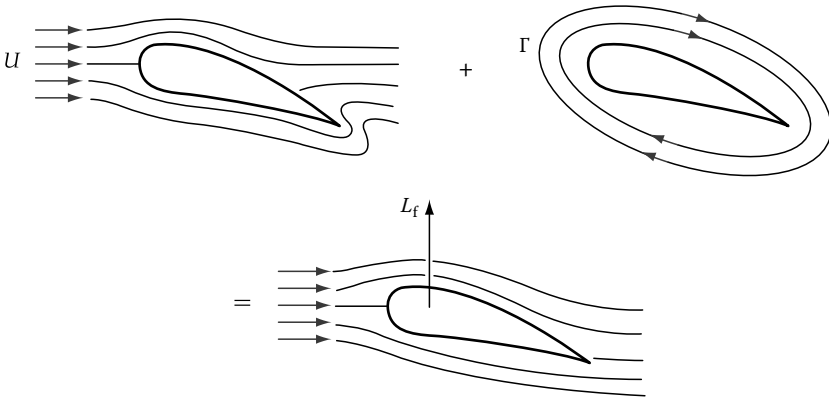


FIGURE 12.25 Superposition of uniform flow past an airfoil and circulation about an airfoil.

Note that the flow must make a sharp turn at the rear edge on the upper surface and travel slightly in the upstream direction. This figure is not a good model of a real flow, however, for experiments on various airfoils indicate that point 2 should be located at the rear edge. Such a flow pattern can be generated by superimposing a clockwise rotation about the wing. The result is illustrated in Figure 12.25. The pressure distribution, if integrated about the surface of the wing, would indicate that drag is still zero but lift is not. In fact, the lift force per unit length is given by Equation 12.43:

$$\frac{L_f}{L} = \rho U \Gamma$$

where: U = free-stream velocity
 Γ = strength of the circulatory flow

But unlike flow past a circular cylinder, here the circulation must have a certain value and cannot be controlled independently of the free-stream velocity because Γ must be just strong enough to move point 2 to the trailing edge.

As was reported in Chapter 6, lift on an airfoil varies with the properties of the airfoil section and with the angle of incidence. Lift varies linearly with angle of incidence up to a certain point and then drops off somewhat.

12.7 SUMMARY

This chapter gave a brief introduction to the field of inviscid flow (flow of a nonviscous fluid). We began with the Navier–Stokes equations for steady incompressible flow and reduced them following various assumptions—no viscosity and that the flow is two-dimensional. We then obtained the continuity equation and the Euler equations. Next the stream and potential functions were introduced, and it was shown that these functions are normal to each other. The concept of irrotationality was also discussed. Laplace’s equation was presented, and various inviscid flows that satisfy Laplace’s equation were given. Because of the linearity of Laplace’s equation, we formed various complex flows by adding simpler flows—a process called superposition. Finally, we examined inviscid flow past an airfoil.

PROBLEMS

Equations of Motion

- 12.1** Beginning with Equation 12.1, use the coordinate transformation

$$x = r \cos \theta$$

$$y = r \sin \theta$$

to derive Equation 12.2.

- 12.2** Determine the vector form of the Euler equations.

Stream Function and Velocity Potential

- 12.3** In Section 12.2, it was shown that in Cartesian coordinates, the stream and potential functions are normal to each other. Show this for polar cylindrical coordinates.

- 12.4** The stream function for a certain flow is

$$\psi = x + 2y$$

Determine the velocity potential function and the velocity components. Does the flow satisfy the continuity equation?

- 12.5** Construct the flow net for Problem 12.4.

- 12.6** Determine whether the flow of Problem 12.4 is irrotational.

- 12.7** A flow field can be described by following stream function:

$$\psi = xy + 2x + 3y$$

Determine the velocity components and the potential function. Does the flow satisfy continuity?

- 12.8** Construct the flow net for Problem 12.7

- 12.9** Show that the flow of Problem 12.7 is irrotational.

- 12.10** A certain flow field has the following potential function:

$$\phi = r \cos \theta$$

Determine the stream function and the velocity components. Does the flow satisfy continuity?

- 12.11** Construct the flow net for Problem 12.10.

- 12.12** Is the flow of Problem 12.10 irrotational?

- 12.13** Is the flow represented by $\psi = x^3 y^3$ irrotational?

- 12.14** A flow is described by the following potential function:

$$\phi = \ln(x^2 + y^2)^{1/2}$$

Show that the stream function is

$$\psi = \tan^{-1} \frac{y}{x}$$

- 12.15** Is the flow described in Problem 12.14 irrotational?

12.16 The stream function for a certain flow is

$$\psi = 4r \cos \theta - r \sin \theta$$

- a. Determine the velocity components.
- b. Find the potential function.
- c. Is the flow irrotational?

12.17 Sketch the flow net for Problem 12.16.

12.18 The velocity components of a certain flow field are

$$V_x = -\frac{3}{2}y$$

$$V_y = x$$

Does the flow satisfy continuity? Is the flow rotational? Can a stream function be written for this flow? If so, find it.

12.19 The velocity components for a certain flow field are

$$V_x = x^2y$$

$$V_y = -xy^2$$

Does the flow satisfy continuity? Is the flow irrotational? Determine, if possible, the stream function for this flow.

12.20 A certain flow is given by

$$V_r = \cos \theta - \sin \theta$$

$$V_\theta = -r \cos \theta - r \sin \theta$$

Does the flow satisfy continuity? Is the flow irrotational? Determine, if possible, the stream and potential functions.

12.21 A stream function is given in polar coordinates by

$$\psi = 2r^{\pi/\alpha} \sin(\pi\theta/\alpha)$$

Show that it satisfies Laplace's equation.

12.22 A potential function is given in polar coordinates by

$$\phi = 2r^{\pi/\alpha} \cos(\pi\theta/\alpha)$$

Show that the corresponding stream function is

$$\psi = 2r^{\pi/\alpha} \sin(\pi\theta/\alpha)$$

12.23 Sketch the flow net given by the stream and potential functions of Problem 12.22. Take α to be 210° in all cases.

12.24 A flow is described by the following stream and potential functions:

$$\psi = Ur^{\pi/\alpha} \sin(\pi\theta/\alpha)$$

$$\phi = Ur^{\pi/\alpha} \cos(\pi\theta/\alpha)$$

Show that this flow reduces to simple uniform flow when $\alpha = \pi$.

12.25 Does the flow in Problem 12.24 (for any α) satisfy continuity?

Laplace's Equation and Flow Field Equations

12.26 Starting with Equation 12.19, derive Equation 12.21.

12.27 Derive Equation 12.22*b*.

12.28 Derive Equation 12.23*b*.

12.29 Derive Equation 12.24*b*.

12.30 Derive Equation 12.25*b*.

12.31 The eye of a tornado has a maximum wind velocity of 100 ft/s. Determine the minimum pressure. Determine also the pressure at the location of the maximum wind velocity.

Combined Flows and Superposition

12.32 Consider the flow field represented by adding a source and a circulation both located at the origin. Sketch the streamlines. Determine the location of any stagnation points. Let $q = \Gamma = 4\pi$.

12.33 Find the potential function of the flow described in Problem 12.32.

12.34 Show that the Euler equations are nonlinear.

12.35 Following the steps outlined below, it is possible to compose the flow about a half-body graphically. The discharge q is assigned a value of 16 units. The uniform flow is given by $q = 2\pi U$.

- Using a plain sheet of paper, select a point for the origin and draw radial lines spaced at angular intervals of $\pi/16$ rad. (Show where $\pi/16$ comes from.)
- The stream function becomes $\psi = 8y/\pi$. (Show its derivation.) Sketch uniform flow lines according to this equation on the same sheet where the source was drawn.
- The result is many four-sided adjacent figures. Connect opposite corners of each appropriately to obtain the streamline pattern. Refer to Figure 12.15.

12.36 Verify Equation 12.31*b*.

12.37 Verify Equation 12.32.

12.38 A source and a sink having an equal strength of $5 \text{ m}^3/\text{s}$ are immersed in a uniform flow of velocity 3 m/s. Determine the velocity at a location given by $x = 6 \text{ m}$, $y = 6 \text{ m}$. (See Figure P12.38.)

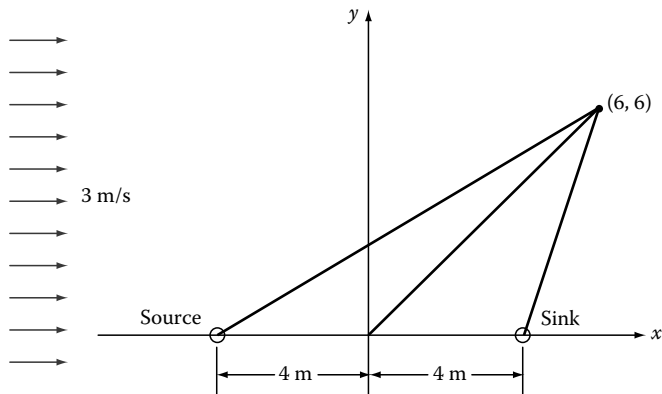


FIGURE P12.38

- 12.39** A doublet whose qa product is $100 \text{ ft}^4/\text{s}$ is located in a uniform flow of 15 ft/s , as shown in Figure P12.39. Determine the velocity at a point located at $x = 1.0$ and $y = 1.5$. Give a sketch of the results.

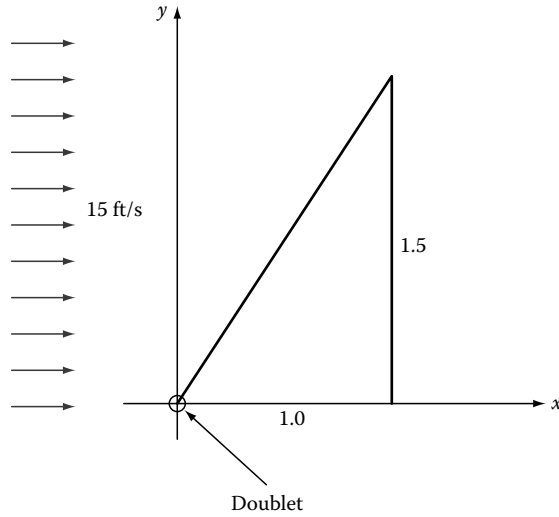


FIGURE P12.39

- 12.40** A circular cylinder having a diameter of 10 ft rotates at a speed of 360 rev/min and moves through air at 25 mi/h. What is the lift per unit length of the cylinder for maximum possible circulation?
- 12.41** Figure P12.41 illustrates a moored Flettner rotor ship in a uniform crosswind of velocity 1500 ft/min. The rotors (length 50 ft, diameter 9 ft) rotate at 750 rev/min. Determine the magnitude of the force that tends to propel the ship forward. Calculate also the lift coefficient for each cylinder.


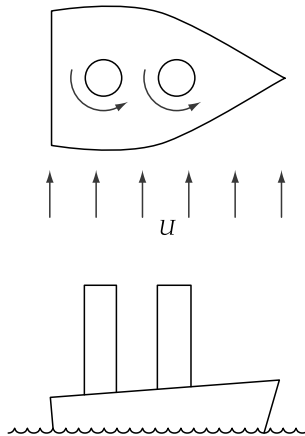


FIGURE P12.41

- 12.42** A pitcher throws a curve ball with a velocity of 27 m/s . For simplicity, the ball is taken to have a spin about the vertical axis. The lift coefficient is determined to be about 0.3. The catcher is 18.3 m away. If the baseball has a diameter of 7.4 cm, determine the rotational speed imparted by the pitcher and the horizontal deviation of the ball from its straightline path at the position of the catcher. Assume that Equation 12.43 applies; for length in that expression, let $L = \text{sphere volume/surface area}$.

This page intentionally left blank

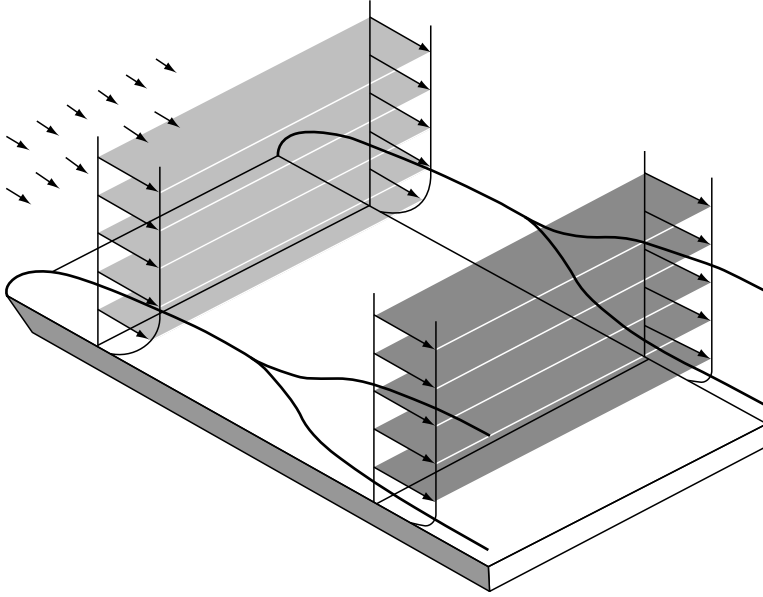13 Boundary-Layer Flow



In the last chapter, the remark was made that most fluids problems involve turbulent flow. An exact analysis to determine velocities in the principal flow directions requires a simultaneous solution to the continuity and momentum equations. Because of the nonlinearity of the equations of motion, some simplifications have to be made. In that regard, the flow field may be divided into two portions. One of these is a nonviscous region away from any solid boundaries. Near a boundary, however, fluid adheres to the surface, and the velocity relative to the boundary at the surface is zero. Because this result is a viscous effect, the second flow region is one where viscosity is important. The flow in this region, known as boundary-layer flow, is the subject of this chapter.

Beginning with the continuity, Bernoulli, and Navier–Stokes equations, we will derive the boundary-layer equations for laminar flow. The derived expressions will then be applied to flow over a flat plate, and the Blasius solution for laminar flow will be presented. We will discuss laminar and turbulent boundary-layer flows and select a point for transition. A displacement thickness expression will also be derived. Local and total skin friction drag equations will be written for the problem as well.

Next we will derive the momentum integral equations from the boundary-layer equations. Although approximate, the momentum integral equations are used to solve the problem of laminar flow over a flat plate, and there is good agreement between the results obtained and the exact solution. The momentum integral equation will then be applied to the problem of turbulent flow

over a flat plate. The results of the laminar and turbulent flow problems will be combined to obtain a graph of skin friction drag as a function of Reynolds number at the end of the plate.

13.1 LAMINAR AND TURBULENT BOUNDARY-LAYER FLOW

Let us begin our discussion of **boundary-layer flow** by considering uniform flow over a flat plate, as illustrated in Figure 13.1a. If the fluid is inviscid, the velocity profile appears as in Figure 13.1b. The velocity at the wall is not zero, as it would be for a real fluid. A better description of a real flow is given in Figure 13.1c. Velocity at the wall is zero owing to the nonslip condition (a viscous effect). Far from the surface, the fluid is not influenced by the presence of the plate; consequently, the effect of viscosity in this region can be neglected. Everywhere outside the boundary layer, the velocity is equal to the free-stream value U , and the pressure equals the free-stream value p_∞ . These are related by the Bernoulli equation if the flow is inviscid, incompressible, and Newtonian. Inside the boundary layer, the velocity varies from zero at the wall to the free-stream value U at the edge of the boundary layer. The thickness of the boundary layer increases with length downstream and is only a few thousandths of a millimeter thick. In spite of its size, its effect is extremely important in such problems as calculating resistance to motion of a body through a fluid (a ship through water) or determining heat transfer characteristics at a body surface (cold wind blowing past the window of a heated dwelling). Even the Moody diagram for pipe flow is a correlation of a surface effect (wall shear stress) for ducts with constant cross sections.

As was mentioned before, to obtain a solution for some problems, it is convenient to divide the flow into portions—the inviscid region and the boundary-layer region. At the edge of the boundary layer, Bernoulli’s equation is applied to determine the pressure variation or distribution. The pressure distribution is then used in the boundary-layer equations to obtain the velocity distribution close to the wall. The inviscid and boundary-layer regions are thus patched together at the edge of the boundary layer.

Now let us resort to the flat plate example. Near the leading edge, the flow in the boundary layer is laminar, and viscous forces are great. As the flow moves downstream, it becomes unstable and goes through a transition region to a region of turbulence. This process is analogous to vertical flow of smoke from a cigarette. At a certain height, the smoke changes from a smooth-flowing jet to a turbulent jet. The regimes for flow over a flat plate are illustrated in Figure 13.2. Even in the turbulent boundary layer, however, velocity at the wall is zero. Thus, near the wall, there exists a laminar sublayer, but, as will be shown, it is quite thin.

In laminar flow, shear stress is due to the sliding of one fluid layer over another. The shear stress is related to the strain rate by Newton’s law of viscosity:

$$\tau_{yx}^{(\ell)} = \mu \frac{dV_x}{dy} \tag{13.1}$$

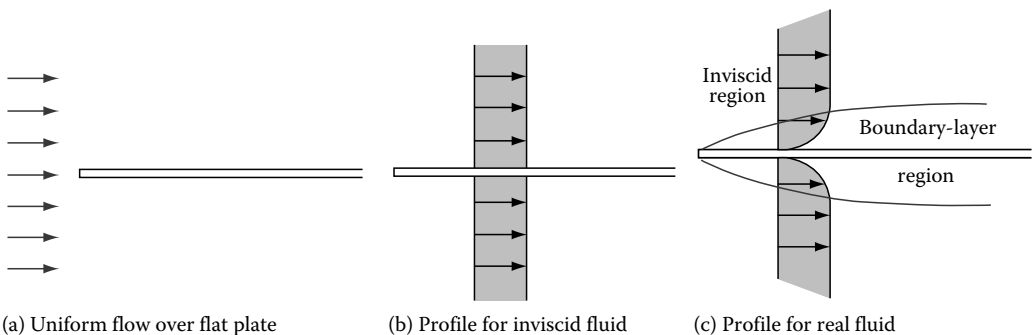


FIGURE 13.1 Uniform flow over a flat plate.

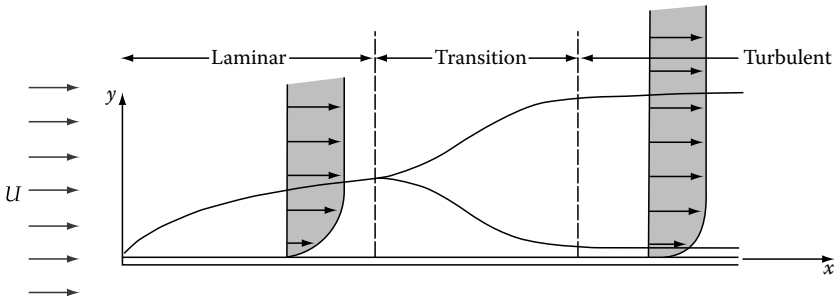


FIGURE 13.2 Laminar, transition, and turbulent flow regimes for flow over a flat plate.

In turbulent flow, random motions of particles and velocity fluctuations are responsible for a mixing action that transports faster-moving particles into slower-moving layers and the reverse. The turbulent shear stress is related to the time-averaged velocity by

$$\tau_{yx}^{(t)} = \mu^{(t)} \frac{d\bar{V}_x}{dy} \tag{13.2}$$

where $\mu^{(t)}$ is the eddy viscosity. The eddy viscosity is many times greater than the absolute viscosity in turbulent flow. As was mentioned in Chapter 11, the absolute viscosity μ is a property of the fluid, but the eddy viscosity is not; it is a property of the flow. The velocity profiles in the laminar and turbulent boundary layers are somewhat different, as is shown in Figure 13.3. Owing primarily to the turbulent mixing effect, the turbulent profile is flatter over a greater portion of the boundary layer.

Because laminar and turbulent flows are so different, it is extremely important that a criterion be established for transition. In pipe flow, the Reynolds number based on hydraulic diameter is used to determine the type of flow. In flow over a flat plate, again the Reynolds number is used, but here it will be based on distance downstream along the plate:

$$\text{Re} = \frac{Ux}{\nu} \tag{13.3}$$

Many factors affect the change: pressure gradient along the surface, surface roughness, and heat transfer to or from the fluid. Thus, no exact point can be specified for transition. Rather, a transition region exists where the flow is said to be critical. As we mentioned in Chapter 6, transition can vary over the range

$$2 \times 10^5 \leq \text{Re}_{\text{cr}} \leq 3 \times 10^6$$

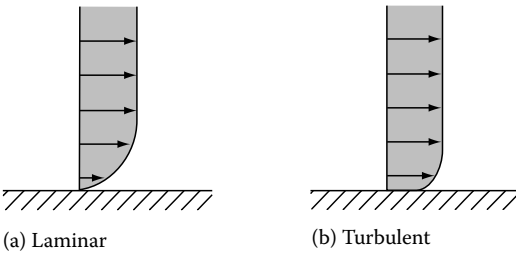


FIGURE 13.3 Velocity profiles in the boundary layer.

where Re_{cr} is the critical Reynolds number. For purposes of calculation, however, we will take the critical Reynolds number for flow over a flat plate to be 5×10^5 .

13.2 EQUATIONS OF MOTION FOR THE BOUNDARY LAYER

In this section, we will derive the continuity and momentum equations for the boundary layer, beginning with the equations of Chapter 11. We will assume that the flow is two-dimensional and steady. Further, the fluid is taken to be Newtonian and incompressible with constant properties. Gravity is neglected, and the radius of curvature of the body is large. This last stipulation is included so that centrifugal forces can be neglected and also to ensure that flow separation does not occur. The boundary-layer equations that we will derive are not applicable to a region of backflow. Because the boundary layer is very thin, pressure does not vary in the direction that is normal to the surface. A schematic of the general boundary-layer problem is given in Figure 13.4. The x -coordinate is in the main flow direction along the body surface; the y -coordinate extends upward normal to the surface; the z -coordinate points out of the page.

Now we will perform what is known as an **order of magnitude analysis**. The boundary layer is thin; thus, velocities and thicknesses in the y -direction have orders of magnitude of δ . In equation form, we would write, for example,

$$V_y \sim O(\delta)$$

This states that the velocity in the y -direction has an order of magnitude of δ . Relative to the y -directed factors, velocities and distances in the x -direction have orders of magnitude of unity. For example,

$$V_x \sim O(1)$$

The values of δ and unity are important in a comparative rather than an absolute sense. In this regard, we will determine the order of magnitude of each term in the continuity, Bernoulli, and Navier–Stokes equations and discard the terms of order δ as being negligible. The continuity equation in differential form (from Chapter 11), with each term’s order of magnitude term written underneath, is

$$\frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0$$
$$\frac{1}{1} \quad \frac{\delta}{\delta}$$

Thus, both terms are of order 1, and neither can be neglected.

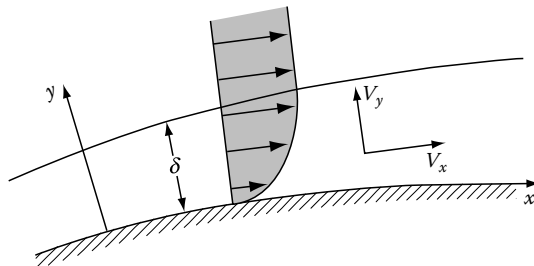


FIGURE 13.4 Flow in the boundary layer.

The Bernoulli equation (from Chapter 12) applies to the region outside the boundary layer. In differential form, we have the following:

$$\frac{1}{\rho} \frac{\partial p}{\partial x} + U \frac{\partial U}{\partial x} = 0$$

$$\frac{1}{1} \quad \quad \quad 1 \frac{1}{\delta^2}$$

If we assume that density is of order 1, then the pressure gradient must also be of order 1. Hence, none of the terms in this expression can be neglected.

The x -component of the Navier–Stokes equation is, neglecting gravity,

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial x} + \nu \left(\frac{\partial^2 V_x}{\partial x^2} + \frac{\partial^2 V_x}{\partial y^2} \right)$$

$$1 \frac{1}{1} \quad \delta \frac{1}{\delta} \quad 1 \quad \quad \frac{1}{1^2} \quad \frac{1}{\delta^2}$$

To ensure that the term $\partial^2 V_x / \partial y^2$ does not make the rest of the terms negligible, we assign the kinematic viscosity an order of magnitude δ^2 . This value implies that the viscosity of the fluid can be extremely small and a boundary-layer flow will still exist. From the preceding equation, we find that all terms except $\partial^2 V_x / \partial x^2$ are of order 1 and thus remain.

The y -component of the Navier–Stokes equations is

$$V_x \frac{\partial V_y}{\partial x} + V_y \frac{\partial V_y}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial y} + \nu \left(\frac{\partial^2 V_y}{\partial x^2} + \frac{\partial^2 V_y}{\partial y^2} \right)$$

$$1 \frac{\delta}{1} \quad \delta \frac{\delta}{\delta} \quad \frac{1}{1} \quad \delta^2 \left(\frac{\delta}{1} \quad \frac{\delta}{\delta^2} \right)$$

We conclude that the pressure gradient in the y -direction must be of order δ . In fact, the entire equation must be of order of magnitude δ . Comparing to the x -component equation, which is of order 1, we can neglect the y -component equation. With $\partial p / \partial y$ negligible, we infer that the pressure gradient across the boundary layer is invariant and that the free-stream pressure equals that in the boundary layer. Summarizing the foregoing analysis, we now write the boundary-layer equations as follows:

$$\text{Continuity: } \frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0 \quad (13.4)$$

$$x\text{-component: } V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial x} + \nu \frac{\partial^2 V_x}{\partial y^2} \quad (13.5)$$

$$y\text{-component: } \frac{\partial p}{\partial y} = 0 \quad (13.6)$$

$$\text{Bernoulli equation: } \frac{1}{\rho} \frac{\partial p}{\partial x} = -U \frac{\partial U}{\partial x} \quad (13.7)$$

These equations are for two-dimensional, steady, incompressible flow of a Newtonian fluid with constant properties.

13.3 LAMINAR BOUNDARY-LAYER FLOW OVER A FLAT PLATE

For laminar boundary-layer flow over a flat plate, Equations 13.4 through 13.7 must be solved simultaneously for V_x , V_y , and p . Assuming uniform flow ($\partial U/\partial x = 0$), Equation 13.7 shows that there is no pressure variation with x . Equation 13.6 states that there is no pressure variation with y . The pressure everywhere, then, is a constant. The equations to be solved are

$$\frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0$$

(13.8)

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = \nu \frac{\partial^2 V_x}{\partial y^2}$$

(13.9)

The boundary conditions are

$$y = 0 \quad V_x = 0 \text{ (condition 1)}$$

(13.10)

$$y = 0 \quad V_y = 0 \text{ (condition 2)}$$

(13.11)

$$y = \infty \quad V_x = U \text{ (condition 3)}$$

(13.12)

Equation 13.12 is the patching condition between the inviscid and boundary-layer regions. The problem was solved in 1908 by Blasius by using a coordinate transformation, the mathematical details of which are beyond the scope of this discussion. The solution form is

$$\frac{V_x}{U} = f(\eta) \quad \eta = y \left(\frac{U}{\nu x} \right)^{1/2}$$

(13.13)

The function f has no known analytic form; it is a power series, the values of which are provided in Table 13.1 as a function of η . A plot of f versus η is given in Figure 13.5. The solution was obtained

TABLE 13.1
Laminar Boundary-Layer Velocity Profile for Flow Past
a Flat Plate: The Blasius Solution

$\eta = y \left(\frac{U}{\nu x} \right)^{1/2}$	$f = \frac{V_x}{U}$	$\eta = y \left(\frac{U}{\nu x} \right)^{1/2}$	$f = \frac{V_x}{U}$
0.0	0.0	2.8	0.811 52
0.2	0.066 41	3.0	0.846 05
0.4	0.132 77	3.2	0.876 09
0.6	0.198 94	3.4	0.901 77
0.8	0.264 71	3.6	0.923 33
1.0	0.329 79	3.8	0.941 12
1.2	0.393 78	4.0	0.955 52
1.4	0.456 27	4.2	0.966 96
1.6	0.516 76	4.4	0.975 87
1.8	0.574 77	4.6	0.982 69
2.0	0.629 77	4.8	0.987 79
2.2	0.681 32	5.0	0.991 55
2.4	0.728 99	∞	1.000 00
2.6	0.772 46		

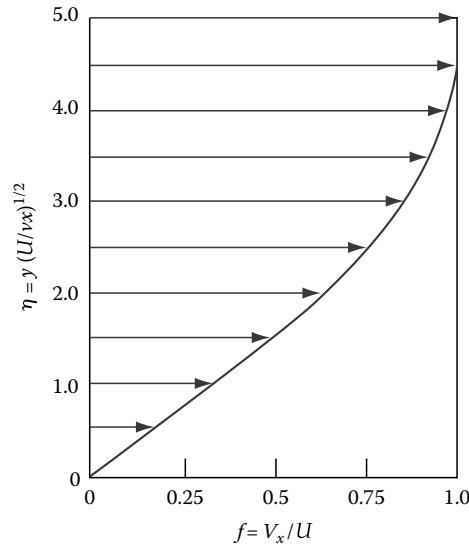


FIGURE 13.5 Blasius velocity profile for a laminar boundary layer.

by formulating a power series expansion about $\eta = 0$ and matching it with an asymptotic solution about $\eta = \infty$. It is customary to select the boundary-layer thickness at the location where $V_x/U = 0.99$. This occurs at $\eta \approx 5$. We therefore write

$$\eta = \delta \left(\frac{U}{\nu x} \right)^{1/2} = 5.0$$

$$\delta = \frac{5.0x}{(Ux^2/\nu)^{1/2}}$$

or, the boundary-layer thickness is

$$\delta = \frac{5.0x}{(\text{Re})^{1/2}} \quad (13.14)$$

where $\text{Re} = Ux/\nu$. The velocity profile in the laminar boundary layer at any location is represented by Figure 13.5. This implies that all profiles, regardless of downstream location, are similar.

In addition to the boundary-layer thickness, a displacement thickness can be defined and determined. Consider Figure 13.6. In the flow upstream of the plate, the velocity is uniform and equal to U . Along the plate, however, the velocity is zero, and a boundary layer has formed. Owing to the decrease in velocity in the boundary layer from the free-stream value, the flow contained in a height H upstream must be displaced upward by an amount δ^* to satisfy conservation of mass.

Mass flow at 1 = mass flow at 2:

$$UH = U\delta^* + U(H - \delta) + \int_0^\delta V_x dy$$

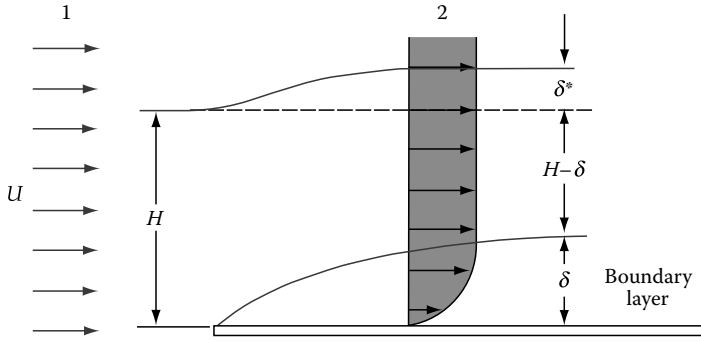


FIGURE 13.6 Displacement thickness formation due to presence of the plate.

or

$$U\delta^* = U\delta - \int_0^\delta V_x dy$$

Dividing by U , we get

$$\delta^* = \delta - \int_0^\delta \frac{V_x}{U} dy$$

The right-hand side may be further manipulated:

$$\begin{aligned} \delta^* &= \int_0^\delta dy - \int_0^\delta \frac{V_x}{U} dy \\ \delta^* &= \int_0^\delta \left(1 - \frac{V_x}{U}\right) dy \end{aligned}$$

Moreover, because $V_x/U = 1$ over the range $y = \delta$ to infinity, the preceding equation can be generalized as

$$\delta^* = \int_0^\infty \left(1 - \frac{V_x}{U}\right) dy \quad (13.15)$$

With the Blasius profile for laminar incompressible flow over a flat plate, it can be shown that

$$\delta^* = \frac{1.73x}{\sqrt{\text{Re}}} \quad (13.16)$$

To determine the force exerted on the plate, we use the Newtonian expression for shear stress applied at the wall:

$$\tau_w = \mu \left(\frac{\partial V_x}{\partial y} \right) \bigg|_{y=0}$$

From the Blasius solution, the slope of the velocity distribution at the wall is

$$\left. \frac{\partial V_x}{\partial y} \right|_{y=0} = \frac{0.33U}{x} \sqrt{\text{Re}}$$

The wall shear stress thus becomes

$$\tau_w = \frac{0.33U\mu}{x} \sqrt{\text{Re}} \quad (13.17)$$

A drag coefficient can now be calculated by using this expression for wall shear stress. (Remember that the drag determined here is a surface or skin friction drag that does not include form drag.) But because τ_w varies with x , the drag coefficient too varies with x . Hence, we define a “local” drag or skin friction coefficient as

$$C_d = \frac{\tau_w}{\rho U^2/2} = \frac{2\tau_w}{\rho U^2}$$

Substituting gives

$$C_d = \frac{0.664U\mu\sqrt{\text{Re}}}{x\rho U^2}$$

or

$$C_d = \frac{0.664}{\sqrt{\text{Re}}} \quad (13.18)$$

The total drag (skin friction drag) can be obtained by integration of the wall shear stress over the length of the plate. Then, by dividing by the kinetic energy of the stream, we get the total skin friction drag coefficient. With b defined as the plate width, we thus obtain

$$D_f = \int_0^L \tau_w b \, dx = \int_0^L \frac{0.332U\mu b}{x} \left(\frac{Ux}{\nu} \right)^{1/2} dx$$

or

$$D_f = 0.664U\mu b\sqrt{\text{Re}_L} \quad (13.19)$$

where

$$\text{Re}_L = \frac{\rho UL}{\mu} \quad (13.20)$$

Thus the drag force varies with the square root of the length. The total skin friction drag coefficient is defined as

$$C_D = \frac{D_f}{\rho U^2 b L / 2} = \frac{2D_f}{\rho U^2 b L}$$

Substituting Equation 13.19 brings

$$C_D = \frac{2(0.664)U\mu b(\rho UL/\mu)^{1/2}}{\rho U^2 bL}$$

or

$$C_D = \frac{1.328}{\sqrt{\text{Re}_L}} \quad (13.21)$$

Note that C_d is a local coefficient, whereas C_D is the total obtained by integration over the length of the plate.

Example 13.1

The top view of a small water tunnel is given in Figure 13.7. An object can be placed in the test section (a free diver, for example, testing flipper thrust) and observed as water is moved around the circuit by a propeller. Upstream of the test section is vertically placed flow straighteners. Each is submerged in 4 ft of liquid, each is 3 ft long, and all are braced across the top. For a flow velocity past the plates of 1.5 ft/s:

- Determine boundary-layer growth with length.
- Determine displacement-thickness growth with length.
- Graph each of the above and also graph the velocity distribution in the boundary layer at $x = 1.5$ ft.
- Determine total skin friction drag on each plate.

SOLUTION

- a. From Table A.5, for water, $\mu = 1.9 \times 10^{-5}$ lbf · s/ft². Therefore,

$$\nu = \frac{\mu}{\rho} = \frac{1.9 \times 10^{-5}}{1.94} = 9.6 \times 10^{-6} \text{ ft}^2/\text{s}$$

The free-stream velocity is given as 1.5 ft/s, and plate length is 3 ft. The Reynolds number at plate end is

$$\text{Re}_L = \frac{UL}{\nu} = \frac{1.5(3)}{9.6 \times 10^{-6}} = 4.7 \times 10^5$$

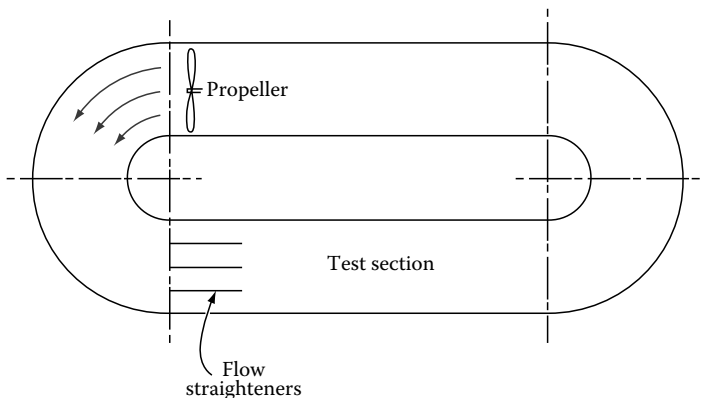


FIGURE 13.7 Water tunnel of Example 13.1.

The boundary layer is laminar over the entire length. The boundary-layer growth is given by Equation 13.14:

$$\delta = \frac{5.0x}{(\text{Re})^{1/2}} = \frac{5.0x}{\left(\frac{Ux}{\nu}\right)^{1/2}}$$

or, after substitution,

$$\delta = 1.26 \times 10^{-2} x^{1/2} \quad (\text{i})$$

b. The displacement thickness is given by Equation 13.16 as

$$\delta^* = \frac{1.73x}{\sqrt{\text{Re}}} = \frac{1.73x}{\left(\frac{Ux}{\nu}\right)^{1/2}}$$

After substitution and simplification, we get

$$\delta^* = 4.38 \times 10^{-3} x^{1/2} \quad (\text{ii})$$

c. A graph of Equations i and ii is provided in Figure 13.8.

The velocity distribution is given by the data of Table 13.1. The independent variable for this problem becomes

$$\eta = y \left(\frac{U}{\nu x} \right)^{1/2} = y \left[\frac{1.5}{(9.6 \times 10^{-6})(1.5)} \right]^{1/2}$$

$$\eta = 3.23 \times 10^2 y$$

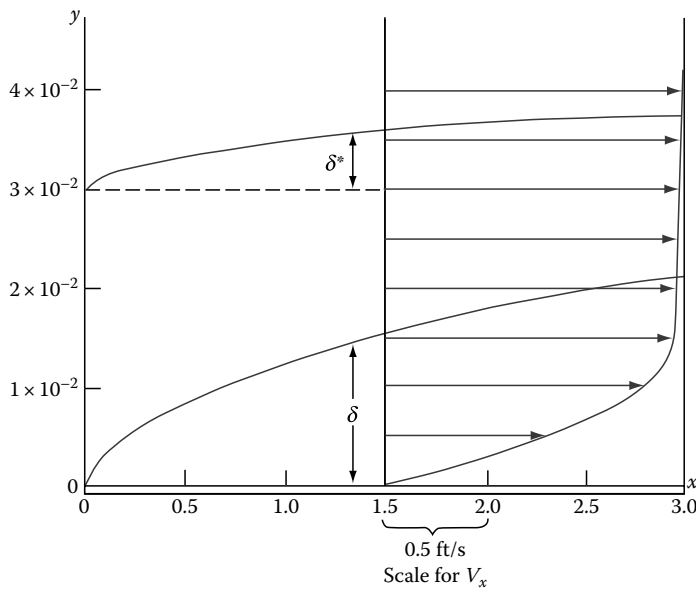


FIGURE 13.8 Boundary-layer growth and displacement-thickness growth with distance and velocity distribution at $x = 1.5$ ft.

TABLE 13.2
Results of Calculations for Example 13.1

η	y (ft)	$f = V_x/U$	V_x (ft/s)
0	0	0	0
1	3.10×10^{-3}	0.329 79	0.49
2	6.20×10^{-3}	0.629 77	0.94
3	9.3×10^{-3}	0.846 05	1.27
4	1.24×10^{-2}	0.955 52	1.43
5	1.55×10^{-2}	0.991 55	1.49

Also,

$$V_x = Uf = 1.5f$$

Using the data, we obtain Table 13.2 and the velocity profile of Figure 13.8.

d. The total drag on one side of any of the plates is given by Equation 13.19:

$$D_f|_1 = 0.664U \mu b \sqrt{\text{Re}_L}$$

The Reynolds number at plate end was calculated earlier as

$$\text{Re}_L = 4.7 \times 10^5$$

With $U = 1.5$ ft/s, $\mu = 1.9 \times 10^{-5}$ lbf · s/ft², and $b = 4$ ft, the drag force becomes

$$\begin{aligned} D_f|_1 &= 0.664(1.5)(1.9 \times 10^{-5})(4)\sqrt{4.7 \times 10^5} \\ &= 0.051 \text{ lbf} \end{aligned}$$

Owing to the presence of a boundary layer on each side of one plate, the total skin friction drag per plate is

$$D_f = 0.102 \text{ lbf}$$

The Blasius solution presented here is valid only for laminar flow. Further, although the results are called an exact solution, the boundary-layer equations are only approximate. The Navier–Stokes equations are the equations that apply; the boundary-layer equations are simplifications. Thus, the Blasius solution is really an exact solution to approximate equations.

The boundary-layer equations can be further modified and placed in integral form. They can then be solved for the flat-plate problem, for example, and compared to the Blasius solution. The technique, developed by von Karman, is known as the **momentum integral method**.

13.4 MOMENTUM INTEGRAL EQUATION

The momentum integral equation is derived from the boundary-layer equations; recall that for steady flow, we wrote

$$\frac{\partial V_x}{\partial x} + \frac{\partial V_y}{\partial y} = 0$$

(13.4)

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = -\frac{1}{\rho} \frac{dp}{dx} + \nu \frac{\partial^2 V_x}{\partial y^2} \quad (13.5)$$

Integrating Equation 13.5 with respect to y from zero to δ , the edge of the boundary layer gives

$$\int_0^\delta V_x \frac{\partial V_x}{\partial x} dy + \int_0^\delta V_y \frac{\partial V_x}{\partial y} dy = -\frac{1}{\rho} \int_0^\delta \frac{dp}{dx} dy + \int_0^\delta \nu \frac{\partial^2 V_x}{\partial y^2} dy \quad (13.22)$$

The second term on the left-hand side can be integrated by parts to obtain

$$\int_0^\delta V_y \frac{\partial V_x}{\partial y} dy = \int_0^\delta \frac{\partial(V_x V_y)}{\partial y} dy - \int_0^\delta V_x \frac{\partial V_y}{\partial y} dy$$

Now at $y = \delta$, we have $V_x = U$; at $y = 0$, we have $V_x = 0$. The preceding equation thus becomes

$$\int_0^\delta V_y \frac{\partial V_x}{\partial y} dy = U \int_0^\delta \frac{\partial V_y}{\partial y} dy - \int_0^\delta V_x \frac{\partial V_y}{\partial y} dy \quad (13.23)$$

From continuity, we get

$$\frac{\partial V_y}{\partial y} = -\frac{\partial V_x}{\partial x}$$

Combining this equation with Equation 13.23, we obtain

$$\int_0^\delta V_y \frac{\partial V_x}{\partial y} dy = -U \int_0^\delta \frac{\partial V_x}{\partial x} dy + \int_0^\delta V_x \frac{\partial V_x}{\partial x} dy$$

Substituting into Equation 13.22 gives

$$\int_0^\delta V_x \frac{\partial V_x}{\partial x} dy - U \int_0^\delta \frac{\partial V_x}{\partial x} dy + \int_0^\delta V_x \frac{\partial V_x}{\partial x} dy = -\frac{1}{\rho} \int_0^\delta \frac{dp}{dx} dy + \nu \int_0^\delta \frac{\partial^2 V_x}{\partial y^2} dy$$

Simplifying and integrating where possible, we get

$$\int_0^\delta V_x \frac{\partial V_x^2}{\partial x} dy - U \int_0^\delta \frac{\partial V_x}{\partial x} dy = -\frac{\delta}{\rho} \frac{dp}{dx} + \frac{\mu}{\rho} \left(\frac{\partial V_x}{\partial y} \right) \bigg|_0^\delta \quad (13.24)$$

We now evaluate each term except for pressure. The first and second terms are evaluated by using the Leibniz rule for differentiating an integral. The formula is

$$\frac{d}{dt} \int_{a(t)}^{b(t)} f(x, t) dx = \int_{a(t)}^{b(t)} \frac{\partial f}{\partial t} dx + \left[f(b, t) \frac{db}{dt} - f(a, t) \frac{da}{dt} \right]$$

The upper and lower limits of the integral on the left-hand side are functions of t . By using the Leibniz rule, the first and second terms of Equation 13.24 become

$$\begin{aligned} \int_0^\delta \frac{\partial V_x^2}{\partial x} dy &= \frac{d}{dx} \int_0^\delta V_x^2 dy - V_x^2|_\delta \frac{d\delta}{dx} \\ &= \frac{d}{dx} \int_0^\delta V_x^2 dy - U^2 \frac{d\delta}{dx} \end{aligned}$$

and

$$\begin{aligned} U \int_0^\delta \frac{\partial V_x}{\partial x} dy &= U \frac{d}{dx} \int_0^\delta V_x dy - U(V_x|_\delta) \frac{d\delta}{dx} \\ &= U \frac{d}{dx} \int_0^\delta V_x dy - U^2 \frac{d\delta}{dx} \end{aligned}$$

where, at the edge of the boundary layer, $V_x = U$. Proceeding with the last term on the right-hand side, we have

$$\begin{aligned} \frac{\mu}{\rho} \left(\frac{\partial V_x}{\partial y} \right) \Big|_0^\delta &= \frac{\mu}{\rho} \left(\frac{\partial V_x}{\partial y} \Big|_\delta \right) - \frac{\mu}{\rho} \left(\frac{\partial V_x}{\partial y} \Big|_0 \right) \\ &= 0 - \frac{\tau_w}{\rho} \end{aligned}$$

The slope $\partial V_x / \partial y = 0$ at δ , and Newton's law of viscosity is applied at the wall:

$$\tau_w = \mu \left(\frac{\partial V_x}{\partial y} \right) \Big|_{y=0}$$

Substituting these terms back into Equation 13.24, we obtain the following after simplification:

$$\frac{d}{dx} \int_0^\delta V_x^2 dy - U \frac{d}{dx} \int_0^\delta V_x dy = -\frac{\delta}{\rho} \frac{dp}{dx} - \frac{\tau_w}{\rho} \quad (13.25)$$

This equation is known as the momentum integral equation. It incorporates the continuity expression and is valid for both laminar and turbulent flows. The equation as written is independent of the y variable. The velocity V_x may contain y , but y is integrated out of each term where it might appear.

13.5 MOMENTUM INTEGRAL METHOD FOR LAMINAR FLOW OVER A FLAT PLATE

The momentum integral equation can be applied to flow over a flat plate. First, however, it is necessary to assume a velocity profile for V_x in terms of y . The more accurate the assumption of a velocity profile, the closer the results will be to the exact solution. To investigate further, let us write a general profile equation and see how it can be refined. The profiles are assumed to be similar at

different locations downstream. Experimentally, it has been shown that the velocity is a function of y/δ . Assume a polynomial, then, such as

$$\frac{V_x}{U} = C_0 + C_1 \frac{y}{\delta} + C_2 \frac{y^2}{\delta^2} + C_3 \frac{y^3}{\delta^3} + C_4 \frac{y^4}{\delta^4} + C_5 \frac{y^5}{\delta^5} + \dots \quad (13.26)$$

We must now write boundary conditions to determine the constants C_i . If we write only that

$$y = 0 \quad V_x = 0 \quad (\text{condition 1})$$

$$y = \delta \quad V_x = U \quad (\text{condition 2})$$

then all constants from C_2 onward are made zero. Moreover, C_0 becomes zero from condition 1, and $C_1 = 1$ from condition 2. Thus, the velocity distribution is

$$\frac{V_x}{U} = \frac{y}{\delta} \quad (13.27)$$

which is linear. Suppose next that we include a third boundary condition:

$$y = \delta \quad \frac{\partial V_x}{\partial y} = 0 \quad (\text{condition 3})$$

This ensures that the velocity profile has a vertical slope at the edge of the boundary layer and that the velocity is no longer changing with y . Combining boundary conditions 1, 2, and 3 with Equation 13.26, we get

$$\frac{V_x}{U} = \frac{2y}{\delta} - \frac{y^2}{\delta^2} \quad (13.28)$$

For still another boundary condition, we could refer to the boundary-layer equation for the flat plate with no pressure gradient (Equation 13.9):

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = \nu \frac{\partial^2 V_x}{\partial y^2}$$

Now at $y=0$, we have $V_x = 0$ and $V_y = 0$. Thus, the preceding equation provides us with

$$y = 0 \quad \frac{\partial^2 V_x}{\partial y^2} = 0 \quad (\text{condition 4})$$

Combining all four boundary conditions with Equation 13.26 yields

$$\frac{V_x}{U} = \frac{3y}{2\delta} - \frac{y^3}{2\delta^3} \quad (13.29)$$

The effect of including more boundary conditions is illustrated graphically in Figure 13.9, where all three distributions are plotted. Figure 13.10 shows the Blasius solution with polynomial profiles plotted for comparison. Note that we can select other forms for an assumed profile. One frequently selected profile is

$$\frac{V_x}{U} = \sin \frac{\pi y}{2\delta}$$

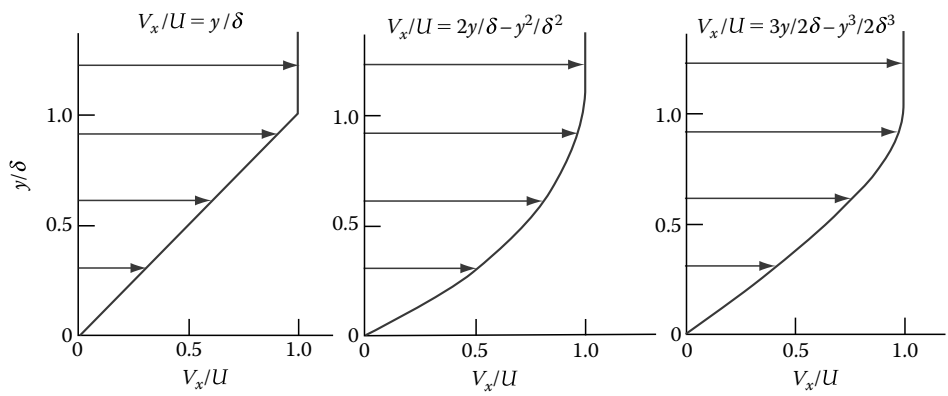


FIGURE 13.9 Three possible velocity profiles.

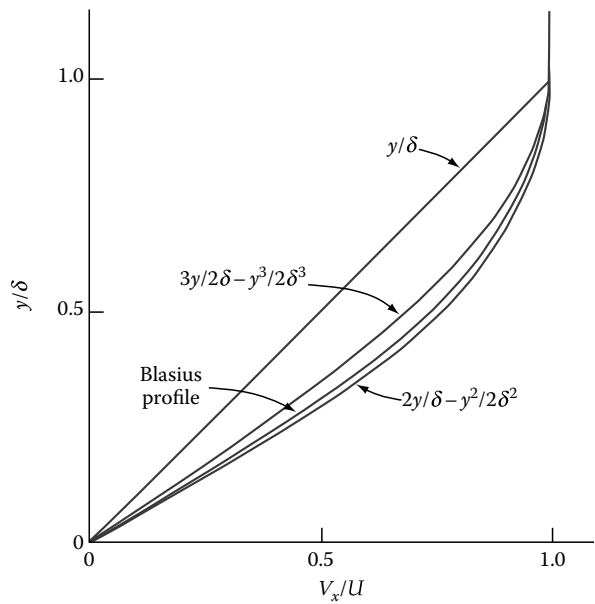


FIGURE 13.10 Blasius profile compared to the polynomial representations.

Now we will select the linear profile given by Equation 13.27 and determine expressions for boundary layer and displacement thicknesses and also the skin friction coefficient:

$$\frac{V_x}{U} = \frac{y}{\delta} \tag{13.27}$$

The momentum integral equation for flow over a flat plate is

$$\frac{d}{dx} \int_0^\delta V_x^2 dy - U \frac{d}{dx} \int_0^\delta V_x dy = -\frac{\tau_w}{\rho} \tag{13.30}$$

For the linear profile,

$$\tau_w = \mu \frac{dV_x}{dy} \Big|_{y=0} = \mu \left(\frac{U}{\delta} \right) \Big|_{y=0} = \frac{U\mu}{\delta}$$

Substitution into Equation 13.30 gives

$$\frac{d}{dx} \int_0^\delta \frac{U^2 y^2}{\delta^2} dy - U \frac{d}{dx} \int_0^\delta \frac{U y^2}{\delta} dy = - \frac{U\mu}{\delta \rho}$$

Integrating, we get

$$\frac{d}{dx} \left(\frac{U^2 y^3}{3\delta^2} \right) \Big|_0^\delta - U \frac{d}{dx} \left(\frac{U y^2}{2\delta} \right) \Big|_0^\delta = - \frac{U\mu}{\delta \rho}$$

or

$$\frac{U^2}{3} \frac{d\delta}{dx} - \frac{U^2}{2} \frac{d\delta}{dx} = - \frac{U\mu}{\delta \rho}$$

Simplifying further, we finally obtain

$$\delta \frac{d\delta}{dx} = \frac{6\mu}{\rho U}$$

Integrating

$$\int_0^\delta \delta \, d\delta = \int_0^x \frac{6\mu}{\rho U} dx$$

we obtain

$$\frac{\delta^2}{2} = \frac{6\mu x}{\rho U}$$

The boundary-layer thickness then becomes

$$\delta = \sqrt{\frac{12\mu x^2}{\rho U x}}$$

or

$$\delta = \frac{3.46x}{\sqrt{\text{Re}}} \quad (13.31)$$

The displacement thickness is found with

$$\delta^* = \int_0^\delta \left(1 - \frac{V_x}{U}\right) dy$$

Substituting the linear profile and integrating, we get

$$\delta^* = \int_0^\delta \left(1 - \frac{y}{\delta}\right) dy = \left(y - \frac{y^2}{2\delta}\right) \Big|_0^\delta = \frac{\delta}{2}$$

Therefore,

$$\delta^* = \frac{1.73x}{\sqrt{\text{Re}}} \tag{13.32}$$

The skin friction or local drag coefficient is

$$C_d = \frac{2\tau_w}{\rho U^2} = \frac{2U\mu}{\delta\rho U^2} = \frac{2\mu}{\rho U} \frac{\sqrt{\text{Re}}}{3.46x}$$

or

$$C_d = \frac{0.578}{\sqrt{\text{Re}}} \tag{13.33}$$

By determining a drag force and defining a total drag coefficient, it can be shown that

$$C_D = \frac{1.156}{\sqrt{\text{Re}_L}} \tag{13.34}$$

A comparison of these results to the Blasius solution is given in Table 13.3. Also shown are the results for other profiles. It is seen that the results compare favorably to the exact solution.

TABLE 13.3
Comparison of Approximate Results to Exact Solution
for Flow over a Flat Plate

Velocity Profile	δ	δ^*	C_D
Blasius (<i>Exact Solution</i>)	$\frac{5.0x}{\sqrt{\text{Re}}}$	$\frac{1.73x}{\sqrt{\text{Re}}}$	$\frac{1.328}{\sqrt{\text{Re}_L}}$
<i>Momentum Integral Method</i>			
$\frac{V_x}{U} = \frac{y}{\delta}$	$\frac{3.46x}{\sqrt{\text{Re}}}$	$\frac{1.73x}{\sqrt{\text{Re}}}$	$\frac{1.156}{\sqrt{\text{Re}_L}}$
$\frac{V_x}{U} = \frac{2y}{\delta} - \frac{y^2}{\delta^2}$	$\frac{5.48x}{\sqrt{\text{Re}}}$	$\frac{1.83x}{\sqrt{\text{Re}}}$	$\frac{1.462}{\sqrt{\text{Re}_L}}$
$\frac{V_x}{U} = \frac{3y}{2\delta} - \frac{y^3}{2\delta^3}$	$\frac{4.64x}{\sqrt{\text{Re}}}$	$\frac{1.74x}{\sqrt{\text{Re}}}$	$\frac{1.292}{\sqrt{\text{Re}_L}}$
$\frac{V_x}{U} = \sin \frac{\pi y}{2\delta}$	$\frac{4.80x}{\sqrt{\text{Re}}}$	$\frac{1.74x}{\sqrt{\text{Re}}}$	$\frac{1.310}{\sqrt{\text{Re}_L}}$

$\text{Re} = Ux/\nu$; $\text{Re}_L = UL/\nu$.

Remember that the von Karman momentum integral method is an approximate solution, whereas the Blasius formulation is the exact solution (to approximate equations).

13.6 MOMENTUM INTEGRAL METHOD FOR TURBULENT FLOW
OVER A FLAT PLATE

As we saw in the preceding section, the momentum integral method for laminar flow gives results that agree well with the exact solution. This result is true even for the crude linear profile. The success of the method thus brings us to an attempt to use it for turbulent flow. The profile that we assume must, of course, be different from that for laminar flow. As seen from Chapter 11, an exact analysis for a turbulent flow problem is not available. Consequently, we have to resort to experimental results. It has been found that a seventh-root profile correlates well with turbulent boundary-layer data over a wide range of Reynolds numbers:

$$\frac{V_x}{U} = \left(\frac{y}{\delta}\right)^{1/7} \tag{13.35}$$

A plot of this equation is provided in Figure 13.11 along with a laminar profile for purposes of comparison. Equation 13.35 does not apply at the wall surface because it predicts an infinite wall shear stress; that is,

$$\frac{dV_x}{dy} = \frac{U}{7y^{6/7}\delta^{1/7}}$$

At the wall, $y=0$, and the gradient becomes infinite. Because this is physically impossible, the laminar sublayer along the wall is assumed to have a linear profile that becomes tangent to the seventh-root profile at the edge of the buffer layer, where $y = \delta$ (see Figure 13.11). The wall shear

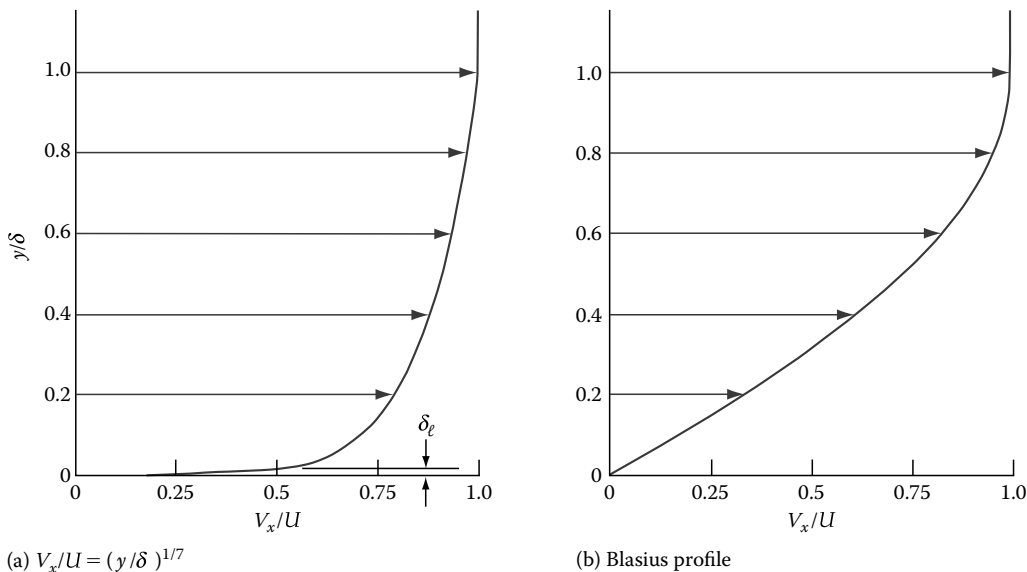


FIGURE 13.11 Turbulent boundary-layer profile compared to the laminar case.

stress has to be obtained from experimental results. An equation that agrees well with data is the Blasius formula:

$$\tau_w = 0.0225\rho U^2 \left(\frac{\nu}{U\delta} \right)^{1/4} \quad (13.36)$$

which is valid over the range

$$5 \times 10^5 \leq \text{Re} \leq 10^7$$

This equation was developed from pipe flow tests. Equations 13.35 and 13.36 can now be substituted into Equation 13.30, the momentum integral expression for flow over a flat plate:

$$\frac{d}{dx} \int_0^\delta V_x^2 dy - U \frac{d}{dx} \int_0^\delta V_x dy = -\frac{\tau_w}{\rho} \quad (13.30)$$

$$U^2 \frac{d}{dx} \int_0^\delta \left(\frac{y}{\delta} \right)^{2/7} dy - U^2 \frac{d}{dx} \int_0^\delta \left(\frac{y}{\delta} \right)^{1/7} dy = -0.0223 U^2 \left(\frac{\nu}{U\delta} \right)^{1/4}$$

Integrating and simplifying, we get

$$\begin{aligned} \frac{7}{72} \frac{d\delta}{dx} &= 0.0225 \left(\frac{\nu}{U\delta} \right)^{1/4} \\ \delta^{1/4} d\delta &= 0.229 \left(\frac{\nu}{U} \right)^{1/4} dx \end{aligned}$$

Integrating, we get

$$\frac{4\delta^{5/4}}{5} = 0.229 \left(\frac{\nu}{U} \right)^{1/4} x + C_1$$

where C_1 is a constant. The constant can be set equal to zero, which is equivalent to assuming that the boundary layer begins at the leading edge of the plate. Although this assumption is not strictly accurate, for long plates the laminar boundary layer exists over a very small percentage of the length, so neglecting it introduces only a small error. Moreover, a turbulent boundary layer can be induced in tests by roughening the leading edge of the plate. In cases in which the laminar boundary layer cannot be neglected, we will compensate by appropriately combining the laminar and turbulent results. With the constant equal to zero, the preceding equation becomes

$$\delta = \frac{0.368x}{(\text{Re})^{1/5}} \quad (13.37)$$

The displacement thickness is found with

$$\delta^* = \int_0^\delta \left(1 - \frac{V_x}{U} \right) dy = \int_0^\delta \left[1 - \left(\frac{y}{\delta} \right)^{1/7} \right] dy$$

Integrating, we obtain

$$\begin{aligned}\delta^* &= \frac{\delta}{8} \\ \delta^* &= \frac{0.046x}{(\text{Re})^{1/5}}\end{aligned}\tag{13.38}$$

To find the drag force, it is first necessary to evaluate the wall shear, rewriting it in terms of x :

$$\begin{aligned}\tau_w &= 0.0225\rho U^2 \left(\frac{\nu}{U\delta} \right)^{1/4} \\ &= 0.0225\rho U^2 \left[\frac{\nu(\text{Re})^{1/5}}{U(0.368x)} \right]^{1/4}\end{aligned}$$

After simplification, we get

$$\tau_w = 0.0286\rho U^2 \left(\frac{1}{\text{Re}} \right)^{1/5}\tag{13.39}$$

The local skin friction coefficient is then

$$C_d = \frac{2\tau_w}{\rho U^2} = \frac{0.0573}{(\text{Re})^{1/5}}\tag{13.40}$$

The drag force is determined by integrating the wall shear over the surface area; with b equal to the plate width, we obtain

$$D_f = b \int_0^L \tau_w dx = 0.0286\rho U^2 b \int_0^L \frac{dx}{(Ux/\nu)^{1/5}}$$

Integrating and simplifying yield

$$D_f = 0.0358\rho U^2 \frac{bL}{(\text{Re}_L)^{1/5}}\tag{13.41}$$

The drag coefficient is

$$C_D = \frac{2D_f}{\rho U^2 bL} = \frac{0.0715}{(\text{Re}_L)^{1/5}}\tag{13.42a}$$

The preceding expression is approximate because we began with the momentum integral equation and relied on empirical results. Better agreement with experimental data is obtained if the equation is altered slightly:

$$C_D = \frac{0.074}{(\text{Re}_L)^{1/5}}\tag{13.42b}$$

TABLE 13.4
Results of Momentum Integral Method Applied to Turbulent
Boundary-Layer Flow over a Flat Plate

Assumed Profile V_x/U	Wall Shear Stress τ_w	δ	Skin Friction Drag Coefficient C_D	Reynolds Number Range
$\left(\frac{y}{\delta}\right)^{1/7}$	$0.0225\rho U^2\left(\frac{v}{U\delta}\right)^{1/4}$	$\frac{0.368x}{(\text{Re})^{1/5}}$	$\frac{0.074}{(\text{Re}_L)^{1/5}}$	5×10^5 to 5×10^7
$\left(\frac{y}{\delta}\right)^{1/8}$	$0.0142\rho U^2\left(\frac{v}{U\delta}\right)^{1/5}$	$\frac{0.252x}{(\text{Re})^{1/6}}$	$\frac{0.045}{(\text{Re}_L)^{1/6}}$	1.8×10^5 to 4.5×10^7
$\left(\frac{y}{\delta}\right)^{1/10}$	$0.0100\rho U^2\left(\frac{v}{U\delta}\right)^{1/6}$	$\frac{0.201x}{(\text{Re})^{1/7}}$	$\frac{0.0305}{(\text{Re}_L)^{1/7}}$	2.9×10^7 to 5×10^8

which is valid over the range

$$5 \times 10^5 \leq \text{Re} \leq 10^7$$

Other expressions for velocity and wall shear stress must be used if the Reynolds number is outside this range. These expressions are summarized in Table 13.4.

Turbulent flow in a pipe was discussed in Chapter 11. Recall that the results of the development were expressed as a graph of $\bar{V}_z/V^*$ as a function of s —that is, dimensionless mean axial velocity in terms of a dimensionless space coordinate measured from the wall. According to Figure 11.8, the laminar sublayer exists over the interval

$$0 \leq s \leq 5$$

where

$$s = \frac{V^*y}{\nu}$$

At the edge of the buffer layer, we have (from Chapter 11)

$$5 = \frac{V^*\delta_\ell}{\nu}$$

$$\frac{\bar{V}_z}{V^*} = 5$$

With $\bar{V}_z = U$,

$$\delta_\ell = \frac{5\nu}{V^*} = \frac{25\nu}{U} \tag{13.43}$$

The ratio of the laminar-sublayer thickness to the boundary-layer thickness given by Equation 13.37 is

$$\begin{aligned} \frac{\delta_\ell}{\delta} &= \frac{25\nu}{U} \frac{(\text{Re})^{1/5}}{0.368x} \\ \frac{\delta_\ell}{\delta} &= \frac{67.9}{(\text{Re})^{4/5}} \end{aligned} \tag{13.44}$$

At $Re = 5 \times 10^5$, we have

$$\frac{\delta_\ell}{\delta} = 0.00187$$

At $Re = 10^7$, we have

$$\frac{\delta_\ell}{\delta} = 0.00017$$

The laminar sublayer is thus very thin.

13.7 LAMINAR AND TURBULENT BOUNDARY-LAYER FLOW OVER A FLAT PLATE

In the preceding section, we derived expressions for turbulent boundary-layer flow on a flat plate. It was assumed that the turbulent boundary layer started at the leading edge. For the real situation, however, the boundary layer is laminar at the leading edge and then changes to a turbulent profile. An error is introduced by assuming that the turbulent boundary layer begins at $x = 0$. An approximate method for correcting the results is to write the total drag as follows:

$$\begin{aligned} \text{Total drag} &= \text{laminar drag} & (0 \leq x \leq x_{cr}) \\ &+ \text{turbulent drag} & (0 \leq x \leq L) \\ &- \text{turbulent drag} & (0 \leq x \leq x_{cr}) \end{aligned}$$

The turbulent drag contribution over the laminar portion is subtracted out. The preceding expression presumes that turbulent flow begins immediately after laminar flow ends; that is, transition exists at a single point. By selecting the transition Reynolds number as $Re_{cr} = 5 \times 10^5$ and substituting from Equation 13.21 for laminar flow and Equation 13.42b for turbulent flow, the drag expression becomes

$$\begin{aligned} C_D \frac{\rho U^2}{2} bL &= \frac{1.328}{(Re_{cr})^{1/2}} \frac{\rho U^2}{2} bL \frac{x_{cr}}{L} \\ &+ \frac{0.074}{(Re_L)^{1/5}} \frac{\rho U^2}{2} bL \\ &- \frac{0.074}{(Re_{cr})^{1/5}} \frac{\rho U^2}{2} bL \frac{x_{cr}}{L} \end{aligned}$$

Rearranging and simplifying, we get

$$C_D = \frac{1.328(Re_{cr})^{1/2}}{Re_{cr}} \frac{x_{cr}}{L} + \frac{0.074}{(Re_L)^{1/5}} - \frac{0.074(Re_{cr})^{4/5}}{Re_{cr}} \frac{x_{cr}}{L}$$

It is seen that

$$\frac{Re_{cr}}{Re_L} = \frac{Ux_{cr}}{v} \frac{v}{UL} = \frac{x_{cr}}{L}$$

By substitution, then, we obtain the following for the drag coefficient:

$$C_D = \frac{1.328(5 \times 10^5)^{1/2}}{Re_L} + \frac{0.074}{(Re_L)^{1/5}} - \frac{0.074(5 \times 10^5)^{4/5}}{Re_L}$$

or

$$C_D = \frac{0.074}{(Re_L)^{1/5}} - \frac{1\,743}{Re_L} \tag{13.45}$$

This expression is valid up to a Reynolds number of 1×10^7 because the first term on the right-hand side is valid only to that point. An expression that fits experimental data over a wider range is the Prandtl–Schlichting equation:

$$C_D = \frac{0.455}{(\log Re_L)^{2.58}} - \frac{1\,700}{Re_L} \tag{13.46}$$

This expression is valid up to a Reynolds number of 1×10^9 . By combining the following equations, the graph of Figure 13.12 results:

$$C_D = \frac{1.328}{(Re_L)^{1/2}} \quad (\text{laminar}) \quad x \leq 5 \times 10^5 \tag{13.21}$$

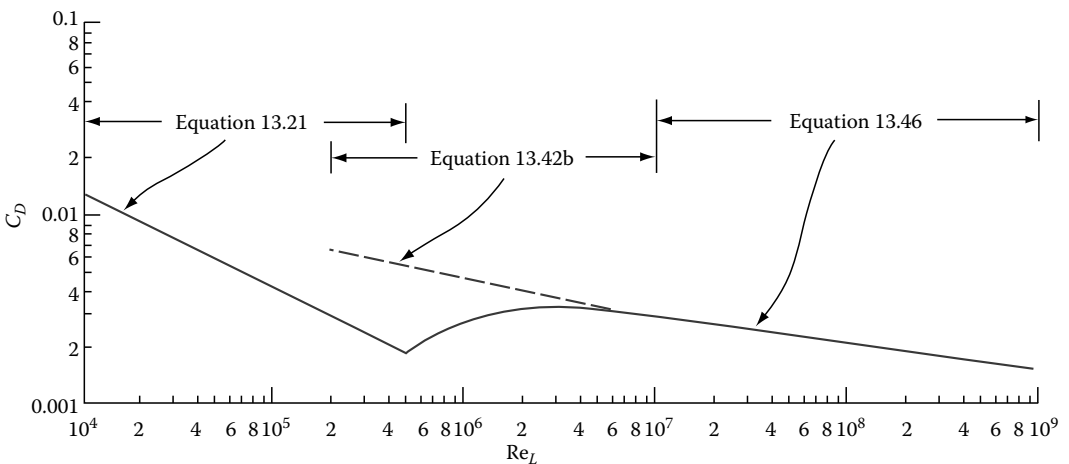


FIGURE 13.12 Drag coefficient versus Reynolds number at end of surface for flow over a flat plate.

$$C_D = \frac{0.074}{(\text{Re}_L)^{1/5}} \quad (\text{turbulent}) \quad 5 \times 10^5 \leq x \leq 1 \times 10^7 \quad (13.42b)$$

$$C_D = \frac{0.455}{(\log \text{Re}_L)^{2.58}} - \frac{1}{\text{Re}_L} \quad (\text{turbulent}) \quad 1 \times 10^7 \leq x \leq 1 \times 10^9 \quad (13.46)$$

The drag coefficient is graphed as a function of the Reynolds number that exists at the end of the plate. Data taken on flow over a flat plate agree well with the graph.

From Figure 13.12, it can be seen that skin friction drag is lowest at a Reynolds number of 5×10^5 (where the flow is laminar) or at very high Reynolds numbers. One way of effectively decreasing drag, then, is to keep the boundary layer laminar if possible. Ensuring that the plate surface is very smooth will reduce disturbances that might cause turbulence. If the transition Reynolds number can be raised to 10^6 , for example, x_{cr} is effectively doubled from that corresponding to $\text{Re}_{\text{cr}} = 5 \times 10^5$; the skin friction drag is cut almost in half.

Example 13.2

A truck trailer is pulled by a cab at 60 mi/h. The boxlike trailer is 40 ft long, 12 ft high, and 7.5 ft wide. Using the results of this chapter, estimate the skin friction drag on the trailer top and sides.

SOLUTION

From Table A.6, for air, we find

$$\rho = 0.0023 \text{ slug/ft}^3 \quad \text{and} \quad \mu = 0.3758 \times 10^{-6} \text{ lbf} \cdot \text{s/ft}^2$$

The free-stream velocity is 60 mi/h, or 88 ft/s. The trailer length is 40 ft. The Reynolds number at the end of the trailer is

$$\text{Re}_L = \frac{\rho U L}{\mu} = \frac{0.0023(88)(40)}{0.3748 \times 10^{-6}} = 2.15 \times 10^7$$

From Figure 13.12, the skin friction drag coefficient is

$$C_D = 0.0025$$

The drag force is found with

$$D_f = C_D \frac{\rho U^2}{2} b L$$

For the trailer top, $b = 7.5$ ft and $L = 40$ ft; therefore,

$$D_f = 0.0025 \frac{0.0023(88)}{2} (7.5)(40)$$

$$D_f = 6.67 \text{ lbf (top)}$$

For either side, $b = 12$ ft. Thus,

$$D_f = 0.0025 \frac{0.0023(88)}{2} (12)(40)$$

$$D_f = 10.7 \text{ lbf (one side)}$$

13.8 SUMMARY

In this chapter, we discussed laminar and turbulent boundary-layer flows. Boundary layer and momentum integral equations were both derived. Moreover, we examined laminar and turbulent boundary-layer flows over a flat plate and presented solutions. The result of the combined problems led to a graph of skin friction drag as a function of Reynolds number at plate end.

PROBLEMS

Equations of Motion for Boundary-Layer Flow

- 13.1** How is Equation 13.5 affected if it is written for unsteady, two-dimensional, incompressible flow of a Newtonian fluid?
- 13.2** Derive Equation 13.19 in detail.
- 13.3** Derive Equation 13.21.
- 13.4** A model airplane made of balsa wood is gliding through the air with a velocity of 1.5 m/s. The front wing is flat; it is 30 cm wide (tip to tip) and 10 cm long. Plot the variation of the boundary-layer thickness with length for the wing. Repeat for the displacement thickness. Calculate the skin friction drag on the wing.
- 13.5** Consider the problem of laminar flow of a thin film down a vertical wall as illustrated in Figure P13.5.* Using an order of magnitude analysis:
- a.** Show that the Navier–Stokes equations reduce to

$$V_x \frac{\partial V_x}{\partial x} + V_y \frac{\partial V_x}{\partial y} = -\frac{1}{\rho} \frac{dp}{dx} + g + \nu \frac{\partial^2 V_x}{\partial y^2}$$

- b.** Write boundary conditions for the problem.
- c.** Neglecting the pressure gradient, and with the aid of the continuity equation, shows that the boundary-layer equations can be used to obtain

$$\frac{d}{dx} \int_0^\delta V_x^2 dy - g\delta(x) = -\nu \frac{\partial V_x}{\partial y} \bigg|_{y=0}$$

List all assumptions inherent in this equation.

* Nabil A. Hassan, Laminar flow along a vertical wall, *Journal of Applied Mechanics*, September 1967, p. 135.

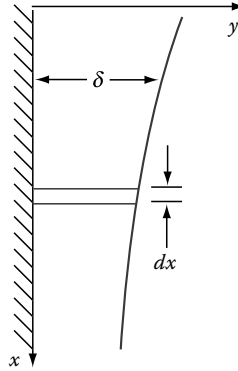


FIGURE P13.5

Momentum Integral Method for Laminar Flow

13.6 Derive Equation 13.34 in detail.

13.7 In the development that led to Equation 13.34, a linear velocity profile was used with the momentum integral boundary-layer equations. Repeat the same analysis using

$$\frac{V_x}{U} = \frac{2y}{\delta} - \frac{y^2}{\delta^2}$$

and verify the corresponding entries in Table 13.3.

13.8 Repeat Problem 13.7, using

$$\frac{V_x}{U} = \frac{3y}{2\delta} - \frac{y^3}{2\delta^3}$$

13.9 Repeat Problem 13.7, using

$$\frac{V_x}{U} = \sin \frac{\pi y}{2\delta}$$

Then plot this function on the same axes as the Blasius profile for comparison.

Momentum Integral Method for Turbulent Flow

13.10 In the development that led to Equation 13.42a, a seventh-root profile was used. Beginning with the eighth-root profile of Table 13.4 and the wall shear stress given for it, verify the corresponding entries for the skin friction drag coefficient.

13.11 Repeat Problem 13.10 for the tenth-root profile of Table 13.4.

13.12 Derive the boundary-layer thickness equation that corresponds to the eighth-root profile of Table 13.4.

13.13 Derive the boundary-layer thickness equation that corresponds to the tenth-root profile of Table 13.4.

Total Drag on a Flat Plate

13.14 A barge travels on a river with a velocity of 2 m/s, as illustrated in Figure P13.14. Estimate the skin friction drag on the bottom surface (assuming that it is flat). The barge width is 4 m.

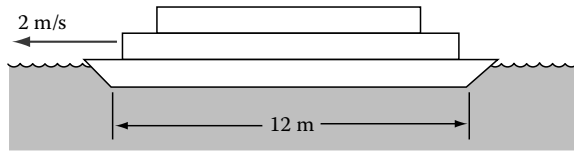


FIGURE P13.14

- 13.15** Determine the ratio of the boundary-layer thickness just before transition to just after transition.
- 13.16** A smooth flat plate has air flowing over it at a rate of 20 ft/s. Estimate the airspeed at a vertical distance of 1 cm from the plate at the following locations: (a) 10 ft from the leading edge and (b) 25 ft from the leading edge.
- 13.17** Flow straighteners are placed in the section upstream of the observation area in a wind tunnel. The flow straighteners consist of a series of vertical and horizontal plates as shown in Figure P13.17. The plates form 25 square ducts that are 10 in. $\times$ 10 in. $\times$ 2 ft long. The inlet flow velocity is 20 ft/s. Calculate the drag exerted on the entire bundle. Neglect edge effects.

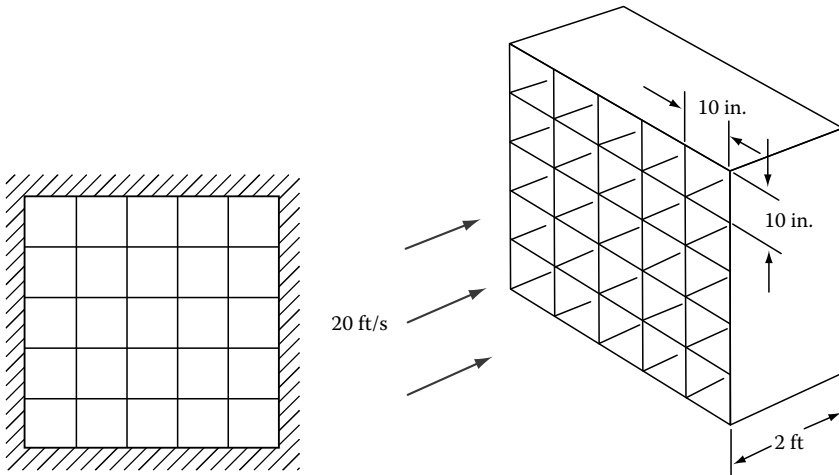


FIGURE P13.17

- 13.18** Determine the boundary-layer thickness and the displacement thickness at the end of the straighteners of Problem 13.17.
- 13.19** The keel of a boat is about 42 in. deep and tapers linearly from a length of 36 in. at the hull to a length of 24 in. at the tip (see Figure P13.19.) When the speed of the boat in water is 1 knot, determine the skin friction drag exerted on the keel. {Hint: Assume that the keel is a rectangular plate 42 in. $\times$ 30 in. [$= (36 + 24)/2$.]} Also calculate the power required to overcome this drag.

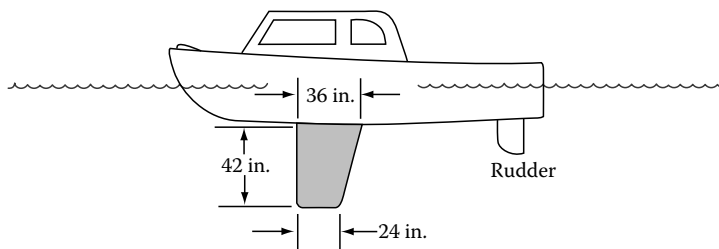


FIGURE P13.19

- 13.20** The rudder of the boat in Figure P13.19 is 25 cm long and is 60 cm deep from hull to tip. At a velocity in water of 7 knots, determine the skin friction drag exerted on the rudder. What is the power required to overcome this drag?
- 13.21** Air flows at 5 m/s past a flat plate that is aligned with the flow direction. Determine the boundary-layer thickness of the flow 1 m past the leading edge of the plate, using each of the relations given in Table 13.3 if applicable.
- 13.22** Figure P13.22 shows a windmill located on a plateau. The structure is placed such that the plane of the blades is 90 ft past the leading edge of the plateau. For an expected wind speed of 30 mi/h, determine the height h that the blade axis of rotation should be placed so that the tip of each blade stays at least 10 ft above the edge of the boundary layer formed along the plateau surface. Assume that the plateau behaves as a flat plate.

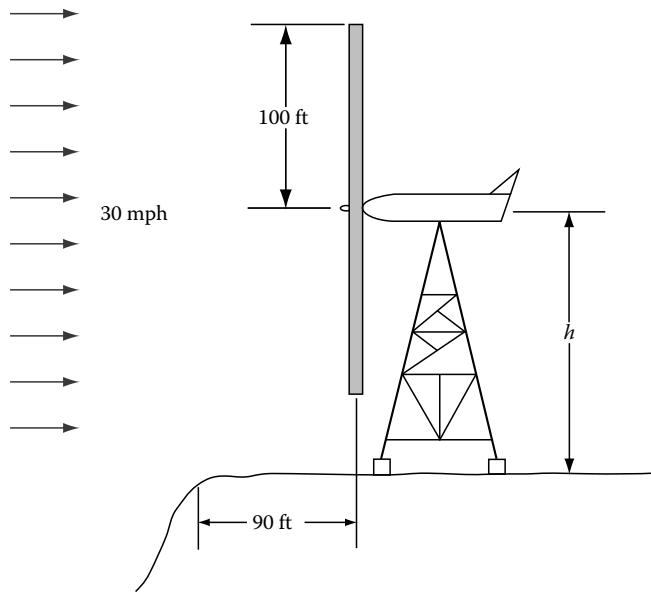


FIGURE P13.22

- 13.23** Air flows at 50 m/s past a flat plate aligned with the flow. Determine the boundary layer thickness 10 m past the leading edge of the plate, using all applicable equations of Table 13.4.

This page intentionally left blank

Appendices

APPENDIX A: CONVERSION FACTORS AND PROPERTIES OF SUBSTANCES

TABLE A.1
Prefixes for SI Units

Factor by which Unit is Multiplied	Prefix	Symbol
10^{12}	tera	T
10^9	giga	G
10^6	mega	M
10^3	kilo	k
10^2	hecto	h
10	deka	da
10^{-1}	deci	d
10^{-2}	centi	c
10^{-3}	milli	m
10^{-6}	micro	μ
10^{-9}	nano	n
10^{-12}	pico	p
10^{-15}	femto	f
10^{-18}	atto	a

Source: Mechtly, E.A., NASA SP-7012, 1969.

TABLE A.2
Conversion Factors Listed by Physical Quantity

To Convert from	To	Multiply by
<i>Acceleration</i>		
foot/second ²	meter/second ²	−01 3.048*
inch/second ²	meter/second ²	−02 2.54*
<i>Area</i>		
foot ²	meter ²	−02 9.290 304*
Inch ²	meter ²	−04 6.4516*
mile ² (U.S. statute)	meter ²	+06 2.589 988 110 336*
yard ²	meter ²	−01 8.361 273 6*

Notes: * indicates an exact conversion, numbers not followed by asterisk (*) are only approximations of definitions or the result of physical measurements. The first two digits of each numerical entry represent a power of 10. Thus, −01 3.048 = $3.048 \times 10^{-1} = 0.3048$.

(continued)

TABLE A.2 (continued)
Conversion Factors Listed by Physical Quantity

To Convert from	To	Multiply by
<i>Density</i>		
gram/centimeter ³	kilogram/meter ³	+03 1.00*
lbm/inch ³	kilogram/meter ³	+04 2.767 990 5
lbm/foot ³	kilogram/meter ³	+01 1.601 846 3
slug/inch ³	kilogram/meter ³	+05 8.912 929 4
slug/foot ³	kilogram/meter ³	+02 5.153 79
<i>Energy</i>		
British thermal unit (thermochemical)	joule	+03 1.054 350 264 488
calorie (thermochemical)	joule	+00 4.184*
foot lbf	joule	+00 1.355 817 9
kilocalorie (thermochemical)	joule	+03 4.184*
kilowatt hour	joule	+06 3.60*
watt hour	joule	+03 3.60*
<i>Energy/Area Time</i>		
Btu (thermochemical)/foot ² second	watt/meter ²	+04 1.134 893 1
Btu (thermochemical)/foot ² minute	watt/meter ²	+02 1.891 488 5
Btu (thermochemical)/foot ² hour	watt/meter ²	+00 3.152 480 8
Btu (thermochemical)/inch ² second	watt/meter ²	+06 1.634 246 2
calorie (thermochemical)/centimeter ² minute	watt/meter ²	+02 6.973 333 3
watt/centimeter ²	watt/meter ²	+04 1.00*
<i>Force</i>		
lbf (pound force, avoirdupois)	newton	+00 4.448 221 615 260 5*
<i>Length</i>		
foot	meter	−01 3.048*
inch	meter	−02 2.54*
mile (U.S. statute)	meter	+03 1.609 344*
mile (U.S. nautical)	meter	+03 1.852*
Yard	meter	−01 9.144*
<i>Mass</i>		
gram	kilogram	−03 1.00*
lbm (pound mass, avoirdupois)	kilogram	−01 4.535 923 7*
slug	kilogram	+01 1.459 390 29
<i>Power</i>		
Btu (thermochemical)/second	watt	+03 1.054 350 264 488
Btu (thermochemical)/minute	watt	+01 1.757 250 4
calorie (thermochemical)/second	watt	+00 4.184*
calorie (thermochemical)/minute	watt	−02 6.973 333 3
foot lbf/hour	watt	−04 3.766 161 0
foot lbf/minute	watt	−02 2.259 696 6
foot lbf/second	watt	+00 1.355 817 9
horsepower (550 foot lbf/second)	watt	+02 7.456 998 7
kilocalorie (thermochemical)/minute	watt	+01 6.973 333 3

Notes: * indicates an exact conversion, numbers not followed by asterisk (*) are only approximations of definitions or the result of physical measurements. The first two digits of each numerical entry represent a power of 10. Thus, −01 3.048 = $3.048 \times 10^{-1} = 0.3048$.

TABLE A.2 (continued)
Conversion Factors Listed by Physical Quantity

To Convert from	To	Multiply by
<i>Pressure</i>		
atmosphere	newton/meter ²	+05 1.013 25*
bar	newton/meter ²	+05 1.00*
centimeter of mercury (0°C)	newton/meter ²	+03 1.333 22
centimeter of water (4°C)	newton/meter ²	+01 9.806 38
dyne/centimeter ²	newton/meter ²	−01 1.00*
foot of water (39.2°F)	newton/meter ²	+03 2.988 98
inch of mercury (32°F)	newton/meter ²	+03 3.386 389
inch of mercury (60°F)	newton/meter ²	+03 3.376 85
inch of water (39.2°F)	newton/meter ²	+02 2.490 82
inch of water (60°F)	newton/meter ²	+02 2.488 4
lbf/foot ²	newton/meter ²	+01 4.788 025 8
lbf/inch ² (psi)	newton/meter ²	+03 6.894 757 2
pascal	newton/meter ²	+00 1.00*
torr (0°C)	newton/meter ²	+02 1.333 22
<i>Speed</i>		
foot/hour	meter/second	−05 8.466 666 6
foot/minute	meter/second	−03 5.08*
foot/second	meter/second	−01 3.048*
inch/second	meter/second	−02 2.54*
kilometer/hour	meter/second	−01 2.777 777 8
knot (international)	meter/second	−01 5.144 444 444
mile/hour (U.S. statute)	meter/second	−01 4.470 4*
mile/minute (U.S. statute)	meter/second	+01 2.682 24*
mile/second (U.S. statute)	meter/second	+03 1.609 344*
<i>Temperature</i>		
Celsius	Kelvin	$t_K = t_C + 273.15$
Fahrenheit	Kelvin	$t_K = (5/9)(t_F + 459.67)$
Fahrenheit	Celsius	$t_C = (5/9)(t_F - 32)$
Rankine	Kelvin	$t_K = (5/9)t_R$
<i>Time</i>		
day (mean solar)	second (mean solar)	+04 8.64*
hour (mean solar)	second (mean solar)	+03 3.60*
minute (mean solar)	second (mean solar)	+01 6.00*
month (mean calendar)	second (mean solar)	+06 2.628*
second (ephemeris)	second	+00 1.000 000 000
year (calendar)	second (mean solar)	+07 3.153 6*

Notes: * indicates an exact conversion, numbers not followed by asterisk (*) are only approximations of definitions or the result of physical measurements. The first two digits of each numerical entry represent a power of 10. Thus, −01 3.048 = 3.048 × 10^{−1} = 0.304 8.

(continued)

TABLE A.2 (continued)
Conversion Factors Listed by Physical Quantity

To Convert from	To	Multiply by
<i>Viscosity</i>		
centistokes	meters ² /second	−06 1.00*
stoke	meters/second	−04 1.00*
foot ² /second	meters/second	−02 9.290 304*
centipoise	newton · second/meter ²	−03 1.00*
lbm/foot second	newton · second/meter ²	+00 1.488 163 9
lbf second/foot ²	newton · second/meter ²	+01 4.788 025 8
poise	newton · second/meter ²	−01 1.00*
slug/foot second	newton · second/meter ²	+01 4.788 025 8
<i>Volume</i>		
barrel (petroleum, 42 gallons)	meter ³	−03 1.233 481 9
cup	meter ³	−04 2.365 882 365*
foot ³	meter ³	−02 2.831 684 659 2*
gallon (U.S. liquid)	meter ³	−03 3.785 411 784*
inch ³	meter ³	−05 1.638 706 4*
liter	meter ³	−03 1.00*
ounce (U.S. fluid)	meter ³	−05 2.957 352 956 25*
gallon (U.S. dry)	meter ³	−03 4.404 883 770 86*
pint (U.S. dry)	meter ³	−04 5.506 104 713 575*
pint (U.S. liquid)	meter ³	−04 4.731 764 73*
quart (U.S. dry)	meter ³	−03 1.101 220 942 715*
quart (U.S. liquid)	meter ³	−04 9.463 529 5
tablespoon	meter ³	−05 1.478 676 478 125*
teaspoon	meter ³	−06 4.928 921 593 75*
yard ³	meter ³	−01 7.645 548 579 84*

Source: Mechtly, E.A., NASA SP-7012, 1969.

Notes: * indicates an exact conversion, numbers not followed by asterisk (*) are only approximations of definitions or the result of physical measurements. The first two digits of each numerical entry represent a power of 10. Thus, −01 3.048 = 3.048 × 10^{−1} = 0.304 8.

TABLE A.3
Properties of Dry Air at Atmospheric Pressure

K	°C	°R	°F	ρ (Slug/ft ³)	ρ (kg/m ³)	$\mu \times 10^6$	
						(lbf · s/ft ²)	(N · s/m ²)
250	−23.15	450	−10	0.00274	1.413	0.3335	15.99
260	−13.15	468	8	0.00264	1.359	0.3444	16.50
270	−3.15	486	26	0.00254	1.308	0.3550	17.00
280	6.85	504	44	0.00245	1.261	0.3652	17.50
290	16.85	522	62	0.00236	1.218	0.3752	17.98
295	21.85	531	71	0.00232	1.197	0.3801	18.22
300	26.85	540	80	0.00228	1.177	0.3854	18.46
310	36.85	558	98	0.00221	1.139	0.3950	18.93
320	46.85	576	116	0.00214	1.103	0.4047	19.39
330	56.85	594	134	0.00208	1.070	0.4143	19.85
340	66.85	612	152	0.00201	1.038	0.4236	20.30
350	76.85	630	170	0.00196	1.008	0.4329	20.75
360	86.85	648	188	0.00190	0.980 5	0.4419	21.18
370	96.85	666	206	0.00185	0.953 9	0.4509	21.60
380	106.85	684	224	0.00180	0.928 8	0.4593	22.02
390	116.85	702	242	0.00176	0.905 0	0.4683	22.44
400	126.85	720	260	0.00171	0.882 2	0.4770	22.86
410	136.85	738	278	0.00167	0.860 8	0.4854	23.27
420	146.85	756	296	0.00163	0.840	0.4938	23.66

Source: Reprinted From Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Note on reading viscosity: For air at 250 K, $\mu \times 10^6 = 15.99 \text{ N} \cdot \text{s/m}^2$, $\mu = 15.99 \times 10^{-6} \text{ N} \cdot \text{s/m}^2$.

TABLE A.4
Specific Gravity and Viscosity of Water at Atmospheric Pressure

Temperature		Specific Gravity	Absolute or Dynamic Viscosity, μ		Kinematic Viscosity, $\nu \times 10^6$	
°C	°F		(N · s/m ²) $\times 10^3$	(lbf · s/ft ²) $\times 10^5$	(m ² /s)	(ft ² /s)
0	32.0	0.9999	1.787	3.730	1.787	19.22
2	35.6	1.0000	1.671	3.490	1.671	17.98
4	39.2	1.0000	1.567	3.273	1.567	16.86
6	42.8	1.0000	1.472	3.074	1.472	15.84
8	46.4	0.9999	1.386	2.895	1.386	14.91
10	50.0	0.9997	1.307	2.730	1.307	14.06
12	53.6	0.9995	1.235	2.579	1.236	13.30
14	57.2	0.9998	1.169	2.441	1.170	12.59
16	60.8	0.9990	1.109	2.316	1.110	11.94
18	64.4	0.9986	1.053	2.199	1.054	11.34

Notes on reading the table: Density, $\rho = (\text{sp. gr.} \times 1.94) \text{ slug/ft}^3 = (\text{sp. gr.} \times 1\,000) \text{ kg/m}^3 = (\text{sp. gr.} \times 62.4) \text{ lbfm/ft}^3$ and kinematic viscosity at 0°C, $\nu \times 10^6 = 1.787 \text{ m}^2/\text{s}$, $\nu = 1.787 \times 10^{-6} \text{ m}^2/\text{s}$.

(continued)

TABLE A.4 (continued)
Specific Gravity and Viscosity of Water at Atmospheric Pressure

Temperature		Specific Gravity	Absolute or Dynamic Viscosity, μ		Kinematic Viscosity, $\nu \times 10^6$	
°C	°F		$(\text{N} \cdot \text{s}/\text{m}^2) \times 10^3$	$(\text{lbf} \cdot \text{s}/\text{ft}^2) \times 10^5$	(m^2/s)	(ft^2/s)
20	68.0	0.9982	1.002	2.093	1.004	10.80
22	71.6	0.9978	0.9548	1.994	0.9569	10.30
24	75.2	0.9973	0.9111	1.903	0.9135	9.829
26	78.8	0.9968	0.8705	1.818	0.8732	9.396
28	82.4	0.9963	0.8327	1.739	0.8358	8.993
30	86.0	0.9957	0.7975	1.665	0.8009	8.618
32	89.6	0.9951	0.7647	1.597	0.7685	8.269
34	93.3	0.9944	0.7340	1.533	0.7381	7.942
36	96.8	0.9937	0.7052	1.473	0.7097	7.636
38	100	0.9930	0.6783	1.417	0.6831	7.350
40	104	0.9922	0.6529	1.364	0.6580	7.080
42	108	0.9915	0.6291	1.314	0.6345	6.827
44	111	0.9907	0.6067	1.267	0.6124	6.589
46	115	0.9898	0.5856	1.223	0.5916	6.366
48	118	0.9890	0.5656	1.181	0.5719	6.154
50	122	0.9881	0.5468	1.142	0.5534	5.955
52	126	0.9871	0.5290	1.105	0.5359	5.766
54	129	0.9862	0.5121	1.069	0.5193	5.588
56	133	0.9852	0.4961	1.036	0.5036	5.419
58	136	0.9842	0.4809	1.005	0.4886	5.257
60	140	0.9832	0.4665	0.9744	0.4745	5.106
62	144	0.9822	0.4528	0.9458	0.4610	4.960
64	147	0.9811	0.4398	0.9184	0.4483	4.824
66	151	0.9800	0.4273	0.8923	0.4360	4.691
68	154	0.9789	0.4155	0.8678	0.4245	4.5677
70	158	0.9778	0.4042	0.8442	0.4134	4.448
72	162	0.9766	0.3934	0.8218	0.4028	4.334
74	165	0.9755	0.3831	0.8000	0.3927	4.225
76	169	0.9743	0.3732	0.7795	0.3830	4.121
78	172	0.9731	0.3638	0.7599	0.3738	4.022
80	176	0.9718	0.3537	0.7388	0.3640	3.917
82	180	0.9706	0.3460	0.7226	0.3565	3.836
84	183	0.9693	0.3377	0.7052	0.3484	3.749
86	187	0.9680	0.3297	0.6884	0.3406	3.665
88	190	0.9667	0.3221	0.6726	0.3332	3.588
90	194	0.9653	0.3147	0.6574	0.3260	3.508
92	198	0.9640	0.3076	0.6424	0.3191	3.434
94	201	0.9626	0.3008	0.6281	0.3125	3.363
96	205	0.9612	0.2942	0.6145	0.3061	3.294
98	208	0.9584	0.2879	0.6011	0.3000	3.228
100	212	0.9584	0.2818	0.5887	0.2940	3.163

Source: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Notes on reading the table: Density, ρ = (sp. gr. $\times$ 1.94) slug/ft³ = (sp. gr. $\times$ 1 000) kg/m³ = (sp. gr. $\times$ 62.4) lbfm/ft³ and kinematic viscosity at 0°C, $\nu \times 10^6 = 1.787 \text{ m}^2/\text{s}$, $\nu = 1.787 \times 10^{-6} \text{ m}^2/\text{s}$.

TABLE A.5
Properties of Common Liquids at 1.0 atm Pressure, 77°F (25°C)

Name	Specific Gravity	Viscosity		Sound Velocity (m/s)	Surface Tension [(N/m) × 10 ³]
		(lbf · s/ft ²) × 10 ⁵	(N · s/m ²) × 10 ³		
Acetone	0.787	0.659	0.316	1 174	23.1
Alcohol, ethyl	0.787	2.29	1.095	1 144	22.33
Alcohol, methyl	0.789	1.17	0.56	1 103	22.2
Alcohol, propyl	0.802	4.01	1.92	1 205	23.5
Benzene	0.876	1.26	0.601	1 298	28.18
Carbon disulfide	1.265	0.752	0.36	1 149	32.33
Carbon tetrachloride	1.59	1.90	0.91	924	26.3
Castor oil	0.960	1356	650	1 474	—
Chloroform	1.47	1.11	0.53	995	27.14
Decane	0.728	1.79	0.859	—	23.43
Dodecane	—	2.87	1.374	—	—
Ether	0.715	0.466	0.223	985	16.42
Ethylene glycol	1.100	33.8	16.2	1 644	48.2
Fluorine refrigerant R-11	1.480	0.876	0.42	—	18.3
Fluorine refrigerant R-12	1.315	—	—	—	—
Fluorine refrigerant R-22	1.197	—	—	—	8.35
Glycerin	1.263	1 983	950	1 909	63.0
Heptane	0.681	0.786	0.376	1 138	19.9
Hexane	0.657	0.622	0.297	1 203	18.0
Kerosene	0.823	3.42	1.64	1 320	—
Linseed oil	0.93	69.0	33.1	—	—
Mercury	13.6	3.20	1.53	1 450	484
Octane	0.701	1.07	0.51	1 171	21.14
Propane	0.495	0.23	0.11	—	6.6
Propylene	0.516	0.19	0.09	—	7.0
Propylene glycol	0.968	88	42	—	36.3
Seawater	1.03	—	—	1 535	—
Turpentine	0.87	2.87	1.375	1 240	—
Water	1.00	1.9	0.89	1 498	71.97

Source: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Notes: Density, ρ = (sp. gr. × 1.94) slug/ft³ = (sp. gr. × 1 000) kg/m³ = (sp. gr. × 62.4) lbfm/ft³; viscosity of acetone, $\mu \times 10^3 = 0.316 \text{ N} \cdot \text{s/m}^2$, $\mu = 0.316 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$.

TABLE A.6
Physical Properties of Gases at Room Temperature and Pressure

Gas	Gas Constant, R		Density, ρ		Dynamic Viscosity, $\mu \times 10^6$		Specific Heat, C_p		$C_p/C_v = \gamma$
	(ft · lbf/slug · °R)	[J/(kg · K)]	(slug/ft ³)	(kg/m ³)	(lbf · s/ft ²)	(N · s/m ²)	(Btu/slug · °R)	[J/(kg · K)]	
Air	1,710	286.8	0.0023	1.19	0.3758	18.0	7.72	1 005	1.40
Argon	1,250	208	0.00318	1.61	0.4162	20.0	4.02	523	1.67
Carbon dioxide	1,130	189	0.00354	1.82	0.2919	14.0	6.60	876	1.30
Helium	12,400	2 077	0.000317	0.164	0.4161	20.0	39.9	5 188	1.66
Hydrogen	24,700	4 126	0.000160	0.082 6	0.1879	9.0	110	14 310	1.405
Oxygen	1,550	260	0.00254	1.31	0.4161	20.0	7.08	920	1.40

Notes: $R = R/\text{MW}$, where $\bar{R} = 1545 \text{ ft} \cdot \text{lbf/lb mol} \cdot ^\circ\text{R} = 49,700 \text{ ft} \cdot \text{lbf/slug mol} \cdot ^\circ\text{R} = 8\,312 \text{ N} \cdot \text{m}/(\text{mol} \cdot \text{K})$ and $\text{MW} = \text{molecular weight (engineering units)} = \text{molecular mass (SI units)}$; $1 \text{ Btu} = 778 \text{ ft} \cdot \text{lbf}$.

TABLE A.7
Specific Gravity of Various Solids at Ordinary Atmospheric Temperature

Substance	Specific Gravity	Substance	Specific Gravity
Amber	1.06–1.11	Porcelain	2.3–2.5
Asbestos slate	1.8	Quartz	2.65
Asphalt	1.1–1.5	Rock salt	2.18
Beeswax	0.96–0.97	Rubber (hard)	1.19
Bone	1.7–2.0	Rubber (soft)	
Brick	1.4–2.2	Commercial	1.1
Butter	0.86–0.87	Pure gum	0.91–0.93
Camphor	0.99	Slate	2.6–3.3
Cardboard	0.69	Sugar	1.59
Cement (set)	2.7–3.0	Talc	2.7–2.8
Chalk	1.9–2.8	Topaz	3.5–3.6
Clay	1.8–2.6	Wax (sealing)	1.8
Cocoa butter	0.89–0.91	Wood (seasoned)	
Cork	0.22–0.26	Ash	0.65–0.85
Diamond	3.01–3.52	Balsa	0.11–0.14
Emery	4.0	Bamboo	0.31–0.40
Gelatin	1.27	Basswood	0.32–0.59
Glass	2.4–2.8	Birch	0.51–0.77
Glue	1.27	Cedar	0.49–0.57
Granite	2.64–2.76	Cherry	0.70–0.90
Graphite	2.30–2.72	Dogwood	0.76
Gypsum	2.31–2.33	Elm	0.54–0.60
Ice	0.917	Hickory	0.60–0.93
Ivory	1.83–1.92	Maple	0.62–0.75
Linoleum	1.18	Oak	0.60–0.90
Marble	2.6–2.84	Walnut	0.64–0.70
Paraffin	0.87–0.91		

Sources: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Note: Density, $\rho = (\text{sp. gr.} \times 1.94) \text{ slug/ft}^3 = (\text{sp. gr.} \times 1\,000) \text{ kg/m}^3 = (\text{sp. gr.} \times 62.4) \text{ lbm/ft}^3$.

TABLE A.8
Specify Gravity of Common Metals and Alloys

Common Name	Specific Gravity
Aluminum	2.70
Aluminum alloy 2017, annealed (ASTM B221)	2.8
Aluminum bronze	7.8
Beryllium	1.85
Beryllium copper	8.25
Cast gray iron (ASTM A48–48, class 25)	7.2
Chromium	7.2
Copper	8.96
Gold	19.32
Ingot iron	7.86
Iridium	22.42
Iron	7.87
Lead	11.35
Magnesium	1.74
Magnesium alloy (AZ31 B)	1.77
Mercury	13.546
Nickel	8.90
Plain carbon steel (AISI-SAE 1020)	7.86
Platinum	21.45
Potassium	0.86
Silicon	2.33
Silver	10.50
Sodium	0.97
Solder 50–50	8.89
Stainless steel (type 304)	8.02
Tin	7.31
Titanium	4.54
Tungsten	19.3
Uranium	18.8
Vanadium	6.1
Yellow brass (high brass)	8.47
Zinc	7

Source: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Note: Density, $\rho = (\text{sp. gr.} \times 1.94) \text{ slug/ft}^3 = (\text{sp. gr.} \times 1\,000) \text{ kg/m}^3 = (\text{sp. gr.} \times 62.4) \text{ lbm/ft}^3$.

TABLE A.9
Surface Tension of Liquids at Atmospheric Pressure and Room Temperature









Name	In Contact with	Surface Tension [(N/m) × 10 ³]
Acetone	Air or vapor	23.1
Benzene	Air	28.2
Butyl alcohol	Air or vapor	24.6
Carbon tetrachloride	Vapor	26.3
Chloroform	Air	27.1
Ethyl alcohol	Vapor	22.4
Ethyl ether	Vapor	16.5
Glycerol	Air	63.0
<i>n</i> -Hexane	Air	18.4
Isobutyl alcohol	Vapor	23.0
Isopropyl alcohol	Air or vapor	21.7
Mercury	Air	484
Methyl alcohol	Air	22.2
Octane	Vapor	21.8
Propyl alcohol	Vapor	23.8
Water	Air	72

Source: Reprinted from Bolz, R.E. and Tuve, G.L. (eds.), *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed., CRC Press, Cleveland, OH, 1973. With permission.

Note: Surface tension of acetone, $\sigma \times 10^3 = 23.1$ N/m, $\sigma = 23.1 \times 10^3$ N/m.

APPENDIX B: GEOMETRIC ELEMENTS OF PLANE AREAS

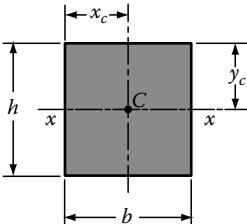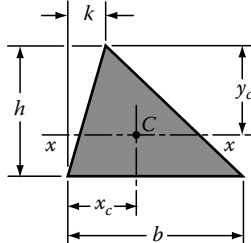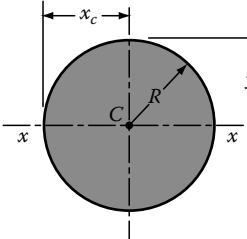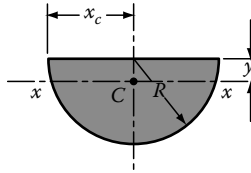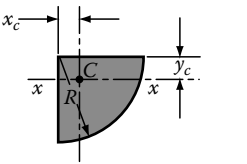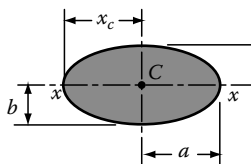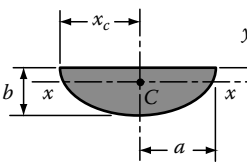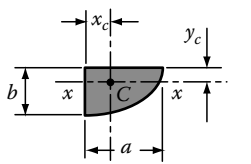TABLE B.1
Areas, Centroidal Distances, and Area Moments of Inertia about Centroidal Axes
for Various Plane Areas

	$A = bh$ $x_c = b/2$ $y_c = h/2$ $I_{xxc} = bh^3/12$ $I_{xyx} = 0$		$A = bh/2$ $x_c = (b + k)/3$ $y_c = 2h/3$ $I_{xxc} = bh^3/36$ $I_{xyx} = bh^2 (2k = b)/72$
	$A = \pi R^2$ $x_c = R$ $y_c = R$ $I_{xxc} = \pi R^4/4$ $I_{xyx} = 0$		$A = \pi R^2/2$ $x_c = R$ $y_c = 4R/3\pi$ $I_{xxc} = R^4(9\pi^2 - 64)/72\pi$ $I_{xyx} = 0$
	$A = \pi R^2/4$ $x_c = 4R/3\pi$ $y_c = 4R/3\pi$ $I_{xxc} = R^4(9\pi^2 - 64)/144\pi$ $I_{xyx} = R^4(31 - 9\pi)/72\pi$		$A = \pi ab$ $x_c = a$ $y_c = b$ $I_{xxc} = \pi ab^3/4$ $I_{xyx} = 0$
	$A = \pi ab/2$ $x_c = a$ $y_c = 4b/3\pi$ $I_{xxc} = ab^3(9\pi^2 - 64)/72\pi$ $I_{xyx} = 0$		$A = \pi ab/4$ $x_c = 4a/3\pi$ $y_c = 4b/3\pi$ $I_{xxc} = ab^3(9\pi^2 - 64)/144\pi$ $I_{xyx} = a^2b^2(32 - 9\pi)/72\pi$

APPENDIX C: PIPE AND TUBE SPECIFICATIONS

TABLE C.1
Dimensions of Wrought Steel and Wrought Iron Pipe

Pipe Size	Outside Diameter		Schedule	Internal Diameter		Flow Area	
	in.	cm		ft	cm	ft ²	cm ²
$\frac{1}{8}$	0.405	1.029	40 (STD)	0.02242	0.683	0.0003947	0.366 4
			80 (XS)	0.01792	0.547	0.0002522	0.235 0
$\frac{1}{4}$	0.540	1.372	40 (STD)	0.03033	0.924	0.0007227	0.670 6
			80 (XS)	0.02517	0.768	0.0004974	0.463 2
$\frac{3}{8}$	0.675	1.714	40 (STD)	0.04108	1.252	0.001326	1.233
			80 (XS)	0.03525	1.074	0.0009759	0.905 9
$\frac{1}{2}$	0.840	2.134	40 (STD)	0.05183	1.580	0.002110	1.961
			80 (XS)	0.04550	1.386	0.001626	1.508
			160	0.03867	1.178	0.001174	1.090
			(XXS)	0.02100	0.640	0.0003464	0.322
$\frac{3}{4}$	1.050	2.667	40 (STD)	0.06867	2.093	0.003703	3.441
			80 (XS)	0.06183	1.883	0.003003	2.785
			160	0.05100	1.555	0.002043	1.898
			(XXS)	0.03617	1.103	0.001027	0.956
1	1.315	3.340	40 (STD)	0.08742	2.664	0.006002	5.574
			80 (XS)	0.07975	2.430	0.004995	5.083
			160	0.06792	2.070	0.003623	3.365
			(XXS)	0.04992	1.522	0.001957	1.815
$1\frac{1}{4}$	1.660	4.216	40 (STD)	0.1150	3.504	0.01039	9.643
			80 (XS)	0.1065	3.246	0.008908	8.275
			160	0.09667	2.946	0.007339	6.816
			(XXS)	0.07467	2.276	0.004379	4.069
$1\frac{1}{2}$	1.900	4.826	40 (STD)	0.1342	4.090	0.01414	13.13
			80 (XS)	0.1250	3.810	0.01227	11.40
			160	0.1115	3.398	0.009764	9.068
			(XXS)	0.09167	2.794	0.006600	6.131
2	2.375	6.034	40 (STD)	0.1723	5.252	0.02330	21.66
			80 (XS)	0.1616	4.926	0.02051	19.06
			160	0.1406	4.286	0.01552	14.43
			(XXS)	0.1253	3.820	0.01232	11.46
$2\frac{1}{2}$	2.875	7.303	40 (STD)	0.2058	6.271	0.03325	30.89
			80 (XS)	0.1936	5.901	0.02943	27.35
			160	0.1771	5.397	0.02463	22.88
			(XXS)	0.1476	4.499	0.01711	15.90
3	3.500	8.890	40 (STD)	0.2557	7.792	0.05134	47.69
			80 (XS)	0.2417	7.366	0.04587	42.61
			160	0.2187	6.664	0.03755	34.88
			(XXS)	0.1917	5.842	0.02885	26.80

Notes: STD implies standard; XS is extra strong; and XXS is double extra strong.

(continued)

TABLE C.1 (continued)
Dimensions of Wrought Steel and Wrought Iron Pipe

Pipe Size	Outside Diameter		Schedule	Internal Diameter		Flow Area	
	in.	cm		ft	cm	ft ²	cm ²
3½	4.000	10.16	40 (STD)	0.2957	9.012	0.06866	63.79
			80 (XS)	0.2803	8.544	0.06172	57.33
4	4.500	11.43	40 (STD)	0.3355	10.23	0.08841	82.19
			80 (XS)	0.3198	9.718	0.07984	74.17
			120	0.3020	9.204	0.07163	66.54
			160	0.2865	8.732	0.06447	59.88
			(XXS)	0.2626	8.006	0.05419	50.34
5	5.563	14.13	40 (STD)	0.4206	12.82	0.1389	129.10
			80 (XS)	0.4011	12.22	0.1263	117.30
			120	0.3803	11.59	0.1136	105.50
			160	0.3594	10.95	0.1015	94.17
			(XXS)	0.3386	10.32	0.09004	83.65
6	6.625	16.83	40 (STD)	0.5054	15.41	0.2006	186.50
			80 (XS)	0.4801	14.64	0.1810	168.30
			120	0.4584	13.98	0.1650	153.50
			160	0.4322	13.18	0.1467	136.40
			(XXS)	0.4081	12.44	0.1308	121.50
8	8.625	21.91	20	0.6771	20.64	0.3601	334.60
			30	0.6726	20.50	0.3553	330.10
			40 (STD)	0.6651	20.27	0.3474	322.70
			60	0.6511	19.85	0.3329	309.50
			80 (XS)	0.6354	19.37	0.3171	294.70
			100	0.6198	18.89	0.3017	280.30
			120	0.5989	18.26	0.2817	261.90
			140	0.5834	17.79	0.2673	248.60
			(XXS)	0.5729	17.46	0.2578	239.40
			160	0.5678	17.31	0.2532	235.30
10	10.750	27.31	20	0.8542	26.04	0.5730	532.60
			30	0.8447	25.75	0.5604	520.80
			40 (STD)	0.8350	25.46	0.5476	509.10
			60 (XS)	0.8125	24.77	0.5185	481.90
			80	0.7968	24.29	0.4987	463.40
			100	0.7760	23.66	0.4730	439.70
			120	0.7552	23.02	0.4470	416.20
			140 (XXS)	0.7292	22.23	0.4176	388.10
			160	0.7083	21.59	0.3941	366.10

Notes: STD implies standard; XS is extra strong; and XXS is double extra strong.

TABLE C.1 (continued)
Dimensions of Wrought Steel and Wrought Iron Pipe

Pipe Size	Outside Diameter		Schedule	Internal Diameter		Flow Area	
	in.	cm		ft	cm	ft ²	cm ²
12	12.750	32.39	20	1.021	31.12	0.8185	760.60
			30	1.008	30.71	0.7972	740.71
			(STD)	1.000	30.48	0.7854	729.70
			40	0.9948	30.33	0.773	722.50
			(XS)	0.9792	29.85	0.7530	699.80
			60	0.9688	29.53	0.7372	684.90
			80	0.9478	28.89	0.7056	655.50
			100	0.9218	28.10	0.6674	620.20
			120 (XXS)	0.8958	27.31	0.6303	585.80
			140	0.8750	26.67	0.6013	558.60
14	14.000	35.56	160	0.8438	25.72	0.5592	519.60
			30 (STD)	1.104	33.65	0.9575	889.30
			160	0.9323	28.42	0.6827	634.40
16	16.000	40.64	30 (STD)	1.271	38.73	1.268	1 178.00
			160	1.068	32.54	0.8953	831.60
18	18.000	45.72	(STD)	1.438	43.81	1.623	1 507.00
			160	1.203	36.67	1.137	1 056.00
20	20.000	50.80	20 (STD)	1.604	48.89	2.021	1 877.00
			160	1.339	40.80	1.407	1 307.00
22	22.000	55.88	20 (STD)	1.771	53.97	2.463	2 288.00
			160	1.479	45.08	1.718	1 596.00
24	24.000	60.96	20 (STD)	1.938	59.05	2.948	2 739.00
			160	1.609	49.05	2.034	1 890.00
26	26.000	66.04	(STD)	2.104	64.13	3.477	3 230.00
28	28.000	71.12	(STD)	2.271	69.21	4.050	3 762.00
30	30.000	76.20	(STD)	2.438	74.29	4.666	4 335.00
32	32.000	81.28	(STD)	2.604	79.34	5.326	4 944.00
34	34.000	86.36	(STD)	2.771	84.45	6.030	5 601.00
36	36.000	91.44	(STD)	2.938	89.53	6.777	6 295.00
38	38.000	96.52	—	3.104	94.61	7.568	7 030.00
40	40.000	101.6	—	3.271	99.69	8.403	7 805.00

Source: Dimensions in English units obtained from ANSI B36.10-1979, *American National Standard Wrought Steel and Wrought Iron Pipe*, The American Society of Mechanical Engineers, New York.

Notes: STD implies standard; XS is extra strong; and XXS is double extra strong.

TABLE C.2
Dimensions of Seamless Copper Tubing

Standard Size	Outside Diameter		Type	Internal Diameter		Flow Area	
	in.	cm		ft	cm	ft ²	cm ²
$\frac{1}{4}$	0.375	0.953	K	0.02542	0.775	0.0005074	0.471 7
			L	0.02625	0.801	0.0005412	0.503 9
$\frac{3}{8}$	0.500	1.270	K	0.03350	1.022	0.0008814	0.820 3
			L	0.03583	1.092	0.001008	0.936 6
			M	0.03750	1.142	0.001104	1.024
$\frac{1}{2}$	0.625	1.588	K	0.04392	1.340	0.001515	1.410
			L	0.04542	1.384	0.001620	1.505
			M	0.04742	1.446	0.001766	1.642
$\frac{5}{8}$	0.750	1.905	K	0.05433	1.657	0.002319	2.156
			L	0.05550	1.691	0.002419	2.246
$\frac{3}{4}$	0.875	2.222	K	0.06208	1.892	0.003027	2.811
			L	0.06542	1.994	0.003361	3.123
			M	0.06758	2.060	0.003587	3.333
1	1.125	2.858	K	0.08292	2.528	0.005400	5.019
			L	0.08542	2.604	0.005730	5.326
			M	0.08792	2.680	0.006071	5.641
$1\frac{1}{4}$	1.375	3.493	K	0.1038	2.163	0.008454	7.858
			L	0.1054	3.213	0.008728	8.108
			M	0.1076	3.279	0.009090	8.444
$1\frac{1}{2}$	1.625	4.128	K	0.1234	3.762	0.01196	11.12
			L	0.1254	3.824	0.01235	11.48
			M	0.1273	3.880	0.01272	11.82
2	2.125	5.398	K	0.1633	4.976	0.02093	19.45
			L	0.1654	5.042	0.02149	19.97
			M	0.1674	5.102	0.02201	20.44
$2\frac{1}{2}$	2.625	6.668	K	0.2029	6.186	0.03234	30.05
			L	0.2054	6.262	0.03314	30.80
			M	0.2079	6.338	0.03395	40.17
3	3.125	7.938	K	0.2423	7.384	0.04609	42.82
			L	0.2454	7.480	0.04730	43.94
			M	0.2484	7.572	0.04847	45.03
$3\frac{1}{2}$	3.625	9.208	K	0.2821	8.598	0.06249	58.06
			L	0.2854	8.700	0.06398	59.45
			M	0.2883	8.786	0.06523	60.63
4	4.125	10.48	K	0.3214	9.800	0.08114	75.43
			L	0.3254	9.922	0.08317	77.32
			M	0.3279	9.998	0.08445	78.51

Notes: Type K is for underground service and general plumbing; type L is for interior plumbing; and type M is for use only with soldered fittings.

TABLE C.2 (continued)
Dimensions of Seamless Copper Tubing

Standard Size	Outside Diameter		Type	Internal Diameter		Flow Area	
	in.	cm		ft	cm	ft ²	cm ²
5	5.125	13.02	K	0.4004	12.21	0.1259	117.10
			L	0.4063	12.38	0.1296	120.50
			M	0.4089	12.47	0.1313	122.10
6	6.125	15.56	K	0.4784	14.58	0.1798	167.00
			L	0.4871	14.85	0.1863	173.20
			M	0.4901	14.39	0.1886	175.30
8	8.125	20.64	K	0.6319	19.26	0.3136	291.50
			L	0.6438	19.62	0.3255	302.50
			M	0.6488	19.78	0.3306	307.20
10	10.125	25.72	K	0.7874	24.00	0.4870	452.50
			L	0.8021	24.45	0.5053	469.50
			M	0.8084	24.64	0.5133	476.80
12	12.125	30.80	K	0.9429	28.74	0.6983	648.80
			L	0.9638	29.38	0.7295	677.90
			M	0.9681	29.51	0.7361	684.00

Source: Dimensions in English units obtained from ANSI=ASTM B88-78, *Standard Specifications for Seamless Copper Water Tube*, American Society for Testing Materials, West Conshohocken, PA.

Notes: Type K is for underground service and general plumbing; type L is for interior plumbing; and type M is for use only with soldered fittings.

APPENDIX D: COMPRESSIBLE FLOW TABLES

TABLE D.1
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
0.00	1.0000	1.0000	∞	0.10	0.9930	0.9980	5.8218
0.01	0.9999	1.0000	57.8738	0.11	0.9916	0.9976	5.2992
0.02	0.9997	0.9999	28.9421	0.12	0.9900	0.9971	4.8643
0.03	0.9994	0.9998	19.3005	0.13	0.9883	0.9966	4.4969
0.04	0.9989	0.9997	14.4815	0.14	0.9864	0.9961	4.1824
0.05	0.9983	0.9995	11.5914	0.15	0.9844	0.9955	3.9103
0.06	0.9975	0.9993	9.6659	0.16	0.9823	0.9949	3.6727
0.07	0.9966	0.9990	8.2915	0.17	0.9800	0.9943	3.4635
0.08	0.9955	0.9987	7.2616	0.18	0.9776	0.9936	3.2779
0.09	0.9944	0.9984	6.4613	0.19	0.9751	0.9928	3.1123

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

(continued)

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
0.20	0.9725	0.9921	2.9635	0.60	0.7840	0.9328	1.1882
0.21	0.9697	0.9913	2.8293	0.61	0.7778	0.9307	1.1767
0.22	0.9668	0.9904	2.7076	0.62	0.7716	0.9286	1.1657
0.23	0.9638	0.9895	2.5968	0.63	0.7654	0.9265	1.1552
0.24	0.9607	0.9886	2.4956	0.64	0.7591	0.9243	1.1452
0.25	0.9575	0.9877	2.4027	0.65	0.7528	0.9221	1.1356
0.26	0.9541	0.9867	2.3173	0.66	0.7465	0.9199	1.1265
0.27	0.9506	0.9856	2.2385	0.67	0.7401	0.9176	1.1179
0.28	0.9470	0.9846	2.1656	0.68	0.7338	0.9153	1.1097
0.29	0.9433	0.9835	2.0979	0.69	0.7274	0.9131	1.1018
0.30	0.9395	0.9823	2.0351	0.70	0.7209	0.9107	1.0944
0.31	0.9355	0.9811	1.9765	0.71	0.7145	0.9084	1.0873
0.32	0.9315	0.9799	1.9219	0.72	0.7080	0.9061	1.0806
0.33	0.9274	0.9787	1.8707	0.73	0.7016	0.9037	1.0742
0.34	0.9231	0.9774	1.8229	0.74	0.6951	0.9013	1.0681
0.35	0.9188	0.9761	1.7780	0.75	0.6886	0.8989	1.0624
0.36	0.9143	0.9747	1.7358	0.76	0.6821	0.8964	1.0570
0.37	0.9098	0.9733	1.6961	0.77	0.6756	0.8940	1.0519
0.38	0.9052	0.9719	1.6587	0.78	0.6691	0.8915	1.0471
0.39	0.9004	0.9705	1.6234	0.79	0.6625	0.8890	1.0425
0.40	0.8956	0.9690	1.5901	0.80	0.6560	0.8865	1.0382
0.41	0.8907	0.9675	1.5587	0.81	0.6495	0.8840	1.0342
0.42	0.8857	0.9659	1.5289	0.82	0.6430	0.8815	1.0305
0.43	0.8807	0.9643	1.5007	0.83	0.6365	0.8789	1.0270
0.44	0.8755	0.9627	1.4740	0.84	0.6300	0.8763	1.0237
0.45	0.8703	0.9611	1.4887	0.85	0.6235	0.8737	1.0207
0.46	0.8650	0.9594	1.4246	0.86	0.6170	0.8711	1.0179
0.47	0.8596	0.9577	1.4018	0.87	0.6106	0.8685	1.0153
0.48	0.8541	0.9560	1.3801	0.88	0.6041	0.8659	1.0129
0.49	0.8486	0.9542	1.3595	0.89	0.5977	0.8632	1.0108
0.50	0.8430	0.9524	1.3398	0.90	0.5913	0.8606	1.0089
0.51	0.8374	0.9506	1.3212	0.91	0.5849	0.8579	1.0071
0.52	0.8317	0.9487	1.3034	0.92	0.5785	0.8552	1.0056
0.53	0.8259	0.9468	1.2865	0.93	0.5721	0.8525	1.0043
0.54	0.8201	0.9449	1.2703	0.94	0.5658	0.8498	1.0031
0.55	0.8142	0.9430	1.2550	0.95	0.5595	0.8471	1.0022
0.56	0.8082	0.9410	1.2403	0.96	0.5532	0.8444	1.0014
0.57	0.8022	0.9390	1.2263	0.97	0.5469	0.8416	1.0008
0.58	0.7962	0.9370	1.2130	0.98	0.5407	0.8389	1.0003
0.59	0.7901	0.9349	1.2003	0.99	0.5345	0.8361	1.0001

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
1.00	0.5283	0.8333	1.000	1.40	0.3142	0.7184	1.115
1.01	0.5221	0.8306	1.000	1.41	0.3098	0.7155	1.120
1.02	0.5160	0.827	1.000	1.42	0.3055	0.7126	1.126
1.03	0.5099	0.8250	1.001	1.43	0.3012	0.7097	1.132
1.04	0.5039	0.8222	1.001	1.44	0.2969	0.7069	1.138
1.05	0.4979	0.8193	1.002	1.45	0.2927	0.7040	1.144
1.06	0.4919	0.8165	1.003	1.46	0.2886	0.7011	1.150
1.07	0.4860	0.8137	1.004	1.47	0.2845	0.6982	1.156
1.08	0.4800	0.8108	1.005	1.48	0.2804	0.6954	1.163
1.09	0.4742	0.8080	1.006	1.49	0.2764	0.6925	1.169
1.10	0.4684	0.8052	1.008	1.50	0.2724	0.6897	1.176
1.11	0.4626	0.8023	1.010	1.51	0.2685	0.6868	1.183
1.12	0.4568	0.7994	1.011	1.52	0.2646	0.6840	1.190
1.13	0.4511	0.7966	1.013	1.53	0.2608	0.6811	1.197
1.14	0.4455	0.7937	1.015	1.54	0.2570	0.6783	1.204
1.15	0.4398	0.7908	1.017	1.55	0.2533	0.6754	1.212
1.16	0.4343	0.7879	1.020	1.56	0.2496	0.6726	1.219
1.17	0.4287	0.7851	1.022	1.57	0.2459	0.6698	1.227
1.18	0.4232	0.7822	1.025	1.58	0.2423	0.6670	1.234
1.19	0.4178	0.7793	1.026	1.59	0.2388	0.6642	1.242
1.20	0.4124	0.7764	1.030	1.60	0.2353	0.6614	1.250
1.21	0.4070	0.7735	1.033	1.61	0.2318	0.6586	1.258
1.22	0.4017	0.7706	1.037	1.62	0.2284	0.6558	1.267
1.23	0.3964	0.7677	1.040	1.63	0.2250	0.6530	1.275
1.24	0.3912	0.7648	1.043	1.64	0.2217	0.6502	1.284
1.25	0.3861	0.7619	1.047	1.65	0.2184	0.6475	1.292
1.26	0.3809	0.7590	1.050	1.66	0.2151	0.6447	1.301
1.27	0.3759	0.7561	1.054	1.67	0.2119	0.6419	1.310
1.28	0.3708	0.7532	1.058	1.68	0.2088	0.6392	1.319
1.29	0.3658	0.7503	1.062	1.69	0.2057	0.6364	1.328
1.30	0.3609	0.7474	1.066	1.70	0.2026	0.6337	1.338
1.31	0.3560	0.7445	1.071	1.71	0.1996	0.6310	1.347
1.32	0.3512	0.7416	1.075	1.72	0.1966	0.6283	1.357
1.33	0.3464	0.7387	1.080	1.73	0.1936	0.6256	1.367
1.34	0.3417	0.7358	1.084	1.74	0.1907	0.6229	1.376
1.35	0.3370	0.7329	1.089	1.75	0.1878	0.6202	1.386
1.36	0.3323	0.7300	1.094	1.76	0.1850	0.6175	1.397
1.37	0.3277	0.7271	1.099	1.77	0.1822	0.6148	1.407
1.38	0.3232	0.7242	1.104	1.78	0.1794	0.6121	1.418
1.39	0.3187	0.7213	1.109	1.79	0.1767	0.6095	1.428

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

(continued)

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
1.80	0.1740	0.6068	1.439	2.20	0.9352^{-1}	0.5081	2.005
1.81	0.1714	0.6041	1.450	2.21	0.9207^{-1}	0.5059	2.023
1.82	0.1688	0.6015	1.461	2.22	0.9064^{-1}	0.5036	2.041
1.83	0.1662	0.5989	1.472	2.23	0.8923^{-1}	0.5014	2.059
1.84	0.1637	0.5963	1.484	2.24	0.8785^{-1}	0.4991	2.078
1.85	0.1612	0.5936	1.495	2.25	0.8648^{-1}	0.4969	2.096
1.86	0.1587	0.5910	1.507	2.26	0.8154^{-1}	0.4947	2.115
1.87	0.1563	0.5884	1.519	2.27	0.8382^{-1}	0.4925	2.134
1.88	0.1539	0.5859	1.531	2.28	0.8251^{-1}	0.4903	2.154
1.89	0.1516	0.5833	1.543	2.29	0.8123^{-1}	0.4881	2.173
1.90	0.1492	0.5807	1.555	2.30	0.7997^{-1}	0.4859	2.193
1.91	0.1470	0.5782	1.568	2.31	0.7873^{-1}	0.4837	2.213
1.92	0.1447	0.5756	1.580	2.32	0.7751^{-1}	0.4816	2.233
1.93	0.1425	0.5731	1.593	2.33	0.7631^{-1}	0.4794	2.254
1.94	0.1403	0.5705	1.606	2.34	0.7512^{-1}	0.4773	2.274
1.95	0.1381	0.5680	1.619	2.35	0.7396^{-1}	0.4752	2.295
1.96	0.1360	0.5655	1.633	2.36	0.7281^{-1}	0.4731	2.316
1.97	0.1339	0.5630	1.646	2.37	0.7168^{-1}	0.4709	2.338
1.98	0.1318	0.5605	1.660	2.38	0.7057^{-1}	0.4688	2.359
1.99	0.1298	0.5580	1.674	2.39	0.6948^{-1}	0.4668	2.381
2.00	0.1278	0.5556	1.688	2.40	0.6840^{-1}	0.4647	2.403
2.01	0.1258	0.5531	1.702	2.41	0.6734^{-1}	0.4626	2.425
2.02	0.1239	0.5506	1.716	2.42	0.6630^{-1}	0.4606	2.448
2.03	0.1220	0.5482	1.730	2.43	0.6527^{-1}	0.4585	2.471
2.04	0.1201	0.5458	1.745	2.44	0.6426^{-1}	0.4565	2.494
2.05	0.1182	0.5433	1.760	2.45	0.6327^{-1}	0.4544	2.517
2.06	0.1164	0.5409	1.775	2.46	0.6229^{-1}	0.4524	2.540
2.07	0.1146	0.5385	1.790	2.47	0.6133^{-1}	0.4504	2.564
2.08	0.1128	0.5361	1.806	2.48	0.6038^{-1}	0.4484	2.588
2.09	0.1111	0.5337	1.821	2.49	0.5945^{-1}	0.4464	2.612
2.10	0.1094	0.5313	1.837	2.50	0.5853^{-1}	0.4444	2.637
2.11	0.1077	0.5290	1.853	2.51	0.5762^{-1}	0.4425	2.661
2.12	0.1060	0.5266	1.869	2.52	0.5674^{-1}	0.4405	2.686
2.13	0.1043	0.5243	1.885	2.53	0.5586^{-1}	0.4386	2.712
2.14	0.1027	0.5219	1.902	2.54	0.5500^{-1}	0.4366	2.737
2.15	0.1011	0.5196	1.919	2.55	0.5415^{-1}	0.4347	2.763
2.16	0.9956^{-1}	0.5173	1.935	2.56	0.5332^{-1}	0.4328	2.789
2.17	0.9802^{-1}	0.5150	1.953	2.57	0.5250^{-1}	0.4309	2.815
2.18	0.9649^{-1}	0.5127	1.970	2.58	0.5169^{-1}	0.4289	2.842
2.19	0.9500^{-1}	0.5104	1.987	2.59	0.5090^{-1}	0.4271	2.869

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
2.60	0.5012^{-1}	0.4252	2.896	3.00	0.2722^{-1}	0.3571	4.235
2.61	0.4935^{-1}	0.4233	2.923	3.01	0.2682^{-1}	0.3556	4.275
2.62	0.4859^{-1}	0.4214	2.951	3.02	0.2642^{-1}	0.3541	4.316
2.63	0.4784^{-1}	0.4196	2.979	3.03	0.2603^{-1}	0.3526	4.357
2.64	0.4711^{-1}	0.4177	3.007	3.04	0.2564^{-1}	0.3511	4.399
2.65	0.4639^{-1}	0.4159	3.036	3.05	0.2526^{-1}	0.3496	4.441
2.66	0.4568^{-1}	0.4141	3.065	3.06	0.2489^{-1}	0.3481	4.483
2.67	0.4498^{-1}	0.4122	3.094	3.07	0.2452^{-1}	0.3466	4.526
2.68	0.4429^{-1}	0.4104	3.123	3.08	0.2416^{-1}	0.3452	4.570
2.69	0.4362^{-1}	0.4086	3.153	3.09	0.2380^{-1}	0.3437	4.613
2.70	0.4295^{-1}	0.4068	3.183	3.10	0.2345^{-1}	0.3422	4.657
2.71	0.4229^{-1}	0.4051	3.213	3.11	0.2310^{-1}	0.3408	4.702
2.72	0.4165^{-1}	0.4033	3.244	3.12	0.2276^{-1}	0.3393	4.747
2.73	0.4102^{-1}	0.4015	3.275	3.13	0.2243^{-1}	0.3379	4.792
2.74	0.4039^{-1}	0.3998	3.306	3.14	0.2210^{-1}	0.3365	4.838
2.75	0.3978^{-1}	0.3980	3.338	3.15	0.2177^{-1}	0.3351	4.884
2.76	0.3917^{-1}	0.3963	3.370	3.16	0.2146^{-1}	0.3337	4.930
2.77	0.3858^{-1}	0.3945	3.402	3.17	0.2114^{-1}	0.3323	4.977
2.78	0.3799^{-1}	0.3928	3.434	3.18	0.2083^{-1}	0.3309	5.025
2.79	0.3742^{-1}	0.3911	3.467	3.19	0.2053^{-1}	0.3295	5.073
2.80	0.3685^{-1}	0.3894	3.500	3.20	0.2023^{-1}	0.3281	5.121
2.81	0.3629^{-1}	0.3877	3.534	3.21	0.1993^{-1}	0.3267	5.170
2.82	0.3574^{-1}	0.3860	3.567	3.22	0.1964^{-1}	0.3253	5.219
2.83	0.3520^{-1}	0.3844	3.601	3.23	0.1936^{-1}	0.3240	5.268
2.84	0.3467^{-1}	0.3827	3.636	3.24	0.1908^{-1}	0.3226	5.319
2.85	0.3415^{-1}	0.3810	3.671	3.25	0.1880^{-1}	0.3213	5.369
2.86	0.3363^{-1}	0.3794	3.706	3.26	0.1853^{-1}	0.3199	5.420
2.87	0.3312^{-1}	0.3777	3.741	3.27	0.1826^{-1}	0.3186	5.472
2.88	0.3263^{-1}	0.3761	3.777	3.28	0.1799^{-1}	0.3173	5.523
2.89	0.3213^{-1}	0.3745	3.813	3.29	0.1773^{-1}	0.3160	5.576
2.90	0.3165^{-1}	0.3729	3.850	3.30	0.1748^{-1}	0.3147	5.629
2.91	0.3118^{-1}	0.3712	3.887	3.31	0.1722^{-1}	0.3134	5.682
2.92	0.3071^{-1}	0.3696	3.924	3.32	0.1698^{-1}	0.3121	5.736
2.93	0.3025^{-1}	0.3681	3.961	3.33	0.1673^{-1}	0.3108	5.790
2.94	0.2980^{-1}	0.3665	3.999	3.34	0.1649^{-1}	0.3095	5.845
2.95	0.2935^{-1}	0.3649	4.038	3.35	0.1625^{-1}	0.3082	5.900
2.96	0.2891^{-1}	0.3633	4.076	3.36	0.1602^{-1}	0.3069	5.956
2.97	0.2848^{-1}	0.3618	4.115	3.37	0.1579^{-1}	0.3057	6.012
2.98	0.2805^{-1}	0.3602	4.155	3.38	0.1557^{-1}	0.3044	6.069
2.99	0.2764^{-1}	0.3587	4.194	3.39	0.1534^{-1}	0.3032	6.126

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

(continued)

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
3.40	0.1512^{-1}	0.3019	6.184	3.80	0.8629^{-2}	0.2572	8.951
3.41	0.1491^{-1}	0.3007	6.242	3.81	0.8512^{-2}	0.2562	9.032
3.42	0.1470^{-1}	0.2995	6.301	3.82	0.8396^{-2}	0.2552	9.115
3.43	0.1449^{-1}	0.2982	6.360	3.83	0.8283^{-2}	0.2542	9.198
3.44	0.1428^{-1}	0.2970	6.420	3.84	0.8171^{-2}	0.2532	9.282
3.45	0.1408^{-1}	0.2958	6.480	3.85	0.8060^{-2}	0.2522	9.366
3.46	0.1388^{-1}	0.2946	6.541	3.86	0.7951^{-2}	0.2513	9.451
3.47	0.1368^{-1}	0.2934	6.602	3.87	0.7844^{-2}	0.2503	9.537
3.48	0.1349^{-1}	0.2922	6.664	3.88	0.7739^{-2}	0.2493	9.624
3.49	0.1330^{-1}	0.2910	6.727	3.89	0.7635^{-2}	0.2484	9.711
3.50	0.1311^{-1}	0.2899	6.790	3.90	0.7532^{-2}	0.2474	9.799
3.51	0.1293^{-1}	0.2887	6.853	3.91	0.7431^{-1}	0.2464	9.888
3.52	0.1274^{-1}	0.2875	6.917	3.92	0.7332^{-2}	0.2455	9.977
3.53	0.1256^{-1}	0.2864	6.982	3.93	0.7233^{-2}	0.2446	10.07
3.54	0.1239^{-1}	0.2852	7.047	3.94	0.7137^{-2}	0.2436	10.16
3.55	0.1221^{-1}	0.2841	7.113	3.95	0.7042^{-2}	0.2427	10.25
3.56	0.1204^{-1}	0.2829	7.179	3.96	0.6948^{-2}	0.2418	10.34
3.57	0.1188^{-1}	0.2818	7.246	3.97	0.6855^{-2}	0.2408	10.44
3.58	0.1171^{-1}	0.2806	7.313	3.98	0.6764^{-2}	0.2399	10.53
3.59	0.1155^{-1}	0.2795	7.382	3.99	0.6675^{-2}	0.2390	10.62
3.60	0.1138^{-1}	0.2784	7.450	4.00	0.6586^{-2}	0.2381	10.72
3.61	0.1123^{-1}	0.2773	7.519	4.01	0.6499^{-2}	0.2372	10.81
3.62	0.1107^{-1}	0.2762	7.589	4.02	0.6413^{-2}	0.2363	10.91
3.63	0.1092^{-1}	0.2751	7.659	4.03	0.6328^{-2}	0.2354	11.01
3.64	0.1076^{-1}	0.2740	7.730	4.04	0.6245^{-2}	0.2345	11.11
3.65	0.1062^{-1}	0.2729	7.802	4.05	0.6163^{-2}	0.2336	11.21
3.66	0.1047^{-1}	0.2718	7.874	4.06	0.6082^{-2}	0.2327	11.31
3.67	0.1032^{-1}	0.2707	7.947	4.07	0.6002^{-2}	0.2319	11.41
3.68	0.1018^{-1}	0.2697	8.020	4.08	0.5923^{-2}	0.2310	11.51
3.69	0.1004^{-1}	0.2686	8.094	4.09	0.5845^{-2}	0.2301	11.61
3.70	0.9903^{-2}	0.2675	8.169	4.10	0.5769^{-2}	0.2293	11.71
3.71	0.9767^{-2}	0.2665	8.244	4.11	0.5694^{-2}	0.2284	11.82
3.72	0.9633^{-2}	0.2654	8.320	4.12	0.5619^{-2}	0.2275	11.92
3.73	0.9500^{-1}	0.2644	8.397	4.13	0.5546^{-2}	0.2267	12.03
3.74	0.9370^{-2}	0.2633	8.474	4.14	0.5474^{-2}	0.2258	12.14
3.75	0.9242^{-2}	0.2623	8.552	4.15	0.5403^{-2}	0.2250	12.24
3.76	0.9116^{-2}	0.2613	8.630	4.16	0.5333^{-2}	0.2242	12.35
3.77	0.8991^{-2}	0.2602	8.709	4.17	0.5264^{-2}	0.2233	12.46
3.78	0.8869^{-2}	0.2592	8.789	4.18	0.5195^{-2}	0.2225	12.57
3.79	0.8748^{-2}	0.2582	8.870	4.19	0.5128^{-2}	0.2217	12.68

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

TABLE D.1 (continued)
Isentropic Flow Tables for a Gas Having $\gamma = 1.4$

M	p/p_t	T/T_t	A/A^*	M	p/p_t	T/T_t	A/A^*
4.20	0.5062^{-2}	0.2208	12.79	4.60	0.3053^{-2}	0.1911	18.02
4.21	0.4997^{-2}	0.2200	12.90	4.61	0.3015^{-2}	0.1905	18.17
4.22	0.4932^{-2}	0.2192	13.02	4.62	0.2978^{-2}	0.1898	18.32
4.23	0.4869^{-2}	0.2184	13.13	4.63	0.2942^{-2}	0.1891	18.48
4.24	0.4806^{-2}	0.2176	13.25	4.64	0.2906^{-2}	0.1885	18.63
4.25	0.4745^{-2}	0.2168	13.36	4.65	0.2871^{-2}	0.1878	18.79
4.26	0.4684^{-2}	0.2160	13.48	4.66	0.2836^{-2}	0.1872	18.94
4.27	0.4624^{-2}	0.2152	13.60	4.67	0.2802^{-2}	0.1865	19.10
4.28	0.4565^{-2}	0.2144	13.72	4.68	0.2768^{-2}	0.1859	19.26
4.29	0.4507^{-2}	0.2136	13.83	4.69	0.2734^{-2}	0.1852	19.42
4.30	0.4449^{-2}	0.2129	13.95	4.70	0.2701^{-1}	0.1846	19.58
4.31	0.4393^{-2}	0.2121	14.08	4.71	0.2669^{-2}	0.1839	19.75
4.32	0.4337^{-2}	0.2113	14.20	4.72	0.2637^{-2}	0.1833	19.91
4.33	0.4282^{-2}	0.2105	14.32	4.73	0.2605^{-2}	0.1827	20.07
4.34	0.4228^{-2}	0.2098	14.45	4.74	0.2573^{-2}	0.1820	20.24
4.35	0.4174^{-2}	0.2090	14.57	4.75	0.2543^{-2}	0.1814	20.41
4.36	0.4121^{-2}	0.2083	14.70	4.76	0.2512^{-2}	0.1808	20.58
4.37	0.4069^{-2}	0.2075	14.82	4.77	0.2482^{-2}	0.1802	20.75
4.38	0.4018^{-2}	0.2067	14.95	4.78	0.2452^{-2}	0.1795	20.92
4.39	0.3968^{-2}	0.2060	15.08	4.79	0.2423^{-2}	0.1789	21.09
4.40	0.3918^{-2}	0.2053	15.21	4.80	0.2394^{-2}	0.1783	21.26
4.41	0.3868^{-2}	0.2045	15.34	4.81	0.2366^{-2}	0.1777	21.44
4.42	0.3820^{-2}	0.2038	15.47	4.82	0.2338^{-2}	0.1771	21.61
4.43	0.3772^{-2}	0.2030	15.61	4.83	0.2310^{-2}	0.1765	21.79
4.44	0.3725^{-2}	0.2023	15.74	4.84	0.2283^{-2}	0.1759	21.97
4.45	0.3678^{-2}	0.2016	15.87	4.85	0.2255^{-2}	0.1753	22.15
4.46	0.3633^{-2}	0.2009	16.01	4.86	0.2229^{-2}	0.1747	22.33
4.47	0.3587^{-2}	0.2002	16.15	4.87	0.2202^{-2}	0.1741	22.51
4.48	0.3543^{-2}	0.1994	16.28	4.88	0.2177^{-2}	0.1735	22.70
4.49	0.3499^{-2}	0.1987	16.42	4.89	0.2151^{-2}	0.1729	21.88
4.50	0.3455^{-2}	0.1980	16.56	4.90	0.2126^{-2}	0.1724	23.07
4.51	0.3412^{-2}	0.1973	16.70	4.91	0.2101^{-2}	0.1718	23.25
4.52	0.3370^{-2}	0.1966	16.84	4.92	0.2076^{-2}	0.1712	23.44
4.53	0.3329^{-2}	0.1959	16.99	4.93	0.2052^{-2}	0.1706	23.63
4.54	0.3288^{-2}	0.1952	17.13	4.94	0.2028^{-2}	0.1700	23.82
4.55	0.3247^{-2}	0.1945	17.28	4.95	0.2004^{-2}	0.1695	24.02
4.56	0.3207^{-2}	0.1938	17.42	4.96	0.1981^{-2}	0.1689	24.21
4.57	0.3168^{-2}	0.1932	17.57	4.97	0.1957^{-2}	0.1683	24.41
4.58	0.3129^{-2}	0.1925	17.72	4.98	0.1985^{-2}	0.1678	24.60
4.59	0.3090^{-2}	0.1918	17.87	4.99	0.1912^{-2}	0.1672	24.80
				5.00	0.1890^{-2}	0.1667	25.00

Source: NACA, Equations, tables and charts for compressible flow, *NACA Report 1135*, 1953.

Note on reading the table: $0.9956^{-1} = 0.9956 \times 10^{-1} = 0.09956$.

TABLE D.2
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
1.00	1.000	1.000	1.000	1.000	1.000	0.5283
1.01	0.9901	1.023	1.017	1.007	1.000	0.5221
1.02	0.9805	1.047	1.033	1.013	1.000	0.5160
1.03	0.9712	1.071	1.050	1.020	1.000	0.5100
1.04	0.9620	1.095	1.067	1.026	0.9999	0.5039
1.05	0.9531	1.120	1.084	1.033	0.9999	0.4980
1.06	0.9444	1.144	1.101	1.039	0.9997	0.4920
1.07	0.9360	1.169	1.118	1.046	0.9996	0.4861
1.08	0.9277	1.194	1.135	1.052	0.9994	0.4803
1.09	0.9196	1.219	1.152	1.059	0.9992	0.4746
1.10	0.9116	1.245	1.169	1.065	0.9989	0.4689
1.11	0.9041	1.271	1.186	1.071	0.9986	0.4632
1.12	0.8966	1.297	1.203	1.078	0.9982	0.4576
1.13	0.8892	1.323	1.221	1.084	0.9978	0.4521
1.14	0.8820	1.350	1.238	1.090	0.9973	0.4467
1.15	0.8750	1.376	1.255	1.097	0.9967	0.4413
1.16	0.8682	1.403	1.272	1.103	0.9961	0.4360
1.17	0.8615	1.430	1.290	1.109	0.9953	0.4307
1.18	0.8549	1.458	1.307	1.115	0.9946	0.4255
1.19	0.8485	1.485	1.324	1.122	0.9937	0.4204
1.20	0.8422	1.513	1.342	1.128	0.9928	0.4154
1.21	0.8360	1.541	1.359	1.134	0.9918	0.4104
1.22	0.8300	1.570	1.376	1.141	0.9907	0.4055
1.23	0.8241	1.598	1.394	1.147	0.9896	0.4006
1.24	0.8183	1.627	1.411	1.153	0.9884	0.3958
1.25	0.8126	1.656	1.429	1.159	0.9871	0.3911
1.26	0.8071	1.686	1.446	1.166	0.9857	0.3865
1.27	0.8016	1.715	1.463	1.172	0.9842	0.3819
1.28	0.7963	1.745	1.481	1.178	0.9827	0.3774
1.29	0.7911	1.775	1.498	1.185	0.9811	0.3729
1.30	0.7860	1.805	1.516	1.191	0.9794	0.3685
1.31	0.7809	1.835	1.533	1.197	0.9776	0.3642
1.32	0.7760	1.866	1.551	1.204	0.9758	0.3599
1.33	0.7712	1.897	1.568	1.210	0.9738	0.3557
1.34	0.7664	1.928	1.585	1.216	0.9718	0.3516
1.35	0.7618	1.960	1.603	1.223	0.9697	0.3475
1.36	0.7572	1.991	1.620	1.229	0.9676	0.3435
1.37	0.7527	2.023	1.638	1.235	0.9653	0.3395
1.38	0.7483	2.055	1.655	1.242	0.9630	0.3356
1.39	0.7440	2.087	1.672	1.248	0.9607	0.3317

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
1.40	0.7397	2.120	1.690	1.255	0.9582	0.3280
1.41	0.7355	2.153	1.707	1.261	0.9557	0.3242
1.42	0.7314	2.186	1.724	1.268	0.9531	0.3205
1.43	0.7274	2.219	1.742	1.274	0.9504	0.3169
1.44	0.7235	2.253	1.759	1.281	0.9476	0.3133
1.40	0.7397	2.120	1.690	1.255	0.9582	0.3280
1.41	0.7355	2.153	1.707	1.261	0.9557	0.3242
1.42	0.7314	2.186	1.724	1.268	0.9531	0.3205
1.43	0.7274	2.219	1.742	1.274	0.9504	0.3169
1.44	0.7235	2.253	1.759	1.281	0.9476	0.3133
1.45	0.7196	2.286	1.776	1.287	0.9448	0.3098
1.46	0.7157	2.320	1.793	1.294	0.9420	0.3063
1.47	0.7120	2.354	1.811	1.300	0.9390	0.3029
1.48	0.7083	2.389	1.828	1.307	0.9360	0.2996
1.49	0.7047	2.423	1.845	1.314	0.9329	0.2962
1.50	0.7011	2.458	1.862	1.320	0.9298	0.2930
1.51	0.6976	2.493	1.879	1.327	0.9266	0.2898
1.52	0.6941	2.529	1.896	1.334	0.9233	0.2866
1.53	0.6907	2.564	1.913	1.340	0.9200	0.2835
1.54	0.6874	2.600	1.930	1.347	0.9166	0.2804
1.55	0.6841	2.636	1.947	1.354	0.9132	0.2773
1.56	0.6809	2.673	1.964	1.361	0.9097	0.2744
1.57	0.6777	2.709	1.981	1.367	0.9061	0.2714
1.58	0.6746	2.746	1.998	1.374	0.9026	0.2685
1.59	0.6715	2.783	2.015	1.381	0.8989	0.2656
1.60	0.6684	2.820	2.032	1.388	0.8952	0.2628
1.61	0.6655	2.857	2.049	1.395	0.8915	0.2600
1.62	0.6625	2.895	2.065	1.402	0.8877	0.2573
1.63	0.6596	2.933	2.082	1.409	0.8838	0.2546
1.64	0.6568	2.971	2.099	1.416	0.8799	0.2519
1.65	0.6540	3.010	2.115	1.423	0.8760	0.2493
1.66	0.6512	3.048	2.132	1.430	0.8720	0.2467
1.67	0.6485	3.087	2.148	1.437	0.8680	0.2442
1.68	0.6458	3.126	2.165	1.444	0.8640	0.2417
1.69	0.6431	3.165	2.181	1.451	0.8598	0.2392
1.70	0.6405	3.205	2.198	1.458	0.8557	0.2368
1.71	0.6380	3.245	2.214	1.466	0.8516	0.2344
1.72	0.6355	3.285	2.230	1.473	0.8474	0.2320
1.73	0.6330	3.325	2.247	1.480	0.8431	0.2296
1.74	0.6305	3.366	2.263	1.487	0.8389	0.2273

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

(continued)

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
1.75	0.6281	3.406	2.279	1.495	0.8346	0.2251
1.76	0.6257	3.447	2.295	1.502	0.8302	0.2228
1.77	0.6234	3.488	2.311	1.509	0.8259	0.2206
1.78	0.6210	3.530	2.327	1.517	0.8215	0.2184
1.79	0.6188	3.571	2.343	1.524	0.8171	0.2163
1.80	0.6165	3.613	2.359	1.532	0.8127	0.2142
1.81	0.6143	3.655	2.375	1.539	0.8082	0.2121
1.82	0.6121	3.698	2.391	1.547	0.8038	0.2100
1.83	0.6099	3.740	2.407	1.554	0.7993	0.2080
1.84	0.6078	3.783	2.422	1.562	0.7948	0.2060
1.85	0.6057	3.826	2.438	1.569	0.7902	0.2040
1.86	0.6036	3.870	2.454	1.577	0.7857	0.2020
1.87	0.6016	3.913	2.469	1.585	0.7811	0.2001
1.88	0.5996	3.957	2.485	1.592	0.7765	0.1982
1.89	0.5976	4.001	2.500	1.600	0.7720	0.1963
1.90	0.5956	4.045	2.516	1.608	0.7674	0.1945
1.91	0.5937	4.089	2.531	1.616	0.7627	0.1927
1.92	0.5918	4.134	2.546	1.624	0.7581	0.1909
1.93	0.5899	4.179	2.562	1.631	0.7535	0.1891
1.94	0.5880	4.224	2.577	1.639	0.7488	0.1873
1.95	0.5862	4.270	2.592	1.647	0.7442	0.1856
1.96	0.5844	4.315	2.607	1.655	0.7395	0.1839
1.97	0.5826	4.361	2.622	1.663	0.7349	0.1822
1.98	0.5808	4.407	2.637	1.671	0.7302	0.1806
1.99	0.5791	4.453	2.652	1.679	0.7255	0.1789
2.00	0.5774	4.500	2.667	1.688	0.7209	0.1773
2.01	0.5757	4.547	2.681	1.696	0.7162	0.1757
2.02	0.5740	4.594	2.696	1.704	0.7115	0.1741
2.03	0.5723	4.641	2.711	1.712	0.7069	0.1726
2.04	0.5707	4.689	2.725	1.720	0.7022	0.1710
2.05	0.5691	4.736	2.740	1.729	0.6975	0.1695
2.06	0.5675	4.784	2.755	1.737	0.6928	0.1680
2.07	0.5659	4.832	2.769	1.745	0.6882	0.1665
2.08	0.5643	4.881	2.783	1.754	0.6835	0.1651
2.09	0.5628	4.929	2.798	1.762	0.6789	0.1636
2.10	0.5613	4.978	2.812	1.770	0.6742	0.1622
2.11	0.5598	5.027	2.826	1.779	0.6696	0.1608
2.12	0.5583	5.077	2.840	1.787	0.6649	0.1594
2.13	0.5568	5.126	2.854	1.796	0.6603	0.1580
2.14	0.5554	5.176	2.868	1.805	0.6557	0.1567

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
2.15	0.5540	5.226	2.882	1.813	0.6511	0.1553
2.16	0.5525	5.277	2.896	1.822	0.6464	0.1540
2.17	0.5511	5.327	2.910	1.831	0.6419	0.1527
2.18	0.5498	5.378	2.924	1.839	0.6373	0.1514
2.19	0.5484	5.429	2.938	1.848	0.6327	0.1502
2.20	0.5471	5.480	2.951	1.857	0.6281	0.1489
2.21	0.5457	5.531	2.965	1.866	0.6236	0.1476
2.22	0.5444	5.583	2.978	1.875	0.6191	0.1464
2.23	0.5431	5.636	2.992	1.883	0.6145	0.1452
2.24	0.5418	5.687	3.005	1.892	0.6100	0.1440
2.25	0.5406	5.740	3.019	1.901	0.6055	0.1428
2.26	0.5393	5.792	3.032	1.910	0.6011	0.1417
2.27	0.5381	5.845	3.045	1.919	0.5966	0.1405
2.28	0.5368	5.898	3.058	1.929	0.5921	0.1394
2.29	0.5356	5.951	3.071	1.938	0.5877	0.1382
2.30	0.5344	6.005	3.085	1.947	0.5833	0.1371
2.31	0.5332	6.059	3.098	1.956	0.5789	0.1360
2.32	0.5321	6.113	3.110	1.965	0.5745	0.1349
2.33	0.5309	6.167	3.123	1.974	0.5702	0.1338
2.34	0.5297	6.222	3.136	1.984	0.5658	0.1328
2.35	0.5286	6.276	3.149	1.993	0.5615	0.1317
2.36	0.5275	6.331	3.162	2.002	0.5572	0.1307
2.37	0.5264	6.386	3.174	2.012	0.5529	0.1297
2.38	0.5253	6.442	3.187	2.021	0.5486	0.1286
2.39	0.5242	6.497	3.199	2.031	0.5444	0.1276
2.40	0.5231	6.553	3.212	2.040	0.5401	0.1266
2.41	0.5221	6.609	3.224	2.050	0.5359	0.1257
2.42	0.5210	6.666	3.237	2.059	0.5317	0.1247
2.43	0.5200	6.722	3.249	2.069	0.5276	0.1237
2.44	0.5189	6.779	3.261	2.079	0.5234	0.1228
2.45	0.5179	6.836	3.273	2.088	0.5193	0.1218
2.46	0.5169	6.894	3.285	2.098	0.5152	0.1209
2.47	0.5159	6.951	3.298	2.108	0.5111	0.1200
2.48	0.5149	7.009	3.310	2.118	0.5071	0.1191
2.49	0.5140	7.067	3.321	2.128	0.5030	0.1182
2.50	0.5130	7.125	3.333	2.138	0.4990	0.1173
2.51	0.5120	7.183	3.345	2.147	0.4950	0.1164
2.52	0.5111	7.242	3.357	2.157	0.4911	0.1155
2.53	0.5102	7.301	3.369	2.167	0.4871	0.1147
2.54	0.5092	7.360	3.380	2.177	0.4832	0.1138

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

(continued)

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
2.55	0.5083	7.420	3.392	2.187	0.4793	0.1130
2.56	0.5074	7.479	3.403	2.198	0.4754	0.1122
2.57	0.5065	7.539	3.415	2.208	0.4715	0.1113
2.58	0.5056	7.599	3.426	2.218	0.4677	0.1105
2.59	0.5047	7.659	3.438	2.228	0.4639	0.1097
2.60	0.5039	7.720	3.449	2.238	0.4601	0.1089
2.61	0.5030	7.781	3.460	2.249	0.4564	0.1081
2.62	0.5022	7.842	3.471	2.259	0.4526	0.1074
2.63	0.5013	7.908	3.483	2.269	0.4489	0.1066
2.64	0.5005	7.965	3.494	2.280	0.4452	0.1058
2.65	0.4996	8.026	3.505	2.290	0.4416	0.1051
2.66	0.4988	8.088	3.516	2.301	0.4379	0.1043
2.67	0.4980	8.150	3.527	2.311	0.4343	0.1036
2.68	0.4972	8.213	3.537	2.322	0.4307	0.1028
2.69	0.4964	8.275	3.548	2.332	0.4271	0.1021
2.70	0.4956	8.338	3.559	2.343	0.4236	0.1014
2.71	0.4949	8.401	3.570	2.354	0.4201	0.1007
2.72	0.4941	8.465	3.580	2.364	0.4166	0.9998 ⁻¹
2.73	0.4933	8.528	3.591	2.375	0.4131	0.9929 ⁻¹
2.74	0.4926	8.592	3.601	2.386	0.4097	0.9860 ⁻¹
2.75	0.4918	8.656	3.612	2.397	0.4062	0.9792 ⁻¹
2.76	0.4911	8.721	3.622	2.407	0.4028	0.9724 ⁻¹
2.77	0.4903	8.785	3.633	2.418	0.3994	0.9658 ⁻¹
2.78	0.4896	8.850	3.643	2.429	0.3961	0.9591 ⁻¹
2.79	0.4889	8.915	3.653	2.440	0.3928	0.9526 ⁻¹
2.80	0.4882	8.980	3.664	2.451	0.3895	0.9461 ⁻¹
2.81	0.4875	9.045	3.674	2.462	0.3862	0.9397 ⁻¹
2.82	0.4868	9.111	3.684	2.473	0.3829	0.9334 ⁻¹
2.83	0.4861	9.177	3.694	2.484	0.3797	0.9271 ⁻¹
2.84	0.4854	9.243	3.704	2.496	0.3765	0.9209 ⁻¹
2.85	0.4847	9.310	3.714	2.507	0.3733	0.9147 ⁻¹
2.86	0.4840	9.376	3.724	2.518	0.3701	0.9086 ⁻¹
2.87	0.4833	9.443	3.734	2.529	0.3670	0.9026 ⁻¹
2.88	0.4827	9.510	3.743	2.540	0.3639	0.8966 ⁻¹
2.89	0.4820	9.577	3.753	2.552	0.3608	0.8906 ⁻¹
2.90	0.4814	9.645	3.763	2.563	0.3577	0.8848 ⁻¹
2.91	0.4807	9.713	3.773	2.575	0.3547	0.8790 ⁻¹
2.92	0.4801	9.781	3.782	2.586	0.3517	0.8732 ⁻¹
2.93	0.4795	9.849	3.792	2.598	0.3487	0.8675 ⁻¹
2.94	0.4788	9.918	3.801	2.609	0.3457	0.8619 ⁻¹

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
2.95	0.4782	9.986	3.811	2.621	0.3428	0.8563^{-1}
2.96	0.4776	10.06	3.820	2.632	0.3398	0.8507^{-1}
2.97	0.4770	10.12	3.829	2.644	0.3369	0.8453^{-1}
2.98	0.4764	10.19	3.839	2.656	0.3340	0.8398^{-1}
2.99	0.4758	10.26	3.848	2.667	0.3312	0.8345^{-1}
3.00	0.4752	10.33	3.857	2.679	0.3283	0.8291^{-1}
3.01	0.4746	10.40	3.866	2.691	0.3255	0.8238^{-1}
3.02	0.4740	10.47	3.875	2.703	0.3227	0.8186^{-1}
3.03	0.4734	10.54	3.884	2.714	0.3200	0.8134^{-1}
3.04	0.4729	10.62	3.893	2.726	0.3172	0.8083^{-1}
3.05	0.4723	10.69	3.902	2.738	0.3145	0.8032^{-1}
3.06	0.4717	10.76	3.911	2.750	0.3118	0.7982^{-1}
3.07	0.4712	10.83	3.920	2.762	0.3091	0.7932^{-1}
3.08	0.4706	10.90	3.929	2.774	0.3065	0.7882^{-1}
3.09	0.4701	10.97	3.938	2.786	0.3038	0.7833^{-1}
3.10	0.4695	11.05	3.947	2.799	0.3012	0.7785^{-1}
3.11	0.4690	11.12	3.955	2.811	0.2986	0.7737^{-1}
3.12	0.4685	11.19	3.964	2.823	0.2960	0.7689^{-1}
3.13	0.4679	11.26	3.973	2.835	0.2935	0.7642^{-1}
3.14	0.4674	11.34	3.981	2.848	0.2910	0.7595^{-1}
3.15	0.4669	11.41	3.990	2.860	0.2885	0.7549^{-1}
3.16	0.4664	11.48	3.998	2.872	0.2860	0.7503^{-1}
3.17	0.4659	11.56	4.006	2.885	0.2835	0.7457^{-1}
3.18	0.4654	11.63	4.015	2.897	0.2811	0.7412^{-1}
3.19	0.4648	11.71	4.023	2.909	0.2786	0.7367^{-1}
3.20	0.4643	11.78	4.031	2.922	0.2762	0.7323^{-1}
3.21	0.4639	11.85	4.040	2.935	0.2738	0.7279^{-1}
3.22	0.4634	11.93	4.048	2.947	0.2715	0.7235^{-1}
3.23	0.4629	12.01	4.056	2.960	0.2691	0.7192^{-1}
3.24	0.4624	12.08	4.064	2.972	0.2668	0.7149^{-1}
3.25	0.4619	12.16	4.072	2.985	0.2645	0.7107^{-1}
3.26	0.4614	12.23	4.080	2.998	0.2622	0.7065^{-1}
3.27	0.4610	12.31	4.088	3.011	0.2600	0.7023^{-1}
3.28	0.4605	12.38	4.096	3.023	0.2577	0.6982^{-1}
3.29	0.4600	12.46	4.104	3.036	0.2555	0.6941^{-1}
3.30	0.4596	12.54	4.112	3.049	0.2533	0.6900^{-1}
3.31	0.4591	12.62	4.120	3.062	0.2511	0.6860^{-1}
3.32	0.4587	12.69	4.128	3.075	0.2489	0.6820^{-1}
3.33	0.4582	12.77	4.135	3.088	0.2468	0.6781^{-1}
3.34	0.4578	12.85	4.143	3.101	0.2446	0.6741^{-1}

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

(continued)

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
3.35	0.4573	2.93	4.151	3.114	0.2425	0.6702^{-1}
3.36	0.4569	3.00	4.158	3.127	0.2404	0.6664^{-1}
3.37	0.4565	3.08	4.166	3.141	0.2383	0.6626^{-1}
3.38	0.4560	3.16	4.173	3.154	0.2363	0.6588^{-1}
3.39	0.4556	3.24	4.181	3.167	0.2342	0.6550^{-1}
3.40	0.4552	13.32	4.188	3.180	0.2322	0.6513^{-1}
3.41	0.4548	13.40	4.196	3.194	0.2302	0.6476^{-1}
3.42	0.4544	13.48	4.203	3.207	0.2282	0.6439^{-1}
3.43	0.4540	13.56	4.211	3.220	0.2263	0.6403^{-1}
3.44	0.4535	13.64	4.218	3.234	0.2243	0.6367^{-1}
3.45	0.4531	13.72	4.225	3.247	0.2224	0.6331^{-1}
3.46	0.4527	13.80	4.232	3.261	0.2205	0.6296^{-1}
3.47	0.4523	13.88	4.240	3.274	0.2186	0.6261^{-1}
3.48	0.4519	13.96	4.247	3.288	0.2167	0.6226^{-1}
3.49	0.4515	14.04	4.254	3.301	0.2148	0.6191^{-1}
3.50	0.4512	14.13	4.261	3.315	0.2129	0.6157^{-1}
3.51	0.4508	14.21	4.268	3.329	0.2111	0.6123^{-1}
3.52	0.4504	14.29	4.275	3.343	0.2093	0.6089^{-1}
3.53	0.4500	14.37	4.282	3.356	0.2075	0.6056^{-1}
3.54	0.4496	14.45	4.289	3.370	0.2057	0.6023^{-1}
3.55	0.4492	14.54	4.296	3.384	0.2039	0.5990^{-1}
3.56	0.4489	14.62	4.303	3.398	0.2022	0.5957^{-1}
3.57	0.4485	14.70	4.309	3.412	0.2004	0.5925^{-1}
3.58	0.4481	14.79	4.316	3.426	0.1987	0.5892^{-1}
3.59	0.4478	14.87	4.323	3.440	0.1970	0.5861^{-1}
3.60	0.4474	14.95	4.330	3.454	0.1953	0.5829^{-1}
3.61	0.4471	15.04	4.336	3.468	0.1936	0.5798^{-1}
3.62	0.4467	15.12	4.343	3.482	0.1920	0.5767^{-1}
3.63	0.4463	15.21	4.350	3.496	0.1903	0.5736^{-1}
3.64	0.4460	15.29	4.356	3.510	0.1887	0.5705^{-1}
3.65	0.4456	15.38	4.363	3.525	0.1671	0.5675^{-1}
3.66	0.4453	15.46	4.369	3.539	0.1855	0.5645^{-1}
3.67	0.4450	15.55	4.376	3.553	0.1839	0.5615^{-1}
3.68	0.4446	15.63	4.382	3.568	0.1823	0.5585^{-1}
3.69	0.4443	15.72	4.388	3.582	0.1807	0.5556^{-1}
3.70	0.4439	15.81	4.395	3.596	0.1792	0.5526^{-1}
3.71	0.4436	15.89	4.401	3.611	0.1777	0.5497^{-1}
3.72	0.4433	15.98	4.408	3.625	0.1761	0.5469^{-1}
3.73	0.4430	16.07	4.414	3.640	0.1746	0.5440^{-1}
3.74	0.4426	16.15	4.420	3.654	0.1731	0.5412^{-1}

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
3.75	0.4423	16.24	4.426	3.669	0.1717	0.5384^{-1}
3.76	0.4420	16.33	4.432	3.684	0.1702	0.5356^{-1}
3.77	0.4417	16.42	4.439	3.698	0.1687	0.5328^{-1}
3.78	0.4414	16.50	4.445	3.713	0.1673	0.5301^{-1}
3.79	0.4410	16.59	4.451	3.728	0.1659	0.5274^{-1}
3.80	0.4407	16.68	4.457	3.743	0.1645	0.5247^{-1}
3.81	0.4404	16.77	4.463	3.758	0.1631	0.5220^{-1}
3.82	0.4401	16.86	4.469	3.772	0.1617	0.5193^{-1}
3.83	0.4398	16.95	4.475	3.787	0.1603	0.5167^{-1}
3.84	0.4395	17.04	4.481	3.802	0.1589	0.5140^{-1}
3.85	0.4392	17.13	4.487	3.817	0.1576	0.5114^{-1}
3.86	0.4389	17.22	4.492	3.832	0.1563	0.5089^{-1}
3.87	0.4386	17.31	4.498	3.847	0.1549	0.5063^{-1}
3.88	0.4383	17.40	4.504	3.863	0.1536	0.5038^{-1}
3.89	0.4380	17.49	4.510	3.878	0.1523	0.5012^{-1}
3.90	0.4377	17.58	4.516	3.893	0.1510	0.4987^{-1}
3.91	0.4375	17.67	4.521	3.908	0.1497	0.4962^{-1}
3.92	0.4372	17.76	4.527	3.923	0.1435	0.4938^{-1}
3.93	0.4369	17.85	4.533	3.939	0.1472	0.4913^{-1}
3.94	0.4366	17.94	4.538	3.954	0.1460	0.4889^{-1}
3.95	0.4363	18.04	4.544	3.969	0.1448	0.4865^{-1}
3.96	0.4360	18.13	4.549	3.985	0.1435	0.4841^{-1}
3.97	0.4358	18.22	4.555	4.000	0.1423	0.4817^{-1}
3.98	0.4355	18.31	4.560	4.016	0.1411	0.4793^{-1}
3.99	0.4352	18.41	4.566	4.031	0.1399	0.4770^{-1}
4.00	0.4350	18.50	4.571	4.047	0.1388	0.4747^{-1}
4.01	0.4347	18.59	4.577	4.062	0.1376	0.4723^{-1}
4.02	0.4344	18.69	4.582	4.078	0.1364	0.4700^{-1}
4.03	0.4342	18.78	4.588	4.094	0.1353	0.4678^{-1}
4.04	0.4339	18.88	4.593	4.110	0.1342	0.4655^{-1}
4.05	0.4336	18.97	4.598	4.125	0.1330	0.4633^{-1}
4.06	0.4334	19.06	4.604	4.141	0.1319	0.4610^{-1}
4.07	0.4331	19.16	4.609	4.157	0.1308	0.4588^{-1}
4.08	0.4329	19.25	4.614	4.173	0.1297	0.4566^{-1}
4.09	0.4326	19.35	4.619	4.189	0.1286	0.4544^{-1}
4.10	0.4324	19.45	4.624	4.205	0.1276	0.4523^{-1}
4.11	0.4321	19.54	4.630	4.221	0.1265	0.4501^{-1}
4.12	0.4319	19.64	4.635	4.237	0.1254	0.4480^{-1}
4.13	0.4316	19.73	4.640	4.253	0.1244	0.4459^{-1}
4.14	0.4314	19.83	4.645	4.269	0.1234	0.4438^{-1}

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

(continued)

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t_2}/p_{t_1}	p_1/p_{t_2}
4.15	0.4311	19.93	4.650	4.285	0.1223	0.4417^{-1}
4.16	0.4309	20.02	4.655	4.301	0.1213	0.4396^{-1}
4.17	0.4306	20.12	4.660	4.318	0.1203	0.4375^{-1}
4.18	0.4304	20.22	4.665	4.334	0.1193	0.4355^{-1}
4.19	0.4302	20.32	4.670	4.350	0.1183	0.4334^{-1}
4.20	0.4299	20.41	4.675	4.367	0.1173	0.4314^{-1}
4.21	0.4297	20.51	4.680	4.383	0.1164	0.4294^{-1}
4.22	0.4295	20.61	4.685	4.399	0.1154	0.4274^{-1}
4.23	0.4292	20.71	4.690	4.416	0.1144	0.4255^{-1}
4.24	0.4290	20.81	4.694	4.432	0.1135	0.4235^{-1}
4.25	0.4288	20.91	4.699	4.449	0.1126	0.4215^{-1}
4.26	0.4286	21.01	4.704	4.466	0.1116	0.4196^{-1}
4.27	0.4283	21.11	4.709	4.482	0.1107	0.4177^{-1}
4.28	0.4281	21.20	4.713	4.499	0.1098	0.4158^{-1}
4.29	0.4279	21.30	4.718	4.516	0.1089	0.4139^{-1}
4.30	0.4277	21.41	4.723	4.532	0.1080	0.4120^{-1}
4.31	0.4275	21.51	4.728	4.549	0.1071	0.4101^{-1}
4.32	0.4272	21.61	4.732	4.566	0.1062	0.4082^{-1}
4.33	0.4270	21.71	4.737	4.583	0.1054	0.4064^{-1}
4.34	0.4268	21.81	4.741	4.600	0.1045	0.4046^{-1}
4.35	0.4266	21.91	4.746	4.617	0.1036	0.4027^{-1}
4.36	0.4264	22.01	4.751	4.633	0.1028	0.4009^{-1}
4.37	0.4262	22.11	4.755	4.651	0.1020	0.3991^{-1}
4.38	0.4260	22.22	4.760	4.668	0.1011	0.3973^{-1}
4.39	0.4258	22.32	4.764	4.685	0.1003	0.3956^{-1}
4.40	0.4255	22.42	4.768	4.702	0.9948^{-1}	0.3938^{-1}
4.41	0.4253	22.52	4.773	4.719	0.9867^{-1}	0.3921^{-1}
4.42	0.4251	22.63	4.777	4.736	0.9787^{-1}	0.3903^{-1}
4.43	0.4249	22.73	4.782	4.753	0.9707^{-1}	0.3886^{-1}
4.44	0.4247	22.83	4.786	4.771	0.9628^{-1}	0.3869^{-1}
4.45	0.4245	22.94	4.790	4.788	0.9550^{-1}	0.3852^{-1}
4.46	0.4243	23.04	4.795	4.805	0.9473^{-1}	0.3835^{-1}
4.47	0.4241	23.14	4.799	4.823	0.9396^{-1}	0.3818^{-1}
4.48	0.4239	23.25	4.803	4.840	0.9320^{-1}	0.3801^{-1}
4.49	0.4237	23.35	4.808	4.858	0.9244^{-1}	0.3785^{-1}
4.50	0.4236	23.46	4.812	4.875	0.9170^{-1}	0.3768^{-1}
4.51	0.4234	23.56	4.816	4.893	0.9096^{-1}	0.3752^{-1}
4.52	0.4232	23.67	4.820	4.910	0.9022^{-1}	0.3735^{-1}
4.53	0.4230	23.77	4.824	4.928	0.8950^{-1}	0.3719^{-1}
4.54	0.4228	23.88	4.829	4.946	0.8878^{-1}	0.3703^{-1}
4.55	0.4226	23.99	4.833	4.963	0.8806^{-1}	0.3687^{-1}
4.56	0.4224	24.09	4.837	4.981	0.8735^{-1}	0.3671^{-1}
4.57	0.4222	24.20	4.841	4.999	0.8665^{-1}	0.3656^{-1}
4.58	0.4220	24.31	4.845	5.017	0.8596^{-1}	0.3640^{-1}
4.59	0.4219	24.41	4.849	5.034	0.8527^{-1}	0.3624^{-1}

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.2 (continued)
Normal Shock Tables for a Gas Having $\gamma = 1.4$

M_1	M_2	p_2/p_1	ρ_2/ρ_1	T_2/T_1	p_{t2}/p_{t1}	p_1/p_{t2}
4.60	0.4217	24.52	4.853	5.052	0.8459^{-1}	0.3609^{-1}
4.61	0.4215	24.63	4.857	5.070	0.8391^{-1}	0.3593^{-1}
4.62	0.4213	24.74	4.861	5.088	0.8324^{-1}	0.3578^{-1}
4.63	0.4211	24.84	4.865	5.106	0.8257^{-1}	0.3563^{-1}
4.64	0.4210	24.95	4.869	5.124	0.8192^{-1}	0.3548^{-1}
4.65	0.4208	25.06	4.873	5.143	0.8126^{-1}	0.3533^{-1}
4.66	0.4206	25.17	4.877	5.160	0.8062^{-1}	0.3518^{-1}
4.67	0.4204	25.28	4.881	5.179	0.7998^{-1}	0.3503^{-1}
4.68	0.4203	25.39	4.885	5.197	0.7934^{-1}	0.3488^{-1}
4.69	0.4201	25.50	4.889	5.215	0.7871^{-1}	0.3474^{-1}
4.70	0.4199	25.61	4.893	5.233	0.7809^{-1}	0.3459^{-1}
4.71	0.4197	25.71	4.896	5.252	0.7747^{-1}	0.3445^{-1}
4.72	0.4196	25.82	4.900	5.270	0.7685^{-1}	0.3431^{-1}
4.73	0.4194	25.94	4.904	5.289	0.7625^{-1}	0.3416^{-1}
4.74	0.4192	26.05	4.908	5.307	0.7564^{-1}	0.3402^{-1}
4.75	0.4191	26.16	4.912	5.325	0.7505^{-1}	0.3388^{-1}
4.76	0.4189	26.27	4.915	5.344	0.7445^{-1}	0.3374^{-1}
4.77	0.4187	26.38	4.919	5.363	0.7387^{-1}	0.3360^{-1}
4.78	0.4186	26.49	4.923	5.381	0.7329^{-1}	0.3346^{-1}
4.79	0.4184	26.60	4.926	5.400	0.7271^{-1}	0.3333^{-1}
4.80	0.4183	26.71	4.930	5.418	0.7214^{-1}	0.3319^{-1}
4.81	0.4181	26.83	4.934	5.437	0.7157^{-1}	0.3305^{-1}
4.82	0.4179	26.94	4.937	5.456	0.7101^{-1}	0.3292^{-1}
4.83	0.4178	27.05	4.941	5.475	0.7046^{-1}	0.3278^{-1}
4.84	0.4176	27.16	4.945	5.494	0.6991^{-1}	0.3265^{-1}
4.85	0.4175	27.28	4.948	5.512	0.6936^{-1}	0.3252^{-1}
4.86	0.4173	27.39	4.952	5.531	0.6882^{-1}	0.3239^{-1}
4.87	0.4172	27.50	4.955	5.550	0.6828^{-1}	0.3226^{-1}
4.88	0.4170	27.62	4.959	5.569	0.6775^{-1}	0.3213^{-1}
4.89	0.4169	27.73	4.962	5.588	0.6722^{-1}	0.3200^{-1}
4.90	0.4167	27.85	4.966	5.607	0.6670^{-1}	0.3187^{-1}
4.91	0.4165	27.96	4.969	5.626	0.6618^{-1}	0.3174^{-1}
4.92	0.4164	28.07	4.973	5.646	0.6567^{-1}	0.3161^{-1}
4.93	0.4163	28.19	4.976	5.665	0.6516^{-1}	0.3149^{-1}
4.94	0.4161	28.30	4.980	5.684	0.6465^{-1}	0.3136^{-1}
4.95	0.4160	28.42	4.983	5.703	0.6415^{-1}	0.3124^{-1}
4.96	0.4158	28.54	4.987	5.723	0.6366^{-1}	0.3111^{-1}
4.97	0.4157	28.65	4.990	5.742	0.6317^{-1}	0.3099^{-1}
4.98	0.4155	28.77	4.993	5.761	0.6268^{-1}	0.3087^{-1}
4.99	0.4154	28.88	4.997	5.781	0.6220^{-1}	0.3075^{-1}
5.00	0.4152	29.00	5.000	5.800	0.6172^{-1}	0.3062^{-1}

Source: NACA, Equations, tables and charts for compressible flow, *NACA Report 1135*, 1953.

Note on reading the table: $0.7214^{-1} = 0.7214 \times 10^{-1} = 0.07214$.

TABLE D.3
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_{t^*}	V/V^*	$fl_{\max}/D$
0.00	1.2000	∞	∞	0	∞
0.01	1.2000	109.544	57.874	0.01095	7134.40
0.02	1.1999	54.770	28.942	0.02191	1778.45
0.03	1.1998	36.511	19.300	0.03286	787.08
0.04	1.1996	27.382	14.482	0.04381	440.35
0.05	1.1994	21.903	11.5914	0.05476	280.02
0.06	1.1991	18.251	9.6659	0.06570	193.03
0.07	1.1988	15.642	8.2915	0.07664	140.66
0.08	1.1985	13.684	7.2616	0.08758	106.72
0.09	1.1981	12.162	6.4614	0.09851	83.496
0.10	1.1976	10.9435	5.8218	0.10943	66.922
0.11	1.1971	9.9465	5.2992	0.12035	54.688
0.12	1.1966	9.1156	4.8643	0.13126	45.408
0.13	1.1960	8.4123	4.4968	0.14216	38.207
0.14	1.1953	7.8093	4.1824	0.15306	32.511
0.15	1.1946	7.2866	3.9103	0.16395	27.932
0.16	1.1939	6.8291	3.6727	0.17482	24.198
0.17	1.1931	6.4252	3.4635	0.18568	21.115
0.18	1.1923	6.0662	3.2779	0.19654	18.543
0.19	1.1914	5.7448	3.1123	0.20739	16.375
0.20	1.1905	5.4555	2.9635	0.21822	14.533
0.21	1.1895	5.1936	2.8293	0.22904	12.956
0.22	1.1885	4.9554	2.7076	0.23984	11.596
0.23	1.1874	4.7378	2.5968	0.25063	10.416
0.24	1.1863	4.5383	2.4956	0.26141	9.3865
0.25	1.1852	4.3546	2.4027	0.27217	8.4834
0.26	1.1840	4.1850	2.3173	0.28291	7.6876
0.27	1.1828	4.0280	2.2385	0.29364	6.9832
0.28	1.1815	3.8820	2.1656	0.30435	6.3572
0.29	1.1802	3.7460	2.0979	0.31504	5.7989
0.30	1.1788	3.6190	2.0351	0.32572	5.2992
0.31	1.1774	3.5002	1.9765	0.33637	4.8507
0.32	1.1759	3.3888	1.9219	0.34700	4.4468
0.33	1.1744	3.2840	1.8708	0.35762	4.0821
0.34	1.1729	3.1853	1.8229	0.36822	3.7520
0.35	1.1713	3.0922	1.7780	0.37880	3.4525
0.36	1.1697	3.0042	1.7358	0.38935	3.1801
0.37	1.1680	2.9209	1.6961	0.39988	2.9320
0.38	1.1663	2.8420	1.6587	0.41039	2.7055
0.39	1.1646	2.7671	1.6234	0.42087	2.4983
0.40	1.1628	2.6958	1.5901	0.43133	2.3085
0.41	1.1610	2.6280	1.5587	0.44177	2.1344
0.42	1.1591	2.5634	1.5289	0.45218	1.9744
0.43	1.1572	2.5017	1.5007	0.46257	1.8272
0.44	1.1553	2.4428	1.4739	0.47293	1.6915

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
0.45	1.1533	2.3865	1.4486	0.48326	1.5664
0.46	1.1513	2.3326	1.4246	0.49357	1.4509
0.47	1.1492	2.2809	1.4018	0.50385	1.3442
0.48	1.1471	2.2314	1.3801	0.51410	1.2453
0.49	1.1450	2.1838	1.3595	0.52433	1.1539
0.50	1.1429	2.1381	1.3399	0.53453	1.06908
0.51	1.1407	2.0942	1.3212	0.54469	0.99042
0.52	1.1384	2.0519	1.3034	0.55482	0.91741
0.53	1.1362	2.0112	1.2864	0.56493	0.84963
0.54	1.1339	1.9719	1.2702	0.57501	0.78662
0.55	1.1315	1.9341	1.2549	0.58506	0.72805
0.56	1.1292	1.8976	1.2403	0.59507	0.67357
0.57	1.1268	1.8623	1.2263	0.60505	0.62286
0.58	1.1244	1.8282	1.2130	0.61500	0.57568
0.59	1.1219	1.7952	1.2003	0.62492	0.53174
0.60	1.1194	1.7634	1.1882	0.63481	0.49081
0.61	1.1169	1.7325	1.1766	0.64467	0.45270
0.62	1.1144	1.7026	1.1656	0.65449	0.41720
0.63	1.1118	1.6737	1.1551	0.66427	0.38411
0.64	1.1091	1.6456	1.1451	0.67402	0.35330
0.65	1.10650	1.6183	1.1356	0.68374	0.32460
0.66	1.10383	1.5919	1.1265	0.69342	0.29785
0.67	1.10114	1.5662	1.1179	0.70306	0.27295
0.68	1.09842	1.5413	1.1097	0.71267	0.24978
0.69	1.09567	1.5170	1.1018	0.72225	0.22821
0.70	1.09290	1.4934	1.09436	0.73179	0.20814
0.71	1.09010	1.4705	1.08729	0.74129	0.18949
0.72	1.08727	1.4482	1.08057	0.75076	0.17215
0.73	1.08442	1.4265	1.07419	0.76019	0.15606
0.74	1.08155	1.4054	1.06815	0.76958	0.14113
0.75	1.07865	1.3848	1.06242	0.77893	0.12728
0.76	1.07573	1.3647	1.05700	0.78825	0.11446
0.77	1.07279	1.3451	1.05188	0.79753	0.10262
0.78	1.06982	1.3260	1.04705	0.80677	0.09167
0.79	1.06684	1.3074	1.04250	0.81598	0.08159
0.80	1.06383	1.2892	1.03823	0.82514	0.07229
0.81	1.06080	1.2715	1.03422	0.83426	0.06375
0.82	1.05775	1.2542	1.03047	0.84334	0.05593
0.83	1.05468	1.2373	1.02696	0.85239	0.04878
0.84	1.05160	1.2208	1.02370	0.86140	0.04226
0.85	1.04849	1.2047	1.02067	0.87037	0.03632
0.86	1.04537	1.1889	1.01787	0.87929	0.03097
0.87	1.04223	1.1735	1.01529	0.88818	0.02613
0.88	1.03907	1.1584	1.01294	0.89703	0.02180
0.89	1.03589	1.1436	1.01080	0.90583	0.01793

(continued)

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
0.90	1.03270	1.12913	1.00887	0.91459	0.014513
0.91	1.02950	1.11500	1.00714	0.92332	0.011519
0.92	1.02627	1.10114	1.00560	0.93201	0.008916
0.93	1.02304	1.08758	1.00426	0.94065	0.006694
0.94	1.01978	1.07430	1.00311	0.94925	0.004815
0.95	1.01652	1.06129	1.00215	0.95782	0.003280
0.96	1.01324	1.04854	1.00137	0.96634	0.002056
0.97	1.00995	1.03605	1.00076	0.97481	0.001135
0.98	1.00664	1.02379	1.00033	0.98324	0.000493
0.99	1.00333	1.01178	1.00008	0.99164	0.000120
1.00	1.00000	1.00000	1.00000	1.00000	0
1.01	0.99666	0.98844	1.00008	1.00831	0.000114
1.02	0.99331	0.97711	1.00033	1.01658	0.000458
1.03	0.98995	0.96598	1.00073	1.02481	0.001013
1.04	0.98658	0.95506	1.00130	1.03300	0.001771
1.05	0.98320	0.94435	1.00203	1.04115	0.002712
1.06	0.97982	0.93383	1.00291	1.04925	0.003837
1.07	0.97642	0.92350	1.00394	1.05731	0.005129
1.08	0.97302	0.91335	1.00512	1.06533	0.006582
1.09	0.96960	0.90338	1.00645	1.07331	0.008185
1.10	0.96618	0.89359	1.00793	1.08124	0.009933
1.11	0.96276	0.88397	1.00955	1.08913	0.011813
1.12	0.95933	0.87451	1.01131	1.09698	0.013824
1.13	0.95589	0.86522	1.01322	1.10479	0.015949
1.14	0.95244	0.85608	1.01527	1.11256	0.018187
1.15	0.94899	0.84710	1.01746	1.1203	0.02053
1.16	0.94554	0.83827	1.01978	1.1280	0.02298
1.17	0.94208	0.82958	1.02224	1.1356	0.02552
1.18	0.93862	0.82104	1.02484	1.1432	0.02814
1.19	0.93515	0.81263	1.02757	1.1508	0.03085
1.20	0.93168	0.80436	1.03044	1.1583	0.03364
1.21	0.92820	0.79623	1.03344	1.1658	0.03650
1.22	0.92473	0.78822	1.03657	1.1732	0.03942
1.23	0.92125	0.78034	1.03983	1.1806	0.04241
1.24	0.91777	0.77258	1.04323	1.1879	0.04547
1.25	0.91429	0.76495	1.04676	1.1952	0.04858
1.26	0.91080	0.75743	1.05041	1.2025	0.05174
1.27	0.90732	0.75003	1.05419	1.2097	0.05494
1.28	0.90383	0.74274	1.05809	1.2169	0.05820
1.29	0.90035	0.73556	1.06213	1.2240	0.06150
1.30	0.89686	0.72848	1.06630	1.2311	0.06483
1.31	0.89338	0.72152	1.07060	1.2382	0.06820
1.32	0.88989	0.71465	1.07502	1.2452	0.07161
1.33	0.88641	0.70789	1.07957	1.2522	0.07504
1.34	0.88292	0.70123	1.08424	1.2591	0.07850

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
1.35	0.87944	0.69466	1.08904	1.2660	0.08199
1.36	0.87596	0.68818	1.09397	1.2729	0.08550
1.37	0.87249	0.68180	1.09902	1.2797	0.08904
1.38	0.86901	0.67551	1.10419	1.2864	0.09259
1.39	0.86554	0.66931	1.10948	1.2932	0.09616
1.40	0.86207	0.66320	1.1149	1.2999	0.09974
1.41	0.85860	0.65717	1.1205	1.3065	0.10333
1.42	0.85514	0.65122	1.1262	1.3131	0.10694
1.43	0.85168	0.64536	1.1320	1.3197	0.11056
1.44	0.84822	0.63958	1.1379	1.3262	0.11419
1.45	0.84477	0.63387	1.1440	1.3327	0.11782
1.46	0.84133	0.62824	1.1502	1.3392	0.12146
1.47	0.83788	0.62269	1.1565	1.3456	0.12510
1.48	0.83445	0.61722	1.1629	1.3520	0.12875
1.49	0.83101	0.61181	1.1695	1.3583	0.13240
1.50	0.82759	0.60648	1.1762	1.3646	0.13605
1.51	0.82416	0.60122	1.1830	1.3708	0.13970
1.52	0.82075	0.59602	1.1899	1.3770	0.14335
1.53	0.81734	0.59089	1.1970	1.3832	0.14699
1.54	0.81394	0.58583	1.2043	1.3894	0.15063
1.55	0.81054	0.58084	1.2116	1.3955	0.15427
1.56	0.80715	0.57591	1.2190	1.4015	0.15790
1.57	0.80376	0.57104	1.2266	1.4075	0.16152
1.58	0.80038	0.56623	1.2343	1.4135	0.16514
1.59	0.79701	0.56148	1.2422	1.4195	0.16876
1.60	0.79365	0.55679	1.2502	1.4254	0.17236
1.61	0.79030	0.55216	1.2583	1.4313	0.17595
1.62	0.78695	0.54759	1.2666	1.4371	0.17953
1.63	0.78361	0.54308	1.2750	1.4429	0.18311
1.64	0.78028	0.53862	1.2835	1.4487	0.18667
1.65	0.77695	0.53421	1.2922	1.4544	0.19022
1.66	0.77363	0.52986	1.3010	1.4601	0.19376
1.67	0.77033	0.52556	1.3099	1.4657	0.19729
1.68	0.76703	0.52131	1.3190	1.4713	0.20081
1.69	0.76374	0.51711	1.3282	1.4769	0.20431
1.70	0.76046	0.51297	1.3376	1.4825	0.20780
1.71	0.75718	0.50887	1.3471	1.4880	0.21128
1.72	0.75392	0.50482	1.3567	1.4935	0.21474
1.73	0.75067	0.50082	1.3665	1.4989	0.21819
1.74	0.74742	0.49686	1.3764	1.5043	0.22162
1.75	0.74419	0.49295	1.3865	1.5097	0.22504
1.76	0.74096	0.48909	1.3967	1.5150	0.22844
1.77	0.73774	0.48527	1.4070	1.5203	0.23183
1.78	0.73453	0.48149	1.4175	1.5256	0.23520
1.79	0.73134	0.47776	1.4282	1.5308	0.23855

(continued)

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
1.80	0.72816	0.47407	1.4390	1.5360	0.24189
1.81	0.72498	0.47042	1.4499	1.5412	0.24521
1.82	0.72181	0.46681	1.4610	1.5463	0.24851
1.83	0.71865	0.46324	1.4723	1.5514	0.25180
1.84	0.71551	0.45972	1.4837	1.5564	0.25507
1.85	0.71238	0.45623	1.4952	1.5614	0.25832
1.86	0.70925	0.45278	1.5069	1.5664	0.26156
1.87	0.70614	0.44937	1.5188	1.5714	0.26478
1.88	0.70304	0.44600	1.5308	1.5763	0.26798
1.89	0.69995	0.44266	1.5429	1.5812	0.27116
1.90	0.69686	0.43936	1.5552	1.5861	0.27433
1.91	0.69379	0.43610	1.5677	1.5909	0.27748
1.92	0.69074	0.43287	1.5804	1.5957	0.28061
1.93	0.68769	0.42967	1.5932	1.6005	0.28372
1.94	0.68465	0.42651	1.6062	1.6052	0.28681
1.95	0.68162	0.42339	1.6193	1.6099	0.28989
1.96	0.67861	0.42030	1.6326	1.6146	0.29295
1.97	0.67561	0.41724	1.6461	1.6193	0.29599
1.98	0.67262	0.41421	1.6597	1.6239	0.29901
1.99	0.66964	0.41121	1.6735	1.6284	0.30201
2.00	0.66667	0.40825	1.6875	1.6330	0.30499
2.01	0.66371	0.40532	1.7017	1.6375	0.30796
2.02	0.66076	0.40241	1.7160	1.6420	0.31091
2.03	0.65783	0.39954	1.7305	1.6465	0.31384
2.04	0.65491	0.39670	1.7452	1.6509	0.31675
2.05	0.65200	0.39389	1.7600	1.6553	0.31965
2.06	0.64910	0.39110	1.7750	1.6597	0.32253
2.07	0.64621	0.38834	1.7902	1.6640	0.32538
2.08	0.64333	0.38562	1.8056	1.6683	0.32822
2.09	0.64047	0.38292	1.8212	1.6726	0.33104
2.10	0.63762	0.38024	1.8369	1.6769	0.33385
2.11	0.63478	0.37760	1.8528	1.6811	0.33664
2.12	0.63195	0.37498	1.8690	1.6853	0.33940
2.13	0.63914	0.37239	1.8853	1.6895	0.34215
2.14	0.62633	0.36982	1.9018	1.6936	0.34488
2.15	0.62354	0.36728	1.9185	1.6977	0.34760
2.16	0.62076	0.36476	1.9354	1.7018	0.35030
2.17	0.61799	0.36227	1.9525	1.7059	0.35298
2.18	0.61523	0.35980	1.9698	1.7099	0.35564
2.19	0.61249	0.35736	1.9873	1.7139	0.35828

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
2.20	0.60976	0.35494	2.0050	1.7179	0.36091
2.21	0.60704	0.35254	2.0228	1.7219	0.36352
2.22	0.60433	0.35017	2.0409	1.7258	0.36611
2.23	0.60163	0.34782	2.0592	1.7297	0.36868
2.24	0.59895	0.34550	2.0777	1.7336	0.37124
2.25	0.59627	0.34319	2.0964	1.7374	0.37378
2.26	0.59361	0.34091	2.1154	1.7412	0.37630
2.27	0.59096	0.33865	2.1345	1.7450	0.37881
2.28	0.58833	0.33641	2.1538	1.7488	0.38130
2.29	0.58570	0.33420	2.1733	1.7526	0.38377
2.30	0.58309	0.33200	2.1931	1.7563	0.38623
2.31	0.58049	0.32983	2.2131	1.7600	0.38867
2.32	0.57790	0.32767	2.2333	1.7637	0.39109
2.33	0.57532	0.32554	2.2537	1.7673	0.39350
2.34	0.57276	0.32342	2.2744	1.7709	0.39589
2.35	0.57021	0.32133	2.2953	1.7745	0.39826
2.36	0.56767	0.31925	2.3164	1.7781	0.40062
2.37	0.56514	0.31720	2.3377	1.7817	0.40296
2.38	0.56262	0.31516	2.3593	1.7852	0.40528
2.39	0.56011	0.31314	2.3811	1.7887	0.40760
2.40	0.55762	0.31114	2.4031	1.7922	0.40989
2.41	0.55514	0.30916	2.4254	1.7956	0.41216
2.42	0.55267	0.30720	2.4479	1.7991	0.41442
2.43	0.55021	0.30525	2.4706	1.8025	0.41667
2.44	0.54776	0.30332	2.4936	1.8059	0.41691
2.45	0.54533	0.30141	2.5168	1.8092	0.42113
2.46	0.54291	0.29952	2.5403	1.8126	0.42333
2.47	0.54050	0.29765	2.5640	1.8159	0.42551
2.48	0.53810	0.29579	2.5880	1.8192	0.42768
2.49	0.53571	0.29395	2.6122	1.8225	0.42983
2.50	0.53333	0.29212	2.6367	1.8257	0.43197
2.51	0.53097	0.29031	2.6615	1.8290	0.43410
2.52	0.52862	0.28852	2.6865	1.8322	0.43621
2.53	0.52627	0.28674	2.7117	1.8354	0.43831
2.54	0.52394	0.28498	2.7372	1.8386	0.44040
2.55	0.52163	0.28323	2.7630	1.8417	0.44247
2.56	0.51932	0.28150	2.7891	1.8448	0.44452
2.57	0.51702	0.27978	2.8154	1.8479	0.44655
2.58	0.51474	0.27808	2.8420	1.8510	0.44857
2.59	0.51247	0.27640	2.8689	1.8541	0.45059

(continued)

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
2.60	0.51020	0.27473	2.8960	1.8571	0.45259
2.61	0.50795	0.27307	2.9234	1.8602	0.45457
2.62	0.50571	0.27143	2.9511	1.8632	0.45654
2.63	0.50349	0.26980	2.9791	1.8662	0.45850
2.64	0.50127	0.26818	3.0074	1.8691	0.46044
2.70	0.48820	0.25878	3.1830	1.8865	0.47182
2.65	0.49906	0.26658	3.0359	1.8721	0.46237
2.66	0.49687	0.26499	3.0647	1.8750	0.46429
2.67	0.49469	0.26342	3.0938	1.8779	0.46619
2.68	0.49251	0.26186	3.1234	1.8808	0.46807
2.69	0.49035	0.26032	3.1530	1.8837	0.46996
2.71	0.48606	0.25726	3.2133	1.8894	0.47367
2.72	0.48393	0.25575	3.2440	1.8922	0.47551
2.73	0.48182	0.25426	3.2749	1.8950	0.47734
2.74	0.47971	0.25278	3.3061	1.8978	0.47915
2.75	0.47761	0.25131	3.3376	1.9005	0.48095
2.76	0.47553	0.24985	3.3695	1.9032	0.48274
2.77	0.47346	0.24840	3.4017	1.9060	0.48452
2.78	0.47139	0.24697	3.4342	1.9087	0.48628
2.79	0.46933	0.24555	3.4670	1.9114	0.48803
2.80	0.46729	0.24414	3.5001	1.9140	0.48976
2.81	0.46526	0.24274	3.5336	1.9167	0.49148
2.82	0.46324	0.24135	3.5674	1.9193	0.49321
2.83	0.46122	0.23997	3.6015	1.9220	0.49491
2.84	0.45922	0.23861	3.6359	1.9246	0.49660
2.85	0.45723	0.23726	3.6707	1.9271	0.49828
2.86	0.45525	0.23592	3.7058	1.9297	0.49995
2.87	0.45328	0.23458	3.7413	1.9322	0.50161
2.88	0.45132	0.23326	3.7771	1.9348	0.50326
2.89	0.44937	0.23196	3.8133	1.9373	0.50489
2.90	0.44743	0.23066	3.8498	1.9398	0.50651
2.91	0.44550	0.22937	3.8866	1.9423	0.50812
2.92	0.44358	0.22809	3.9238	1.9448	0.50973
2.93	0.44167	0.22682	3.9614	1.9472	0.51133
2.94	0.43977	0.22556	3.9993	1.9497	0.51291
2.95	0.43788	0.22431	4.0376	1.9521	0.51447
2.96	0.43600	0.22307	4.0763	1.9545	0.51603
2.97	0.43413	0.22185	4.1153	1.9569	0.51758
2.98	0.43226	0.22063	4.1547	1.9592	0.51912
2.99	0.43041	0.21942	4.1944	1.9616	0.52064

TABLE D.3 (continued)
Fanno Flow (Flow with Friction) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	p/p^*	p_t/p_t^*	V/V^*	$fL_{\max}/D$
3.0	0.42857	0.21822	4.2346	1.9640	0.52216
3.5	0.34783	0.16850	6.7896	2.0642	0.58643
4.0	0.28571	0.13363	10.719	2.1381	0.63306
4.5	0.23762	0.10833	16.562	2.1936	0.66764
5.0	0.20000	0.08944	25.000	2.2361	0.69381
6.0	0.14634	0.06376	53.180	2.2953	0.72987
7.0	0.11111	0.04762	104.14	2.3333	0.75281
8.0	0.08696	0.03686	190.11	2.3591	0.76820
9.0	0.06977	0.02935	327.19	2.3772	0.77898
10.0	0.05714	0.02390	535.94	2.3905	0.78683
∞	0	0	∞	2.4495	0.82153

$$\begin{aligned} \frac{T}{T^*} &= \frac{\gamma + 1}{2} \left(1 + \frac{\gamma - 1}{2} M^2 \right)^{-1} \frac{p}{p^*} = \left[\frac{2M^2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{-1/2} \\ \frac{p_t}{p_t^*} &= \frac{1}{M} \left[\frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{(\gamma + 1)/[2(\gamma - 1)]} \\ \frac{V}{V^*} &= M \left[\frac{\gamma + 1}{2} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{-1/2} \\ \frac{fL_{\max}}{D} &= \frac{1 - M^2}{\gamma M^2} + \frac{\gamma + 1}{2\gamma} \ln \left[\frac{\gamma + 1}{2} M^2 \left(1 + \frac{\gamma - 1}{2} M^2 \right)^{-1} \right] \end{aligned}$$

TABLE D.4
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
0	0	0	2.4000	1.2679	0
0.01	0.000576	0.000480	2.3997	1.2678	0.000240
0.02	0.00230	0.00192	2.3987	1.2675	0.000959
0.03	0.00517	0.00431	2.3970	1.2671	0.00216
0.04	0.00917	0.00765	2.3946	1.2665	0.00383
0.05	0.01430	0.01192	2.3916	1.2657	0.00598
0.06	0.02053	0.01712	2.3880	1.2647	0.00860
0.07	0.02784	0.02322	2.3836	1.2636	0.01168
0.08	0.03621	0.03022	2.3787	1.2623	0.01522
0.09	0.04562	0.03807	2.3731	1.2608	0.01922
0.10	0.05602	0.04678	2.3669	1.2591	0.02367
0.11	0.06739	0.05630	2.3600	1.2573	0.02856
0.12	0.07970	0.06661	2.3526	1.2554	0.03388
0.13	0.09290	0.07768	2.3445	1.2533	0.03962
0.14	0.10695	0.08947	2.3359	1.2510	0.04578

(continued)

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
0.15	0.12181	0.10196	2.3267	1.2486	0.05235
0.16	0.13743	0.11511	2.3170	1.2461	0.05931
0.17	0.15377	0.12888	2.3067	1.2434	0.06666
0.18	0.17078	0.14324	2.2959	1.2406	0.07439
0.19	0.18841	0.15814	2.2845	1.2377	0.08247
0.20	0.20661	0.17355	2.2727	2.2346	0.09091
0.21	0.22533	0.18943	2.2604	1.2314	0.09969
0.22	0.24452	0.20574	2.2477	1.2281	0.10879
0.23	0.26413	0.22244	2.2345	1.2247	0.11821
0.24	0.28411	0.23948	2.2209	1.2213	0.12792
0.25	0.30440	0.25684	2.2069	1.2177	0.13793
0.26	0.32496	0.27446	2.1925	1.2140	0.14821
0.27	0.34573	0.29231	2.1777	1.2102	0.15876
0.28	0.36667	0.31035	2.1626	1.2064	0.16955
0.29	0.38774	0.32855	2.1472	1.2025	0.18058
0.30	0.40887	0.34686	2.1314	1.1985	0.19183
0.31	0.43004	0.36525	2.1154	1.1945	0.20329
0.32	0.45119	0.38369	2.0991	1.1904	0.21495
0.33	0.47228	0.40214	2.0825	1.1863	0.22678
0.34	0.49327	0.42056	2.0657	1.1822	0.23879
0.35	0.51413	0.43894	2.0487	1.1779	0.25096
0.36	0.53482	0.45723	2.0314	1.1737	0.26327
0.37	0.55529	0.47541	2.0140	1.1695	0.27572
0.38	0.57553	0.49346	1.9964	1.1652	0.28828
0.39	0.59549	0.51134	1.9787	1.1609	0.30095
0.40	0.61515	0.52903	1.9608	1.1566	0.31373
0.41	0.63448	0.54651	1.9428	1.1523	0.32658
0.42	0.65346	0.56376	1.9247	1.1480	0.33951
0.43	0.67205	0.58076	1.9065	1.1437	0.35251
0.44	0.69025	0.59748	1.8882	1.1394	0.36556
0.45	0.70804	0.61393	1.8699	1.1351	0.37865
0.46	0.72538	0.63007	1.8515	1.1308	0.39178
0.47	0.74228	0.64589	1.8331	1.1266	0.40493
0.48	0.75871	0.66139	1.8147	1.1224	0.41810
0.49	0.77466	0.67655	1.7962	1.1182	0.43127
0.50	0.79012	0.69136	1.7778	1.1141	0.44444
0.51	0.80509	0.70581	1.7594	1.1099	0.45761
0.52	0.81955	0.71990	1.7409	1.1059	0.47075
0.53	0.83351	0.73361	1.7226	1.1019	0.48387
0.54	0.84695	0.74695	1.7043	1.0979	0.49696
0.55	0.85987	0.75991	1.6860	1.0940	0.51001
0.56	0.87227	0.77249	1.6678	1.0901	0.52302
0.57	0.88416	0.78468	1.6496	1.0863	0.53597
0.58	0.89552	0.79648	1.6316	1.0826	0.54887
0.59	0.90637	0.80789	1.6136	1.0789	0.56170

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
0.60	0.91670	0.81892	1.5957	1.0753	0.57447
0.61	0.92653	0.82957	1.5780	1.0717	0.58716
0.62	0.93584	0.83983	1.5603	1.0682	0.59978
0.63	0.94466	0.84970	1.5428	1.0648	0.61232
0.64	0.95298	0.85920	1.5253	1.0615	0.62477
0.65	0.96081	0.86833	1.5080	1.0582	0.63713
0.66	0.96816	0.87708	1.4908	1.0550	0.64941
0.67	0.97503	0.88547	1.4738	1.0519	0.66158
0.68	0.98144	0.89350	1.4569	1.0489	0.67366
0.69	0.98739	0.90118	1.4401	1.0460	0.68564
0.70	0.99290	0.90850	1.4235	1.0431	0.69751
0.71	0.99796	0.91548	1.4070	1.0403	0.70928
0.72	1.00260	0.92212	1.3907	1.0376	0.72093
0.73	1.00682	0.92843	1.3745	1.0350	0.73248
0.74	1.01062	0.93442	1.3585	1.0325	0.74392
0.75	1.01403	0.94009	1.3427	1.0301	0.75524
0.76	1.01706	0.94546	1.3270	1.0278	0.76645
0.77	1.01970	0.95052	1.3114	1.0255	0.77755
0.78	1.02198	0.95528	1.2961	1.0234	0.78853
0.79	1.02390	0.95975	1.2809	1.0213	0.79939
0.80	1.02548	0.96395	1.2658	1.0193	0.81013
0.81	1.02672	0.96787	1.2510	1.0175	0.82075
0.82	1.02763	0.97152	1.2362	1.0157	0.83125
0.83	1.02823	0.97492	1.2217	1.0140	0.84164
0.84	1.02853	0.97807	1.2073	1.0124	0.85190
0.85	1.02854	0.98097	1.1931	1.0109	0.86204
0.86	1.02826	0.98363	1.1791	1.0095	0.87207
0.87	1.02771	0.98607	1.1652	1.0082	0.88197
0.88	1.02689	0.98828	1.1515	1.0070	0.89175
0.89	1.02583	0.99028	1.1380	1.0059	0.90142
0.90	1.02452	0.99207	1.1246	1.0049	0.91097
0.91	1.02297	0.99366	1.1115	1.0039	0.92039
0.92	1.02120	0.99506	1.0984	1.0031	0.92970
0.93	1.01922	0.99627	1.0856	1.0024	0.93889
0.94	1.01702	0.99729	1.0728	1.0017	0.94797
0.95	1.01463	0.99814	1.0603	1.0012	0.95693
0.96	1.01205	0.99883	1.0479	1.0008	0.96577
0.97	1.00929	0.99935	1.0357	1.0004	0.97450
0.98	1.00636	0.99971	1.0236	1.0002	0.98311
0.99	1.00326	0.99993	1.0117	1.0000	0.99161
1.00	1.00000	1.00000	1.0000	1.0000	1.00000
1.01	0.99659	0.99993	0.98841	1.0000	1.00828
1.02	0.99304	0.99973	0.97698	1.0002	1.01645
1.03	0.98936	0.99940	0.96569	1.0004	1.02450
1.04	0.98554	0.99895	0.95456	1.0006	1.03246

(continued)

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
1.05	0.98161	0.99838	0.94358	1.0012	1.04030
1.06	0.97755	0.99769	0.93275	1.0017	1.04804
1.07	0.97339	0.99690	0.92206	1.0024	1.05567
1.08	0.96913	0.99601	0.91152	1.0031	1.06320
1.09	0.96477	0.99501	0.90112	1.0039	1.07063
1.10	0.96031	0.99392	0.89087	1.0049	1.07795
1.11	0.95577	0.99275	0.88075	1.0059	1.08518
1.12	0.95115	0.99148	0.87078	1.0070	1.09230
1.13	0.94645	0.99013	0.86094	1.0082	1.09933
1.14	0.94169	0.98871	0.85123	1.0095	1.10626
1.15	0.93685	0.98721	0.84166	1.0109	1.11310
1.16	0.93196	0.98564	0.83222	1.0124	1.11984
1.17	0.92701	0.98400	0.82292	1.0140	1.12649
1.18	0.92200	0.98230	0.81374	1.0157	1.13305
1.19	0.91695	0.98054	0.80468	1.0175	1.13951
1.20	0.91185	0.97872	0.79576	1.0194	1.14589
1.21	0.90671	0.97684	0.78695	1.0214	1.15218
1.22	0.90153	0.97492	0.77827	1.0235	1.15838
1.23	0.89632	0.97294	0.76971	1.0257	1.16449
1.24	0.89108	0.97092	0.76127	1.0279	1.17052
1.25	0.88581	0.96886	0.75294	1.0303	1.17647
1.26	0.88052	0.96675	0.74473	1.0328	1.18233
1.27	0.87521	0.96461	0.73663	1.0354	1.18812
1.28	0.86988	0.96243	0.72865	1.0380	1.19382
1.29	0.86453	0.96022	0.72078	1.0408	1.19945
1.30	0.85917	0.95798	0.71301	1.0437	1.20499
1.31	0.85380	0.95571	0.70536	1.0466	1.21046
1.32	0.84843	0.95341	0.69780	1.0497	1.21585
1.33	0.84305	0.95108	0.69036	1.0528	1.22117
1.34	0.83766	0.94873	0.68301	1.0561	1.22642
1.35	0.83227	0.94637	0.67577	1.0594	1.23159
1.36	0.82689	0.94398	0.66863	1.0629	1.23669
1.37	0.82151	0.94157	0.66158	1.0664	1.24173
1.38	0.81613	0.93914	0.65464	1.0701	1.24669
1.39	0.81076	0.93671	0.64778	1.0738	1.25158
1.40	0.80539	0.93425	0.64103	1.0777	1.25641
1.41	0.80004	0.93179	0.63436	1.0816	1.26117
1.42	0.79469	0.92931	0.62779	1.0856	1.26587
1.43	0.78936	0.92683	0.62130	1.0898	1.27050
1.44	0.78405	0.92434	0.61491	1.0940	1.27507
1.45	0.77874	0.92184	0.60860	1.0983	1.27957
1.46	0.77346	0.91933	0.60237	1.1028	1.28402
1.47	0.76819	0.91682	0.59623	1.1073	1.28840
1.48	0.76294	0.91431	0.59018	1.1120	1.29273
1.49	0.75771	0.91179	0.58421	1.1167	1.29700

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
1.50	0.75250	0.90928	0.57831	1.1215	1.30120
1.51	0.74732	0.90676	0.57250	1.1265	1.30536
1.52	0.74215	0.90424	0.56676	1.1315	1.30945
1.53	0.73701	0.90172	0.56111	1.1367	1.31350
1.54	0.73189	0.89920	0.55552	1.1419	1.31743
1.55	0.72680	0.89669	0.55002	1.1473	1.32142
1.56	0.72173	0.89418	0.54458	1.1527	1.32530
1.57	0.71669	0.89168	0.53922	1.1583	1.32913
1.58	0.71168	0.88917	0.53393	1.1640	1.33291
1.59	0.70669	0.88668	0.52871	1.1697	1.33663
1.60	0.70174	0.88419	0.52356	1.1756	1.34031
1.61	0.69680	0.88170	0.51848	1.1816	1.34394
1.62	0.69190	0.87922	0.51346	1.1877	1.34753
1.63	0.68703	0.87675	0.50851	1.1939	1.35106
1.64	0.68219	0.87429	0.50363	1.2002	1.35455
1.65	0.67738	0.87184	0.49880	1.2066	1.35800
1.66	0.67259	0.86939	0.49405	1.2131	1.36140
1.67	0.66784	0.86696	0.48935	1.2197	1.36475
1.68	0.66312	0.86453	0.48472	1.2264	1.36806
1.69	0.65843	0.86212	0.48014	1.2333	1.37133
1.70	0.65377	0.85971	0.47562	1.2402	1.37455
1.71	0.64914	0.85731	0.47117	1.2473	1.37774
1.72	0.64455	0.85493	0.46677	1.2545	1.38088
1.73	0.63999	0.85256	0.46242	1.2618	1.38398
1.74	0.63545	0.85019	0.45813	1.2692	1.38705
1.75	0.63095	0.84784	0.45390	1.2767	1.39007
1.76	0.62649	0.84551	0.44972	1.2843	1.39306
1.77	0.62205	0.84318	0.44559	1.2920	1.39600
1.78	0.61765	0.84087	0.44152	1.2999	1.39891
1.79	0.61328	0.83857	0.43750	1.3078	1.40179
1.80	0.60894	0.83628	0.43353	1.3159	1.40462
1.81	0.60464	0.83400	0.42960	1.3241	1.40743
1.82	0.60036	0.83174	0.42573	1.3324	1.41019
1.83	0.59612	0.82949	0.42191	1.3409	1.41292
1.84	0.59191	0.82726	0.41813	1.3494	1.41562
1.85	0.58774	0.82504	0.41440	1.3581	1.41829
1.86	0.58359	0.82283	0.41072	1.3669	1.42092
1.87	0.57948	0.82064	0.40708	1.3758	1.42351
1.88	0.57540	0.81845	0.40349	1.3849	1.42608
1.89	0.57136	0.81629	0.39994	1.3940	1.42862
1.90	0.56734	0.81414	0.39643	1.4033	1.43112
1.91	0.56336	0.81200	0.39297	1.4127	1.43359
1.92	0.55941	0.80987	0.38955	1.4222	1.43604
1.93	0.55549	0.80776	0.38617	1.4319	1.43845
1.94	0.55160	0.80567	0.38283	1.4417	1.44083

(continued)

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
1.95	0.54774	0.80358	0.37954	1.4516	1.44319
1.96	0.54392	0.80152	0.37628	1.4616	1.44551
1.97	0.54012	0.79946	0.37306	1.4718	1.44781
1.98	0.53636	0.79742	0.36988	1.4821	1.45008
1.99	0.53263	0.79540	0.36674	1.4925	1.45233
2.00	0.52893	0.79339	0.36364	1.5031	1.45455
2.01	0.52525	0.79139	0.36057	1.5138	1.45674
2.02	0.52161	0.78941	0.35754	1.5246	1.45890
2.03	0.51800	0.78744	0.35454	1.5356	1.46104
2.04	0.51442	0.78549	0.35158	1.5467	1.46315
2.05	0.51087	0.78355	0.34866	1.5579	1.46524
2.06	0.50735	0.78162	0.34577	1.5693	1.46731
2.07	0.50386	0.77971	0.34291	1.5808	1.46935
2.08	0.50040	0.77782	0.34009	1.5924	1.47136
2.09	0.49696	0.77593	0.33730	1.6042	1.47336
2.10	0.49356	0.77406	0.33454	1.6162	1.47533
2.11	0.49018	0.77221	0.33182	1.6282	1.47727
2.12	0.48684	0.77037	0.32912	1.6404	1.47920
2.13	0.48352	0.76854	0.32646	1.6528	1.48110
2.14	0.48023	0.76673	0.32382	1.6653	1.48298
2.15	0.47696	0.76493	0.32122	1.6780	1.48484
2.16	0.47373	0.76314	0.31865	1.6908	1.48668
2.17	0.47052	0.76137	0.31610	1.7037	1.48850
2.18	0.46734	0.75961	0.31359	1.7168	1.49029
2.19	0.46418	0.75787	0.31110	1.7300	1.49207
2.20	0.46106	0.75613	0.30864	1.7434	1.49383
2.21	0.45796	0.75442	0.30621	1.7570	1.49556
2.22	0.45488	0.75271	0.30381	1.7707	1.49728
2.23	0.45184	0.75102	0.30143	1.7846	1.49898
2.24	0.44882	0.74934	0.29908	1.7986	1.50066
2.25	0.44582	0.74768	0.29675	1.8128	1.50232
2.26	0.44285	0.74602	0.29446	1.8271	1.50396
2.27	0.43990	0.74438	0.29218	1.8416	1.50558
2.28	0.43698	0.74276	0.28993	1.8562	1.50719
2.29	0.43409	0.74114	0.28771	1.8710	1.50878
2.30	0.43122	0.73954	0.28551	1.8860	1.51035
2.31	0.42838	0.73795	0.28333	1.9012	1.51190
2.32	0.42555	0.73638	0.28118	1.9165	1.51344
2.33	0.42276	0.73482	0.27905	1.9319	1.51496
2.34	0.41998	0.73326	0.27695	1.9476	1.51646
2.35	0.41723	0.73173	0.27487	1.9634	1.51795
2.36	0.41451	0.73020	0.27281	1.9794	1.51942
2.37	0.41181	0.72868	0.27077	1.9955	1.52088
2.38	0.40913	0.72718	0.26875	2.0119	1.52232
2.39	0.40647	0.72569	0.26676	2.0284	1.52374

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
2.40	0.40384	0.72421	0.26478	2.0451	1.52515
2.41	0.40122	0.72275	0.26283	2.0619	1.52655
2.42	0.39864	0.72129	0.26090	2.0789	1.52793
2.43	0.39607	0.71985	0.25899	2.0962	1.52929
2.44	0.39352	0.71842	0.25710	2.1136	1.53065
2.45	0.39100	0.71699	0.25522	2.1311	1.53198
2.46	0.38850	0.71558	0.25337	2.1489	1.53331
2.47	0.38602	0.71419	0.25154	2.1669	1.53461
2.48	0.38356	0.71280	0.24973	2.1850	1.53591
2.49	0.38112	0.71142	0.24793	2.2033	1.53719
2.50	0.37870	0.71006	0.24615	2.2218	1.53846
2.51	0.37630	0.70871	0.24440	2.2405	1.53972
2.52	0.37392	0.70736	0.24266	2.2594	1.54096
2.53	0.37157	0.70603	0.24093	2.2785	1.54219
2.54	0.36923	0.70471	0.23923	2.2978	1.54341
2.55	0.36691	0.70340	0.23754	2.3173	1.54461
2.56	0.36461	0.70210	0.23587	2.3370	1.54581
2.57	0.36233	0.70081	0.23422	2.3569	1.54699
2.58	0.36007	0.69952	0.23258	2.3770	1.54816
2.59	0.35783	0.69826	0.23096	2.3972	1.54931
2.60	0.35561	0.69700	0.22936	2.4177	1.55046
2.61	0.35341	0.69575	0.22777	2.4384	1.55159
2.62	0.35122	0.69451	0.22620	2.4593	1.55272
2.63	0.34906	0.69328	0.22464	2.4805	1.55383
2.64	0.34691	0.69206	0.22310	2.5018	1.55493
2.65	0.34478	0.69084	0.22158	2.5233	1.55602
2.66	0.34266	0.68964	0.22007	2.5451	1.55710
2.67	0.34057	0.68845	0.21857	2.5671	1.55816
2.68	0.33849	0.68727	0.21709	2.5892	1.55922
2.69	0.33643	0.68610	0.21562	2.6117	1.56027
2.70	0.33439	0.68494	0.21417	2.6343	1.56131
2.71	0.33236	0.68378	0.21273	2.6571	1.56233
2.72	0.33035	0.68264	0.21131	2.6802	1.56335
2.73	0.32836	0.68150	0.20990	2.7035	1.56436
2.74	0.32638	0.68037	0.20850	2.7270	1.56536
2.75	0.32442	0.67926	0.20712	2.7508	1.56634
2.76	0.32248	0.67815	0.20575	2.7748	1.56732
2.77	0.32055	0.67705	0.20439	2.7990	1.56829
2.78	0.31864	0.67595	0.20305	2.8235	1.56925
2.79	0.31674	0.67487	0.20172	2.8482	1.57020

(continued)

TABLE D.4 (continued)
Rayleigh Flow (Flow with Heat Addition) Tables for a Gas Having $\gamma = 1.4$

M	T/T^*	T_t/T_t^*	p/p^*	p_t/p_t^*	V/V^*
2.80	0.31486	0.67380	0.20040	2.8731	1.57114
2.81	0.31299	0.67273	0.19910	2.8982	1.57207
2.82	0.31114	0.67167	0.19780	2.9237	1.57300
2.83	0.30931	0.67062	0.19652	2.9493	1.57391
2.84	0.30749	0.66958	0.19525	2.9752	1.57482
2.85	0.30568	0.66855	0.19399	3.0014	1.57572
2.86	0.30389	0.66752	0.19275	3.0278	1.57661
2.87	0.30211	0.66651	0.19151	3.0544	1.57749
2.88	0.30035	0.66550	0.19029	3.0813	1.57836
2.89	0.29860	0.66450	0.18908	3.1084	1.57923
2.90	0.29687	0.66350	0.18788	3.1359	1.58008
2.91	0.29515	0.66252	0.18669	3.1635	1.58093
2.92	0.29344	0.66154	0.18551	3.1914	1.58178
2.93	0.29175	0.66057	0.18435	3.2196	1.58261
2.94	0.29007	0.65960	0.18319	3.2481	1.58343
2.95	0.28841	0.65865	0.18205	3.2768	1.58425
2.96	0.28675	0.65770	0.18091	3.3058	1.58506
2.97	0.28512	0.65676	0.17979	3.3350	1.58587
2.98	0.28349	0.65583	0.17867	3.3646	1.58666
2.99	0.28188	0.65490	0.17757	3.3944	1.58745
3.00	0.28028	0.65398	0.17647	3.4245	1.58824
3.50	0.21419	0.61580	0.13223	5.3280	1.61983
4.00	0.16831	0.58909	0.10256	8.2268	1.64103
4.50	0.13540	0.56982	0.08177	12.502	1.65588
5.00	0.11111	0.55556	0.06667	18.634	1.66667
6.00	0.07849	0.53633	0.04669	38.946	1.68093
7.00	0.05826	0.52438	0.03448	75.414	1.68966
8.00	0.04491	0.51647	0.02649	136.62	1.69536
9.00	0.03565	0.51098	0.02098	233.88	1.69930
10.00	0.02897	0.50702	0.01702	381.61	1.70213
∞	0.00000	0.48980	0.00000	∞	1.71430

$$\frac{p}{p^*} = \frac{1 + \gamma}{1 + \gamma M^2} \quad \frac{T}{T^*} = \frac{(1 + \gamma)^2 M^2}{(1 + \gamma M^2)^2} \quad \frac{V}{V^*} = \frac{(1 + \gamma) M^2}{1 + \gamma M^2}$$
$$\frac{T_t}{T_t^*} \frac{(1 + \gamma)^2 M^2}{(1 + \gamma M^2)^2} \left(\frac{1 + \frac{\gamma-1}{2} M^2}{1 + \frac{\gamma-1}{2}} \right) \quad \frac{p_t}{p_t^*} = \left(\frac{1 + \gamma}{1 + \gamma M^2} \right) \left(\frac{1 + \frac{\gamma-1}{2} M^2}{1 + \frac{\gamma-1}{2}} \right)^{\gamma/(\gamma-1)}$$

APPENDIX E: MISCELLANEOUS

TABLE E.1		
Greek Alphabet		
English Spelling	Capital Greek Letters	Lowercase Greek Letters
Alpha	A	α
Beta	B	β
Gamma	Γ	γ
Delta	Δ	δ
Epsilon	E	ε
Zeta	Z	ζ
Eta	H	η
Theta	Θ	θ
Iota	I	ι
Kappa	K	κ
Lambda	Λ	λ
Mu	M	μ
Nu	N	ν
Xi	Ξ	ξ
Omicron	O	ο
Pi	Π	π
Rho	P	ρ
Sigma	Σ	σ
Tau	T	τ
Upsilon	Υ	υ
Phi	Φ	φ
Chi	X	χ
Psi	Ψ	ψ
Omega	Ω	ω

This page intentionally left blank

Bibliography

- Bird, R. B., W. E. Stewart, and E. N. Lightfoot. *Transport Phenomena*. New York: John Wiley & Sons, 1960.
- Bober, W. and R. A. Kenyon. *Fluid Mechanics*. New York: John Wiley & Sons, 1980.
- Bolz, R. E. and G. L. Tuve, editors. *CRC Handbook of Tables for Applied Engineering Science*, 2nd ed. Cleveland, OH: CRC Press, 1973.
- Chen, N. H. An explicit equation for friction factor in pipe, *Industrial & Engineering Chemistry Fundamentals*, 18(3), 296–297, 1979.
- Chow, V. T. *Open-Channel Hydraulics*. New York: McGraw Hill, Inc., 1959.
- Daugherty, R. L. and J. B. Franzini. *Fluid Mechanics with Engineering Applications*, 8th ed. New York: McGraw-Hill Book Co., 1977.
- Deissler, R. G. NACA Report 1210, 1955.
- Dimensions in English units obtained from ANSI B36.10-1979, *American National Standard Wrought Steel and Wrought Iron Pipe*.
- Dimensions in English units obtained from ANSI/ASTM B88–78, *Standard Specifications for Seamless Copper Water Tube*.
- Dixon, S. L. *Fluid Mechanics: Thermodynamics of Turbomachinery*, 3rd ed. New York: Pergamon Press, 1978.
- Forsythe, W. E., editor. *Smithsonian Physical Tables*, 9th ed. The Smithsonian Institution, Washington, DC, 1956.
- Fox, J. A. *An Introduction to Engineering Fluid Mechanics*. New York: McGraw-Hill Book Co., 1974.
- Fox, R. W. and A. T. McDonald. *Introduction to Fluid Mechanics*, 3rd ed. New York: John Wiley & Sons, 1985.
- Geonkopolis, C. J. *Transport Processes and Unit Operations*. Boston, MA: Allyn & Bacon, 1978.
- Gerhart, P. M. and R. J. Gross. *Fundamentals of Fluid Mechanics*. Reading, MA: Addison Wesley Publishing Co., 1985.
- Granger, R. A. *Fluid Mechanics*. New York: Holt, Rinehart and Winston, div of CBS College Publishing, 1985.
- Gross, A. C., C. R. Kyle, and D. J. Malewicki. The aerodynamics of human powered land vehicles, *Scientific American*, 249(6), 142–152, December 1983.
- John, J. E. A. and W. Haberman. *Introduction to Fluid Mechanics*, 2nd ed. Englewood Cliffs, NJ: Prentice Hall, 1980.
- Lenz, A. T. Viscosity and surface tension effects on V-notch weir coefficients, *Transactions of ASCE*, 108, 739–802, 1943.
- Lissaman, P. B. S. and C. A. Shollenberger, Formation flight of birds, *Science*, 168(3934), 1003–1005, May 1970.
- Mechtly, E. A. NASA SP-701Z, 1969.
- Moody, L. F. Friction factors in pipe flow, *Transactions of ASME*, 68, 672, 1944.
- Murdock, J. W. *Fluid Mechanics and Its Applications*. Boston, MA: Houghton Mifflin Co., 1976.
- NACA, Equations, tables and charts for compressible flow, NACA Report 1135, 1953.
- Olson, R. M. *Essentials of Engineering Fluid Mechanics*, 4th ed. New York: Harper & Row, 1980.
- Prasuhn, A. L. *Fundamentals of Fluid Mechanics*. Englewood Cliffs, NJ: Prentice Hall, 1980.
- Roberson, J. A. and C. T. Crowe. *Engineering Fluid Mechanics*, 3rd ed. Boston, MA: Houghton Mifflin Co., 1985.
- Schlichting, H. *Boundary Layer Theory*, 7th ed. New York: McGraw-Hill, Inc., 1979.
- Selby, S. M., editor. *Standard Mathematical Tables*, 16th ed. Cleveland, OH: Chemical Rubber Co., 1968.
- Shames, I. H. *Mechanics of Fluids*, 2nd ed. New York: McGraw-Hill Book Co., 1982.
- Silverstein, A. NACA Report 502, p. 15, 1934.
- Standard for Metric Practice*. E 380–76. Philadelphia, PA: American Society for Testing and Materials, 1976.
- Streeter, V. L. and E. B. Wylie. *Fluid Mechanics*, 8th ed. New York: McGraw-Hill Book Co., 1985.
- Student ME's Letter, *ASME*, 2(1), p. I.

- The American Society of Mechanical Engineers. *Fluid Meters—Their Theory and Application*, 5th ed. New York: The American Society of Mechanical Engineers, 1959.
- Vennard, J. K. and R. L. Street. *Elementary Fluid Mechanics*, 6th ed. New York: John Wiley & Sons, 1982.
- White, F. M. *Fluid Mechanics*, 2nd ed. New York: McGraw-Hill Book Co., 1986.
- Yuan, S. W. *Foundations of Fluid Mechanics*. Englewood Cliffs, NJ: Prentice Hall, 1967.

Answers to Selected Problems

CHAPTER 1

1.3	9.78 m/s ²	1.32	$23.8 \times 10^{-3} \text{ lbf} \cdot \text{s/ft}^2$	1.56	$1.68 \times 10^4 \text{ J/kg}$
1.5	Same container	1.34	53.1 rad/s	1.58	67.4°F
1.10	1 g/cm ³	1.36	$4.32 \times 10^{-6} \text{ ft}^2/\text{s}$	1.60	$2 \times 10^{-8} \text{ m}^2/\text{N}$
1.12	59.9 lbf/ft ³	1.38	$8.47 \times 10^{-2} \text{ cm}^2/\text{s}$	1.62	$2.18 \times 10^7 \text{ N/m}^2$
1.14	124 kg	1.40	70 576 N/m ²	1.64	1.2 MPa
1.16	1.13 m/s	1.42	8.6 mm	1.66	$9.21 \times 10^7 \text{ N/m}^2$
1.18	$3.3 \times 10^{-5} \text{ m}$	1.46	0.0198 lbf/ft	1.72	0.73 kg of CO ₂
1.22	375 ft ²	1.48	3.28 mm	1.74	$4.089 \times 10^{-3} \text{ g/cm}^3$
1.24	$0.55 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$	1.50	8.14 mm	1.76	15.5
1.26	Pseudoplastic	1.52	1.11 mm	1.78	1.54 ft ³
1.28	Dilatant	1.54	$2.2 \times 10^4 \text{ J/kg}$		

CHAPTER 2

2.2	1100 lbf	2.33	49 psig	2.65	3 <i>h</i> /4
2.5	159 ft	2.35	21.9 psi	2.67	5 <i>b</i> /4
2.7	986 psf	2.37	Hg will work	2.69	4950 lbf
2.9	6.74 ft	2.39	146 psig	2.71	3.27 kN
2.11	8.6 ft	2.41	842 kg/m ³	2.75	1 m
2.13	790 psf	2.43	29.3 kPa gauge	2.77	21.5 ft/s ²
2.15	130 psfg	2.47	1.26 m	2.81	16.1 ft/s ²
2.17	55 kPa	2.49	5.06 m	2.85	2.9 ft ³
2.19	13 560 m	2.52	11.25 ft	2.87	1 410 kg/m ³
2.23	18 405 m	3.54	4.02 ft	2.89	0.95 in.
2.25	2.05 ft	2.56	43.9°	2.91	12.3 kN
2.28	5.41 kPa	2.58	523 N	2.93	731 kg/m ³
2.29	0.86 ft	2.60	1.66 ft	2.95	2.53 m
2.31	0.344 ft	2.63	2 <i>h</i> /3		

CHAPTER 3

3.3	1.77 ft/s	3.31	680 lbf	3.55	5.22 ft
3.7	0.0057 ft/s	3.33	38.9°	3.57	16 ft/s
3.11	2.3 m/s	3.39	0.0015 hp	3.61	7.33 ft/s
3.13	1950 psig	3.41	8.9 m/s	3.63	0.26 ft ³ /s
3.15	8.2 h	3.43	84.4 hp	3.65	1.68 psig
3.19	$2\rho AV^2$	3.45	450W	3.67	1.93 s
3.21	$2\rho AV^2$	3.47	0.17 in.	3.68	0.014 m ³ /s
3.25	53.1°	3.49	1.90 ft	3.71	4.63 min
3.27	143.1°	3.51	3.23 in.	3.73	1 in.

CHAPTER 4

4.3	Correct for Q	4.47	3.44×10^3 psi/(40 ft)	4.55	26.4 mi/h water
4.5	Correct for Q	4.49	839 m/s	4.57	2.18 knots
4.43	3.83×10^4 in. ³ /s	4.51	1.15 lbf	4.59	16.3 ft
4.45	6.37×10^{-5} ft/s	4.53	0.75 N		

CHAPTER 5

5.1	Laminar	5.25	0.18 in. of water	5.45	2 std any type
5.3	Laminar	5.27	0.803 psi	5.47	$\frac{3}{4}$ std type M
5.5	0.326 in./s	5.29	478 psi	5.49	$1\frac{1}{2}$ std type M
5.7	1.2 ft	5.31	598 N/m ²	5.51	0.000 14 m
5.9	No solution	5.33	21.1 ft ³ /s	5.53	0.0057 ft
5.11	1.24×10^6	5.35	0.089 ft ³ /s	5.57	43.9 ft
5.15	Fully developed	5.37	0.00076 slug/s	5.65	0.08 hp
5.17	2.09 ft	5.39	0.29 m/s	5.67	1.42 kW
5.21	849 kPa	5.41	0.0064 ft ³ /s	5.69	\$11.45
5.23	12 kPa	5.43	0.031 m ³ /s	5.79	1.5 ft/s coiled

CHAPTER 6

6.3	0.032 5 N	6.23	0.877 m/s	6.39	0.13 hp
6.5	0.48 N	6.25	10.1 m/s	6.41	10.9 m/s
6.7	0.0348 lbf	6.29	1.85 m/s	6.47	6.6 hp
6.9	0.0085 lbf	6.31	2.7 mm	6.53	2075 hp
6.15	44.3 N	6.33	14.9 in.	6.55	7748 lbf
6.17	0.37 N · m	6.35	0.155 lbf	6.63	3.61 lbf
6.21	0.124 ft · lbf	6.37	0.038 m	6.65	5.36 m/s

CHAPTER 7

7.3	0.56 m ³ /s	7.29	2.17 m	7.51	Supercritical
7.9	9.4 m ³ /s	7.39	73.8 m ³ /s	7.53	$\sqrt{3/3}$
7.11	12.4 in.	7.41	2.42 ft	7.55	60°
7.19	6.85 ft/s	7.43	0.9 m	7.63	3.52 ft
7.21	6.4 ft/s	7.45	0.762	7.67	2.55 ft
7.23	5.55 ft/s	7.47	Subcritical		
7.25	1.44 m	7.49	Subcritical		

CHAPTER 8

8.1	1050 ft/s	8.21	333 K	8.39	278°R
8.3	268 m/s	8.23	0.53 kg/s	8.41	16.55 psia
8.5	4308 ft/s	8.25	0.749 kg/s	8.43	1 444 m/s
8.7	12,180 ft/s	8.27	856 ft/s	8.45	252.2 K
8.9	Supersonic	8.29	25.9 psia	8.47	0.019 slug/s
8.11	338°R	8.31	98.5 K		
8.17	0.0785 slug/s	8.37	1.83 kPa		

CHAPTER 9

9.3	2.7 kN · m	9.29	35.1 MW	9.53	138.5 kW
9.7	54.7%	9.33	255 m ³ /s	9.57	373 MW
9.11	142.5 MW	9.35	36.4 kPa	9.59	73.3 rpm
9.13	3.49 MW	9.43	27 kW	9.61	3.9×10^5 hp
9.15	377 Pa	9.45	22.3 kW	9.63	80.1 m
9.17	7.68×10^5 ft · lbf	9.47	−4 m		
9.27	2.46 psi	9.49	No cavitation		

CHAPTER 10

10.1	4.38×10^{-4} lbf · s/ft ²	10.13	19.3 ft ³ /s	10.37	4.95 ft
10.3	1.33×10^{-6} N · m	10.21	0.054 4 m ³ /s	10.41	1.09 m
10.5	1.45 min	10.23	4.3 ft ³ /s	10.47	1.36 in.
10.7	0.3 in.	10.29	1.9 ft ³ /s	10.49	0.153 ft
10.9	7.5% error	10.33	0.000475 slug/s		
10.11	3.84 slug/s	10.35	156 kPa		

CHAPTER 11

11.29	25.9 Pa/m	11.31	4.64 Pa/m

CHAPTER 12

12.7	Continuity satisfied	12.15	Irrotational	12.31	14.62 psi
12.9	Irrotational	12.19	Continuity satisfied	12.41	628
12.13	Rotational	12.25	Continuity satisfied		

CHAPTER 13

13.15	0.265	13.17	0.352 lbf	13.19	3×10^{-4} hp

This page intentionally left blank

Index

A

Absolute pressure, 42
Accelerating fluids, 61
Adiabatic process, 120
Air properties, 661
Airfoil, flow past, 620
Alternate depths, 333
Angular momentum equation, 117, 424
Annulus, 213
Answers to selected problems, 709
Archimedes Principle, 69
Area moments of plane surfaces, 668
Atmosphere, 39, 79
Atmospheric pressure, 42
Average velocity, 108, 135
Axial flow compressor, 453
Axial flow fan, 453
Axial flow pump, 453
Axial flow turbines, 430

B

Backwater curve, 354
Barometer, 42
Bed materials, 344
Bellows meter, 510
Bernoulli equation, 126, 202
Bibliography, 707
Bingham plastic, 8
Blasius solution, 632
Blattner, Prof. Ernest, 234
Blower, 470
Boundary layer, 269
Boundary layer flow, 627
Boundary layer thickness, 269
Bourdon tube, 41
British Gravitational System, 2
Buckingham Pi method, 161
Bulk modulus, 19
Buoyant force, 67

C

Capillary action, 15
Cavitation, 482
Cell Reynolds number, 557
Center of buoyancy, 69
Centrifugal pump, 247, 479
Centroidal distances of plane areas, 668
Chen equation, 246
Chezy formula, 343
Choked flow, 389
Churchill equation, 246
Circular cylinder, 613

Circular duct, 546
Circulation, 617
Clark Y airfoil, 301
Closed conduit flow, 101, 193
Coffee pot problem, 148
Coiled tube, 263
Compressibility factor, 19, 526
Compressible flow, 377
Compressible flow tables, 673
Compressible flow with friction, 404
Compressible flow with heat transfer, 409
Compression shock, 399
Compressor, 470
Conservation equation, 106
Continuity equation, 107
Continuum, 22
Contracted rectangular weir, 533
Contraction coefficient, 522
Control surface, 104
Control volume 104,
Control volume approach, 103
Conventional unit systems, 6
Converging-diverging nozzle, 394, 401
Converging nozzle, 390
Conversion factor tables, 657
Correlation of data, 175
Couette flow, 552, 562
Critical depth, 332
Critical flow, 326, 335, 389
Critical Reynolds number, 194

D

Darcy-Weisbach friction factor, 205
Degree of reaction, 434
Degrees API (°API), 32
Density of water, 12
Density, 12
Depth of flow, 327
Depth to centroid, 327
Diamond shaped airfoil, 381
Dilatant, 8
Dimensional analysis, 155
Dimensional analysis of turbomachinery, 478
Dimensional homogeneity, 155
Dimensionless ratios, 163
Dimensions, 2, 157
Direction finding tube, 501
Discharge coefficient, 535
Displacement thickness, 270, 637
Doublet, 609
Downwash, 302
Drag, 272
Drag coefficient, 164
Drag flow meter, 322
Drag on a cylinder, 276, 279

Drag on a flat plate, 649
 Drag on a sphere, 284
 Drag on automobiles, 293
 Drag on bicycle rider, 288
 Drag on birds, 304
 Drag on three dimensional bodies, 283, 287
 Drag on trucks, 293
 Drag on two dimensional bodies, 276, 282
 Draining tanks, 131
 Dynamic similarity, 169

E

Eddy viscosity, 572
 Effective diameter, 202
 Energy equation, 120
 Energy grade line, 267
 Engineering unit system, 5
 Enthalpy, 19
 Entrance effects, 197
 Entrance length, 198
 Equation of motion, 543
 Equation of state, 21
 Equations of fluid mechanics, 101
 Equivalent diameter, 201
 Equivalent length, 227
 Error function, 559
 Euler equations, 594
 Euler turbine equation, 428
 Eulerian approach, 103
 Expansion wave, 381

F

Fairing, 296
 Falling sphere viscometer, 496
 Fan, 453
 Fanning friction factor, 205
 Fanno flow, 408
 Fanno flow equations, 697
 Fanno flow tables, 690
 Finned tube, 263
 Fire hydrant, 148
 Fittings, forces on, 240
 Fittings, losses through, 229
 Flat plate, 272
 Flat plate, suddenly accelerated, 559
 Flettner rotor, 625
 Flow about a half body, 606
 Flow area, 327
 Flow down an incline, 549
 Flow in open channels, 325
 Flow nozzle, 519
 Flow over a flat plate, 629
 Flow through a straight channel, 550
 Flow with friction, tables, 690
 Fluid, definition, 1
 Fluids, properties, 7
 Forces on fittings, 240
 Form drag, 277
 Francis turbine, 466

Friction factor, 205, 217, 405
 Froude number, 165, 171, 326
 Fully developed flow, 197
 Funnel, 151

G

Gage pressure, 41
 Gases, 22
gc, 5
 Gear pump, 247
 General conservation equation, 106
 Geometric elements of plane areas, 668
 Geometric similarity, 168
 Gradually varied flow, 351
 Graphical solution methods, 557
 Greek alphabet, 705

H

Haaland equation, 246
 Half body, 606
 Head coefficient, 165
 Honey, properties, 26
 Hook gage, 536
 Hot film probe, 506
 Hot wire anemometer, 505
 Hydraulic diameter, 202
 Hydraulic grade line, 267
 Hydraulic jump, 363
 Hydraulic radius, 203, 327
 Hydraulic turbines, 487
 Hydraulically optimum cross section, 348
 Hydrostatic equation, 38
 Hydrostatic force, 47
 Hyperbola method, 29

I

Ideal gas law, 21
 Immersed bodies, flow over,
 164, 269
 Impeller, 248
 Incompressible, 377
 Induced drag, 302
 Inspection method, 165
 Internal energy, 18
 Inviscid flow, 583
 Inviscid fluid, 8
 Irreversible process, 378
 Irrotational flow, 591
 Irrotational vortex flow, 601
 Isentropic flow, 382
 Isentropic flow tables, 673

J

Jet d'Eau, 145
 Jif[®] Peanut Butter, properties, 11

K

Kaplan turbine, 439
 Kinematics of flow, 101
 Kinematic viscosity, 13
 Kraft[®] mayonnaise, properties, 25

L

Lagrangian approach, 103
 Laminar boundary layer flow, 628
 Laminar flow, 193, 546
 Laminar open channel flow, 338
 Laminar sublayer, 197
 Laplace equation, 595
 LDA, 506
 Lift coefficient, 164
 Lift on airfoils, 298, 621
 Linear momentum equation, 113
 Liquids, 22

M

Mach number, 378
 Macroscopic approach, 22
 Manning roughness coefficient, 343
 Manometer, 44, 80
 Mass flow rate, 107
 Mayonnaise, properties, 26
 Mean depth, 327
 Measurement of flow rate, 506
 Measurement of velocity, 501
 Measurement of viscosity, 495
 Measurements in open channels, 531
 Measurements, 495
 Mechanical energy equation, 128
 Memphis, TN, 355
 Meniscus, 14
 Metacentric height, 73
 Mexico City, 43
 Microscopic approach, 22
 Milk, properties, 260
 Minor losses, 227
 Mixing length hypothesis, 572
 Modeling, 171
 Momentum equation, 112
 Momentum integral method, 638, 645
 Momentum transport, 196
 Moody diagram 209–210

N

NACA 23012 airfoil, 315
 Navier–Stokes equations, 543
 Net positive suction head, 484
 New Orleans, LA, 358
 Newtonian fluid, 8
 Nominal diameter, 199
 Non circular ducts, 201, 211
 Non-Newtonian fluids, 8

Nonslip condition, 196
 Nonuniform flow, 325, 351
 Normal shock tables, 680
 Normal shock waves, 397
 Normal stage, 431
 Nozzle, 431
 NPSH, 484
 Nutating disk meter, 510

O

One-dimensional flow, 102
 Open channel flow, 101, 164, 325
 Open channel flow rate measurement, 531
 Order of magnitude analysis, 630
 Orifice insert, 175
 Orifice meter, 522
 Orifice plate, 522
 Overexpanded nozzle, 401
 Oxy-acetylene torch, 111
 Parallel flow, 546
 Parallel pipes, 243
 Perfectly expanded nozzle, 401
 Performance of centrifugal pump, 479
 Piezometer ring, 500
 Pipe flow, 163
 Pipe roughness, 206, 210
 Pipe schedule, 199
 Pipes in parallel, 243
 Pipe specifications, 199, 669
 Piping systems, 216
 Pitot static tube, 501
 Pitot tube, 501
 Plane Couette flow, 552
 Point gage 536
 Polar diagram, 300
 Positive-displacement pump, 247
 Potential function, 585
 Pressure, 12, 35
 Pressure coefficient, 164, 176, 615
 Pressure drag, 277
 Pressure gage, 41
 Pressure measurement, 35
 Properties of air, 661
 Properties of gases, 664
 Properties of selected liquids, 663
 Properties of water, 661
 Pseudoplastic, 8
 Pump, 247, 470
 Pump performance map, 266
 Pump performance, 185

Q

Quasi-steady flow, 103

R

Radial flow compressor, 470
 Radial flow pump, 470

Radial flow turbine, 466
 Rankine body, 611
 Rapidly varied flow, 325, 361
 Rate meters, 510
 Ratio of specific heats, 17
 Rayleigh flow, 414
 Rayleigh flow equations, 704
 Rayleigh flow tables, 697
 Rayleigh method, 157
 Reaction ratio, 434
 Rectangular duct, 211
 Rectangular weir, 531
 Reynolds number, 164, 326, 341
 Reynolds stresses, 571
 Rheological diagram, 8
 Rheopectic fluid, 9
 Rotameter, 510
 Rotating concentric cylinders, 555, 563
 Rotating container, 64
 Rotating cup viscometer, 495
 Rotational flow, 591
 Rotor, 423

S

Saul'ev method, 557
 Savonius rotor, 310
 Schedule, pipe, 199
 Separation region, 275
 Separation, 269, 275
 Sharp crested weir, 531
 Shear thinning fluid, 12
 Shock wave, 381
 SI unit system, 4
 Similitude, 155, 167
 Sink flow, 599
 Siphon, 130
 Slipstream, 444
 Sluice gate, 329
 Sonic velocity, 20, 378
 Source flow, 597
 Specific energy, 332
 Specific gravity, 12
 Specific gravity of metals, 666
 Specific gravity of various solids, 665
 Specific heat, 16
 Specific speed, 484
 Specific weight, 12
 Sprinkler, 119, 426
 Stability of floating bodies, 71
 Stability of numerical solution, 557
 Stagnation point, 275
 Stagnation pressure, 275, 382, 384, 500
 Stagnation properties, 382
 Stagnation temperature, 382
 Stall, 299
 Startup flow in a plane channel, 565
 Static pressure measurement, 500
 Steady flow, 102, 325, 546
 Steady uniform flow, 325
 Stokes flow, 497
 Stratosphere, 40

Streakline, 103
 Stream function, 585
 Streamlines, 103
 Streamlining, 287
 Streamtube, 103
 Subcritical flow, 326
 Submerged bodies, 67
 Submerged curved surface, 55, 92
 Submerged plane surface, 47, 85
 Subsonic flow, 381
 Suddenly accelerated flat plate, 559
 Supercritical flow, 326
 Superposition, 606
 Supersonic flow, 381
 Surface tension, 13
 Surface tension of liquids, 667
 Surroundings, 104
 Swamee-Jain equation, 247
 System curve, 265

T

Terminal velocity, 284
 Thixotropic fluid, 9
 Three-dimensional flow, 102
 Throat, 393
 Time dependent fluid, 9
 Top width, 327
 Tornado, 603
 Total pressure, 384
 Tow tank, 174
 Tube fittings, 201
 Tubing specifications, 672
 Tubing, 200
 Turbine stage, 431
 Turbine-type flow meter, 510
 Turbomachinery, 423
 Turbulent boundary layer flow, 628
 Turbulent core, 197
 Turbulent flow, 193, 568
 Turbulent momentum flux, 571
 Turbulent open channel flow, 342
 Two-dimensional flow, 102

U

Unbounded flows, 101
 Underexpanded nozzle, 401
 Uniform depth, 347
 Uniform flow, 325, 597
 Units, 2, 157
 Unsteady flow, 102, 325
 Unsteady plane Couette Flow, 562
 Unsteady uniform flow, 325
 Upwash, 303

V

V-notch weir, 533
 Variable area nozzle, 386

Varied flow, 325
Vaseline, 25
Velocity diagrams, 443
Venturi discharge coefficient, 515
Venturi flume, 331
Venturi meter, 128, 145, 513
Viscoelastic fluid, 9
Viscosity, absolute, 7
Viscosity, kinematic, 13
Viscous flow, 194
Volume flow rate, 107
Vortex filament, 302

W

Wall correction, 498
Water properties, 661
Water slide, 143
Water tunnel, 636
Water, density, 12
Weber number, 165
Weir, 531
Wetted perimeter, 327
Wind tunnel, 174
Windmill, 444